

# Television

# Téléviseur

 
# Televisor digital a color con pantalla de cristal líquido

## Reference Guide

## Manuel de référence

## Guía de referencia

XR-98X90L / 85X90L / 85X90CL  
XR-75X90L / 75X90CL / 65X90L  
XR-65X90CL / 55X90L

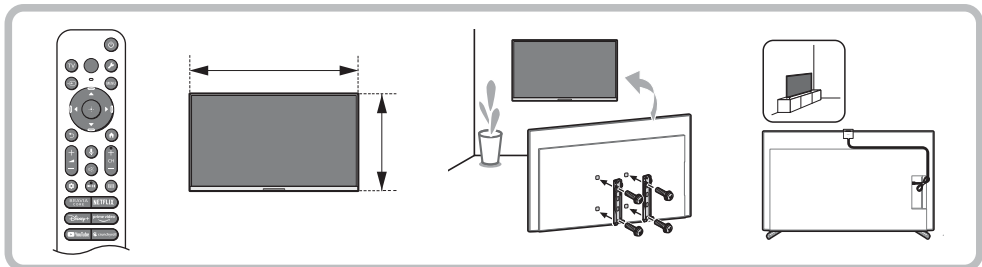

Read this manual before using this product

### Sony Customer Support

U.S.A.:

<https://www.sony.com/tvsupport>

Canada:

<https://www.sony.ca/support>

United States

1.800.222.SONY

Canada

1.877.899.SONY

Call the telephone number that appears on your warranty card/policy.

Please do not return the product to the store.

Lisez ce manuel avant d'utiliser le produit

### Service à la clientèle Sony

Canada :

<https://www.sony.ca/support>

États-Unis :

<https://www.sony.com/tvsupport>

Canada

1.877.899.SONY

États-Unis

1.800.222.SONY

Appelez le numéro de téléphone qui apparaît sur votre carte/policy.

Ne retourner pas le produit au magasin.

Lea este manual antes de usar el producto

### Centro de Asistencia de Sony

<https://esupport.sony.com/ES/LA/>

Llame al número de teléfono que aparece en su tarjeta/póliza de garantía.

Por favor no devuelva el producto a la tienda donde adquirió el producto.

© 2023 Sony Corporation

Dimensions and weight (without Table-Top Stand) / Dimensions et poids (sans support de table) / Dimensiones y peso (sin soporte de sobremesa)

|                     | (mm)/(inches/pouces/pulgadas)*1 |               |               |            | (kg)/(lb.)*2 |
|---------------------|---------------------------------|---------------|---------------|------------|--------------|
|                     | A                               | B             | C             | D          | W            |
| XR-98X90L           | 2199 / 86 1/8                   | 1305 / 51 1/2 | 1255 / 49 1/2 | 85 / 3 3/8 | 67.2 / 148.1 |
| XR-85X90L / 85X90CL | 1891 / 74 1/2                   | 1120 / 44 1/8 | 1085 / 42 3/8 | 59 / 2 3/8 | 44.5 / 98.1  |
| XR-75X90L / 75X90CL | 1668 / 65 3/4                   | 992 / 39 1/8  | 959 / 37 1/8  | 59 / 2 3/8 | 35.4 / 78    |
| XR-65X90L / 65X90CL | 1445 / 57                       | 861 / 34      | 831 / 32 3/8  | 57 / 2 1/8 | 24.2 / 53.4  |
| XR-55X90L           | 1225 / 48 1/8                   | 707 / 27 7/8  | 677 / 26 7/8  | 56 / 2 1/8 | 16.9 / 37.3  |

\*1 (Approx. / Environ / Aprox.)

|                     | (mm)/(inches/pouces/pulgadas)*1 |               |               |            | (kg)/(lb.)*2 |
|---------------------|---------------------------------|---------------|---------------|------------|--------------|
|                     | A                               | B1            | B2            | C          | W            |
| XR-98X90L           | 2199 / 86 1/8                   | 1305 / 51 1/2 | 1255 / 49 1/2 | 85 / 3 3/8 | 68.9 / 151.8 |
| XR-85X90L / 85X90CL | 1891 / 74 1/2                   | 1120 / 44 1/8 | 1085 / 42 3/8 | 59 / 2 3/8 | 45.9 / 101.2 |
| XR-75X90L / 75X90CL | 1668 / 65 3/4                   | 992 / 39 1/8  | 959 / 37 1/8  | 59 / 2 3/8 | 36.6 / 80.7  |
| XR-65X90L / 65X90CL | 1445 / 57                       | 861 / 34      | 831 / 32 3/8  | 57 / 2 1/8 | 25 / 55.1    |
| XR-55X90L           | 1225 / 48 1/8                   | 707 / 27 7/8  | 677 / 26 7/8  | 56 / 2 1/8 | 17.7 / 39    |

\*1 (Approx. / Environ / Aprox.)

|                     | (mm)/(inches/pouces/pulgadas)*1 |               |               |            | (kg)/(lb.)*2 |
|---------------------|---------------------------------|---------------|---------------|------------|--------------|
|                     | A                               | B1            | B2            | C          | W            |
| XR-98X90L           | 2199 / 86 1/8                   | 1305 / 51 1/2 | 1255 / 49 1/2 | 85 / 3 3/8 | 68.9 / 151.8 |
| XR-85X90L / 85X90CL | 1891 / 74 1/2                   | 1120 / 44 1/8 | 1085 / 42 3/8 | 59 / 2 3/8 | 45.9 / 101.2 |
| XR-75X90L / 75X90CL | 1668 / 65 3/4                   | 992 / 39 1/8  | 959 / 37 1/8  | 59 / 2 3/8 | 36.6 / 80.7  |
| XR-65X90L / 65X90CL | 1445 / 57                       | 861 / 34      | 831 / 32 3/8  | 57 / 2 1/8 | 25 / 55.1    |
| XR-55X90L           | 1225 / 48 1/8                   | 707 / 27 7/8  | 677 / 26 7/8  | 56 / 2 1/8 | 17.7 / 39    |

\*1 (Approx. / Environ / Aprox.)

The length of the screw for Wall-Mount Bracket differs depending on the Wall-Mount Bracket thickness / La longueur des vis pour le support de fixation murale diffère selon l'épaisseur du support de fixation murale / La longitud del tornillo para el soporte de montaje mural varía dependiendo del espesor del soporte de montaje mural

 
|                     | (mm)/(inches/pouces/pulgadas)*1 |               |               |            | (kg)/(lb.)*2 |
|---------------------|---------------------------------|---------------|---------------|------------|--------------|
|                     | A                               | B1            | B2            | C          | W            |
| XR-98X90L           | 2199 / 86 1/8                   | 1305 / 51 1/2 | 1255 / 49 1/2 | 85 / 3 3/8 | 68.9 / 151.8 |
| XR-85X90L / 85X90CL | 1891 / 74 1/2                   | 1120 / 44 1/8 | 1085 / 42 3/8 | 59 / 2 3/8 | 45.9 / 101.2 |
| XR-75X90L / 75X90CL | 1668 / 65 3/4                   | 992 / 39 1/8  | 959 / 37 1/8  | 59 / 2 3/8 | 36.6 / 80.7  |
| XR-65X90L / 65X90CL | 1445 / 57                       | 861 / 34      | 831 / 32 3/8  | 57 / 2 1/8 | 25 / 55.1    |
| XR-55X90L           | 1225 / 48 1/8                   | 707 / 27 7/8  | 677 / 26 7/8  | 56 / 2 1/8 | 17.7 / 39    |

\*1 (Approx. / Environ / Aprox.)

Optional Camera and Microphone Unit (not supplied) / Câble Management / Gestion du câble de la caméra avec microphone en option (non fourni) / Manejo del cable de la unidad de cámara y micrófono opcional (no suministrado)



EN

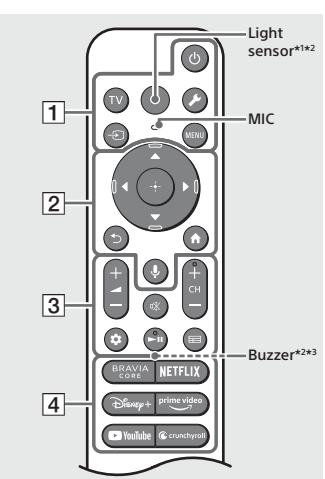

The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model/TV settings.\*4

- (Power)**  
TV: Display TV channel list or switch to Input.  
➤ **(Quick settings):** Display Quick Settings.  
➤ **(Input):** Display and select the input source, etc.  
**MENU (Control menu):** Display the Control menu.
- (Back)**  
➤ **(Home)**  
➤ **(Google Assistant / Microphone):** Use Google Assistant\*\*4.
- (Volume)**  
➤ **(Mute)\***  
➤ **CH + / - (Channel)**  
➤ **(Dashboard):** Display Dashboard.
- (Guide):** Display the digital program guide of TV or Cable/satellite box\*\*4.

- The remote control backlight will illuminate when the light sensor detects the ambient light is low. Automatic illumination of the backlight can be turned off.
- RMF-TX810U only. To see the model name of the remote control, open the remote control cover and see the label on the remote control.
- The buzzer will emit a sound when you use the remote control finder function. Refer to the online Help Guide for details.
- Google Assistant requires an Internet connection.
- Accessibility shortcut is available by pressing and holding ⏏ (Mute).
- (Cable/Satellite box setup) setting is required.

- Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
- Read the supplied safety documentation for additional safety information.

Location of the identification label  
Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.

| IMPORTANT NOTICE                                                                                                                                                                                        |  |  |  |  |  |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|--|--|--|
| Owner's Record                                                                                                                                                                                          |  |  |  |  |  |
| The model and serial numbers are located at the side and/or rear of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this TV. |  |  |  |  |  |
| Model Name                                                                                                                                                                                              |  |  |  |  |  |
| Serial No.                                                                                                                                                                                              |  |  |  |  |  |

**IMPORTANT NOTICE FOR MEXICO**  
Operation of this equipment is subject to the following two conditions: (1) It is possible that this equipment or device may not cause harmful interference and (2) this equipment or device must accept any interference, including interference that may cause undesired operation.

For information related to the certificate number, refer to the package label and / or product.

Note:  
This product uses the following module for wireless functionalities:  
Model: DHUR-SV63  
Brand: Wistron NeWeb Corporation

WLAN:  
2.4 GHz (2,4000 GHz - 2.4835 GHz)  
5 GHz (5,150 GHz - 5.850 GHz)  
Bluetooth®:  
2.4 GHz (2,4000 GHz - 2.4835 GHz)

Information for the remote control with voice command included with this product:  
Model: RMF-TX810U\*  
Brand: Sony

Note: Use the following device for wireless functionalities:  
Model: UE878  
Brand: UEI

\* To see the model name of the remote control, open the remote control cover and see the label on the remote control.

### Safety Information

Notice for customers in the United States of America

**Supplier's Declaration of Conformity**  
Trade Name: SONY  
Model: XR-98X90L / XR-85X90L / XR-85X90CL / XR-75X90L / XR-75X90CL / XR-65X90L / XR-65X90CL / XR-55X90L  
Responsible Party: Sony Electronics Inc.  
Address: 16535 Via Esprillo, San Diego, CA 92127 U.S.A.  
Telephone Number: 858-942-2230

**Compatible Wall-Mount Bracket Information**  
Use the following Sony Wall-Mount Bracket with your TV model.

| Sony TV Model No.                                |            |
|--------------------------------------------------|------------|
| XR-75X90L / 75X90CL / 65X90CL / 65X90CL / 55X90L |            |
| Sony Wall-Mount Bracket Model No.                | SU-WLB85*1 |

Use with other Wall-Mount Brackets\*2 may cause instability and could result in property damage or injury.

 
 
 
 
- \*1 Only for limited region/country/model.
- \*2 For instructions on using the Wall-Mount Bracket with your TV please go to <https://www.sony.com/am/support> for your TV model and download "Wall-Mount Bracket".

**To Customers**  
Sufficient expertise is required for TV installations. Be sure to subcontract the installation to a Sony dealer or licensed contractor and pay adequate attention to safety during the installation.

**Before setting up your TV**  
Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See "Installing the TV to the Wall" if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand (refer to the Setup Guide).  
Be sure to consider the following while setting up your TV:

- Disconnect all cables when carrying the TV.
- Two or more persons (three or more persons for 214.8 cm (85 inches), four or more persons for 247.7 cm (98 inches) and above TV) are needed to transport a large TV set.
- Correct hand placement while carrying the TV is very important for safety and to avoid damage.
- When handling or mounting the TV set, do not lay down the TV (for applicable TV model only).

XR-98X90L

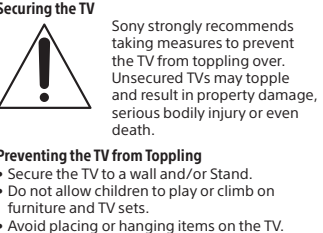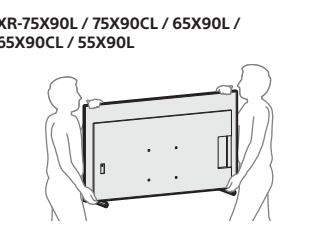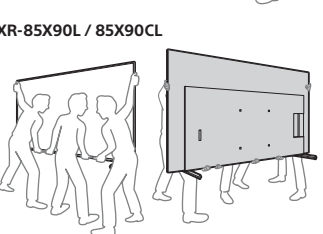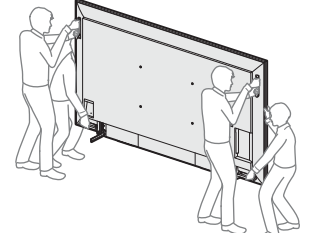


**Securing the TV**  
Sony strongly recommends taking measures to prevent the TV from toppling over. Unsecured TVs may topple and result in property damage, serious bodily injury or even death.

**Preventing the TV from Toppling**  
• Secure the TV to a wall and/or Stand.  
• Do not allow children to play or climb on furniture and TV sets.  
• Avoid placing or hanging items on the TV.  
• Never install the TV on:  
— Shaky, unstable and/or uneven surfaces.  
— Furniture that can easily be used as steps, such as a chest of drawers.  
• Install the TV where it cannot be pulled, pushed or knocked over.  
• Install the TV so that the TV's Table-Top Stand does not protrude out from the Stand (not supplied). If the Table-Top Stand protrudes out from the Stand, it may cause TV to topple over, fall down, and cause personal injury or damage to the TV.


**Recommended Measures to Secure the TV**  
Refer to the following measures when securing your TV to a Stand (not supplied).

 - Secure the Stand for the TV.  
Make sure the Stand can adequately support the weight of the TV. Use two angle brace (not supplied) to secure the Stand. For each angle brace use the appropriate hardware to:  
• Attach one side of the angle brace to the wall stud.  
• Attach the other side to the Stand.

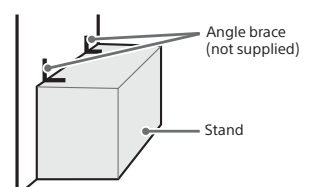


**2 Secure the TV to the Stand.**  
Use the optional hardware listed as follows (not supplied):  
• M6 machine screws (screwed into the TV's Table-Top Stand) (XR-98X90L only).  
• M6 machine screws (screwed into the TV's rear cover) (except XR-98X90L).  
• A screw or similar (attach it to the Stand).  
• Rope or chain (strong enough to support the weight of the TV). Make sure that there is no excess slack in the rope or chain.

 XR-98X90L




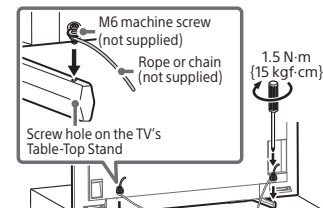


**Compatible Wall-Mount Bracket Information**  
Use the following Sony Wall-Mount Bracket with your TV model.






| Sony TV Model No.                                |            |
|--------------------------------------------------|------------|
| XR-75X90L / 75X90CL / 65X90CL / 65X90CL / 55X90L |            |
| Sony Wall-Mount Bracket Model No.                | SU-WLB85*1 |

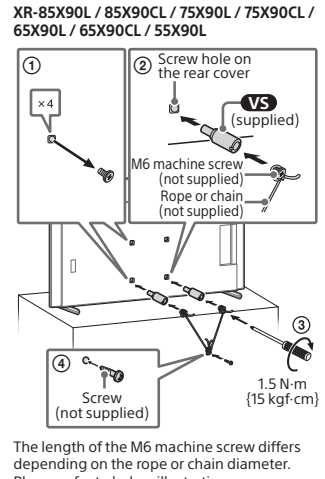 

    The length of the M6 machine screw differs depending on the rope or chain diameter. Please refer to below illustration.

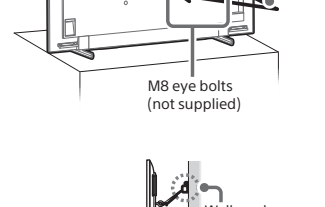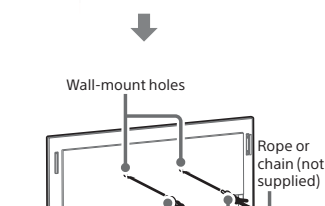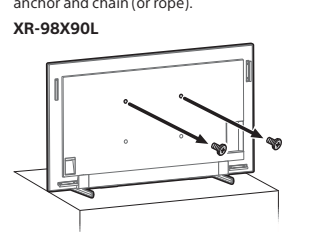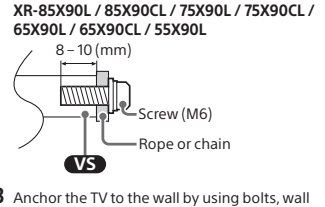

     **Model Name**  
XR-98X90L 600 × 400 mm  
XR-85X90L / 85X90CL 400 × 400 mm  
XR-75X90L / 75X90CL 300 × 300 mm  
XR-65X90L / 65X90CL 300 × 300 mm  
XR-55X90L 300 × 300 mm

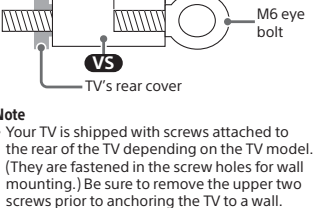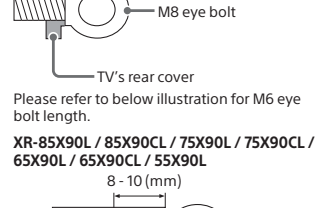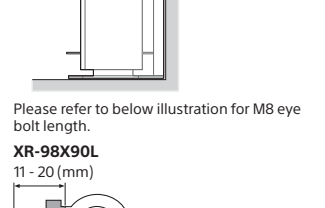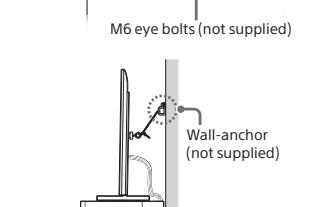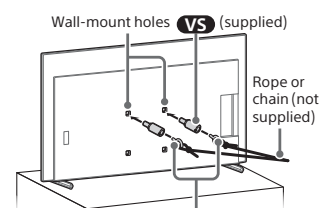


**Note**  
• Your TV is shipped with screws attached to the rear of the TV depending on the TV model. (They are fastened in the screw holes for wall mounting.) Be sure to remove the upper two screws prior to anchoring the TV to a wall.  
• Securing the TV to the Stand without securing the TV and the Stand to the wall provides minimum protection against the TV toppling over. For further protection, be sure to follow the three measures recommended.

**The BRAVIA® 4K TV Experience**  
Thank you for choosing Sony! Your new BRAVIA® TV opens the door to the "4K TV Experience". This document will help you get the most out of your TV. Please take a moment to register your TV at:  
U.S.A.:  
<https://productregistration.sony.com>  
Canada:  
<https://www.sony.ca/registration>  
This TV displays all video input signals in a resolution of 3840 dots × 2160 lines.

Note

- For supported PC formats, refer to the online Help Guide.

 **Guidelines for IR Remote Control**  
• Point your remote control directly at the IR sensor located on your TV.  
• Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.

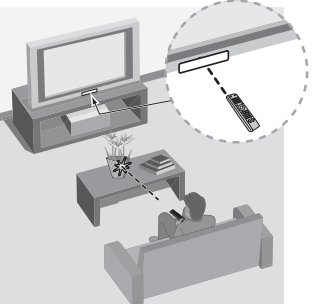

- Fluorescent lamps can interfere with your remote control, try turning off the fluorescent lamps.
- If you are having problems with the remote control, reinset or replace your batteries and make sure that they are correctly inserted.

**Installing the TV to the Wall**  
Using the optional Wall-Mount Bracket (SU-WLB85 only)\* (not supplied)

**To Customers:**  
For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by your dealer or licensed contractors. Do not attempt to install it yourself.

**To Sony Dealers and Contractors:**  
Provide full attention to safety during the installation, periodic maintenance and examination of this product.

**Wall-Mount Bracket Installation**  
For instructions on Wall-Mount Bracket installation, see the Installation Information (Wall-Mount Bracket) on the Sony Customer Support website for your TV model at the following address:  
<https://www.sony.com/am/support>

Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.  
• Sony is not liable for any damage or injury caused by mishandling or improper installation.

• Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

**Note**  
• Read the supplied safety documentation for additional safety information.

• Only for limited region/country/model.

**Using the optional Wall-Mount Bracket (except SU-WLB85) (not supplied)**  
This TV's instruction manual only provides the steps to prepare the TV for Wall-Mount installation before it is installed on the wall.

Your TV can be mounted to a wall using a suitable Wall-Mount Bracket (not supplied). If the Table-Top Stand is attached to the TV, the TV may require detaching the Table-Top Stand; see "Detaching the Table-Top Stand from the TV". Prepare the TV for the Wall-Mount Bracket before making cable connections.

**For product protection and safety reasons, Sony strongly recommends that installation of your TV on the wall be performed by qualified professionals. Do not attempt to install it yourself.**

• Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.  
• The screws for installing the Wall-Mount Bracket to the TV are not supplied.  
• Refer to the following table for wall-mount hole pattern.

| Model Name | Wall-mount hole pattern |
|------------|-------------------------|
| XR-98X90L  |                         |

