 
 


Wireless Audio Transmitter Adapter for XBox Controller



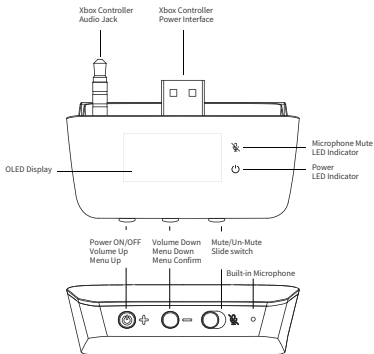

Product Details




Display Information



Basic Operation

Function	Display Information	Button Control	LED States	Remark
Power On		Auto power on when XBox controller turn on. Also can be power on by long press Power button for 3 seconds.	Power LED light on for 2 seconds	If there is no device paired with BOX02, it will auto power off in 10 minutes
Power Off		Long press Power button for 5 seconds	Power LED light on for 2 seconds	
Enter pairing mode		Long press the Vol ⁺ + and Vol ⁻ - button at the same time for 3 seconds	Power LED flashing	Refer to Page 6~7
Exit pairing mode	N/A	Click the Vol ⁺ + and Vol ⁻ - button at the same time	N/A	
Mute/ Un-Mute	N/A	Slide Mute switch to left/right side	Mute LED on/off	Refer to Page 8
Microphone Switch	N/A	Long press Vol ⁺ - button for 3 seconds	N/A	Refer to Page 8~9
Volume Up	N/A	Click Vol ⁺ + button	N/A	
Volume Down	N/A	Click Vol ⁻ - button	N/A	
Reset paired list		Long press the Vol ⁺ + and Vol ⁻ - button at the same time for 5 seconds	N/A	

 Adapter Installation

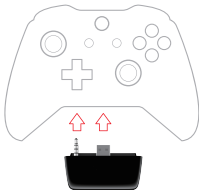

Insert the adapter in the direction of Xbox controller's headphone and power interface hole.



After installation, adapter and Xbox controller fit without gaps.

Application Scenarios

XBox console transmitter audio playback to Xbox controller, Box02 is used as a Bluetooth Transmitter, it's 3.5mm audio port receive audio playback from Xbox controller and transmits to Bluetooth headphone paired with Box02.



XBox



Transmitter



Bluetooth Earbuds



Bluetooth Earphone



 
Bluetooth Headphone

How to Use



③ Follow these steps to pairing:

- a. Put the Bluetooth earbuds to be used by entering pairing mode.



b. Long press the Vol "+" and Vol "-" button at the same time for 3 seconds to enter pairing mode.



c. Find a list of nearby Bluetooth devices that can be paired.



 
d. Press the menu up/down buttons to select Bluetooth device, and long press menu down button for 2 seconds to confirm and pair.




e. Paired successfully.



Microphone Mute/Un-Mute



 Microphone Mute

 

 Microphone Un-Mute

Built-in/External Microphone Switch

Long press the Vol "-" button for 2 seconds to switch between Built-in microphone and External microphone.



 
 IN = Built-in Microphone

 EX = External Microphone
(Bluetooth headphone's Microphone)


FS = Fast Stream



Built-in Microphone Mode

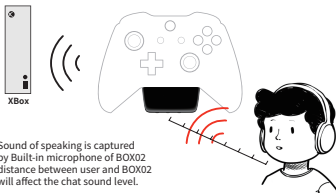

External Microphone Mode

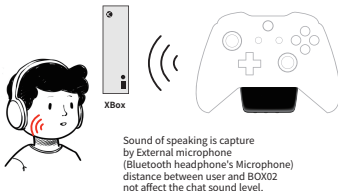 

Remarks:

When use External microphone, sound of speaking is captured by the Bluetooth headphone's microphone, BOX02 runs at FS (Fast Stream) mode, sound quality will decrease due to technical bottlenecking.

Encoding Format Support

Audio Encoding Format	TX Mode
SBC	✓
AAC	X
APTX	✓
APTX-AD	✓
APTX-HD	✓
APTX-LL	✓
FS (Fast Stream)	✓

Specification

Effective Range: 10 meters (33 feet)

Bluetooth Version: 5.2

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warranty Terms

1. There is a manual and warranty card in the package.
User fill out the warranty card as the warranty certificate.
2. When adapter quality problems occur in normal use and not more than a year since the date of purchased, users can enjoy free repair services.
3. The following situations don't belong to the scope of warranty:
 - A. No dealer signature or seal in warranty card.
 - B. Artificial or force majeure cause damage.
 - C. Machine to normal wear and tear.
4. If the failure is caused by human factors, beyond the warranty period or force majeure factors, we will charge maintenance fees.
5. If the product fails and needs to be returned to the factory for warranty, please contact us: **yocowoco@outlook.com**.