


Please read the manual before using the product. The manual and carton contain important information, please keep them properly for later reference. Failure to follow the instructions may be dangerous to children. In order to improve the product and quality, we may change some of the structure, appearance, packing method, assembly method and function without any notice. When there is any difference between the manual and the product, please refer to the actual product. We are sorry for any inconvenience.

Executive standard:



Manual of Battery Powered Car


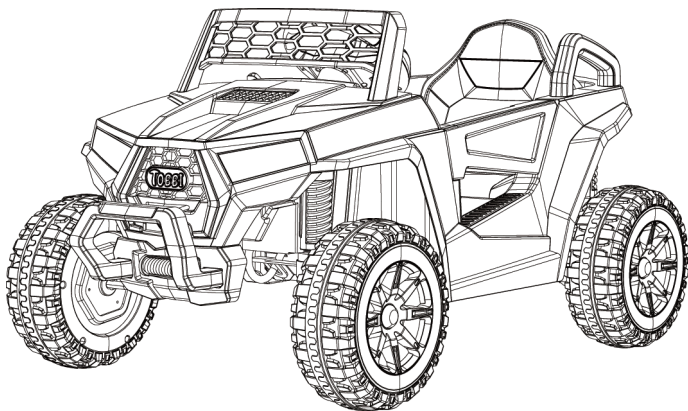



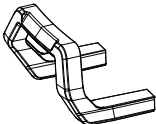
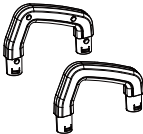





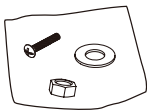
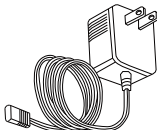


WARNING

Products should be assembled by an adult. Protective equipment should be worn. Not to be used in traffic. Not suitable for children under 3 years.

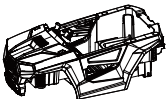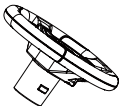Choking hazard- small parts. There are potentially hazardous small parts in an unassembled state. Please keep out of the reach of small children. Pay attention to the potential hazards of using the toy in areas other than private grounds.


PARTS LIST

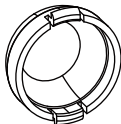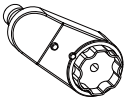Number	Part Name	Picture	Quantity	Number	Part Name	Picture	Quantity
1	Car body		1	2	Steering wheel		1
3	Seat		1	4	backrest		1
5	Wind deflector		1	6	Front bumper		1
7	Handrail		2	8	Front wheel		2
9	Rear wheel		2	10	Wheel cover		4
11	Drive motor		2	12	Rear shaft		1
13	Kit		1	14	Charger		1

ASSEMBLY INSTRUCTIONS


1. Install the wheel

Install the wheel on the shaft, fit the 8mm nut with a wrench, and install the wheel cover.

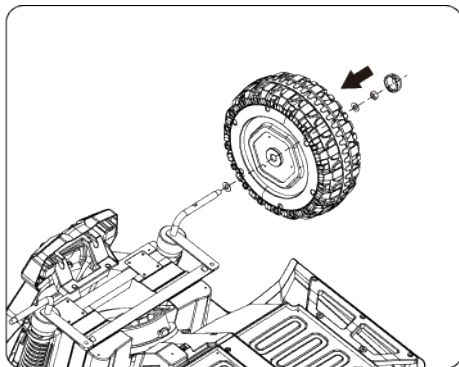


2. Install the steering wheel

First connect the wire on the steering wheel with the wire on the body, and then clamp the steering wheel at the specified position.

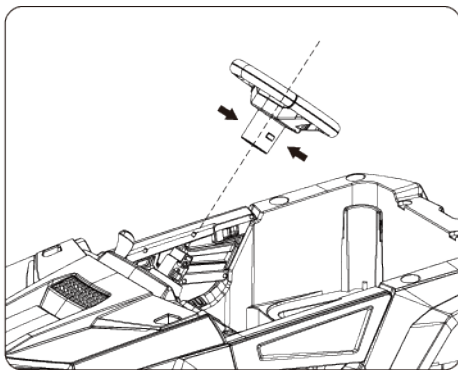


3. Install the wind deflector

Insert the wind deflector into the specified position of the vehicle body.

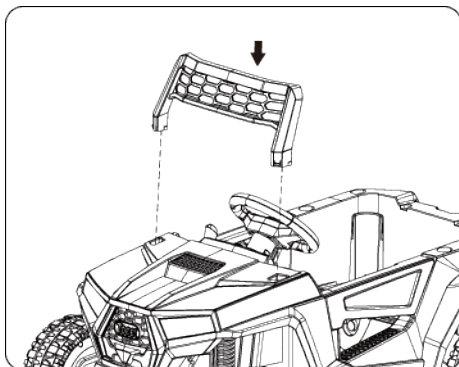


4. Install the bumper

Insert the bumper into the specified position of the body.

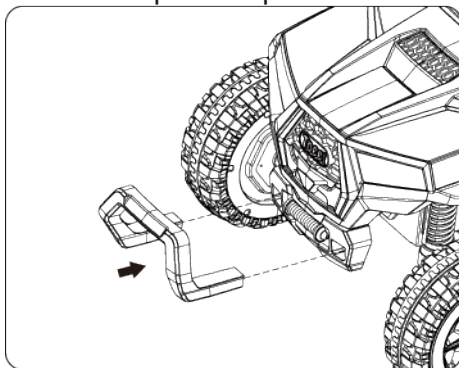


5. Connect the power supply

Open the seat and connect the two plugs.

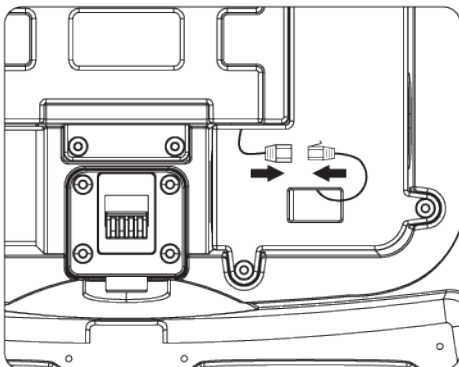


6.Install the backrest

Insert the backrest into the body and fix it with two 4*12mm screws.

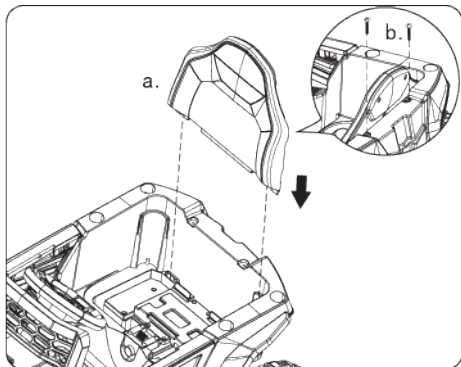


6.Install the seat

Put the seat into the bottom of the backrest, then lay it flat and insert it into the body.

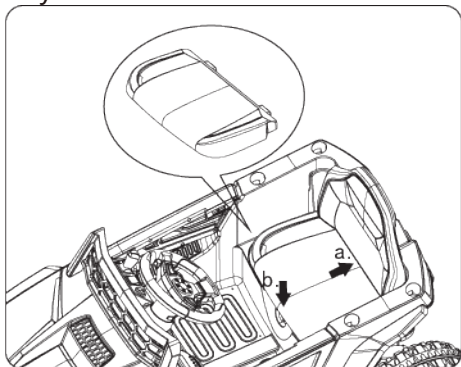

7.Mount the handrails

Insert directly into both sides of the body as shown in the figure.

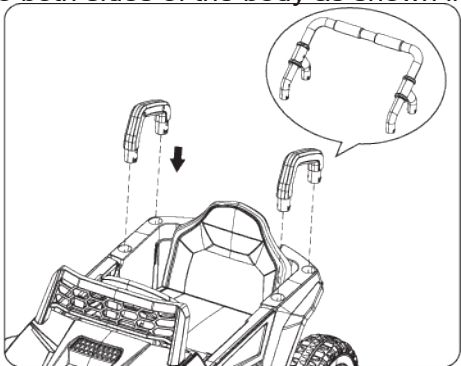


PRODUCT SPECIFICATIONS

Battery	12V4.5
Main material	PP
Suitable age	37-60 Months
Weight limit	66 lbs
Product size	37 x 24 x 20 Inches
Carton Size	35 x 19 x 13 Inches
Speed	3-5km/h
Runtime	1-2 hours after charging for 8-12 hours, based on riding conditions
Charger	12V0.5A
Fuse	Auto-reset fuse

CHARGER WAY

- For safety concerns, charging must be done by adults.
- Fully charge the battery for the first time.
- Power OFF before charging, then put the charger into the charging hole.
- Insert the power plug into the power supply at the correct voltage.
- Charge the battery when the car runs slow, normal charging time is 8 -12 hours. Do not exceed.
- Fully charge the battery before storing it for a long time.

Press the seat quick-release button to take out the seat. Then unplug the power cord and plug it into the charger.

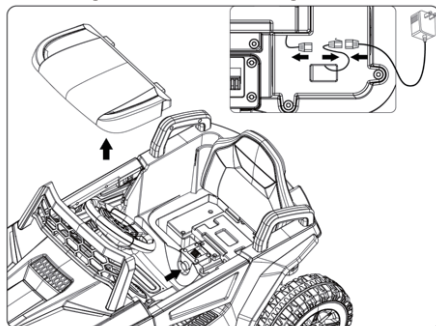

Attention:

- Do not use incorrect batteries or chargers.
 - Do not mix old and new or different types of batteries.
 - The battery terminal should not be short circuit.
 - Do not open the battery or charger.
 - Do not leave batteries up side down when charging.
 - Check the charger, battery and plug before charging.
- If there is any broken part, stop using it immediately.
- Do not use it until it is fully repaired.
 - It is normal for the battery to get a little hot while charging. If not, it may be caused from the short circuit of charger or circuit board.
 - Must use the pressing plate to fix the battery.
 - Exhausted batteries must be handled by adults, remove the batteries that run out. Recycle properly and shall not be arbitrarily discarded.
 - To extend the lifetime of the battery, fully charge it every 3 months.
 - Chargers and batteries are not toys, keep kids away from them.

MAINTENANCE AND SERVICE

1. Parents should check whether all the parts are in good condition before use, like the battery, charger, wire, plug, body and other parts, whether any screws are loose, whether there are potential safety hazards. If found, it must be repaired.
2. Wipe moving parts with a small amount of lubricating oil to prevent wear parts from rusting after using the toys for some time.
3. The car should be far away from the fire and out of sunlight. Store indoors or store outdoors with a protective cover. Do not put it upside down.
4. The car should be far away from the hot things, like the stove or heater, because the plastic part may melt. When charging, the car should be far away from inflammable materials to prevent it from fire.
5. Charge in time after use, and the charging work must be done by adults. If the product is not used for a long time, it must be fully charged, every month, so that to extend the battery lifespan.
6. Must use a soft cloth to clean the car. Do not use chemical solvents to wipe the toy plastic parts. Do not use soap and water to clean the car or drive in rainy or snowy weather. Water will damage the motor, battery and circuit system.
7. When stopping or storing the car, please cut off the power and make all the switch to "STOP" or "OFF" position.
8. Do not use the fuse which is not same with this product specifications.
9. Do not change the product structure and circuit system. Maintenance and repair work must be under the guidance of the professional or technical person.

10. Don't put toys for other purposes. Put batteries in the right polarity.
11. Do not short-circuit the negative battery. Non rechargeable batteries, can't be charged.
12. Chargeable batteries can only be charged under adult supervision.
13. Don't mix old or new batteries or different types of batteries.
14. Exhausted batteries should be removed from the toy properly to prevent children from playing.
15. Disconnect the battery completely if not in use and prevent children from playing.

TROUBLESHOOTING

Car does not move or power on	If the "power" switch is in OFF position
	If the fuse doesn't work properly
	If the battery is not connected, check the red and black wires.
	If the charger is plugged in, car will not power on. Unplug the charger.
	If the pedal switch doesn't work properly
	If the wheels stuck and cannot move
Car moves slow	If the battery is not fully charged. Need to be charged in time
	If there is an issue with the wheels
	If the rider weight exceeds the limit
Battery does not charge	If the charger is malfunctioning
	If the battery loses its capacity
	If the charger and battery are connected to charge