

Insta360

Bullet Time Selfie Stick 2.0

子弹时间自拍杆 2.0

Instructions for Use

使用说明

Gebrauchsanleitung

取扱説明

Instrukcja użytkowania

EN / CN / DE / JA / PL

Specs

Minimum Length: 29.7cm (11.7in)

Maximum Length: 120.6cm (47.5in)



Weight: 250g (8.8oz)

Max. Weight Limit: 300g
(10.6oz)

How to Use


■ Selfie Stick Mode

Tighten the knob, mount the camera, and then extend the selfie stick to the desired length.

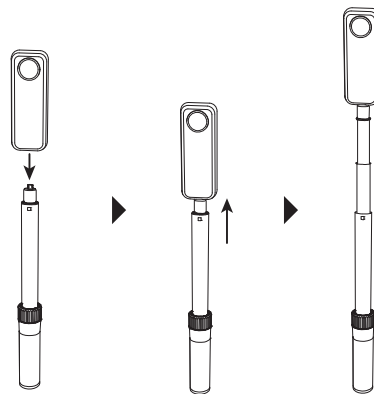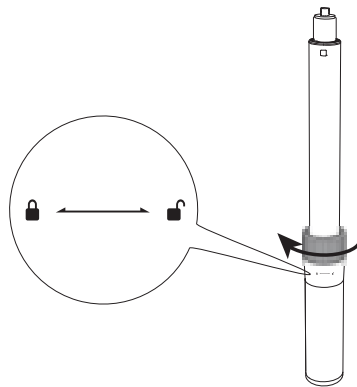


■ Bullet Time Mode

1. Loosen the knob, extend the stick until the red indication mark on the Bullet Time Component is completely exposed, then tighten.

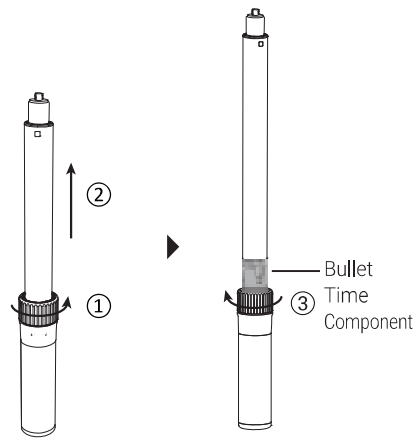


Tip: To retract the Bullet Time Component, loosen the knob and shorten the stick.


2. Hold the handle of the selfie stick and rotate the Bullet Time Component until it aligns with the desired notch in the angle ring (65°, 75° or 90°) then insert and snap into place.

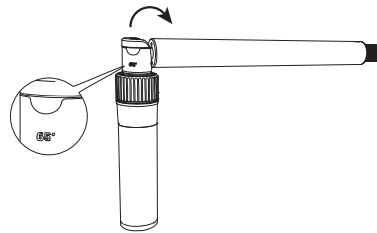

3. Mount your camera onto the selfie stick and turn it until one of the lenses is aimed squarely at the ground and the other is facing directly upwards. Then extend the stick to the desired length.

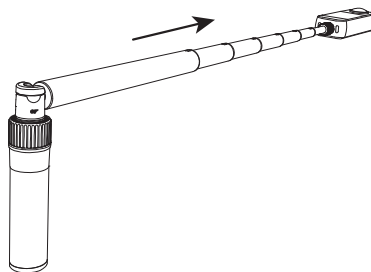

4. Set your camera to Bullet Time Mode, then grip the handle tightly and swing the selfie stick in a circular motion at a consistent speed. One rotation per second is recommended.

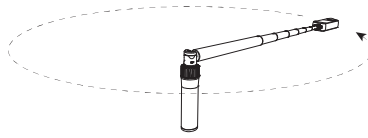

Notes:

- When using Selfie Stick Mode, don't loosen the knob to extend or retract the Bullet Time Component.
- Only use Bullet Time Mode with Insta360 X series cameras, and ensure the camera is securely connected to the selfie stick before using the feature.
- This selfie stick can be used in fresh water, but cannot be used in salt water. After using it in water, shake out all excess water via the drainage hole in the bottom of the selfie stick. Leave it in a cool, dry area to dry thoroughly before using it again.
- This selfie stick provides three different Bullet Time angles: 65°, 75° and 90°. The lower the angle, the better the view, but the invisible selfie stick effect will become harder to achieve.
- When using the selfie stick on a beach, avoid getting sand in the rotating gear and hinge. If sand does get into the selfie stick, clean thoroughly before using Bullet Time.
- Ensure that the bullet time component is completely extended and the red indication mark is visible before using Bullet Time Mode in order to prevent damage when swinging the selfie stick.
- The 1/4" screw port at the bottom of the selfie stick can connect with a tripod or Selfie Stick Wrist Strap. Do not install on vehicles for use while in motion.

Disclaimer

Please read this Disclaimer carefully. Using this product means that you acknowledge and accept the terms of this disclaimer. By using this product, you hereby acknowledge and agree that you are solely responsible for your own conduct when using this product and any consequences thereof. You agree to use this product only for proper and lawful purposes. You understand and agree that Arashi Vision Inc. (hereinafter referred to as 'Insta360') accepts no liability for any and all misuse, consequences, damages, injuries, penalties, or any other legal responsibility directly or indirectly incurred by your using this product and associated accessories. Before every use, make sure that your accessories are functioning properly. If there's any damage or irregularity, stop using them immediately. Within the scope of state laws and regulations, Insta360 reserves the right of final explanation and revision for the commitment.

After-Sales Service

The warranty period of the attached product is 3 months from the original retail purchase. Warranty service may vary according to the applicable laws of your state or jurisdiction. For detailed warranty policies, please visit <https://insta360.com/support>