

anko

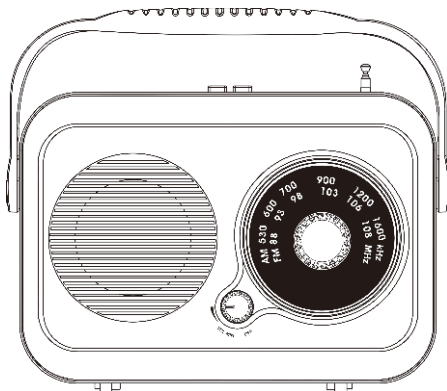


TABLE OF CONTENTS

Functions	2
Important Safeguards	2
Battery Safety	3
Parts	4
Before First Use	5
Mains Operation	5
Battery Operation	5
Radio Operation	5
Using Line-in Jack	5
Using Headphones	5
Cleaning And Care	5
Technical Data	6
Warranty Card	7

USER MANUAL

RETRO RADIO

42646396

Dear Customer,

Thank you for choosing the Retro Radio. For correct operation and maintenance of this appliance, please read this User Manual carefully. Please pay particular attention to the Safety section.

FUNCTIONS

- ▶ FM: 87.5 – 108 MHz / AM: 530 – 1600 KHz Radio
- ▶ Headphone Jack
- ▶ Line-in Jack
- ▶ AC/DC operation

IMPORTANT SAFEGUARDS

Please read this instruction manual thoroughly before using this appliance! Follow all the safety instructions to avoid damage caused by improper use.


- ▶ Keep the instruction manual for future reference. Should this appliance be given to a third party, then this instruction manual must also be handed over.
- ▶ Use this appliance solely for its intended purpose.
- ▶ This appliance is intended for household use only.
- ▶ Only use this appliance indoors.
- ▶ **Danger of electroshock!** Do not immerse the appliance, power cord or power plug in water or in other liquids.
- ▶ Do not place the appliance in the direct vicinity of liquids - e.g. bathtubs and sinks, in a damp basement or close to a swimming pool.
- ▶ Do not start up the appliance with damp hands or if you are standing on a wet floor. Never grasp the power plug with damp or wet hands.
- ▶ The manufacturer assumes no liability for possible damages that may have been caused by incorrect usage or mishandling of the appliance.
- ▶ This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- ▶ Young children should be supervised to ensure that they don't play with the appliance.
- ▶ Keep the appliance away from all hot surfaces and naked flames.
- ▶ Do not place any objects on the appliance. Don't put objects with naked flames (such as candles) on or next to the appliance. Never put items containing liquid (such as vases) on or next to the appliance.
- ▶ Do not expose the appliance to direct sunlight.
- ▶ Do not use the appliance if it is damaged. To avoid hazards, defective components must only be replaced by the manufacturer, his customer service or similar qualified persons.
- ▶ Do not dismantle and repair the appliance by yourself.
- ▶ Do not insert any foreign objects into the housing.
- ▶ Do not cover the appliance while in use.
- ▶ This appliance should be only operated with the type of power source, or batteries indicated on the marking label. Marketing label is located at rear enclosure of the apparatus.
- ▶ Always turn the power off before plugging the appliance into the power outlet or unplugging it.
- ▶ Prevent damage to the power cord by not squeezing, bending or rubbing it on sharp edges. Keep the cord away from hot surfaces and open flames.
- ▶ Always pull the plug, not the power cord when disconnecting the appliance from a power outlet.
- ▶ Plug the appliance into an easily accessible socket, so that you can disconnect it quickly from the mains, in the event of an emergency. Unplug the appliance from the power socket to switch it off completely. Use the mains plug as a disconnecting appliance.
- ▶ If the appliance malfunctions due to electrostatic discharge or short-term overvoltage, disconnect it from the power supply and connect it once again.
- ▶ Ensure minimum distances of 5 cm around the apparatus for sufficient ventilation. Do not place the product in closed bookcases or racks without proper ventilation. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- ▶ Do not use or store the equipment in humid or dusty area. Attention should be drawn to the use of apparatus in tropical and/ or moderate climates.
- ▶ To prevent possible hearing damage, do not listen at high volume levels for long periods.



BATTERY SAFETY

- ▶ Only use Alkaline or rechargeable batteries.
- ▶ If the batteries leak, remove them with a cloth and dispose of them accordingly. Ensure that leaking battery acid does not come into contact with skin and eyes. If you do get battery acid in your eyes, flush them thoroughly with lots of water and consult a physician immediately! If battery acid comes into contact with your skin, wash the affected area with lots of water and soap.
- ▶ **Danger of explosion!** Batteries must not be charged or reactivated by other means, taken apart, thrown in the fire or short-circuited.
- ▶ Do not expose batteries to extreme temperatures such as from direct sunlight or fire. Do not place the appliance on a heater. Leaking battery acid can cause damage.
- ▶ **Caution!** There is a danger of explosion if the batteries are inserted incorrectly. Use only the same battery types with the corresponding technical data to replace them.
- ▶ Do not use old and new batteries or batteries of a different type or that are from different manufacturers together.
- ▶ Always insert batteries in accordance with the correct polarity (+ and -) as illustrated in the battery compartment.
- ▶ Batteries are life-threatening if swallowed. Store all batteries out of the reach of small children and domestic animals. Seek medical help immediately if batteries are swallowed.
- ▶ Do not allow children to change batteries without adult supervision.
- ▶ If the battery compartment door does not secure closely, stop using the appliance and keep it away from the children.
- ▶ If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- ▶ If the device is not to be used for an extended period of time, then the batteries should be removed, as the device could become damaged should they leak.
- ▶ If the device functions weaken, replace all batteries.
- ▶ Remove the batteries prior to disposing of the device.
- ▶ **Batteries do not belong in household waste!** Expired batteries must be disposed of in an environmentally friendly way and according to the applicable legal regulations.

PARTS

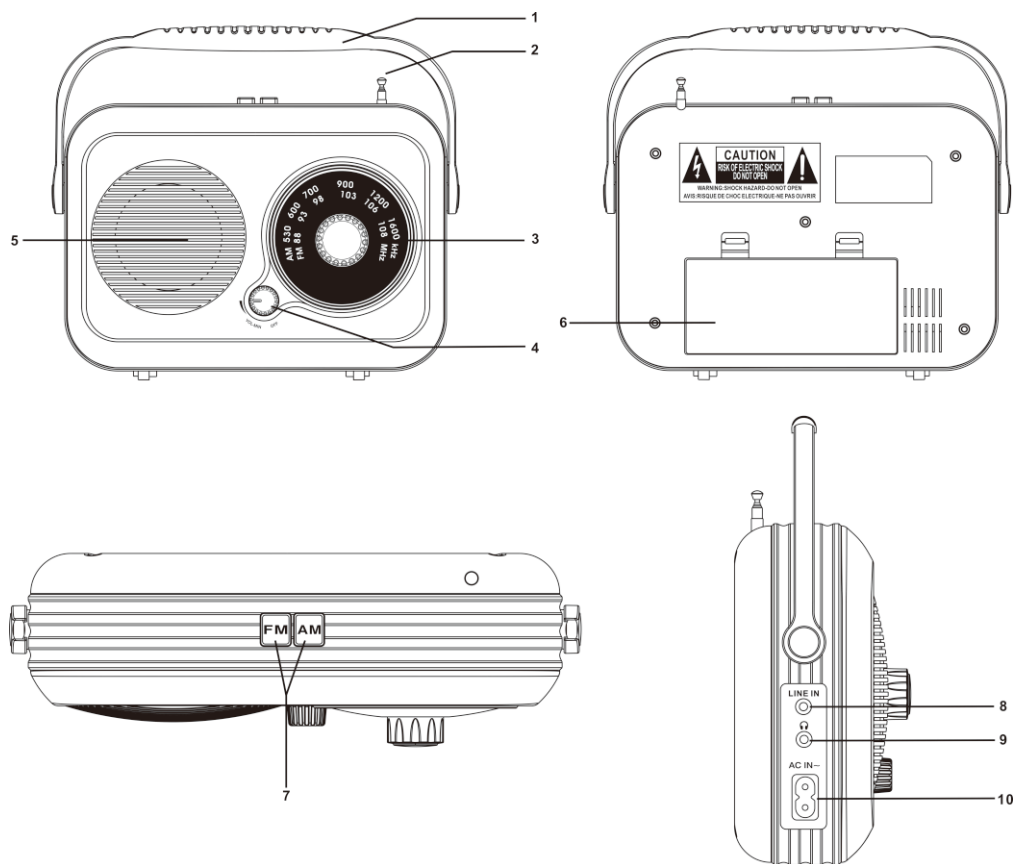

1. Handle
2. FM antenna (telescopic)
3. Tuning control knob
4. Volume control - on / off knob
5. Speaker

6. Battery compartment
7. Waveband buttons
8. Line in Jack
9. Headphone jack
10. AC Socket
11. AC power cable (not shown)

BEFORE FIRST USE

- ▶ Unpack the appliance and check if all parts are there and undamaged. Should this not be the case, return the product to Kmart for replacement.
- ▶ **Danger of suffocation!** Keep all packaging materials away from children.
- ▶ Dispose of the packaging materials properly. Inform yourself at the local authorities regarding collection points or garbage separation.
- ▶ Remove all protective foils and packaging material prior to use.


MAINS OPERATION

Fit the AC power cord into the AC socket (10) of the appliance and plug into the household socket.

BATTERY OPERATION

To use the appliance with batteries ensure that the AC power cord is NOT inserted into the back of the appliance and install the batteries into the battery compartment.

1. Disconnect the radio from power.
2. Remove the door of the battery compartment (6).
3. Insert 4 x Size "C" / UM-2 / R14 (or equivalent) 1.5V heavy-duty alkaline batteries in accordance with the diagram in the battery compartment. Take care to observe the correct polarity (+/-).
4. Refit the battery compartment cover.

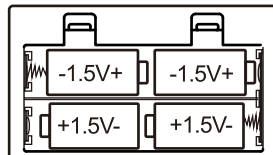

RADIO OPERATION

Listening to the Radio

1. Turn the volume control - on/off knob clockwise to switch the radio on.
2. Select the waveband by pressing the radio band button of choice on the top of the radio.
3. Turn the tuning control knobs to select the frequency of choice and station of choice. The radio frequency scale will show the wavelength selected.
4. Adjust the volume to the desired level by rotating the volume control.
5. To turn off the radio, turn the volume control - on/off knob anticlockwise until a click is heard.

Achieve Optimum Reception

1. The built-in AM and the external FM antennas are directional. If tuning into a FM station extend or move the antenna (2) for a better reception. If tuning into an AM station rotate the whole unit after tuning to obtain the best reception.

USING THE LINE IN JACK

1. Turn the volume control - on/off knob clockwise to switch the unit on.
2. Connect the auxiliary equipment (eg Mp3 player) to the LINE IN jack using a 'line in' cable (not supplied).
3. Switch on and press play on the auxiliary equipment. The unit will start to play automatically.
4. Adjust the volume to the desired level by rotating the volume control knob.
5. To turn off the radio, turn the volume control - on/off knob anticlockwise until a click is heard. Press stop on the auxiliary equipment and disconnect the 'line in' cable.

USING HEADPHONES (NOT INCLUDED)

1. A headphone jack has been provided so that the set can be used without disturbing others. Plug in the 3.5mm headphone at the point marked 'H'. Turn the listening volume to the lowest setting before adjusting the volume up to your chosen level.
Excessive sound pressure from earphones and headphones can cause hearing loss. The speaker will not operate when headphones are fitted.

CLEANING AND CARE

Danger of electroshock! Do not immerse the appliance in water or in other liquids.

1. Wipe the housing with a dry, soft cloth.
2. Do not use petrol, alcohol or other abrasive cleaners to clean the device.

TECHNICAL DATA

Rated voltage: AC 230-240V ~ 50Hz

Battery: DC 6V (4 x 1.5V)  Battery size "C"/UM-2/R14 or equivalent (not included)

Frequency range: AM 530 – 1600 kHz

FM 87.5 – 108MHz

Operating conditions: Temperature: 5°C to 35°C

Humidity: 5% to 90%

Due to continuous product development, design and specifications are subject to change without notice.

Warranty CARD

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.