
# ■ BC-251 Battery charger


NOTE: The transceiver MUST be turned OFF while charging. Otherwise:

- The battery will not be charged correctly.
- The battery life may be shortened.

**NOTE:** Be sure the tabs on the transceiver are correctly aligned with the guide rails inside the battery charger.

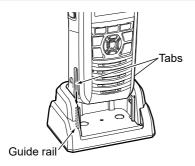


## ♦ Mounting the Battery charger

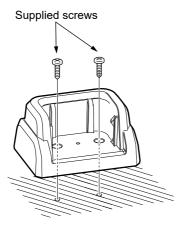

### **♦** Supplied battery charger

#### Charging time:

Approximately 4 hours for the BP-306

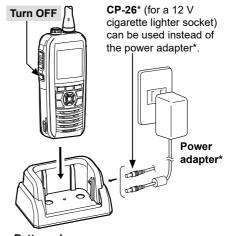

#### **Battery charger**

- \* May not be supplied, or the shape may be different, depending on the transceiver version.
- "Charging" is displayed and bars of the battery icon scroll while charging.



① "Full Charge" is displayed when the battery has been fully charged, and then disappears after 10 seconds.

#### NOTE:

- DO NOT transmit while charging. If you need to transmit, remove the transceiver from the charger, and then turn ON the transceiver.
- If the battery pack does not properly charge, remove the transceiver from the charger and insert the transceiver into the charger again.
  - ① If error is detected, "Charging Error" is displayed.

