

Instruction Manual for Smart Lithium Electric Lawn Mower

Version:2.3



Three Gears
Adjustable



Power Display






Gear Adjustment Button

Gear Speed Display

Battery Level Display



Lithium electric lawn mower parts list

		
①Serrated blade	②Diamond blade	
		
③Gasket	④Backing Plate Screw	⑤Handle
		
⑥Battery	⑦Charger	⑧Glove
		
⑨Wrench	⑩Fender	⑪Goggles

Note: Part numbers 3 and 4 have been pre installed on the machine and are not included in the accessory package. Remove during installation and then install the blade.

Installation Notes

①:Take out the fuselage and install the grass baffle.



Remove the screws of the grass guard, and insert the grass guard into the machine head corresponding to the groove.

Tighten the screws to secure the fender.

②:Remove the backing plate screw that holds the blade in place.



③:Placing spacers and blades.



④:Screw on the backing plate screw.Please pay attention to the installation direction of the back plate screws.



⑤:Use a wrench to fix the screw on the shaft,and then use a special wrench to tighten the screw.



Be sure to lock the screw securely to hold the blade in place to prevent the blade from falling out during use.

⑥: To install the handle, remove the handle screw. Fix the handle on the pole, adjust the position and tighten the screw.



When removing the handle screw, pay attention to the screw shown on the left, do not lose it.

⑦: Adjust the motor and install the battery.



⑧: Start using. Adjust to the right length, then press and hold the safety lock and power switch to get started.



Note: When starting to use, pay attention to the position of the motor to prevent injury to yourself and others.

Function Description

①:Gear Adjustment. Click the gear adjustment button.



S Gear : Minimum speed

M Gear : Medium speed

F Gear : Maximum speed



Note: It is not recommended to be used as a professional tree cutting tool, and cannot replace the electric chain saw, hand saw and other professional cutting tools.

③:Charging Display.



Red Light:Charging.

Green Light:Fully Charged.

Fully Charged 2-3 hours.



Please use the charger included with the product. Using a different power charger may cause damage to the battery.

WARNING:Please store the lithium battery in a dry place after fully charging! If the product is not used for a long time, please do a charging cycle every three months. To prevent the battery from being unable to charge normally after power loss.

③:Cut with a blade.



Tip: Do not use the blade in a digging manner.



Tip: If you are trying to cut grass taller than 10 cm or more at a time, use caution by trimming overgrown grass several times from the top of the lawn to prevent the grass from tangling.

Tip: If you find that the cutter head is involved in the turf during use, please turn off the machine in time and clean it up. After use, clean with a dry cloth, and use a brush to clean hard-to-reach places, especially the motor vents. It is strictly forbidden to wash with water.

WARNING: The sundries in the mowing area should be cleared before use, such as stones, steel pipes, toys and other hard objects.

WARNING: This product is intended for household use. During use, please keep the working head of the product parallel to the ground, and do not touch the ground, otherwise it will be dangerous.


Related questions

①: Blade comes off.

Check blade installation status



②: Remove the battery

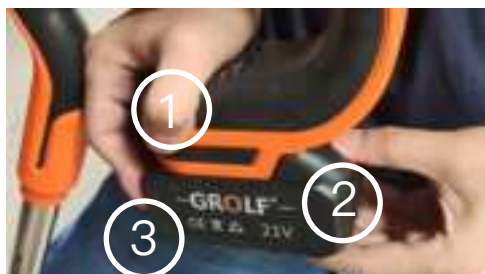

Step 1: Hold the machine

Step 2: Press the battery button

Step 3: Push the battery out

③: The machine stops suddenly after being used for a long time.

Possible reasons: The machine is overloaded or overheated.


Solution: It can be reused after half an hour.

④: Lithium battery cannot be charged or discharged in winter.

Cause: The temperature of the lithium battery dropped to minus 5 degrees due to weather, which led to the automatic protection of the battery.

Solution: Put the battery in a warm room and let the battery temperature reach above 15 °C, and the battery will recover its performance. (Do not use direct heating methods such as fire baking)

Customer service support

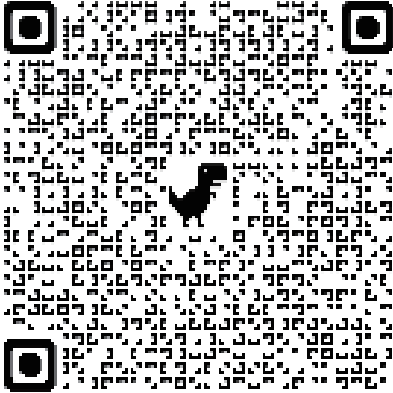

Use Amazon APP to scan QR code
or send email to customer service
email to contact us.

Technical Support Email:
fallen_leaves2021@163.com

UK/REP

Company name: KOVA ASSOCIATES LTD

Contact Person: Louisa Timms

Address: 72a Kingston Road, Portsmouth, Hampshire,
PO2 7PA, United Kingdom

Email: KOVA.Compliance@outlook.com