



**EXTRA-LARGE 7-QUART**  
**360° CLEAR VIEW AIR FRYER**  
**USER GUIDE**

# IMPORTANT SAFEGUARDS

**When using an electrical appliance, especially when children are present, basic safety precautions should always be taken, including the following:**

1. Read all instructions before using.
2. Never touch the inside of the appliance or other hot surfaces during operation.
3. Use protection when touching exterior hot surfaces.
4. To protect against electrical shock, never immerse the housing in water, rinse housing under the tap, or let other liquids enter the appliance.
5. Only operate the appliance on a flat, even and stable surface.
6. Always put the foods to be fried in the frying drawer to prevent them from coming in direct contact with the heating elements.
7. Do not cover the air inlet and the air outlet openings while the appliance is operating.
8. Do not fill the pan with oil as this may cause a fire hazard.
9. Turn the unit off and unplug from outlet when not in use and before cleaning. Allow approx. 30 minutes to cool before putting on or taking off parts.
10. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
11. Do not use outdoors.
12. Do not plug in the appliance or operate the control panel with wet hands.
13. Do not place on or near hot gas or electric burner, or in a heated oven.
14. To disconnect, press and hold the power button until the appliance switch to stand-by mode, then unplug from outlet.
15. Do not use appliance for other than intended use.
16. Do not let the appliance operate unattended.
17. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating risk of electric shock.
18. Oversize foods and metal utensils must not be inserted into the appliance, as they may create a fire or risk of electric shock.
19. A fire may occur if the appliance is covered or touching flammable materials including curtains, draperies, walls and the like, when in operation. Do not store any item on top of or touching the unit when in operation. Leave at least 4 inches (10 cm) free space on the back and sides of the appliance.
20. Do not place any of the following materials in the appliance: paper, cardboard, plastic, and the like.
21. Do not cover any part of this appliance with metal foil. This will cause overheating of the appliance.
22. During hot air frying, hot steam is released through the air outlet openings. Keep hands and face at a safe distance from the steam and from the air outlet openings. Also, be careful of hot steam and air when you remove the tray from the appliance.
23. Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emissions to stop before you remove the container from the appliance.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance. Supervision is also required when appliance is used by or near children.
26. Smoke can be detected when cooking greasy food. Please stop cooking and remove the extra oil in a safe manner and without coming into direct contact with the oil.

## CAUTION

This is an air fryer that works on hot air. Do not fill the frying drawer with oil, frying fat or any other liquid. Do not touch a hot surface, use the handles. Remove the hot tray with oven-safe gloves. This appliance is for household use only.

## SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord. Longer extension cords may be used if care is exercised. If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or animals or tripped over. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord.

## GROUNDING INSTRUCTIONS

This appliance must be grounded while in use to protect the operator from electrical shock. The appliance is equipped with a 3-conductor cord and a 3-prong grounding type plug to fit the proper grounding-type receptacle.

## SAVE THESE INSTRUCTIONS

**Please read and keep these instructions readily available. These instructions will help you use your 7QT Clear View Air Fryer properly, so that you will achieve optimal results.**

## NOTICE

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## FOR HOUSEHOLD USE ONLY

## NOT INTENDED FOR COMMERCIAL USE

# HEALTHY COOKING STARTS WITH GREENPAN

Since inventing healthy ceramic nonstick in 2007, we've dedicated ourselves to unique advances that make cooking better for everyone. From healthy ceramic nonstick cookware to revolutionary home appliances, our groundbreaking designs deliver remarkable performance so you can focus on the flavor. Enjoy!

## CONTENTS

- |  |                                     |
|--|-------------------------------------|
| <b>2 Important Safeguards</b>          | <b>7 Cleaning &amp; Maintenance</b> |
| <b>3 Special Cord Set Instructions</b> | <b>7 Storage</b>                    |
| <b>5 Before First Use</b>              | <b>8 Warranty</b>                   |
| <b>5 Parts</b>                         |                                     |
| <b>5 Control Panel</b>                 |                                     |
| <b>6 Operation</b>                     |                                     |


# BEFORE FIRST USE

- Remove all packaging, and various accessories on the inside and outside of the appliance and check that all items have been received in good condition or check for any defects.
- Tear up all plastic bags, if any, and dispose of properly as they can pose a suffocation or choking risk to children.
- Hand wash and thoroughly dry the removable parts.
- When using the air fryer for the first time, you may notice smoke or a slight odor for the first few minutes of cooking. This is normal. It can come from protective substance or oil on the heating elements that may have been used for packing and shipping. Ensure the room is well ventilated.
- Slide the tray into the appliance until it clicks into place.

# PARTS

Remove all packaging, and various accessories on the inside and outside of the appliance and check that all items have been received in good condition or check for any defects.


1. Air Fryer Body
2. Air Fryer Drawer
3. See Through Window
4. Ceramic Nonstick Coated Air Fry Tray

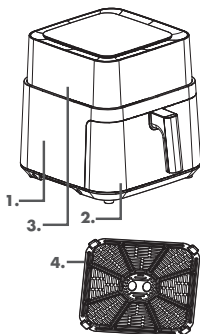

1. Hold the top of the body with one hand. Use an oven glove if needed.
2. Grip the drawer handle with the other hand.
3. Slide the drawer out of the body. **Warning!** After cooking: Rest the tray on a heat-resistant mat, as the drawer is hot.

# CONTROL PANEL

1. **Power Button**  
Press long to switch on the appliance. A red light indicates the appliance is plugged in and a white light indicates it's working.
2. **Menu Button**  
Button to select a pre-set recipe (keep on pressing the button until you reach the recipe you want).
3. **Start & Pause Button**  
Button to start & pause a program. The button lights up when the appliance is switched on.
4. **Delay Button**  
Delay function, can be adjusted from 10 minutes to 15 hours.
5. **Temperature & Time Switch Button**  
Press to adjust temperature or time.
6. **Plus & Minus Button**  
Press lightly to adjust slowly, press long for quick adjustment.
7. **Preheat Button**  
Preheat for 3 minutes, the appliance will beep after preheating is done.
8. **Shake Reminder**  
When this button lights up, you need to shake or turn your food.
9. **Keep Warm Button**  
Press to keep the food warm at 140°F-158°F (60-70°C), choose the desired time.
10. **Display Screen**  
Time/temperature display.
11. **Light Button**  
Press to turn on the interior light of the Clear View Air Fryer for easy viewing.

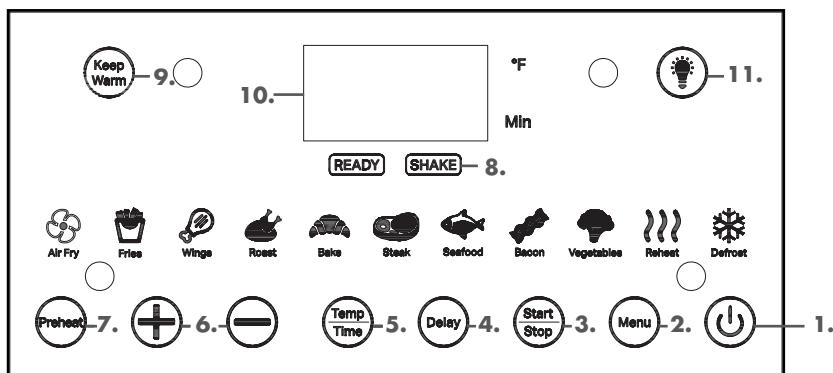

# OPERATION

1. The appliance beeps after every touch.
2. The **power button** light will be red when the appliance is plugged in. Press once to switch on the appliance, the light turns to white. Press for 3 seconds to shut off the appliance.
3. **Temperature & Time Switch Button** for time or temperature adjustment. Press once, the button will blink 5 times. Press **Plus Button** once to increase with 10°F intervals. Press long for quick adjustment (without beep sound). Maximum temperature is 400°F, maximum time is 60 minutes. Press **Minus Button** once to decrease with 10°F intervals. Press long for quick adjustment (without beep sound). Minimum temperature is 80°F, minimum time is 1 minute. After setting the time & temperature, press the start/stop icon to start the program. If there is no action, the appliance will start automatically.
4. **Keep Warm Button**, set by default at 130°F and 15 minutes. Press **Temperature & Time Switch Button** to adjust temperature and time. Use + & - to increase or decrease by 10°F or 1 minute intervals. Maximum range for time is 60 minutes.
5. **Delay Button**, set by default at 90 minutes, can be adjusted from 10-900 minutes. Adjustment with + & -. Press once to increase or decrease by 10 minutes, press long for 30 minutes. Press **Recipe Button** to select a recipe, press **Delay Button** to adjust the time, and press **Delay Button** again to start. To cancel the DELAY request, press **Delay Button** to pause and press **Menu Button** one more time to cancel.
6. Pre-set "shake function" for several settings.
7. **Menu Button**, press to select a recipe. Press **Start & Pause Button** to start the program.
8. **Preheat Button**, default setting is 3 minutes at 400°F. When finished, READY will glow on the display and the appliance will beep 3 times. To stop preheating, press the **Preheat Button** again.

**NOTE:** Default cooking times and temperatures are for non-frozen food. When using frozen food, please adjust the temperature and time per your preference.

# USE

1. **Time Control**  
When the program starts, the timer will start to countdown, numbers on the display indicate the remaining time. When it reaches zero, the air fryer will stop working. When temperature is over 212°F, the fan will continue working for another 20 seconds. Then the fan will turn off and the appliance shuts off with 5 beep sounds.
2. **Temperature Control**  
When the set temperature is reached, the appliance stops heating. The heating system will turn on and off to keep your set temperature.
3. **Temperature Overheat Protection**  
When temperature is over 500°F, the appliance will stop heating, and "E4" will appear on the display with 3 beep sounds. The fan will keep working for 20 seconds to cool down the appliance.
4. **Forced Shutdown Function**  
To shut down the appliance, press long on the power button. All lights will turn off and the power light will turn to red.

# QUICK TIPS

Check food a few minutes before cook time completes and cook a little longer if not to the desired doneness.

- Always make sure meats reach their food safe temperature before eating.
- Air fryers perform similar to ovens; follow oven instructions on item packaging or recipe if Air Fryer instructions are not included.
- Food that can be prepared in an oven can also be prepared in the air fryer.
- Preheating the air fryer before adding food will generally deliver the best results.
- When cooking multiple batches in a row, only preheat before the first batch.
- Turning or tossing food halfway through cook time will deliver the best results. The shaker reminder will notify you when that is needed.
- Do not cook foods that will produce a large amount of grease in the air fryer.

# AIR FRY PRESET GUIDE

Preset	Default Cooking Time	Default Temperature	Shake Reminder
Air Fry	10	350°F	Yes
Fries	20	400°F	Yes
Wings	22	380°F	Yes
Roast	40	360°F	Yes
Bake	15	360°F	No
Steak	12	360°F	Yes
Seafood	15	360°F	Yes
Bacon	5	360°F	No
Vegetables	10	300°F	Yes
Reheat	20	400°F	Yes
Defrost	20	90°F	Yes

**NOTE:** Air Frying doesn’t require oil, but a light coating can enhance browning and crispiness.

## CLEANING & MAINTENANCE

**IMPORTANT:** Before cleaning any part, be sure the air fryer is switched off, unplugged, and cool. It is important that you clean the entire appliance after each use to prevent accumulation of grease and to avoid unpleasant odors.

**IMPORTANT:** Do not immerse the appliance, power cord or plug in any liquid.

Wash the tray and frying drawer in warm to hot soapy water. Rinse and dry thoroughly.

If any food is stuck between the openings of the frying drawer, soak in warm to hot soapy water before cleaning. Use a sponge or soft cleaning brush to remove stains. Rinse and dry thoroughly. Roughly wipe the interior of the body to remove any crumb or residue, but NOT the heating elements at the top.

**Exterior surfaces** Clean the exterior with a damp cloth or sponge. Dry thoroughly.

**NOTE:**

- Do not use any abrasive material or sharp utensils to clean the air fryer or any of its parts.
- Allow all parts and surfaces to dry thoroughly before using the appliance again.

## STORAGE

Do not store the air fryer with metal utensils or sharp items, as this may lead to scratches or damage to the surface.

Always ensure your air fryer is clean and dry before storing it. Store your air fryer carefully.

## LIMITED WARRANTY

GreenPan Electrics are covered by a limited warranty against defects in materials and workmanship, beginning on the date of purchase and lasting for two years. If your GreenPan Electrics product has a defect during the warranty period, The Cookware Company (USA), LLC will either repair or replace the product. Further information on the warranty claim process, exclusions from warranty coverage, and other terms can be found in the complete limited warranty for this product, available online at [greenpan.us/warranty](http://greenpan.us/warranty).

## TERMS OF SALE; ARBITRATION

The terms on which The Cookware Company (USA), LLC sells GreenPan Electrics are available online at [greenpan.us/pages/terms-of-sale](http://greenpan.us/pages/terms-of-sale) (the "Terms"). The Terms contain very important information regarding your rights and obligations, as well as conditions, limitations, and exclusions that may apply to you. Please read them carefully.

In particular, the Terms provide that, by your purchase of this product, you and The Cookware Company (USA), LLC are agreeing to give up any rights to litigate in a court or before a jury, or to participate in a class action or representative action with respect to a claim. Other rights that you would have if you went to court may also be unavailable or limited in arbitration. Any claim, dispute, or controversy between you and The Cookware Company (USA), LLC arising from or relating in any way to your purchase of products or services will be resolved exclusively and finally by binding arbitration.

The arbitration will be administered by the American Arbitration Association ("AAA") in accordance with the Consumer Arbitration Rules (the "AAA Rules") then in effect, except as modified hereby. (The AAA Rules are available at [adr.org](http://adr.org) or by calling the AAA at 1-800-778-7879.) The Federal Arbitration Act will govern the interpretation and enforcement of this arbitration and waiver provision.

The Cookware Company (USA), LLC will be responsible for the AAA filing fee of any such proceeding. Other than your right to pursue a

claim in small claims court, as described in the Terms, the arbitrator will have exclusive authority to resolve any dispute relating to arbitrability and/or enforceability of this arbitration provision, including any unconscionability challenge or any other challenge that the arbitration provision or these Terms are void, voidable or otherwise invalid. The arbitrator will be empowered to grant whatever relief would be available in court under law or in equity. Any award of the arbitrator(s) will be final and binding on each of the parties and may be entered as a judgment in any court of competent jurisdiction. Attorney fee shifting in this case is governed by the Terms. You agree to an arbitration on an individual basis. In any dispute, NEITHER YOU NOR THE COOKWARE COMPANY (USA), LLC WILL BE ENTITLED TO JOIN OR CONSOLIDATE CLAIMS BY OR AGAINST OTHER CUSTOMERS IN COURT OR IN ARBITRATION OR OTHERWISE PARTICIPATE IN ANY CLAIM AS A CLASS REPRESENTATIVE, CLASS MEMBER OR IN A PRIVATE ATTORNEY GENERAL CAPACITY. The arbitral tribunal may not consolidate more than one person's claims and may not otherwise preside over any form of a representative or class proceeding. The arbitral tribunal has no power to consider the enforceability of this class arbitration waiver and any challenge to the class arbitration waiver may only be raised in a court of competent jurisdiction.

If any provision of the arbitration agreement described herein and in the Terms is found unenforceable, the unenforceable provision will be severed and the remaining arbitration terms will be enforced.



## This image shows a single sheet of white paper with horizontal blue ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

## This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

## NOTES

[illegible]

