

FAQ

What is the Worx 4V ZipSnip Cordless Electric Scissors?

The Worx ZipSnip Cordless Electric Scissors are a handheld tool that handles jobs traditional scissors can't. The rotating blade cuts paper, plastic packaging, cloth, carpet, leather, and more with ease. The self-sharpening blade insures a precise cut every time.

What is cutting capacity of the Worx ZipSnip? What materials does it cut?

The 4V Cordless Electric Scissors can cut materials up to 1/4" thick. Your ZipSnip can handle a wide range of materials including paper, plastic packaging, cloth, cardboard, leather, canvas, carpet, wallpaper, wire net, flower stem and much more.

What kind of blades does the ZipSnip use? Can they be sharpened?

The ZipSnip includes one blade and uses a self-sharpening mechanism to ensure it's always ready to cut when you are. When you're ready for more blades, Worx offers Replacement Blades in a pack of 2.

How long do the blades last?

The blades for your ZipSnip are made of quality materials and designed to offer optimum performance for as long as possible. Actual wear rate will depend on the application, materials and user technique. Always use the accessory for its intended purpose, and allow the ZipSnip to do the work without excessive force or pressure.

Are there any precautions I should follow when using the Worx 4V ZipSnip Cordless Electric Scissors?

While there aren't any specific hazards related to the Worx 20V Cordless Electric Scissors, we recommend that all our customers follow standard safety precautions while using our tools – including wearing safety eyewear, gloves, appropriate shoes & clothing, and keeping hair tied back. See your owner's manual for complete details.