

# Quick Start Guide

## PowerXL™ CORDLESS DUOSEALER™

See owner's manual for complete instructions and important safety information before using this product.

### MAKING & SEALING A BAG FROM THE BAG ROLL


#### STEP 1



##### Cut a Bag to Size

Place the appliance on a level surface. Press the Push-Open Latch to open the Sealing Arm. Place the bag material on the Sealing Platform. Line the bag up with the Cutting Guides. Close the Sealing Arm and press down on the Sealing Arm near the Push-Open Latch until the Sealing Arm clicks into place. Starting at one end of the Sealing Arm, slide the Slide Cutter Tab all the way to the other side of the Sealing Arm to cut the bag to your desired length.

#### STEP 2

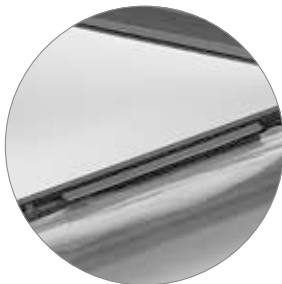

##### Seal One End

Plug the sealer into a power outlet. The Power Indicator on the Control Panel will illuminate. Open the Sealing Arm. Insert one end of the open bag into the sealer, aligning the bag under the Alignment Guide. Close and lock the Sealing Arm. Press the Seal Only Button. The light next to the button will illuminate. When the bag is sealed, the light will turn off.

#### STEP 3



##### Add Food

Open the Sealing Arm and remove the bag. Add food to the bag, leaving at least 2 inches of free space at the top of the bag to allow for a proper seal. Return the bag to the Sealing Platform and align the bag with the Alignment Guide. Close the Sealing Arm.

**NOTE:** Do not use the Vacuum & Seal Button with foods containing a large amount of liquid. Instead, use the Seal Only Button.

#### STEP 4



##### Vacuum and Seal

Press the Vacuum & Seal Button. When the bag is sealed, the light will turn off.

#### STEP 5



##### Remove Sealed Bag

Open the Sealing Arm and remove the sealed bag.

**IMPORTANT:** Unpack all parts from the box and packaging and remove any clear or blue protective film on the components. Wash with warm, soapy water before first use (only select accessories are dishwasher safe).