


HOME
DECORATORS
COLLECTION

Item # 1001 xxx xxx
Model #31820-HB

USE AND CARE GUIDE

3-LIGHT SEMI-FLUSHMOUNT

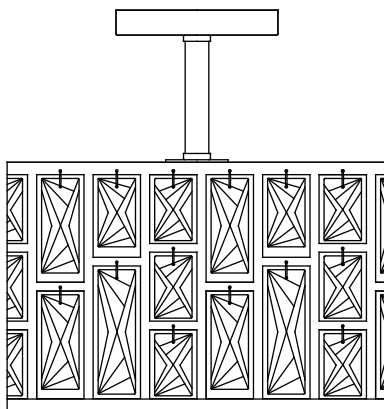

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

WWW.HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this 3-light semi-flushmount. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents.....	2	Hardware Included.....	3
Safety Information.....	2	Package Contents.....	4
Warranty.....	2	Installation.....	5
Pre-Installation.....	3	Care and Cleaning.....	7
Planning Installation	3	Troubleshooting.....	7
Tools Required.....	3		

Safety Information

- Read all instructions before installing.
- Consult a qualified electrician for installation of this fixture.
- If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-800-986-3460 or visit www.homedepot.com/homedecorators.
- Please reference your SKU 1001 xxx xxx or (UPC 773546292887).
- Keep your receipt and these instructions for proof of purchase.



CAUTION: Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.



IMPORTANT: Do not install this lighting system in a wet location.



IMPORTANT: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have occurred during shipping. If there is a defect in the wire, do not continue the assembly process. Please call our Customer Service Team at 1-800-986-3460.

Warranty

LIMITED WARRANTY

WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modification, alteration, neglect, or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

Contact Customer Care at 1-800-986-3460 or visit www.homedepot.com/homedecorators.

Pre-Installation

 
PLANNING INSTALLATION

Read all instructions before assembly and installation. To avoid damaging this product, assemble it on a soft, non-abrasive surface, such as carpet or cardboard. Inspect each part for defects that may have occurred during shipping. Keep your receipt and these instructions for proof of purchase.


TOOLS REQUIRED




Safety goggles

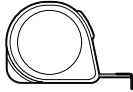

Measuring tape

 

Phillips screwdriver

 

Flathead screwdriver



Wire strippers



Spanner



Wire cutters




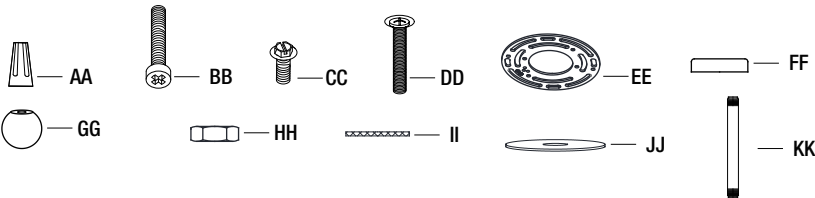
Ladder



Electrical tape

HARDWARE INCLUDED


 **NOTE:** Hardware not shown to actual size.



Part	Description	Quantity
AA	Wire nut	3
BB	Outlet box screw	2
CC	Ground screw (preassembled)	1
DD	Mounting screw (preassembled)	2
EE	Crossbar	1
FF	Collar	1
GG	Ball nut (preassembled)	2
HH	Hex nut	1
II	Lock washer	1
JJ	Plain washer	1
KK	Stem	1

Pre-Installation (continued)

PACKAGE CONTENTS

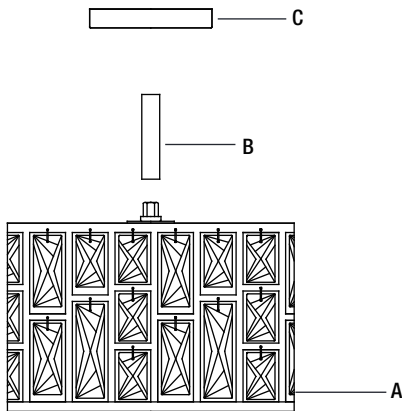


Part	Description	Quantity
A	Fixture body	1
B	Bushing	1
C	Canopy	1

Installation

1 Installing the fixture body

- Carefully unpack the fixture. Lay out all the parts on a clean surface.
- Unravel the supply power and ground wires and pass them through the center holes of the stem (KK) into the coupling at the center of the fixture body (A).
- Twist the stem (KK) onto the top of the fixture body. Then place the bushing (B) over the stem (KK).
- Place the flat collar (FF), followed by the canopy (C), plain washer (JJ) and lock washer (II). Then secure this assembly in place using the hex nut (HH).

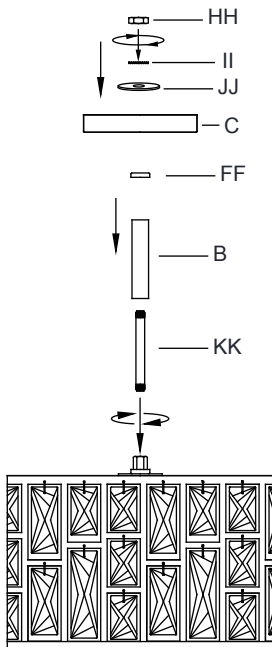


2 Installing the crossbar



WARNING: To reduce the risk of electrical shock, turn the power off at the main fuse box before installation.

- Remove the crossbar (EE) from the canopy (C) by loosening the two ball nuts (GG) on the canopy (C).
- Attach the crossbar (EE) to the junction box (not included) with the outlet box screws (BB).

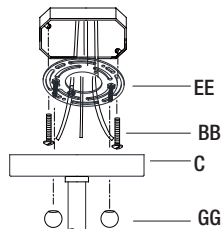


3 Connecting the wires



NOTE: Always use wire nuts (AA) (included) to connect wires and push all excess wires and connections back into the junction box.


- Push all slack fixture wire through the canopy (C) and into the outlet box. Trim the excess fixture wire, leaving a minimum of 6 in. hanging out of the outlet box.
- Connect the ground wire from the branch circuit to the ground screw (CC) on the crossbar (EE).
- Connect the wires as follows:

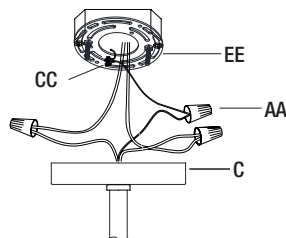

WHITE WIRE	WHITE WIRE
FROM HOUSE	FROM FIXTURE
BLACK WIRE	BLACK WIRE
FROM HOUSE	FROM FIXTURE
GROUND WIRE	GROUND WIRE
FROM HOUSE	FROM CANOPY


4 Installing the fixture body

- Install the canopy (C) to the crossbar (EE) by securing the two ball nuts (GG) to the two mounting screws (DD).

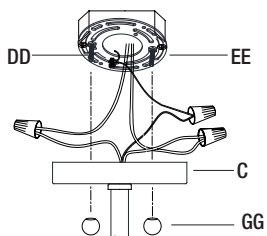

5 Installing the bulbs

- Install three 60W max. B10 bulbs (not included) to the socket of the fixture body (A).

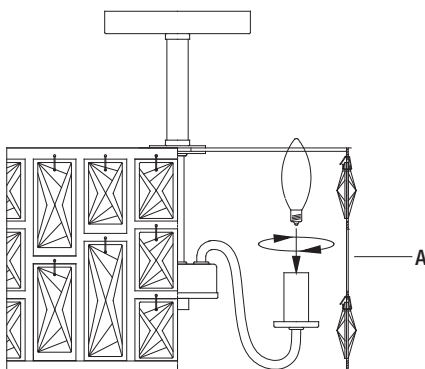

Care and Cleaning

- Clean the light fixture carefully with a soft, dry cloth. Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
□ The bulb will not light.	□ The bulb is burned out.	□ Replace the bulb with a new 60W max. B10 bulb.
	□ The power is off.	□ Ensure that the power supply is turned on.
	□ The circuit breaker is off.	□ Ensure that the circuit breaker is set to the ON position.
□ The fuse blows or the circuit breaker trips when the light is turned on.	□ There are too many items on one circuit.	<ul style="list-style-type: none">□ Unplug the other items on the circuit.□ Contact a qualified electrician or call the Customer Service Team at 1-800-986-3460.

HOME DECORATORS COLLECTION

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

WWW.HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.