



Portable BT Speaker
COUNTY PRO 11



User Manual

www.zebronics.com



Thank you for purchasing **ZEB-COUNTY PRO 11** Portable BT Speaker. Please read this user manual carefully before operation & save it for future reference.

Note:

- *Avoid the use of this product at the high temperature and high humidity environment.*
- *Avoid self-disassembly of the products or it results in the voiding the product's Warranty.*
- *Turn off the speaker if the speaker is not being used for a long for a long period of time.*

<https://zebronics.com/pages/warranty-policy>

Features:

16W RMS Output

Up to 24h* Backup

Dual 10.16cm Drivers

TWS Function

BT v5.4 | USB | mSD | AUX | FM

6.3mm Mic Input

4 RGB LED Modes

Carry handle

Media / Volume control

Built-in Rechargeable battery

Specifications:


Model	: ZEB-PSPK 55
Output Power (RMS)	: 16W
BT Version	: v5.4
Driver Size	: 10.16cm X 2
Speaker Impedance	: 2Ω
Frequency Response	: 40Hz-20kHz
S/N Ratio	: ≥70dB
Max. Supported USB/mSD Memory Size	: 32GB
Supported Audio Formats	: Mp3
Charging Time	: 5h
Playback Time	: 24h*
Product Dimension (W x D x H)	: 16.5 x 15.2 x 36 cm
Net. Weight	: 1.1Kg

** at 50% Volume (LED off)*

Package Contents

Speaker	: 1 U
Charging Cable	: 1 U
Input Cable	: 1 U
QR Code Guide	: 1 U

Buttons and Ports Description

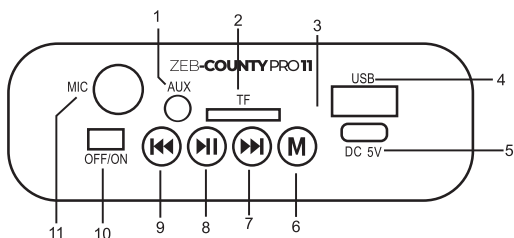

1. AUX Input port
2. mSD card slot
3. Charging Indication LED
4. USB Input port
5. Charging input port
6. Mode Switch
7. Next Track/ Volume Increase
8. Play/Pause
9. Previous Track/Volume Decrease
10. Power ON/OFF
11. Microphone input port

Button Function:

Power On/off

Use the power ON/OFF slider switch to Switch ON/OFF the speaker.

BT Connectivity :

- Once the Speaker is ON, Please make sure that the speaker is in BT mode.
- Now, search for nearby BT device in your mobile and tap on the BT name “**ZEB-COUNTY PRO 11**” to connect.
- Short press ⏮ or ⏭ to control the media.
- Long press ⏮ or ⏭ to adjust the Volume.
- Short press “Play/Pause” to Play/Pause the music.

USB/Micro SD card Mode :

- Once the speaker is ON, Insert a USB pendrive / Micro SD card to the respective port of the speaker.
- The Speaker will automatically detect the songs from the USB/ Micro SD card and the supported audio content will be played from it.
Note: This mode isn't selectable on the speaker unless a USB/mSD flash card is connected.
- Short press ⏮ or ⏭ to control the media.
- Long press ⏮ or ⏭ to adjust the Volume.
- Short press “Play/Pause” to Play/Pause the music.

FM Radio :

- Once the speaker is ON, Please switch the speaker to FM mode using the mode button.
- Short press the “Play/Pause” key to auto scan the available FM channels.

- Short press ⏮ or ⏭ to change the scanned FM channels.
- Long press ⏮ or ⏭ to adjust the Volume.

TWS Function :

Turn on two ZEB-COUNTY PRO 11 speakers you want to pair. Double click “Play/pause” button on any one speaker to activate TWS mode. After few seconds, both the speakers will be connected successfully. Now, Search for nearby BY device in your mobile and Tap on the BT name **“ZEB-COUNTY PRO 11”** to connect.

*Note: User need to make TWS connection first, then make Bluetooth connection with the mobile phone.Requires two **ZEB-COUNTY PRO 11** speakers for using TWS feature.*

AUX-In :

Switch the speaker to AUX Mode, Connect one end of the AUX cable to the speaker & connect the other end to an audio source. The songs played from the audio source can be heard through the speaker.

RGB Light Control :

When the speaker is turned on, the RGB light is on automatically, User can switch the light modes by long press the mode button.

Charging instruction :

Connect the charging cable to the speaker. The red LED indicates that the speaker is charging. The red light turns off once the speaker is fully charged.

