

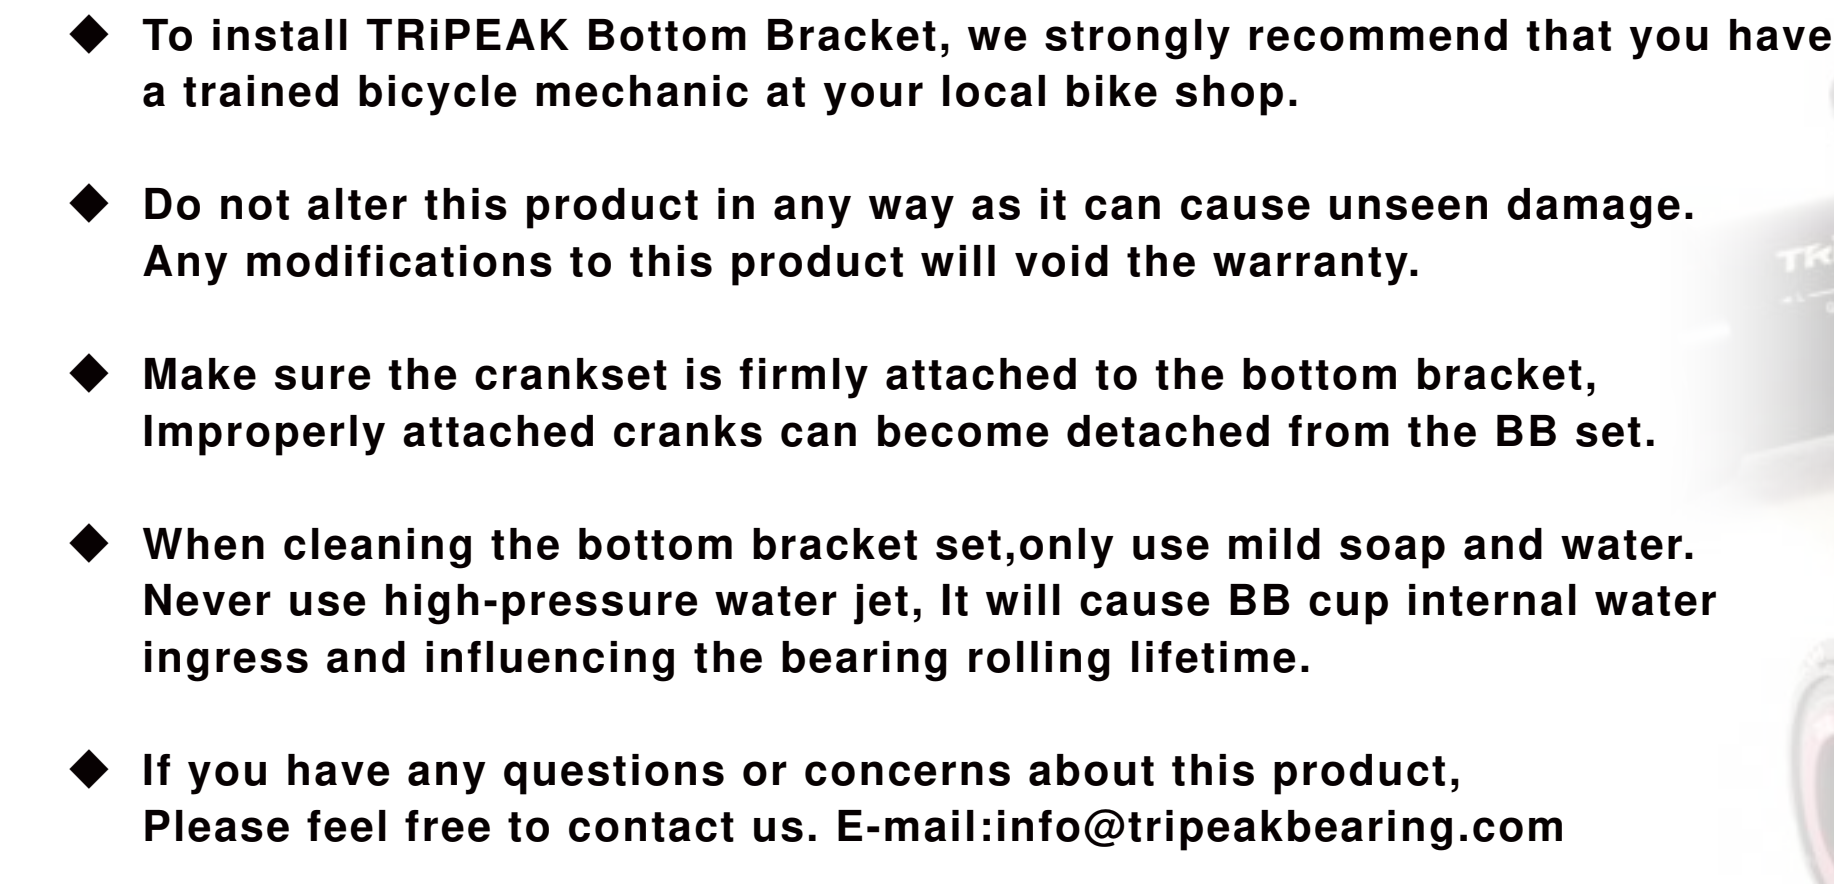



◆ Before installation, please ensure that your bike frame and crankset meet the following specifications.

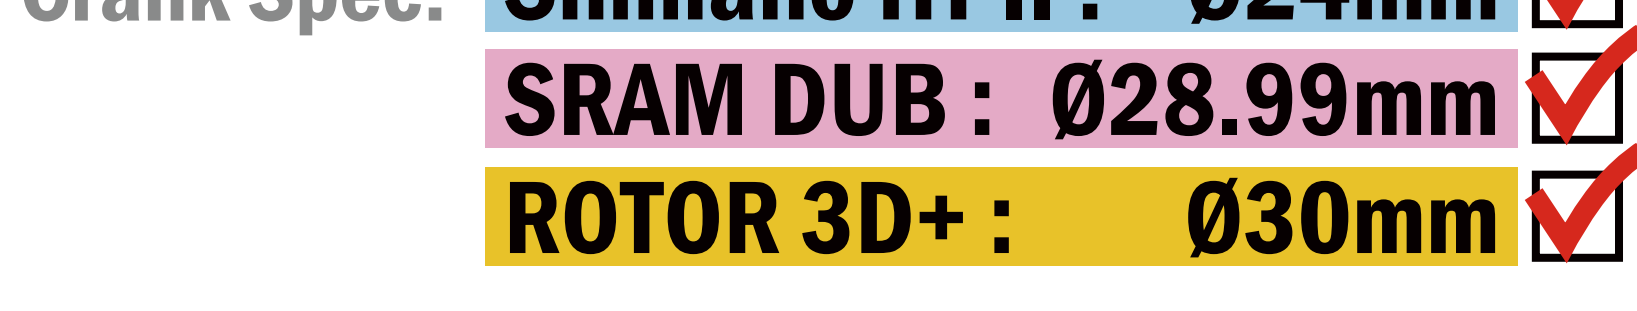

TRIPEAK Tool Required : B015
Tool compatible with torque wrench for installation use.

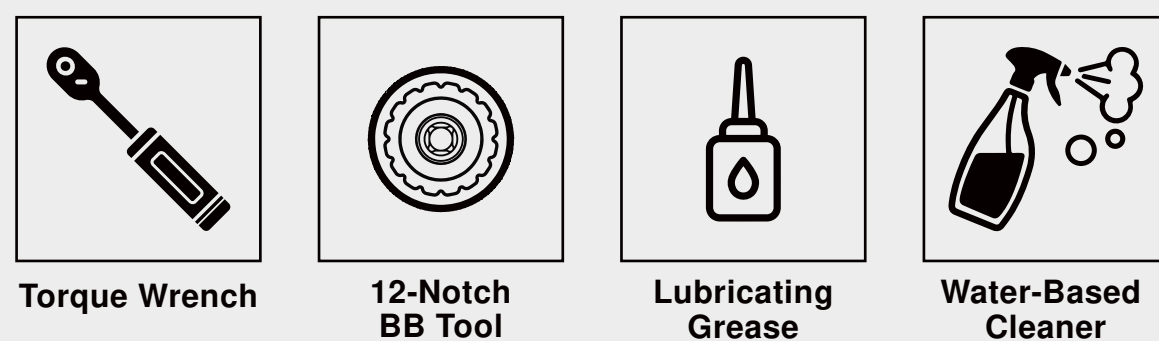

Use the included TRIPEAK ETERNA LV Fluid to Add a full lap of bearings. Rotate the bearings gently by hand to ensure the lubricant is evenly distributed.

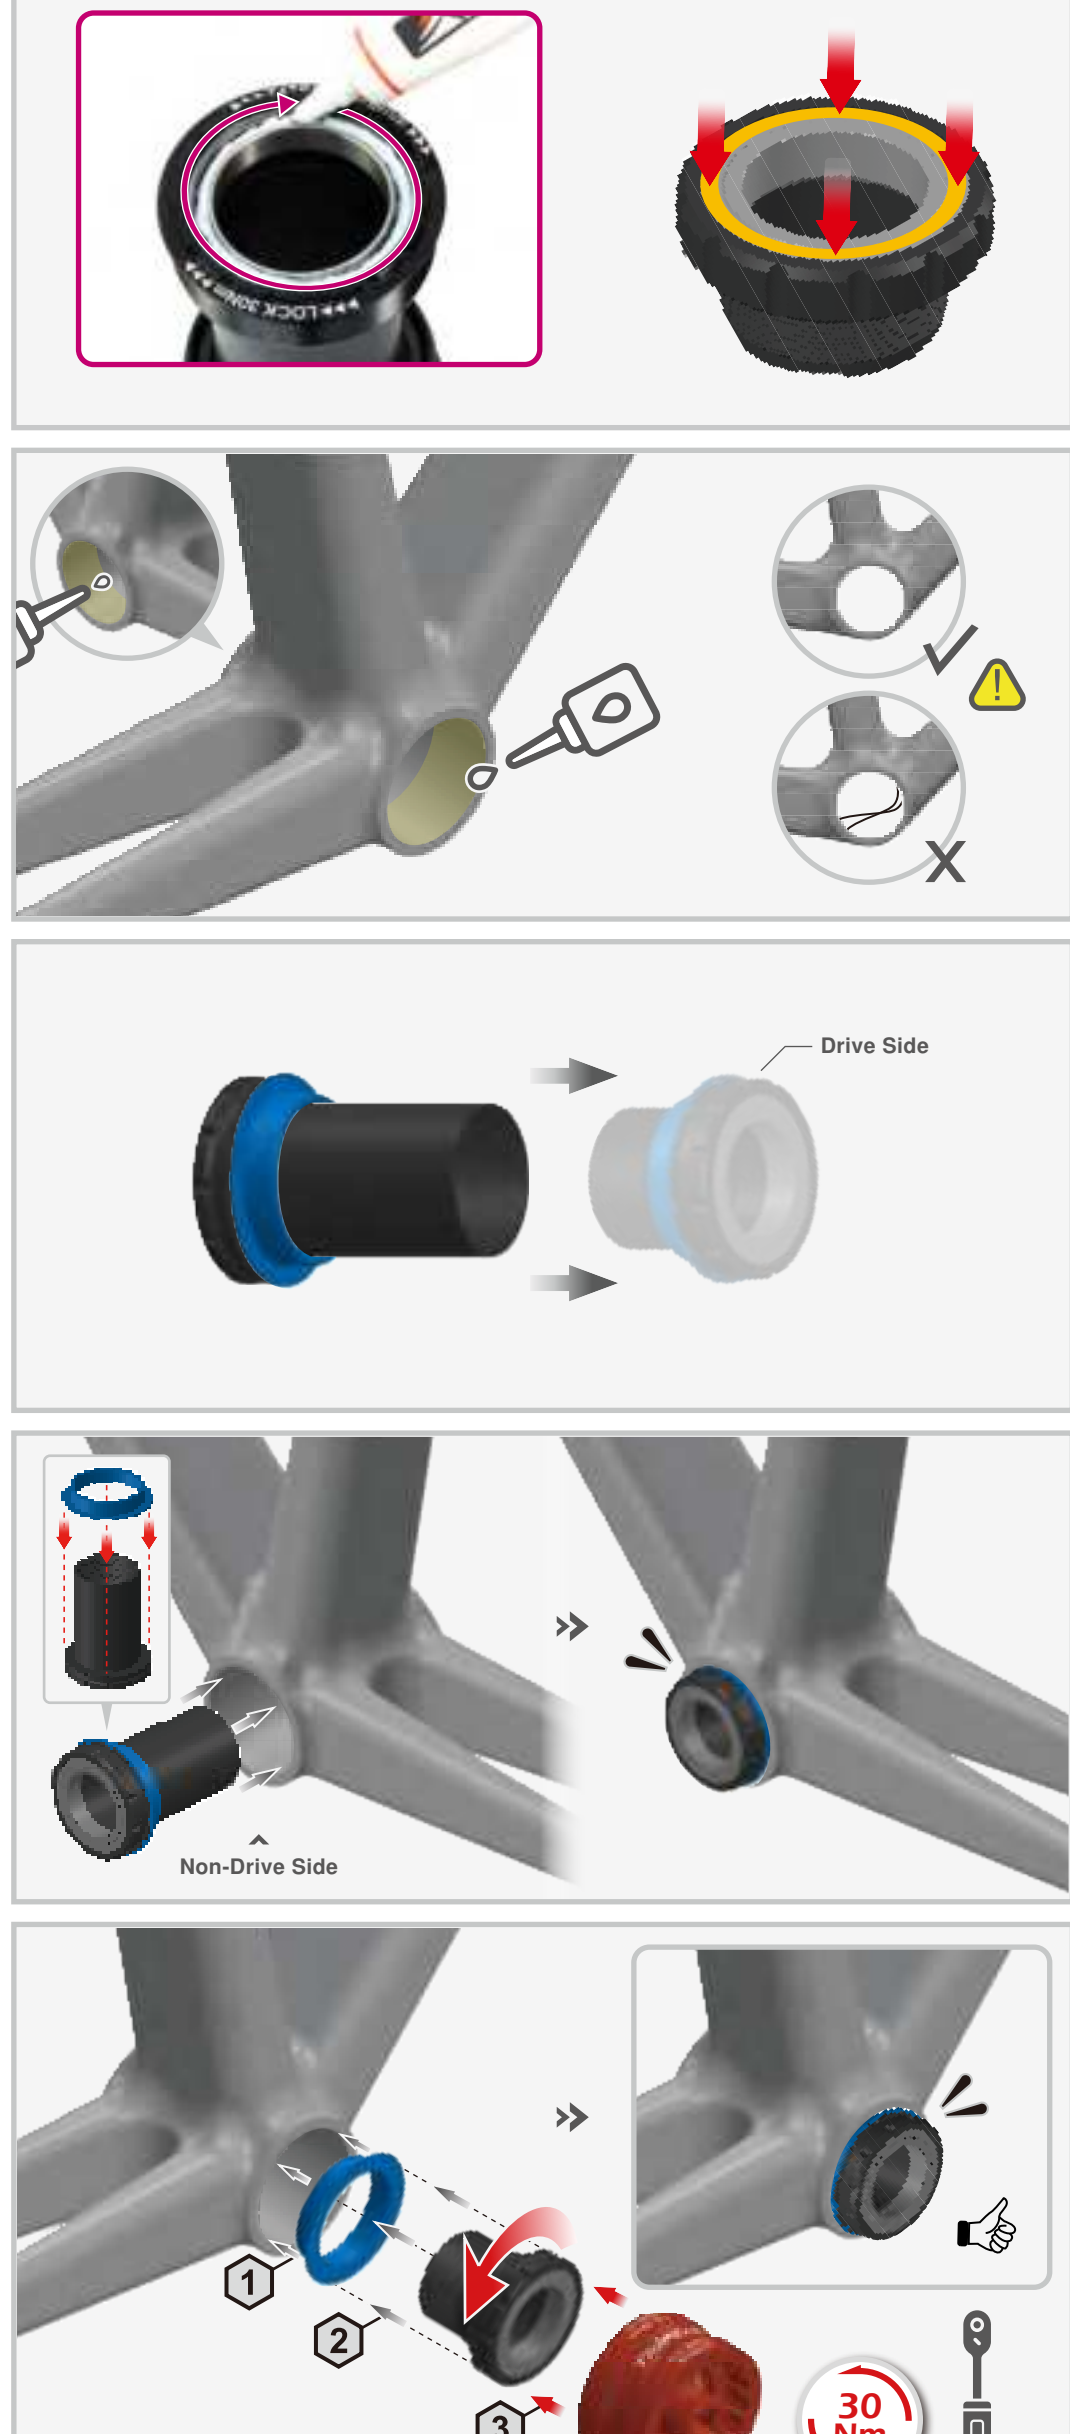

3-IN-1 CORE SYSTEM



- ◆ For maintaining and servicing TRIPEAK bottom brackets, we strongly recommend hiring a trained bicycle mechanic at your local bike shop.
- ◆ Regular maintenance is generally recommended after riding 5,000-10,000 km. If riding in harsh conditions (wet, dusty, extreme temperatures, etc.), it is advised to perform maintenance immediately after riding.
- ◆ Avoid repeated disassembly and reassembly of the BB Cup unless necessary, as maintenance should only focus on the BB bearings to prevent damage to the frame.
- ◆ Do not use high-pressure water jets to clean the BB to avoid water infiltration and bearing damage.
- ◆ Regularly check the torque value of the BB Cup, and do not ride with a loose BB Cup.
- ◆ Bearing specifications for BB30 BB. (OD x ID x H mm)

Drive Side : 42 x 30 x 7mm (6806-2RS)	Non-Drive Side : 42 x 30 x 7mm (6806-2RS)
---------------------------------------	---



PEAK ETERNA LV F



solvent to clean the bearings thoroughly, removing old lubricant and any debris. Allow them to dry completely.

 Be cautious not to damage the seals or the bearings.

