

## UAP-AC-LR Quick Start Guide

Click for  
Table of Contents

x

**tents**

UniFi AP AC LR



Mounting Bracket



Ceiling Backing Plate



Flat Head Screws (Qty. 4)



Keps Nuts (Qty. 4)



Screws (Qty. 4)



Screw Anchors (Qty. 4)

Gigabit PoE\* (24V, 0.5A) with  
Mounting Bracket

Power Cord\*

\* Included only in the single-pack of the UAP-AC-LR.

## Installation Requirements

- CAT5/6 cable
- Phillips screwdriver
- Drill and drill bit (6 mm for wall-mounting or 3 mm for ceiling-mounting)

## UAP-AC-LR Quick Start Guide



**IMPORTANT:** The UAP-AC-LR requires the UniFi Controller v4.7 or higher, available at: [ui.com/download/unifi](https://ui.com/download/unifi)

Click for  
Table of Contents


## System Requirements

- Linux, Mac OS X, or Microsoft Windows 7/8/10
- Java Runtime Environment 1.6 (1.8 or newer recommended)
- Web Browser: Google Chrome (Other browsers may have limited functionality.)
- UniFi Controller software v4.7 or higher (available at: [ui.com/download/unifi](https://ui.com/download/unifi))

## Hardware Overview

### LED

### Ports

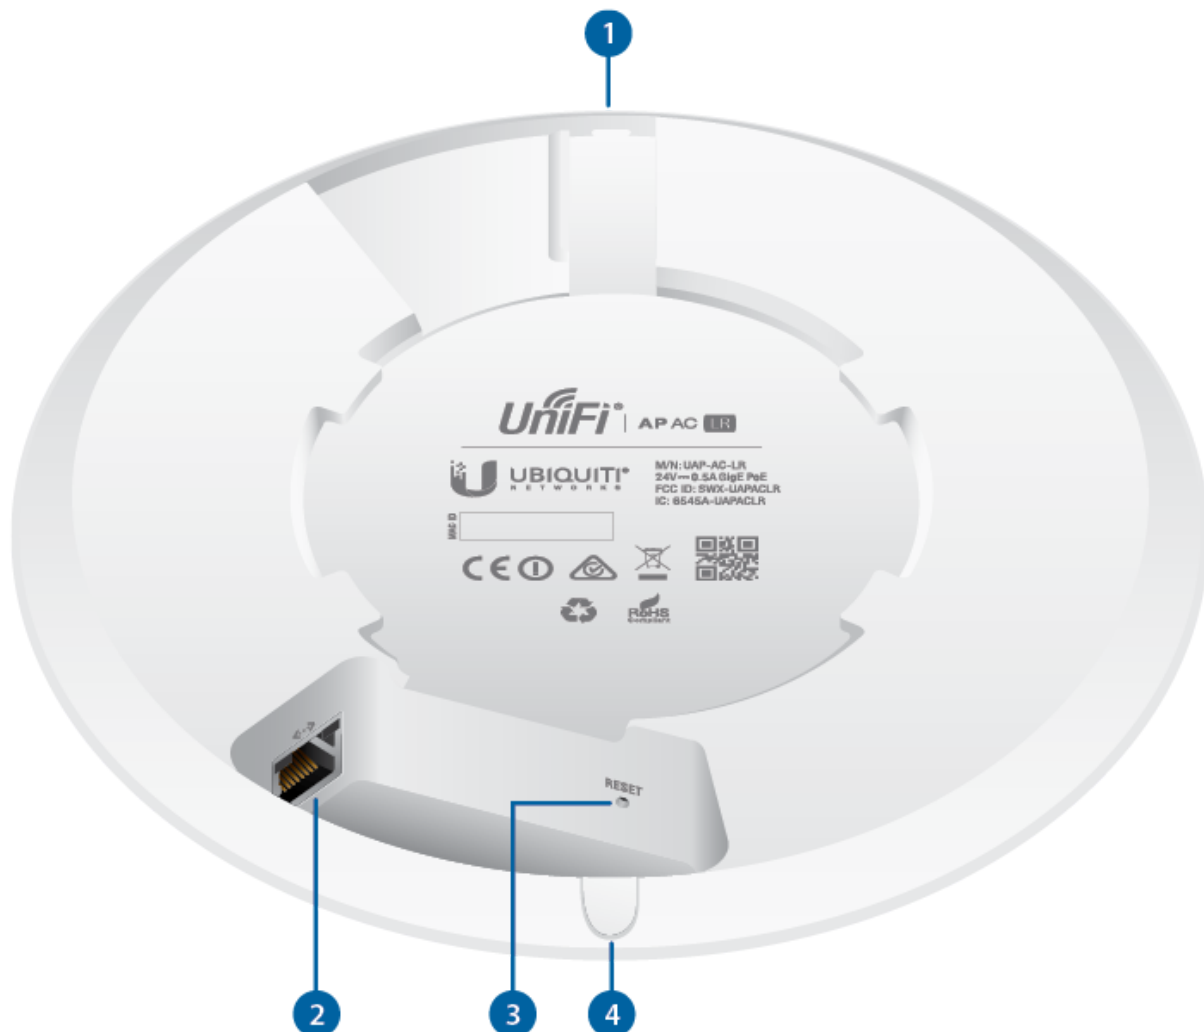

#### 1 Locking Notch



UAP-AC-LR Quick Start Guide



(This is described further in the Mounting Bracket section.)

Click for  
Table of Contents



This Gigabit Ethernet port is used to connect the power and should be connected to the LAN and DHCP server. Power can be provided by a UniFi Switch with PoE or Gigabit PoE adapter (included with single-pack only).

3 Reset

- The Reset button serves two functions for the UniFi AP:
- **Restart** Press and release the Reset button quickly.
  - **Restore to Factory Default Settings** Press and hold the Reset button for more than five seconds.

4 Cable Feed Plug

If your Ethernet cable feeds along the mounting surface, remove the Cable Feed Plug.

Mounting Bracket



5 Locking Tab

During installation, the Locking Tab on the Mounting Bracket moves from the Initial

## UAP-AC-LR Quick Start Guide

Click for  
Table of Contents



*Initial Position*



*Final Position*



**Note:** If you need to remove the UniFi AP from the Mounting Bracket, insert a paper clip in the Slot to release the Locking Tab and turn the UniFi AP counterclockwise.

## Hardware Installation

The device can be mounted on the wall or ceiling. Perform the steps for the appropriate installation.

### Wall Mount


1.



Click for  
Table of Contents

×


## UAP-AC-LR Quick Start Guide

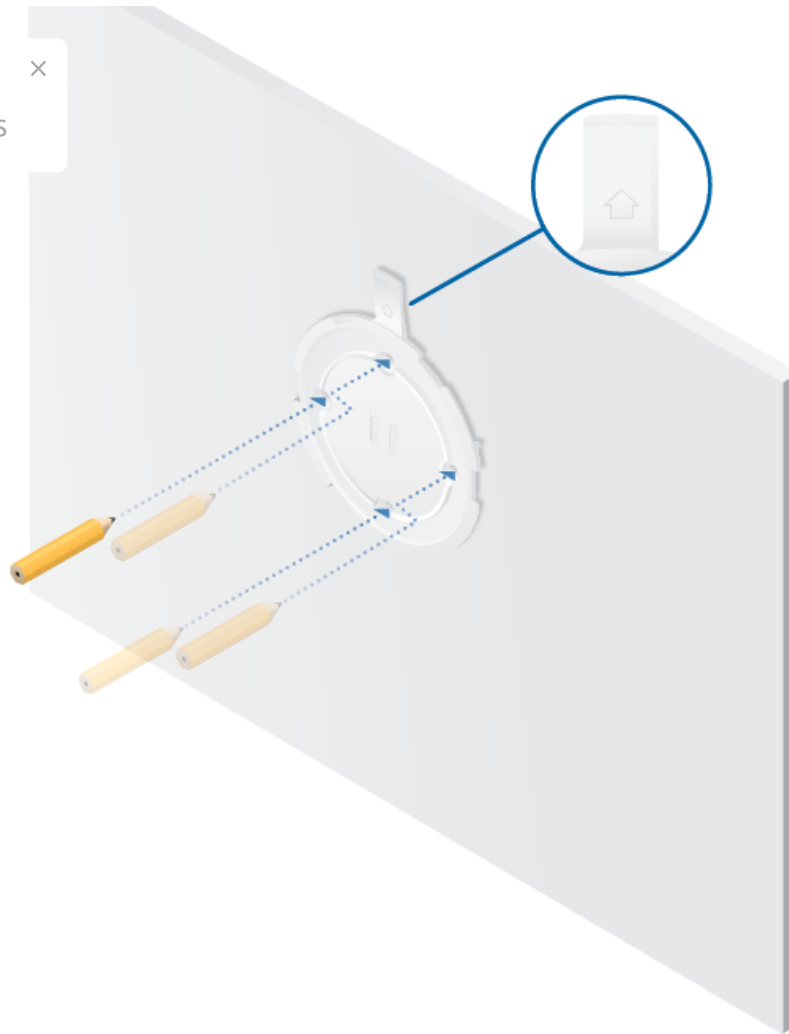

2.



Click for  
Table of Contents

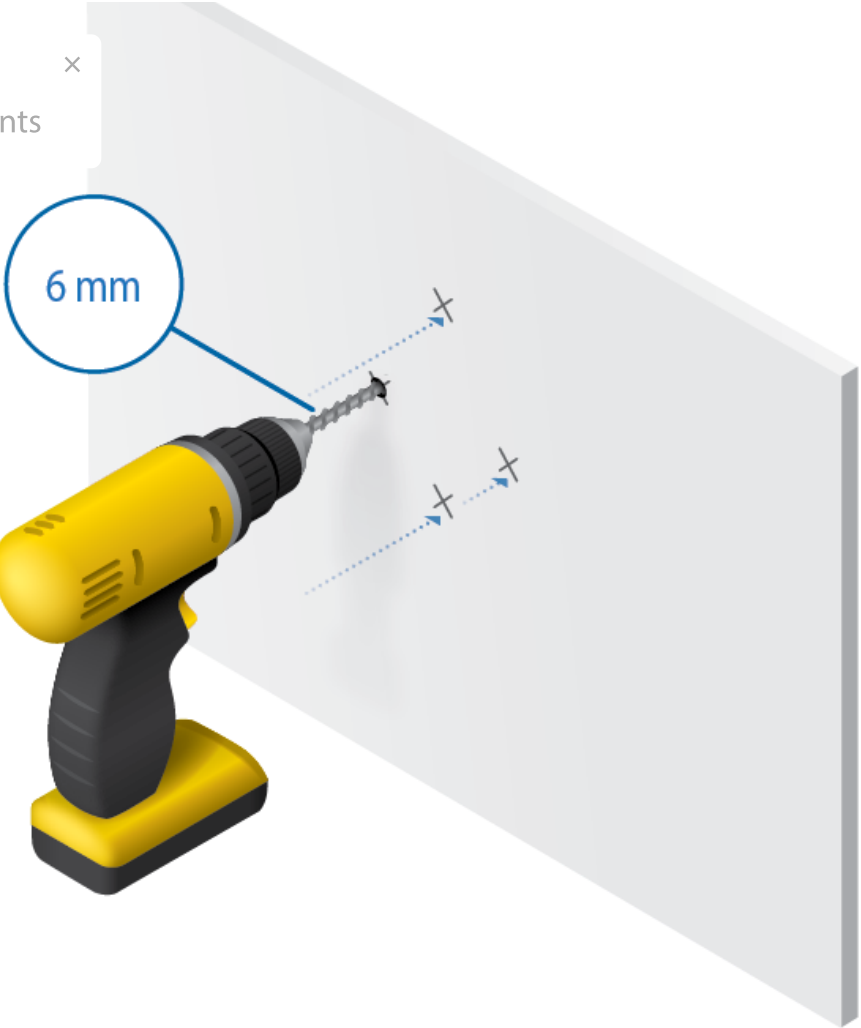


Optional



Click for  
Table of Contents

×


# UAP-AC-LR Quick Start Guide

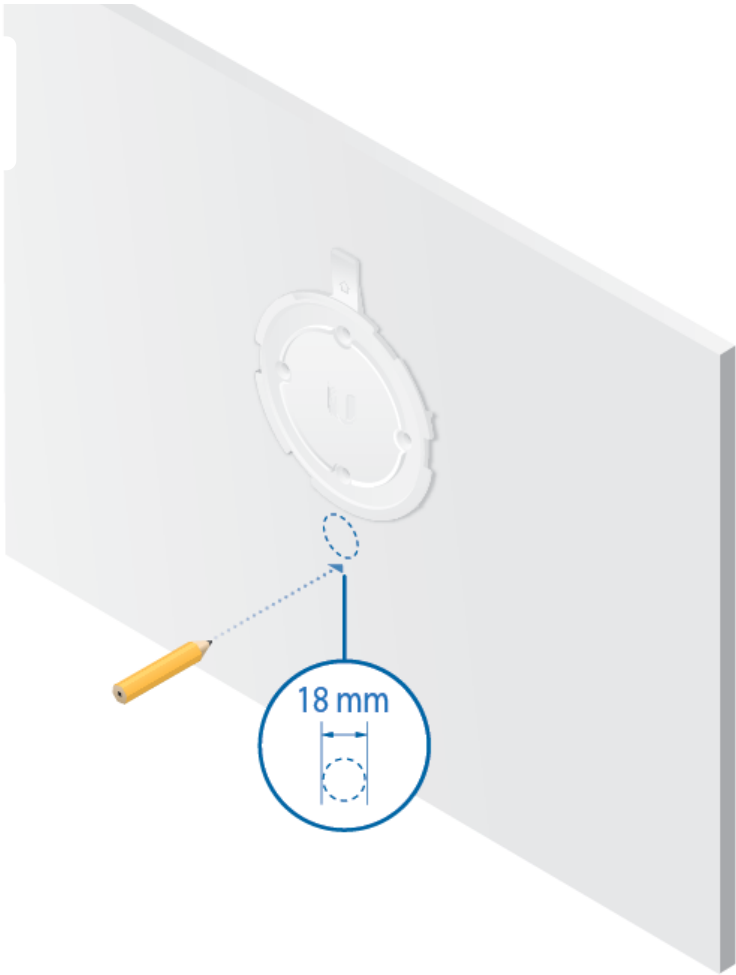



## UAP-AC-LR Quick Start Guide

Click for  
Table of Contents

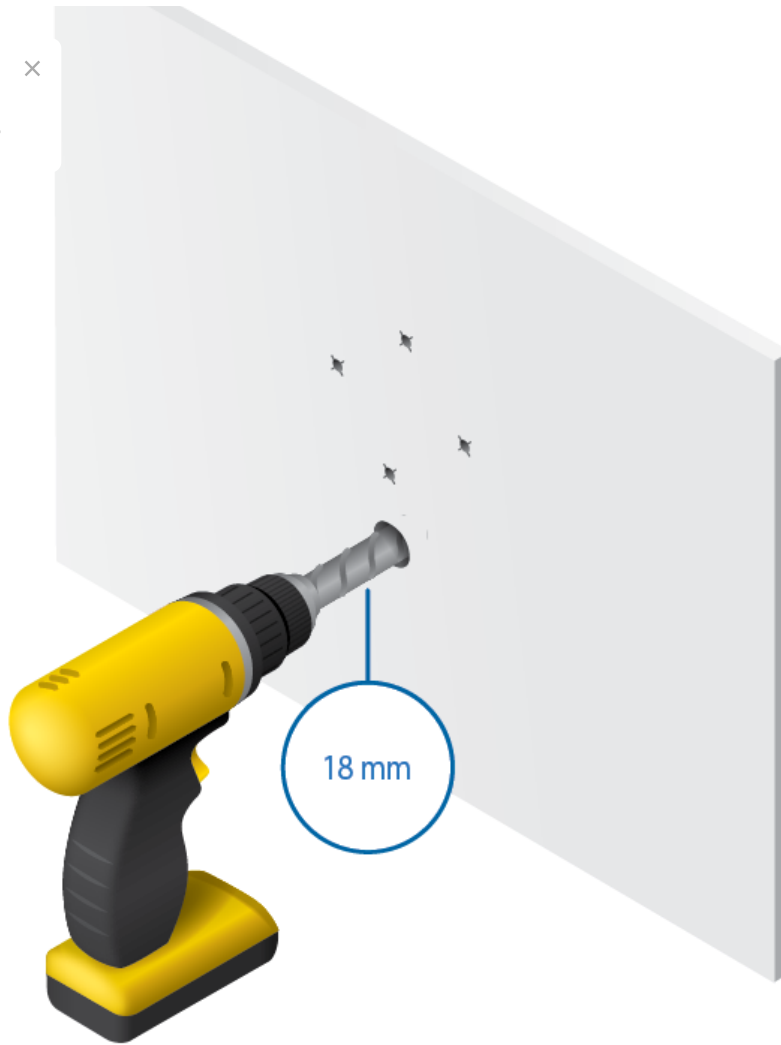

3.






Click for  
Table of Contents




# UAP-AC-LR Quick Start Guide

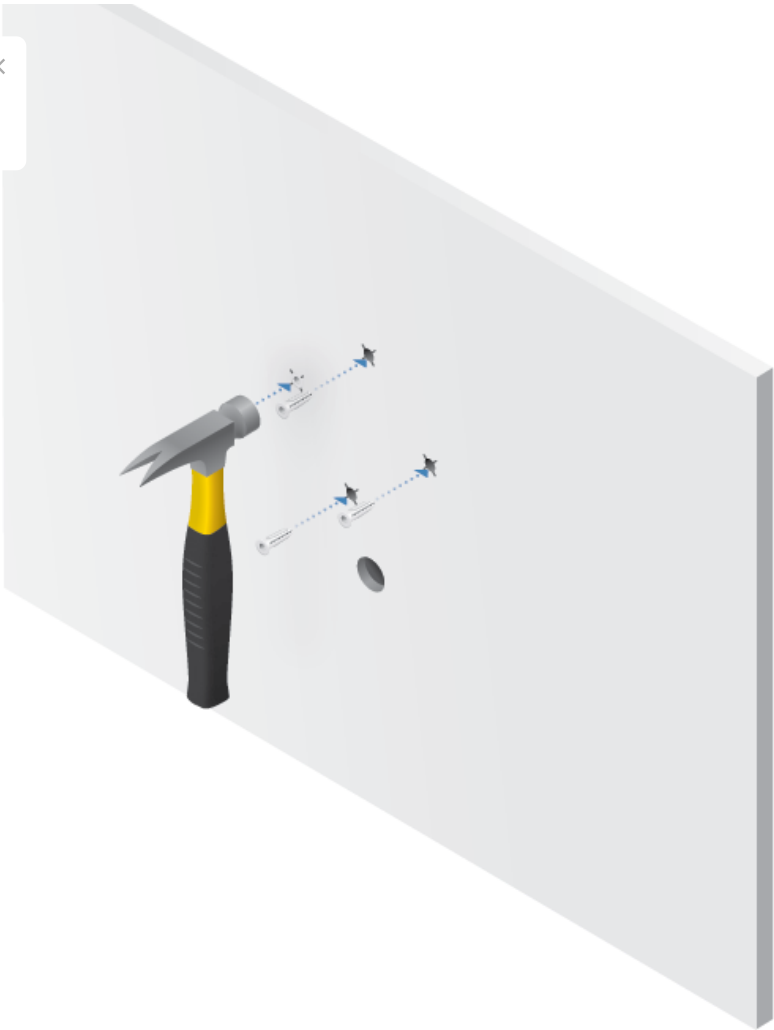


4.

## UAP-AC-LR Quick Start Guide

Click for  
Table of Contents

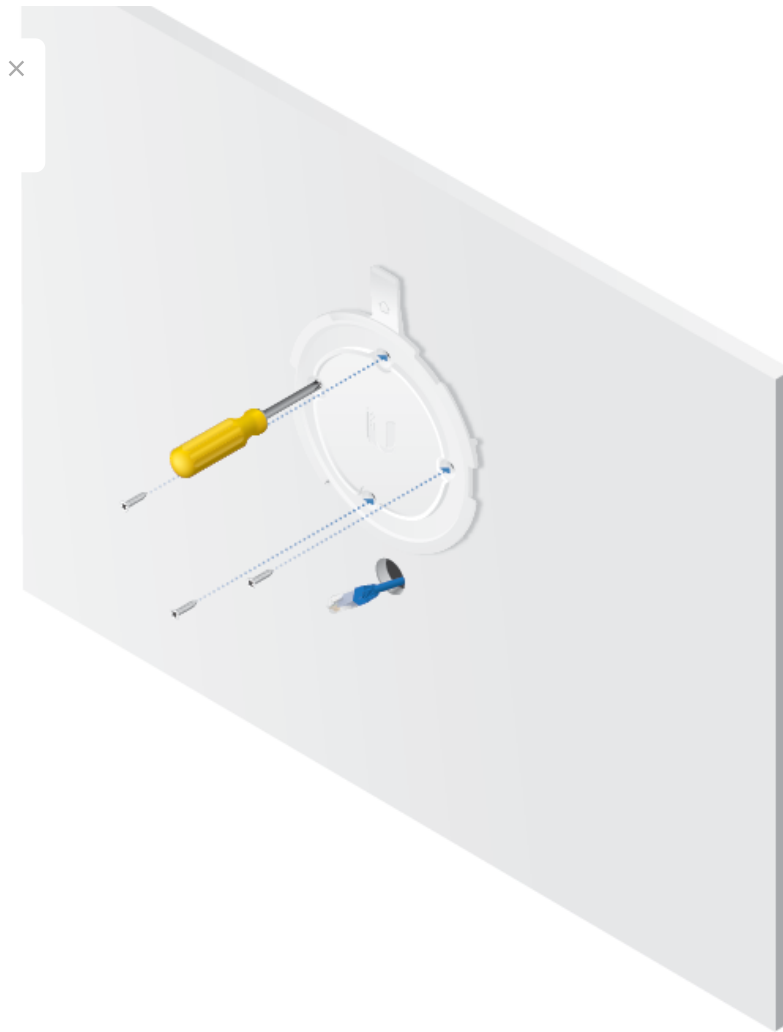

Optional

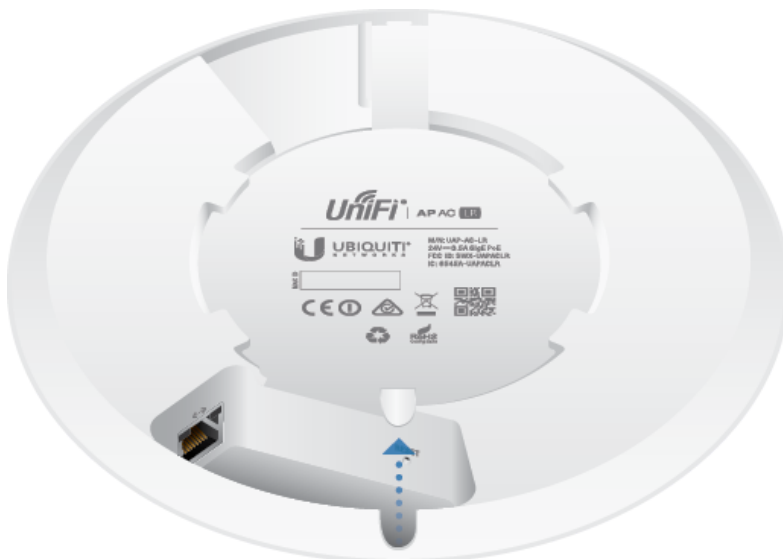




Click for  
Table of Contents



6.

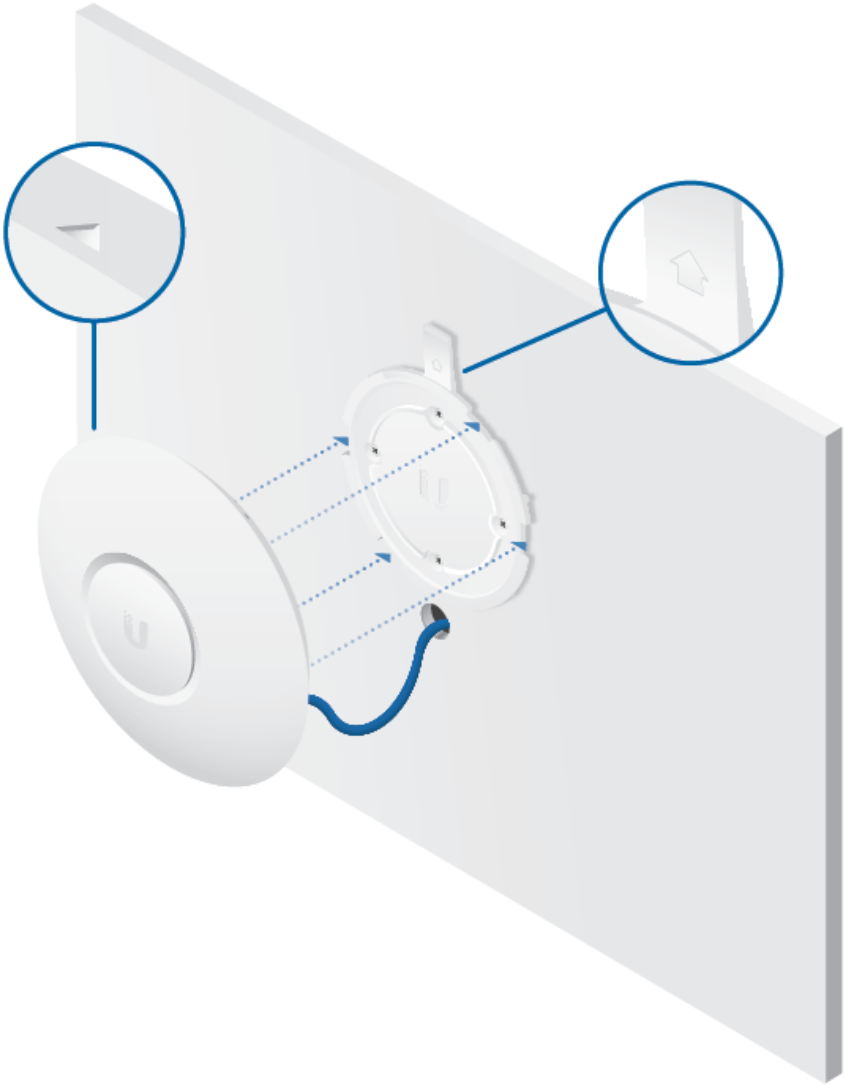


7.

## UAP-AC-LR Quick Start Guide



Click for  
Table of Contents

x

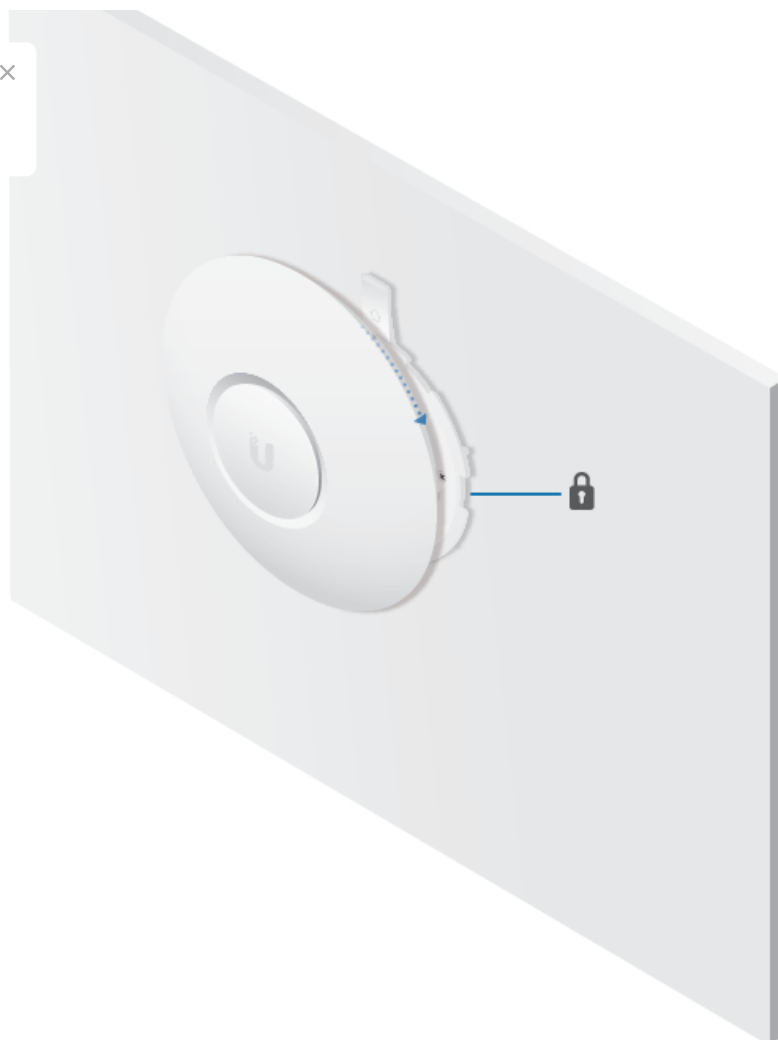

## Ceiling Mount


1.




## UAP-AC-LR Quick Start Guide

Click for  
Table of Contents

×

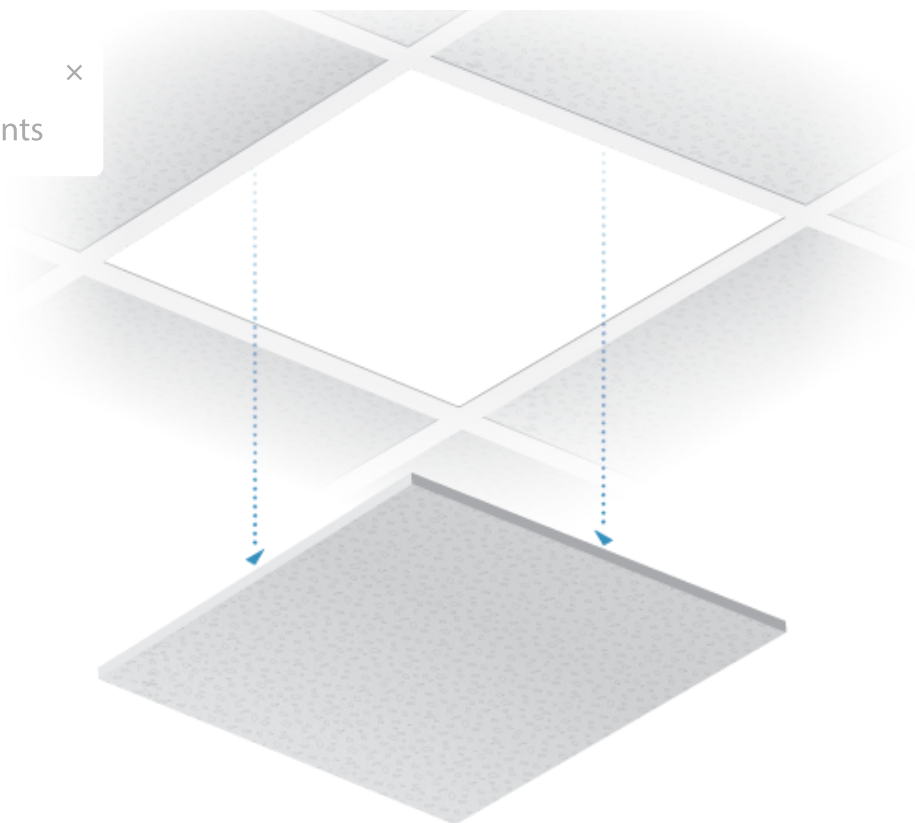

2.

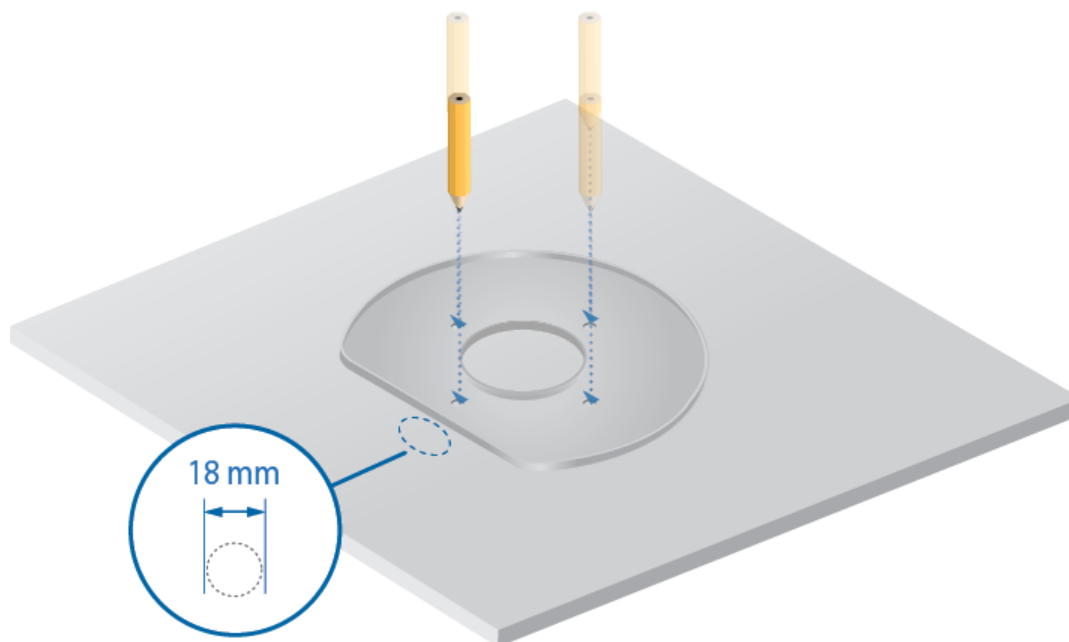


3.



Click for  
Table of Contents

×

## UAP-AC-LR Quick Start Guide

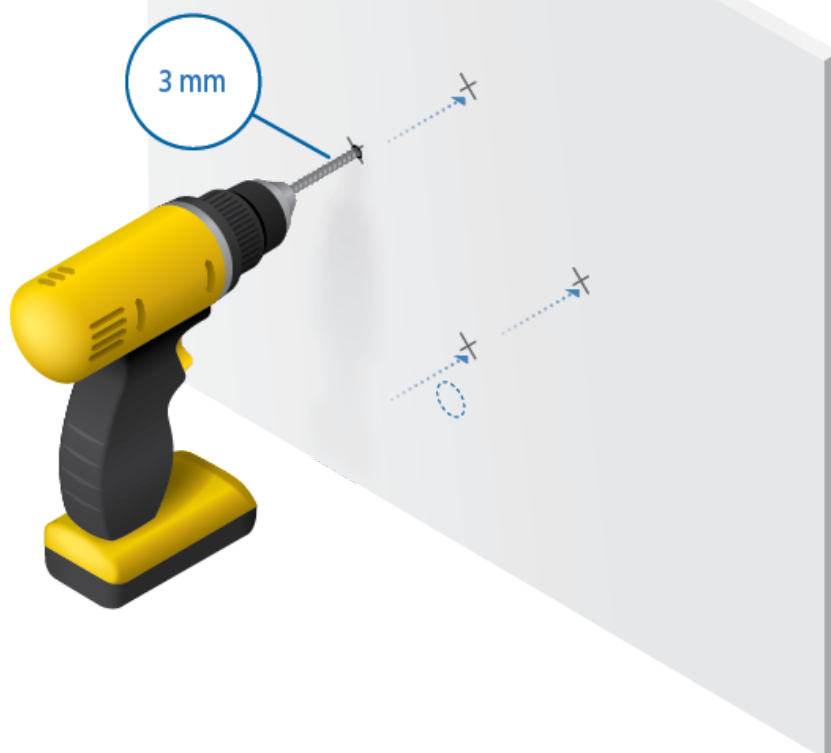


4.



Click for  
Table of Contents

×

## UAP-AC-LR Quick Start Guide

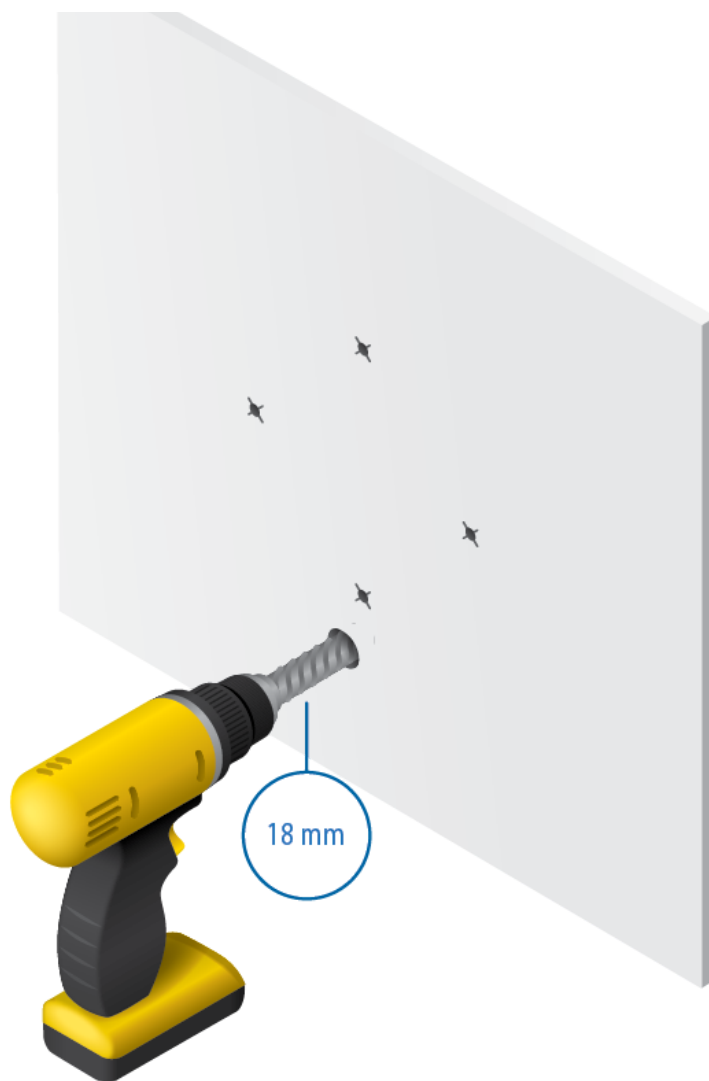


5.



Click for  
Table of Contents



## UAP-AC-LR Quick Start Guide

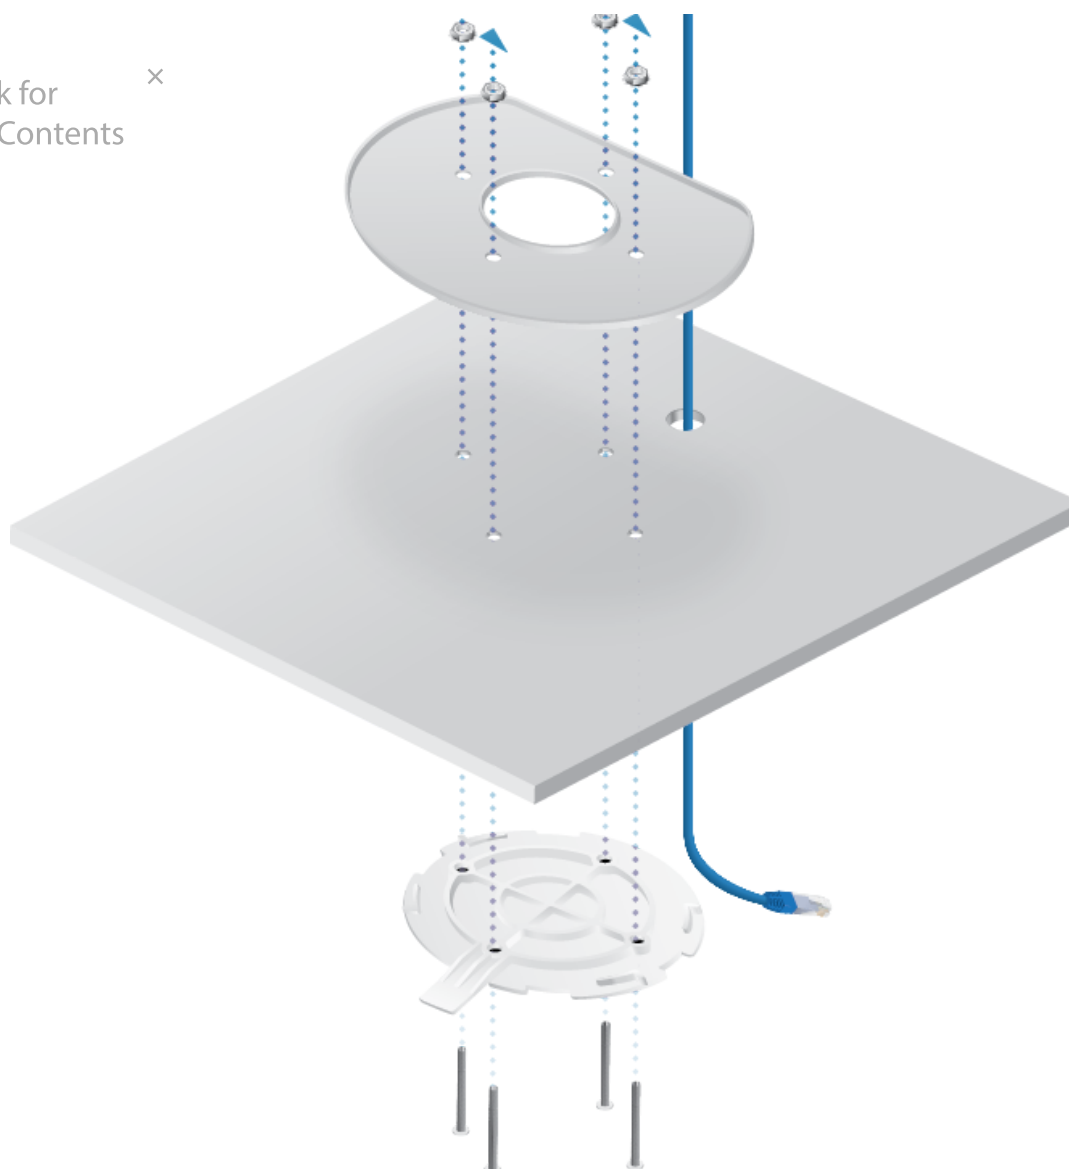


6.




## UAP-AC-LR Quick Start Guide

Click for  
Table of Contents

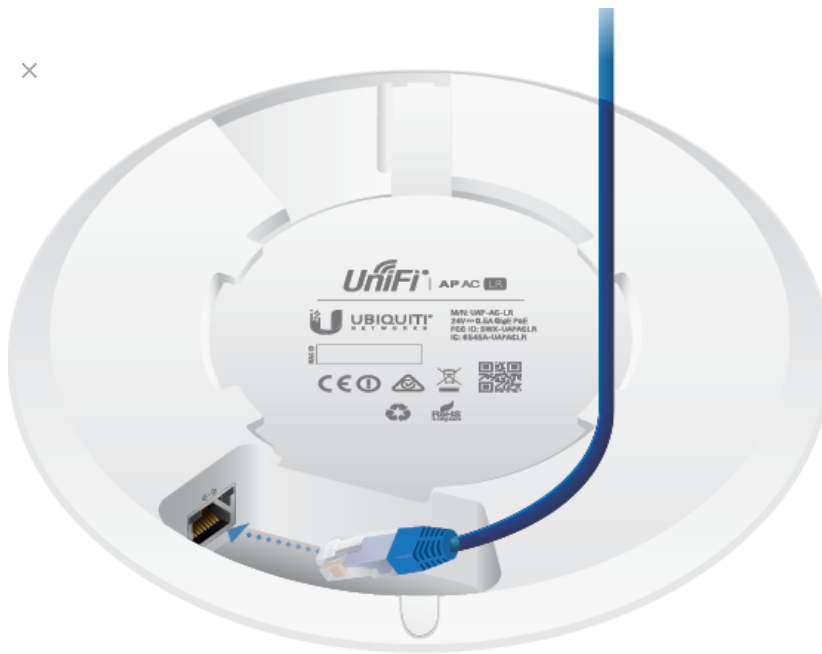

7.

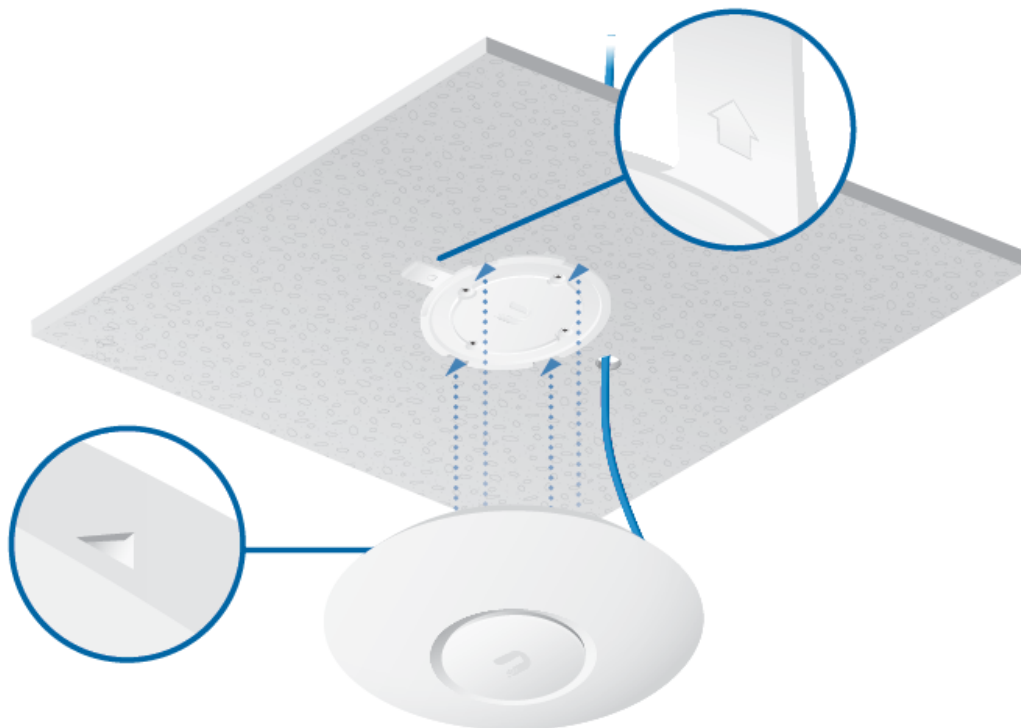

8.




Click for  
Table of Contents

×

## UAP-AC-LR Quick Start Guide



9.

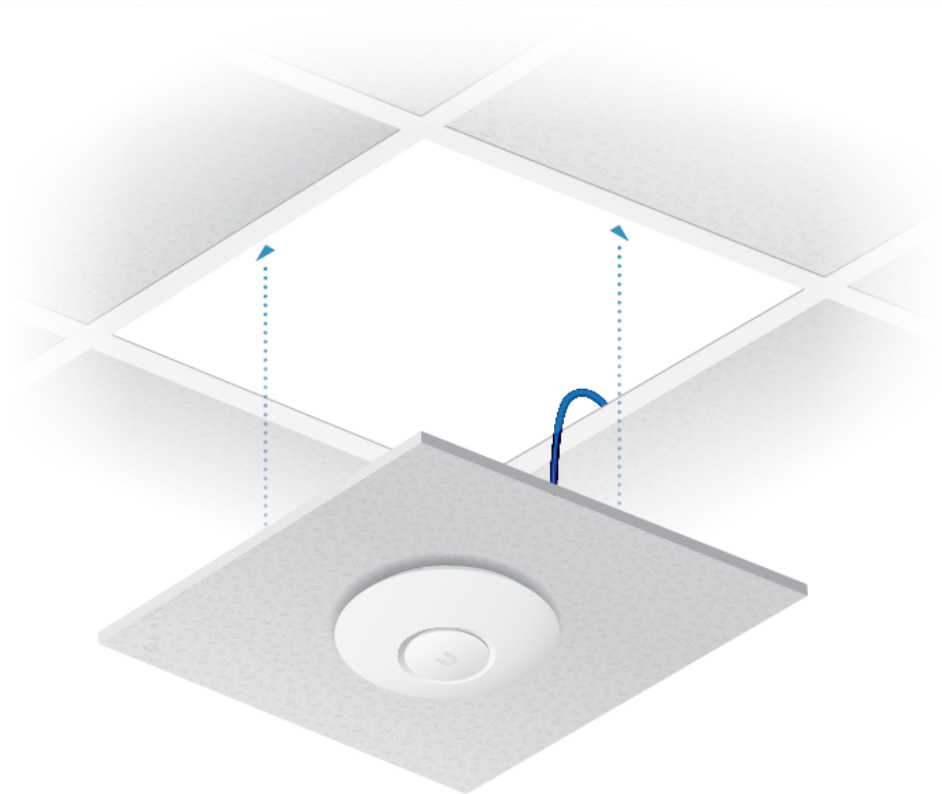

## Powering the UniFi AP

Use a UniFi Switch with PoE or a Gigabit PoE adapter for power.

## Connecting to a UniFi Switch with PoE

Connect the Ethernet cable from the UniFi AP directly to a PoE port on the UniFi Switch with PoE.

## UAP-AC-LR Quick Start Guide

Click for  
Table of Contents



*UniFi Switch with PoE Power Connection Diagram*

## Connecting to the PoE Adapter

1. Connect the Ethernet cable from the device to the POE port of the PoE adapter.
2. Connect an Ethernet cable from your LAN to the LAN port of the PoE adapter.
3. Connect the Power Cord to the adapter, and then plug the Power Cord into a power outlet.



## Mounting the PoE Adapter (Optional)

1. Remove the PoE Mounting Bracket from the adapter, place the bracket at the desired location, and mark the two holes.
2. Pre-drill the holes if necessary, and secure the bracket using two fasteners (not included).
3. Align the adapter's slots with the tabs of the PoE Mounting Bracket, and then slide the adapter down.



Click for  
Table of Contents


## UAP-AC-LR Quick Start Guide



## Software Installation

Download and install the latest version of the UniFi Controller software. Launch it and follow the on-screen instructions. The software and step-by-step instructions in the User Guide are available at: [ui.com/download/unifi](https://ui.com/download/unifi)

After you have installed the software and run the UniFi Installation Wizard, a login screen will appear for the UniFi Controller management interface. Enter the username and password that you created and click Sign In.

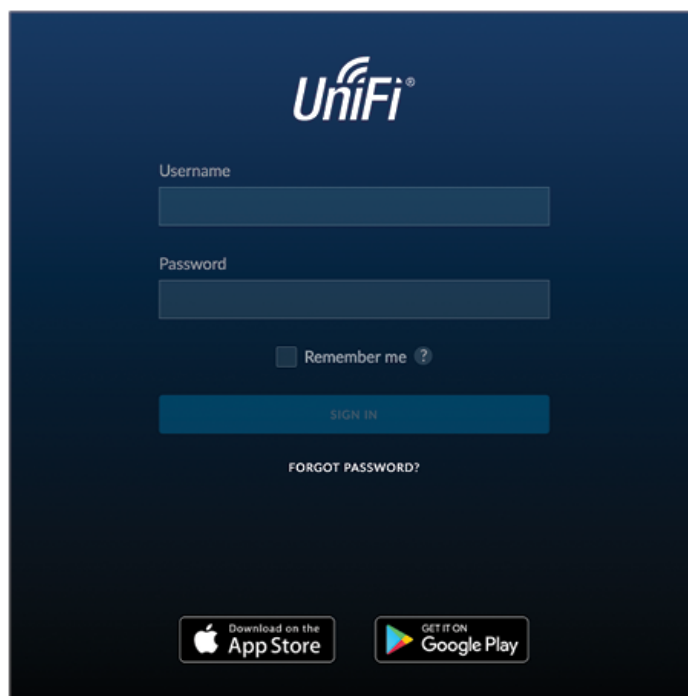

You can manage your wireless network and view network statistics using the UniFi Controller management interface. For information on configuring and using the UniFi Controller software, refer to the User Guide.

## Mobile App Installation

Ubiquiti also offers the UniFi app, which is available from the App Store® (iOS) or Google Play™ Store (Android). You can use it to provision a UniFi AP for basic functionality without configuring a UniFi Controller. It also allows seamless provisioning of APs for remote

## UAP-AC-LR Quick Start Guide

Click for  
Table of Contents

× S

UAP-AC-LR	
Dimensions	175.7 x 175.7 x 43.2 mm (6.92 x 6.92 x 1.70")
Weight	240 g (8.5 oz)
With Mounting Kits	315 g (11.1 oz)
Networking Interface	(1) 10/100/1000 Ethernet Port
Buttons	Reset
Power Method	Passive PoE (Pairs 4, 5+; 7, 8 Return)
Power Supply	24V, 0.5A PoE Gigabit Adapter <sup>1</sup>
Max. Power Consumption	6.5W
Max. TX Power	
2.4 GHz	24 dBm
5 GHz	22 dBm
MIMO	
2.4 GHz	3 x 3
5 GHz	2 x 2
Throughput Speeds <sup>2</sup>	
2.4 GHz	450 Mbps
5 GHz	867 Mbps
Range <sup>2</sup>	183 m (600 ft)
Antennas	(1) Dual-Band Antenna, Tri-Polarity
Antenna Gain	2.4 GHz: 3 dBi, 5 GHz: 3 dBi
Wi-Fi Standards	802.11 a/b/g/n/ac
Wireless Security	WEP, WPA-PSK, WPA-Enterprise (WPA/WPA2, TKIP/AES)
BSSID	Up to Four per Radio
Mounting	Wall/Ceiling (Kits Included)
Operating Temperature	-10 to 70° C (14 to 158° F)
Operating Humidity	5 - 95% Noncondensing
Certifications	CE, FCC, IC

1. Only the single-pack of the UAP-AC-LR includes a PoE adapter.

2. Speed and Range values may vary and are based on optimal environments.

## UAP-AC-LR Quick Start Guide

Click for Table of Contents	×		2400 - 2483.5
		U-NII-1	5150 - 5250
		U-NII-2A	5250 - 5350
		U-NII-2C	5470 - 5725
		U-NII-3	5725 - 5850
Worldwide			2400 - 2483.5 5150 - 5875

## Safety Notices

1. Read, follow, and keep these instructions.
2. Heed all warnings.
3. Only use attachments/accessories specified by the manufacturer.



**WARNING:** Do not use this product in location that can be submerged by water.



**WARNING:** Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.

## Electrical Safety Information

1. Compliance is required with respect to voltage, frequency, and current requirements indicated on the manufacturer's label. Connection to a different power source than those specified may result in improper operation, damage to the equipment or pose a fire hazard if the limitations are not followed.
2. There are no operator serviceable parts inside this equipment. Service should be provided only by a qualified service technician.
3. This equipment is provided with a detachable power cord which has an integral safety ground wire intended for connection to a grounded safety outlet.
  - a. Do not substitute the power cord with one that is not the provided approved type. Never use an adapter plug to connect to a 2-wire outlet as this will defeat the continuity of the grounding wire.
  - b. The equipment requires the use of the ground wire as a part of the safety certification, modification or misuse can provide a shock hazard that can result in serious injury or death.
  - c. Contact a qualified electrician or the manufacturer if there are questions about the installation prior to connecting the equipment.
  - d. Protective earthing is provided by Listed AC adapter. Building installation shall provide appropriate short-circuit backup protection.
  - e. Protective bonding must be installed in accordance with local national wiring rules and regulations.



## UAP-AC-LR Quick Start Guide

[ui.com/support/warranty](https://dl.ui.com/support/warranty)[Click for  
Table of Contents](#)

× requires the use of arbitration to resolve disputes on an individual basis, and, fy arbitration instead of jury trials or class actions.

## Compliance

### FCC

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operations of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This radio transmitter has been approved by FCC.

### ISED Canada

#### CAN ICES-3(A)/NMB-3(A)

This device complies with ISED Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This radio transmitter has been approved by ISED Canada.

The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

#### CAN ICES-3(A)/NMB-3(A)

Le présent appareil est conforme aux CNR d'ISDE Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage;
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## UAP-AC-LR Quick Start Guide

Les appareils fonctionnant dans la bande des 900 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites et des canaux.

Click for  
Table of Contents

## JTE

## Radiation Exposure Statement

- This equipment complies with radiation exposure limits set forth for an uncontrolled environment.
- This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.
- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## AVIS IMPORTANT

### Déclaration sur l'exposition aux rayonnements

- Cet équipement est conforme aux limites prévues pour l'exposition aux rayonnements dans un environnement non contrôlé.
- Lors de l'installation et de la mise en fonctionnement de l'équipement, assurez-vous qu'il y ait une distance minimale de 20 cm entre l'élément rayonnant et vous.
- Cet émetteur ne doit être installé à proximité d'aucune autre antenne ni d'aucun autre émetteur, et ne doit être utilisé conjointement à aucun autre de ces appareils.

## Australia and New Zealand



Warning: This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

## Brazil



**Nota:** Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

## CE Marking

CE marking on this product represents the product is in compliance with all directives that are applicable to it.



### Country List

AT	BE	BG	CY	CZ	DE	DK	EE	EL	ES	FI	FR	HR	HU
----	----	----	----	----	----	----	----	----	----	----	----	----	----



## UAP-AC-LR Quick Start Guide

Click for  
Table of Contents

x

Power meets Max. TX power limit per ETSI regulations.

The following apply to products that operate in the 5 GHz frequency range:



**Note:** This device is restricted to indoor use only when operating in the 5150 - 5350 MHz frequency range within all member states.



**Note:** Operation in the 5.8 GHz frequency band is prohibited in BFWA member states. Other countries listed may use the 5.8 GHz frequency band.

## WEEE Compliance Statement

## Declaration of Conformity

## Online Resources



© 2022 Ubiquiti Inc. All rights reserved.