

## INSTRUCTION

1. THIS UNIT HAS RECHARGEABLE BATTERY, WHEN THE BATTERY POWER IS DRAINED, PLEASE PLUG THE SWITCH INTO AN ELECTRICAL SOCKET ACCORDING TO THE INPUT VOLTAGE.
2. PLEASE NOTE IF VOLTMETER IS GOING BELOW 3.7V WHICH SHOWS BATTERY IS GETTING LOW, IT MEANS THE UNIT NEEDS TO CHARGE. WHEN THE UNIT IS CHARGING, PLEASE MAKE SURE THE AC/DC SWITCH IS ON. ONCE CHARGED, PLEASE UNPLUG THE SOCKET FROM THE ELECTRICAL OUTLET SAFELY. YOU HAVE TO CHARGE THE BATTERY FOR 10 TO 12 HOURS FOR FIRST USE. AND 8 TO 10 HOURS FOR ALL FUTURE USES. THE BATTERY CAN LAST 2 TO 4 HOURS ACCORDING TO THE VOLUME OF THE SPEAKER.
3. IF YOU CHANGE THE FUSE, PLEASE USE 10AMP FUSE ONLY.

## ATTENTION


1. IN ORDER TO PROLONG THE BATTERY LIFE, PLEASE CHARGE THE BATTERY AFTER EACH USE. IF THE SPEAKER IS NOT USED OR CHARGED FULLY FREQUENTLY, BATTERY DAMAGE MAY OCCUR.
2. IF ANY ISSUE WITH THE PRODUCT ARISES, PLEASE CONTACT A PROFESSIONAL TO HANDLE ANY REPAIRS AS THIS UNIT IS A HIGH-POWER ELECTRONIC.
3. PLEASE KEEP AWAY FROM CHILDREN.



15" PORTABLE DJ SPEAKER


FBX1548SM

### PANEL FUNCTION DECLARATION

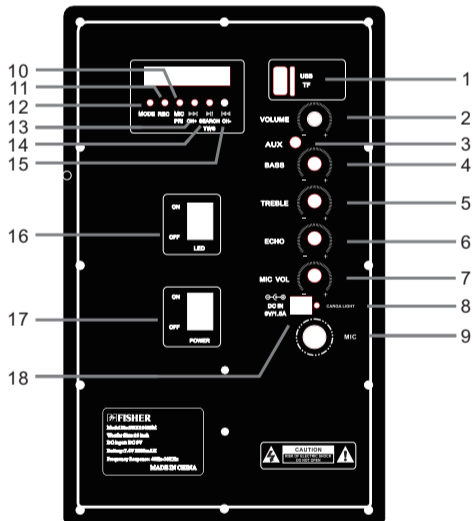

1. USB/TF CARD PORT
2. VOLUME CONTROL
3. LINE IN
4. BASS LEVEL
5. TREBLE LEVEL
6. ECHO LEVEL
7. MIC.VOL
8. Charging red light, full power green light
9. MIC.INPUT
10. Microphone priority
11. Sound recording
12. MODE (Jump to LINE-IN, USB, FM and BLUETOOTH mode)
13. ►►: NEXT SONG / NEXT CHANNEL
14. ►| : PLAY/PAUSE (on FM mode, long press Pause button to Auto Scan channel)/TWS switch
15. ◀◀: PREVIOUS SONG / PREVIOUS CHANNEL
16. LIGHT SWITCH
17. POWER ON/OFF
18. DC INPUT

### REMOTE FUNCTION DECLARATION

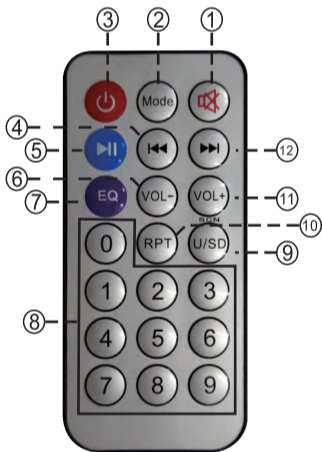

1. **MUTE**: Press to mute the Volume
2. **MODE**: Switch the Media Input Mode: FM/Wireless Connection/Line
3. **Power On/ Off**:Turns the Power On/Off
4. ◀◀ Previous track
5. ►| Press to Play or Pause
6. **VOL-**:Volume down
7. **EQ**: Choose preset Equalizer
8. **Number**: Number keypad selection
9. **USB/TF**:USB/TF input
10. **REPEAT**: Press this button to repeat
11. **VOL+**: Volume up
12. ▶▶ Next track

### BLUETOOTH FUNCTION DECLARATION

1. PRESS THE MODE BUTTON ON FRONT PANEL TO LAUNCH THE BLUETOOTH APPLICATION. YOU WILL THEN SEE THAT "FISHER-FBX1548SM" SHOWS ON THE SCREEN.
2. SLIDE THE "BLUETOOTH" SWITCH TO "ON" ON SPEAKER. MAKE SURE BLUETOOTH IS ACTIVATED ON THE DEVICE YOU WISH TO CONNECT. YOUR DEVICE (CELLPHONE, COMPUTER, ETC.) WILL AUTOMATICALLY BEGIN SCANNING FOR NEARBY BLUETOOTH DEVICES.
3. TAP THE ENTRY FOR THE BLUETOOTH ACCESSORY WHEN YOUR DEVICE HAS DETECTED THE SPEAKER AND DISPLAYED ON THE SPEAKER SCREEN. BLUETOOTH IS NOW READY TO OPERATE.

#### True Wireless Stereo(TWS) Function

TWS allows you to connect 2 speakers Via Bluetooth with TWS technology so they can play at the same time and you can double your audio output.

Long press(3 seconds) "TWS" key in bluetooth PLAY/PAUSE then turn on TWS function, Long press again (3 seconds) "TWS" key to turn off TWS function

FBX1548SM

2021. 7. 7

## FCC statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.