

Reacher
GX

User Manual



Get warranty/support with
customer@reachershop.com

Instructional Video

You can get our Reacher product instructional video when you scan the QR code below and input item model GX

Link:
https://www.youtube.com/channel/UCvpUg6_WyxzmEFQebi7FFVw



Notice:

Please use the delivery of the official standard adapter (5V1A), to avoid excessive current leading to short-circuit machine damage.

Getting Started

1. Powering On the GX:

Locate the power switch on the side of the GX.

 
Slide the switch to the ON position

(If the screen stays off, adjust brightness or charge the device.)




2. Charging the GX:

(1) Plug into a standard outlet.




1

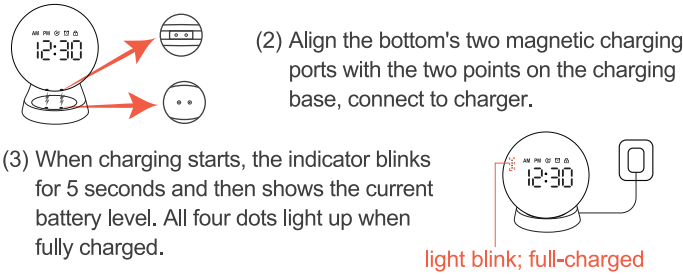 

Notice:

To charge the device, the back side (marked with model and brand) must face inward. Placing it outward will disable charging.

Front View

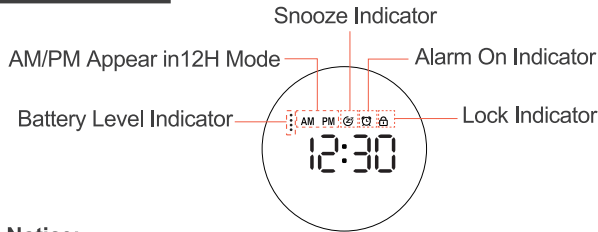

Notice:

1. All operations will auto exit and save settings if no action is taken within 5 seconds.
2. Please check "AM" & "PM" indicator when you set time and alarm.

2

Overview of Button Functions

	1. Slide to Power ON/OFF
	2. Slide to select Wake-up mode
	3. Press to enter Time setting
	4. Press to enter Alarm setting
	5. Press to enter Snooze mode/Long press to enter Button Lock mode
	6. Ambient light sensor
	7. Previous and Next/Volume - & Volume+
	8. Press to select Vibration intensity
	9. Slide to turn ON/OFF Auto Dim
	10. Dial to manually adjust brightness

Time Setting

- ① Press "⌚" → hour → minute → 12H/24H.
- ② Press "⏮" / "⏭" to change the selected content.
- ③ Press "⌚" to confirm selected content.

3

Example: Default time is "AM 12:00 ", but correct time is "AM 12:30 ". Correct the minute as below.

1. Press "⌚" once, "12" flash. Press "⌚" again, "00" flash.
2. Press "⏮" / "⏭" until "00" becomes "30" .
3. Press "⌚" again, "12H" flash.
4. Press "⌚" again to finish setting.

Alarm Setting

- ① Press "⌚" → hour → minute → ringtone → volume.
- ② Press "⏮" / "⏭" to change the selected content (hour/minute/ringtone/volume).
- ③ Press "⌚" again to finish setting.

Wake-up Mode Setting

Slide "⏮" to select the wake-up mode
("🔊" -Sound Only/ "🔊🔊" -Sound + Vibration / "🔊🔊🔊" -Vibration Only).

Attention:

When the clock is in the charging cradle, it automatically switches the wake-up mode to sound mode. It automatically switches back to the original wake-up mode after leaving the charging cradle.

4

Stop the Alarm

When the alarm goes off, you have 2 options to stop alarm ringing:

1. Press "⏮" to get 9 minutes snooze.
2. Press "⌚" to stop the alarm when it's ringing. Alarm will go off the next day.

Enable/Disable Alarm

Hold "⌚" for 2s to enable or disable alarm.
If the "🔊" icon displays, it means the alarm is enabled.
Otherwise, the alarm is disabled.

Vibration Intensity Setting

Press "🔊" to select vibration intensity P1 (Low) → P5 (High)

Dimmer Setting

Auto Dimmer Switch:

Turn on the auto dimmer, the display brightness will change according to the environment, do not cover the light sensor on the top.
If you want to manually adjust the display brightness, turn off the auto dimmer, slide the side wheel dial.

Note:

If you turn on the auto dimmer, do not cover the ambient light sensor on top of the machine.

5

Button Lock

Hold the "⏮" for 8 seconds to lock or unlock all controls. The "🔒" will appear when the lock is activated and disappear when it's unlocked.

Safety Instructions

- To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.
- To avoid damage, never place the unit near radiators, in front of heating vents, under direct sunlight or near water.
- When disconnecting the power supply, pull the plug first. Do not pull the cord by itself. Never handle the power plug with wet hands, as this could cause fire or electric shock.
- Do not open the housing.
- Do not twist or pinch the power supply cord. If the plug or power supply cord needs to be replaced, ensure that it complies with the manufacturer's recommendation.

Support & Warranty

Reacher backs 45-day refund policy and 12-month warranty for products in our store.

Email: **customer@reachershop.com**.

If you have any questions, please feel free to contact us.

6