

INSTRUCTION MANUAL

使用說明 / 使用说明

momax

1-Vibe Go


Magnetic Bluetooth speaker

磁吸無線音箱

磁吸无线音箱



BS7

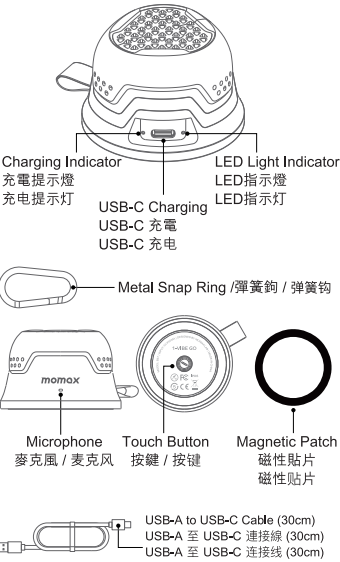

INSTRUCTION FOR USE

操作/操作

Function	Key Operation	Function Details (Function description in detail)
Power on	Long press the bottom button for 2 seconds	When manually long pressing the bottom button for 2 seconds,Power on with a prompt tone.
Power off	Long press the bottom button for 2 seconds	When manually long pressing the bottom button for 2 seconds, power off!And there is a prompt tone.
BT Search Pairing	Default to BT mode when powered on	When powered on, the blue light flashes, entering pairing mode.And there is a prompt tone ~ It will automatically search for your device, and once your device finds the Bluetooth name of this unit, you can directly press to pair and connect.
Pairing Successful	When in BT mode after powering on	Simultaneously search and pair, pairing OK,There is a prompt tone;
After BT pairing is successful (automatically reconnects when powered on)	Long press the bottom button for 2 seconds	Long press the bottom button for 2 seconds,Power on with a prompt tone, Bluetooth automatically pairs successfully, and there is a prompt tone;

TWS Dual-speaker mode	Double-click the bottom button of the speaker	After powering on two speakers, connect one of them to the phone's Bluetooth, and do not connect the other to any device. Then, double-click the buttons on both speakers respectively. The working indicator light will alternately flash blue and white. Once pairing is complete, the speaker with the blue indicator light on is the left channel speaker, and the one with the white indicator light on is the right channel speaker. The next time you power on, the two speakers will automatically reconnect to TWS and the phone. A prompt tone will indicate successful reconnection to the phone; a TWS Teaming' prompt tone will indicate successful TWS reconnection.
Play/Pause Music	Short Press the Bottom Button	When music is playing, short press the bottom button to pause the music. When music is paused, short press the bottom button to play the music.

In Call	NA	NA
Answer Incoming Call	Short Press the Bottom Button	When there is an incoming call, short press the bottom button to answer the call.
End Call	Short Press the Bottom Button	When in call, short press the bottom button to end the call, and the music will automatically play.
Clear Connection Restore Factory Settings	Triple Press the Bottom Button	Triple-clicking the bottom button will clear and disconnect Bluetooth and TWS connections, restoring factory settings (i.e., resetting volume to default, TWS initialization, Bluetooth initialization), and the speaker will enter pairing mode. And there is a prompt tone
Charging	Insert 5V Charger	When charging, the red light stays on. The device can also be powered on in this state.
Fully Charged	When powered on or in standby mode	When the built-in battery of the main unit is fully charged, the green light next to the Type-C port stays on.

功能	按鍵操作	功能詳細
開機	長按底部按鍵2秒	當手動長按底部按鍵2秒,開機併伴有提示音
關機	長按底部按鍵2秒	當手動長按底部按鍵2秒,關機併有提示音
BT搜索配對	開機狀態下默認在BT時	當開機後藍燈閃亮，此時進入配對狀態，併有提示音，此時會自動搜索附近的設備，設備自動搜到本機藍牙名，直接可點按配對相連。
配對成功	當開機BT狀態下	同時搜索後配對，配對OK，有提示音；
BT配對成功後（開機自動回連）	長按底部按鍵2秒	長按底部按鍵2秒，開機併伴有提示音“Power on” 藍牙自動配對成功，有“connected”的提示音；

TWS 組隊	雙擊音箱底部按鍵	兩臺音箱開機後，將其中一臺連接到手機藍牙，另外一臺不要連接任何設備，然後分別雙擊兩臺音箱的按鍵，工作指示燈將交替閃爍藍色和白色。配對完成後工作指示燈長亮藍色的是左聲道音箱，工作指示燈長亮白色的是右聲道音箱。下一次重新開機後，兩臺音箱將自動回連TWS和手機回連手成功有提示音；TWS相對-提示音
播放/暫停音樂	短按底部按鍵	當在音樂播放狀態時，短按底部按鍵，暫停音樂。當在音樂暫停狀態時，短按底部按鍵，播放音樂。
通話中	NA	NA
來電接聽	短按底部按鍵	當有來電呼入時，短按底部按鍵可以接聽來電
結束通話	短按底部按鍵	當在通話狀態下，短按底部按鍵可結束通話，音響自動播放。
清除連接恢復出廠設置	3擊底部按鍵	三連擊底部按鍵會清除併斷開藍牙和TWS連接,恢復出廠設置

充電中	插入5V充電器	(指恢復音量默認，TWS初始化，藍牙初始化。) ，音箱進入等待配對狀態併有“pairing”一聲提示音
充電飽	開機或待機時	當主機內置電池充滿電後，Type_c插口旁邊的綠燈常亮
低電報警	在開機狀態	當音箱在開機狀態下，電量不足時，有“Low Battery1”提示音

功能	按鍵操作	功能詳細
开机	长按底部按键2秒	当手动长按底部按键2秒,开机并伴有提示音“Power on”
关机	长按底部按键2秒	当手动长按底部按键2秒,关机并有“power off”的提示音
BT搜索配对	开机状态下默认在BT时	当开机后蓝灯闪亮,此时进入配对状态, 并有“pairing”一声提示音, 此时会自动搜索你的设备, 设备自动搜到本机蓝牙名, 直接可点按配对相连.
配对成功	当开机BT状态下	同时搜索后配对, 配对OK, 有“connected”的提示音;

BT配成功	长按底部按鍵2秒	长按底部按鍵2秒，开机并伴有提示音“Power on”，蓝牙自动配成功，有“connected”的提示音；
清除連接恢復出廠設置	3击底部按键	三连击底部按鍵會清除併斷開藍牙和TWS連接,恢復出廠設置 (指恢復音量默認，TWS初始化，藍牙初始化。) ，音箱進入等待配對狀態併有一聲提示音
充電中	插入5V充電器	當在充電狀態時，紅燈常亮。此狀態時也可以開機
充電飽	開機或待機時	當主機內置電池充滿電後，Type_c插口旁邊的綠燈常亮
低電報警	在開機狀態	當音箱在開機狀態下，電量不足時，有“Low Battery1”提示音

清除連接恢復出廠設置	3击底部按键	三连击底部按鍵會清除併斷開藍牙和TWS連接,恢復出廠設置 (指恢復音量默認，TWS初始化，藍牙初始化。) ，音箱進入等待配對狀態併有一聲提示音
充電中	插入5V充電器	當在充電狀態時，燈紅常亮。此狀態時也可以开机
充電飽	开机或待机时	当主机内置电池充满电后, Type_c插口旁边的绿灯常亮
低电报警	在开机状态	当音箱在开机状态下，电量不足时，有“Low Battery1”提示音

LEDLight Status (LED status)

LED燈的狀態/LED灯的状态

Power on 開機/ 开机	The working indicator light flashes blue 工作指示燈藍燈閃爍/工作指示灯蓝灯闪烁
Power off 關機/ 关机	The blue indicator light turns off, entering standby mode. 指示燈藍燈熄滅，進入關機。
BT Search Pairing BT搜索配對	The working indicator light flashes blue. 工作指示燈藍燈閃爍/工作指示灯蓝灯闪烁
Pairing Successful 配對成功	After Bluetooth pairing is OK, the blue light stays on. 藍牙配對OK後，藍燈常亮
After BTpairing is successful (automatically reconnects when powered on) BT配對成功後（開機自動回連）	After Bluetooth pairing is OK, the blue light stays on. 藍牙配對OK後，藍燈常亮
BT配對成功後（開機自動回連）	After Bluetooth pairing is OK, the blue light stays on. 藍牙配對OK後，藍燈常亮
TWS Dual-speaker mode TWS 組隊	The working indicator light will alternately flash blue and white. 工作指示燈將交替閃爍藍色和白色
In Call 通話中/ 通话中	Default LED Light Always On 默認LED燈常亮/默认LED灯常亮

FCC Warning
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.




BS7_Manual_NewSize_aw

背面

Magnetic sheet* installation steps

引磁片*安裝步驟 / 引磁片*安裝步驟

Reject Incoming Call 來電接聽/ 来电接听	Default LED Light Always On 默認LED燈常亮/默认LED灯常亮
Clear Connection Restore Factory Settings 清除連接恢復出廠設置	The working indicator light flashes blue. 工作指示燈閃爍藍色/工作指示灯闪烁蓝色
Charging 充電中	The orange light next to the Type-C port stays on, and the power-on status light is not affected. Type_c插口的橙色燈常亮，開機狀態燈不受影響。 Type_c插口的橙色灯常亮，开机状态灯不受影响
Fully Charged 充電飽/ 充电饱	The green light next to the Type-C port stays on, and the power-on status light is not affected. Type_c插口旁邊的綠燈常亮,開機狀態燈不受影響。 Type_c插口旁边的绿灯常亮,开机状态灯不受影响
Low Battery Alarm 低電報警/ 低电报警	When the battery level drops to the limit of 3.3V, the orange light flashes. 當電量低至極限3.3V時橙色燈閃爍 当电量低至极限3.3V时橙色灯闪烁

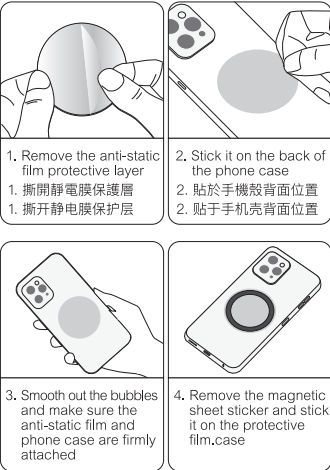

*Phone models support magnetic wireless charging natively may not require such Magnetic sheet.
*Because the corresponding wireless charging position of each mobile phone model that supports wireless charging (non-native magnetic charging support) may be different, please consult the corresponding mobile phone brand to obtain such information.

*原生支持磁吸充電的手機可能不需要使用引磁片。
*因為每款手機型號相應無線充電位置可能會有所不同，請諮詢相應的手機品牌以獲取此類資訊。

*原生支持磁吸充电的手机可能不需要使用引磁片。
*因为每款手机型号相应无线充电位置可能会有所不同，请咨询相应的手機品牌以获取此类信息。

SPECIFICATION

產品規格 / 产品规格

MODEL: BS7	
USB-C Input	: 5V=350mA
Capacity	: 700mAh 3.7V (2.59Wh)
Charging time	: ≤ 3小時
Working time	: Up to 12 hours(50% Volume)
Frequency Response	: 120Hz—20kHz
Driver size	: Φ40mm
Output RMS	: 3W
Wireless connectivity	: V5.4
Effective range	: ≤10m / TWS > 5m
Material	: ABS + PC+TPU + Silicone
Dimension	: Φ62mm*H40.5mm
Weight	: 82.6g

CONTAINS:
1. Magnetic Bluetooth speaker
2. USB-A 至 USB-C Cable (30cm)
3. Metal Snap Ring
4. Magnetic patch and protective film
5. Instruction Manual and Warranty Card

型號: BS7	
輸入	: 5V=350mA
容量	: 700mAh 3.7V (2.59Wh)
充電時間	: ≤ 3 小時
續航時間	: 約12小時 (50%音量)
頻率響應	: 120Hz—20kHz
驅動單元尺寸	: Φ40mm
額定輸出功率	: 3W
無線版本	: V5.4
有效距離	: ≤10m / TWS > 5m
材質	: ABS + PC + TPU + 矽膠
產品尺寸	: Φ62mm*H40.5mm
產品重量	: 82.6g

包裝內容:
1. 磁吸藍牙音箱
2. USB-A 至 USB-C 連接線 (30cm)
3. 彈簧鉤
4. 磁性貼片及保護膜
5. 使用說明書及保用證

型號: BS7	
USB-C輸入	: 5V=350mA
容量	: 700mAh 3.7V (2.59Wh)
充電時間	: ≤ 3 小時
續航時間	: 約12小时 (50%音量)
頻率响应	: 120Hz—20kHz
驱动单元尺寸	: Φ40mm
额定输出功率	: 3W
无线版本	: V5.4
有效距离	: ≤10m / TWS > 5m
材质	: ABS + PC + TPU + 硅胶
产品尺寸	: Φ62mm*H40.5mm
产品重量	: 82.6g

包裝內容:
1. 磁吸藍牙音箱
2. USB-A 至 USB-C 連接線 (30cm)
3. 彈簧鉤
4. 磁性貼片及保護膜
5. 使用说明书及保用证

WARNING

- Do not dismantle or modify the product;
- Do not store the product in wet conditions;
- Do not keep or use the product near heat sources;
- Do not let water or any other liquid flows into the inside part of the product's interface. This would cause damages to the product;
- Make sure to remove metallic or magnetic protective case of your device when charging;
- While charging, the 1-Vibe Go may heat up. This is normal and should not affect 1-Vibe Go's performance. If the battery feels hot to the touch during this charging process, remove the 1-Vibe Go from the charger and allow it to cool down before restarting the charging process;
- Avoid using bent or damaged USB cable.

DISPOSAL OF ELECTRONIC PRODUCTS

- Do not place the product as household waste;
- Please dispose of discarded electronic products properly according to local regulations.
- MOMAX encourages you to participate in electronics recycling program.

WARRANTY CONDITIONS

- For any defect, in the judgment of our technician, caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our company;
- A valid warranty card and original purchase invoice must be presented upon request of warranty service;

- This warranty card shall not apply to the product if:
(a) it has explicitly modified or repaired in any way by persons other than technicians of this company; or;
(b) it has been damaged through misuse, malicious acts, negligence, inflow of any liquid, or; (c) losses or damages are caused by force majeure or natural disasters.

- No alteration to this warranty card will be allowed;
- Please retain your proof of purchase for warranty service;
- Please consult the dealer about the product compatibility with your cell phone / PDA before purchase. Product specifications are subject to change without prior notice;
- Please visit www.momax.net for latest product information.

警告

- 請勿自行拆開或改裝本產品；
- 請勿將本產品存放在潮濕環境中；
- 請勿將產品靠近熱源或於熱源附近充電；
- 請勿將水或其它液體流入本產品介面內部，導致本產品損壞；
- 如您有額外使用金屬或包含磁片的保護殼，請確保充電前須移除；
- 充電時，1-Vibe Go 有可能產生熱力，此乃正常現象，並不會影響產品表現。但如果感到手

機電池或 1-Vibe Go 過熱，請斷開 1-Vibe Go 電源供應，待冷卻後，再嘗試充電；

- 請勿將電子產品當成家庭廢棄物丟棄；
- 請依當地的法例規定處理廢棄的電子產品；
- MOMAX鼓勵您積極參與電子產品回收計劃。

- 保養條款
1. 由購買日期起12個月內，如產品有損壞或故障，經本公司技術人員證實為在正常使用之情況下發生，本公司將提供免費維修服務；
2. 維修時必須出示本保用證及購買商號之發票正本，如果用戶不能提供，本公司有權不提供維修服務。用戶可能需要支付相關維修費用；
3. 保用期內，出現以下條款產品保用證自動失效：
(a) 非本公司人員蓄意拆解或維修產品之任何部分；
(b) 錯誤的操作如：非法接駁電源，以及水、污穢物參入產品內導致產品損壞；
(c) 不可抗拒意外事件或天然災害導致產品損壞；
4. 此保用證如經塗改，保用證自動失效；
5. 本公司有權增刪任何維修及保用條款而不作通知；
6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞，本公司不會承擔任何責任；
7. 有關 MOMAX 原裝產品和您的手機或電子產品的相容性，請在購買時向經銷商確認。此產品規格隨時可能變更，恕不另行通知；

- 請瀏覽 www.momax.net 瞭解最新產品資訊。

警告

- 請勿自行拆開或改裝本產品；
- 請勿將本產品存放在潮濕環境中；
- 請勿將產品靠近熱源或於熱源附近充電；
- 請勿將水或其它液體流入本產品介面內部，導致本產品損壞；
- 如您有額外使用金屬或包含磁片的保護壳，請確保充電前須移除；
- 充電時，1-Vibe Go 有可能產生熱力，此乃正常現象，並不會影響產品表現。但如果感到手机電池或 1-Vibe Go 過熱，請斷開 1-Vibe Go 电源供应，待冷却后，再尝试充电；
- 避免使用弯曲或损坏的USB线材。

如何处理废弃电子产品

- 请勿将电子产品当成家庭废弃物丢弃；
- 请依当地的法例规定处理废弃的电子产品；
- MOMAX鼓励您积极参与电子产品回收计划。

保養條款

- 由購買日期起12個月內，如產品有損壞或故障，經本公司技術人員證實為在正常使用之情況下發生，本公司將提供免費維修服務；
2. 維修時必須出示本保用證及購買商號之發票正本，如果用戶不能提供，本公司有權不提供維修服務。用戶可能需要支付相关维修費用；

- 保用期內，出現以下條款產品保用證自動失效：
(a) 非本公司人員蓄意拆解或維修產品之任何部分；
(b) 錯誤的操作如：非法接駁電源，以及水、污穢物參入產品內導致產品損壞；
(c) 不可抗拒意外事件或天然災害導致產品損壞；
4. 此保用證如經塗改，保用證自動失效；
5. 本公司有權增刪任何維修及保用條款而不作通知；
6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞，本公司不會承擔任何責任；
7. 有关 MOMAX 原裝產品和您的手机或电子产品的相容性，請在購買時向經銷商確認。此产品规格随时可能變更，恕不另行通知；
8. 請瀏覽 www.momax.net 了解最新产品资讯。

有毒有害物質或元素附表									
部件名稱	有毒有害物質或元素						10		
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr6+)	多環芳烴 (PAHs)	多環二噁英 (PCDDs)			
主殼	X	O	O	O	O	O			
配件	X	O	O	O	O	O			

O：表示該有毒有害物質在該部件所有均 X：表示該有毒有害物質至少在該部件中某些部件含有且GB/T 26572 26572 9 有毒限值的限量要求
注：本产品所有“X”的原因系：现阶段没有可供选择的替代性技术或组件



momax

WARRANTY/保用證/保用证

Model/型號/型号: _____
Date of Purchase/購買日期/购买日期: _____
Remarks/備註/备注: _____
Customer Service/客戶服務中心/客户服务中心
Hong Kong and Macau:
Unit A, 4/F, Cheung Lung Ind. Bldg.,
Lai Chi Kok, Kowloon, Hong Kong/10 Cheung Yee Street,
Hotline: 852-2402 3186 E-Mail: info@momax.net

香港及澳門:
香港九龍荔枝角長義街10號置隆大廈4樓A室
服務熱線: 852-2402 3186 電郵: info@momax.net
中國內地:
摩米士科技(深圳)有限公司
广东省深圳市龙岗区坂田街道岗头社区雪岗路2016号或
雪岗布吉厂房A四座
郵址: 518000 全國服務熱線: 86-400-886-0010
電郵: info@momax.net.cn

Copyright© 2025 MOMAX Technology Ltd. All rights reserved.
MOMAX is registered trademark of MOMAX Technology Ltd.
All other trademarks are the property of their respective owners.
版權所有©2025 MOMAX Technology Ltd. 保留所有權利。
MOMAX是MOMAX Technology Ltd. 的註冊商標。
所有其他商標均為其各自所有者的財產。
版權所有©2025 MOMAX Technology Ltd. 保留所有權利。
MOMAX是MOMAX Technology Ltd. 的注册商标。所有其他商标均为其各自所有者的财产。