

# kvm-tec First Aid masterEASY



Check out  
our Installation Channel:

# master Easy

 
FULL HD - KVM EXTENDER OVER IP  
Tune in the easy KVM World

**masterEASY**  
Single in Fiber  
Art Nr KT - 8113


[www.kvm-tec.com](http://www.kvm-tec.com)

## Quick Instructions

V102022

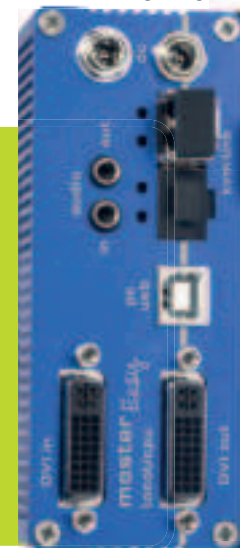

 **kvm-tec Support**  
**support@kvm-tec.com**  
**phone: +43 2253 81912 - 30**

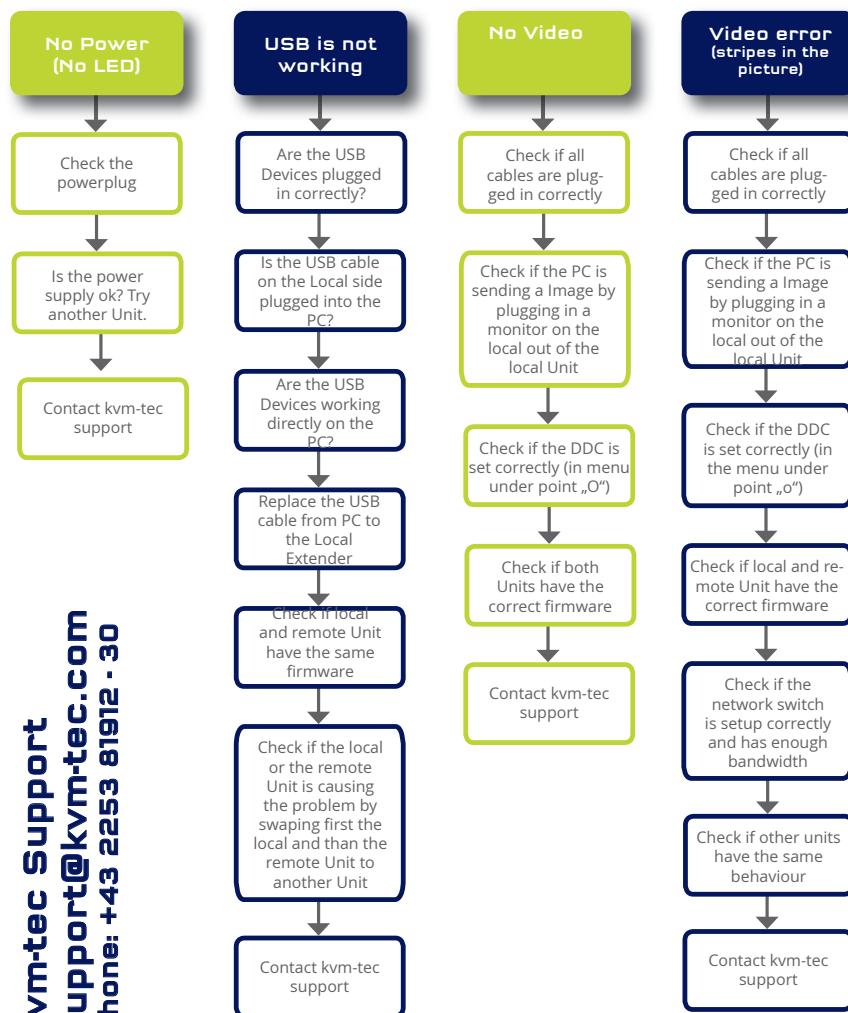

**We are here for you to answer  
your questions about installation?**

 
Manual download [www.kvm-tec.com](http://www.kvm-tec.com)

or

kvm-tec Installationchannel on our homepage  
personally +43 2253 81912



**Full HD**  
over IP

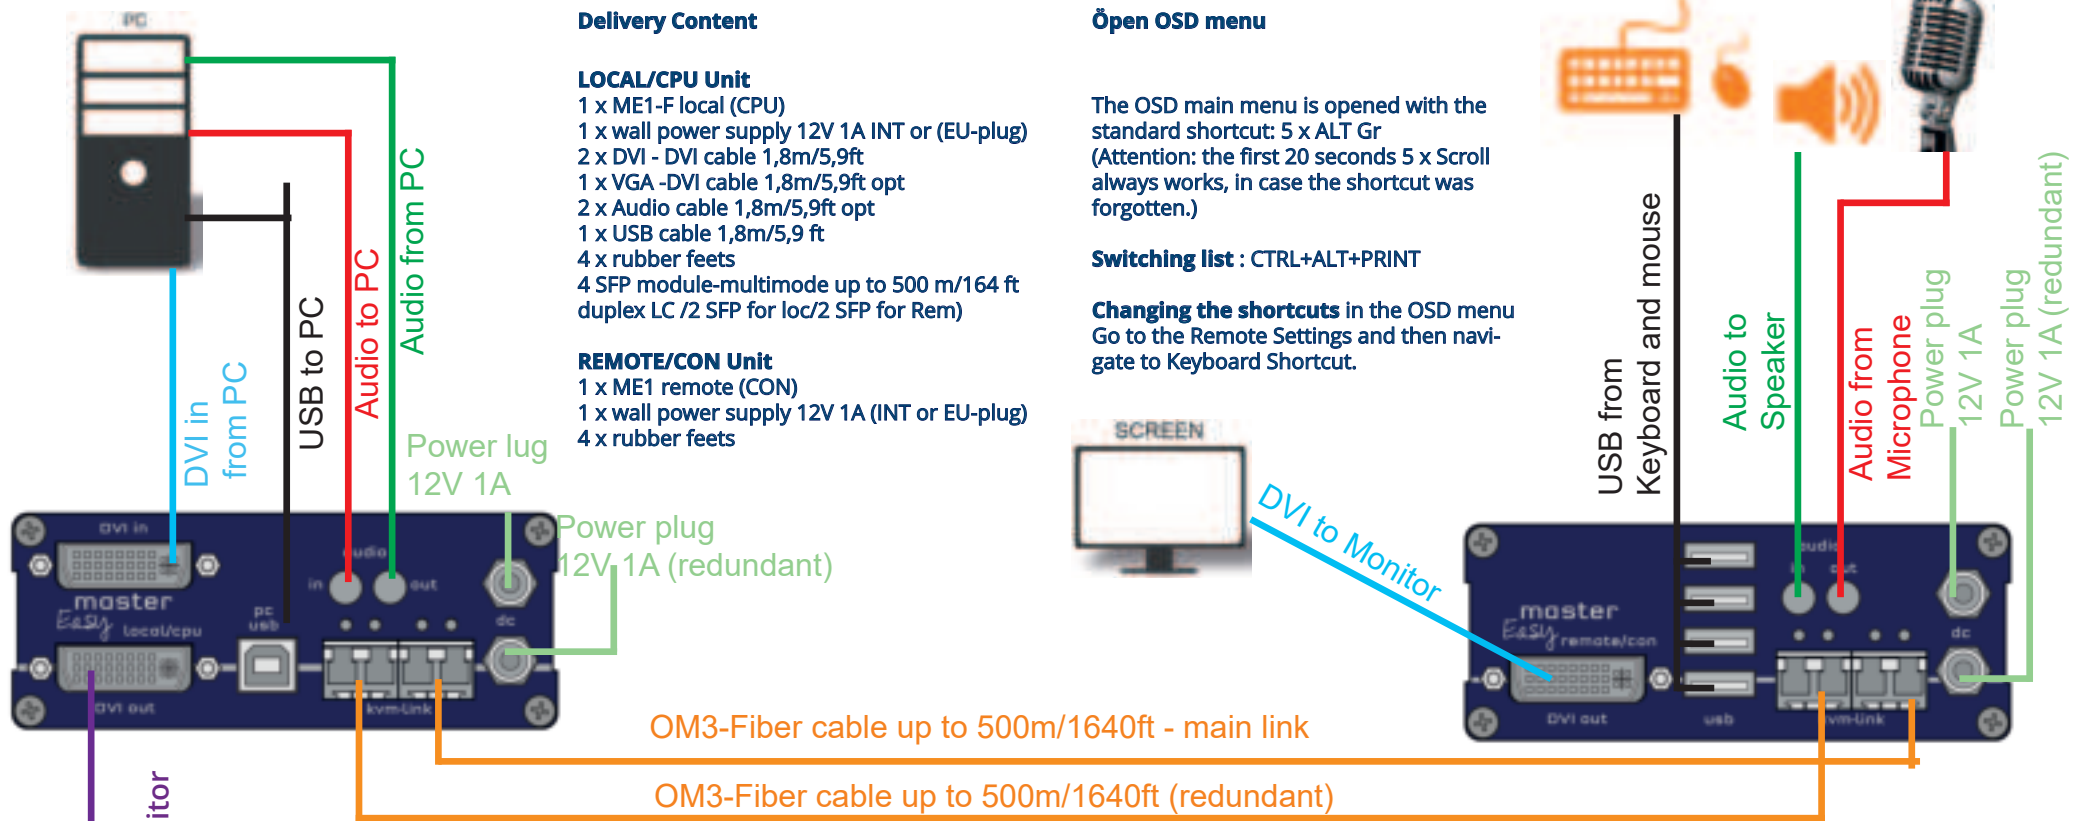

### Quick Installation masterEASY Single Fiber local / CPU – remote / CON

1. Connect the CON / Remote and the CPU / Local Unit to the included 12V 1A power supply.
2. Now connect the USB cable to a USB port on your PC and connect the other end of the USB cable to the CPU / Local Unit. Connect keyboard and mouse to the CON / Remote Unit.
3. Connect the CPU / Local and the CON / Remote Unit with a network cable.
4. Now connect the DVI cable to the DVI socket of the PC and the other end to the DVI socket of the CPU / Local Unit (PC-in).
5. Then connect the monitor with the DVI cable to the CON / Remote Unit.
6. Opt: Connect PC audio/out with the audio cable to local audio/in. Connect audio/out via the audio cable
7. Almost done Opt: Connect the audio cable local audio/out to the PC audio/in and remote audio/out with audio cable to the microphone
8. If you are using a switch: Connect all endpoints to the switch. Ensure that all connections have a bandwidth of 1Gbit/sec. For video sharing the network has to support IGMP snooping (Switch Layer3)

 
**HAVE FUN - your kvm-tec Extender is now in use for many years (MTBF approx 10 years)**

## ACCESS TO MAIN MENU

Use the monitor and the keyboard to access the main menu

### Access to the main menu.

1. make sure the extenders, monitors, and computers are turned on.
2. Press the Scroll Lock button five times quickly. The main menu and an overview of the submenus are displayed.
3. To enter a submenu, press the corresponding key.

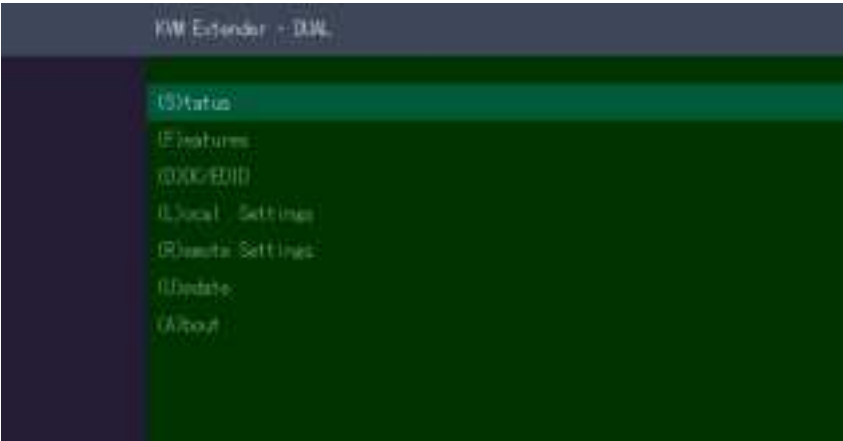

### Main menu Short Cuts :

 
S	Status Overview	Menu Status / current Status
U	Update Flash FW	Firmware update
F	Features Overview	Settings Features
D	DDC Option	DDC Option Fix
L	Local Settings	Settings Local
R	Remote Settings	Settings Remote
A	About Overview	Exit
Key „Esc“		

## DISPLAYING THE FIRMWARE VERSION

Make sure that the main menu is open. Under „A“ - About the currently installed firmware version of the remote (CON) and local (CPU) extender is displayed.

## FEATURES


Press the F key to enter the Features menu. Switching mode is set by default

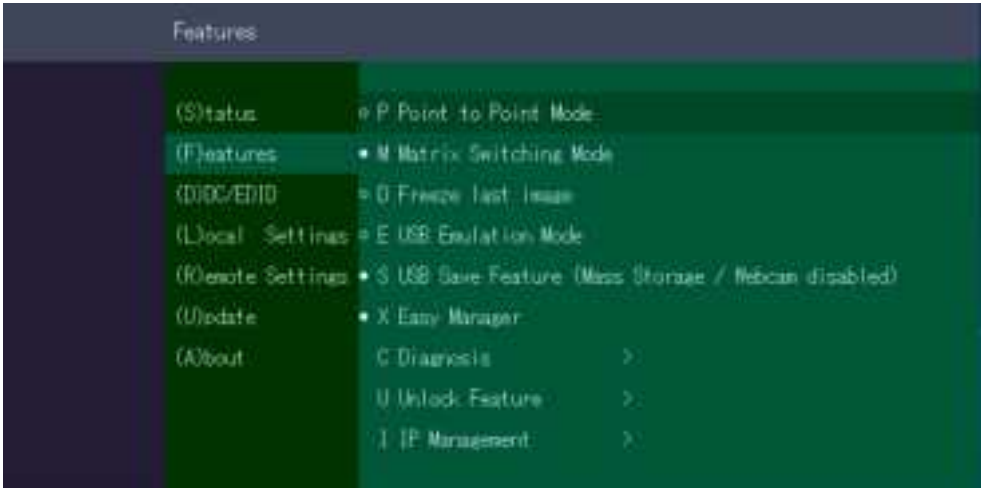

**FRONTBRIDGING**  
**HARDWARE: 1 X DUAL LOCAL + 2 X SINGLE REMOTE**

The „Status Menu“ displays the current status of the extender connection. The menu shows the information about the connection, the resolution of the video channel and the USB status. The link status shows if a connection is possible. Connected shows if the kvm files can currently be transferred.

 
Video and USB show if data is currently being transferred

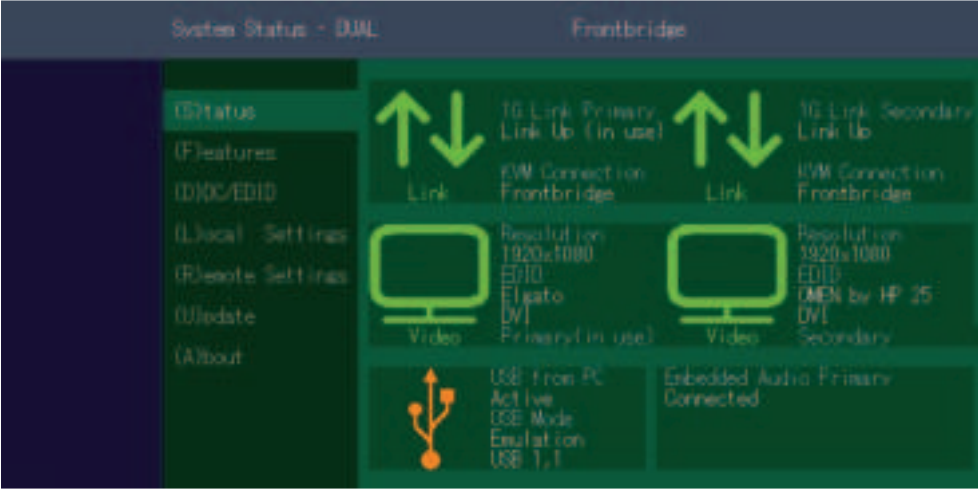

**BACKBRIDGING**  
**HARDWARE: 1 X DUAL LOCAL + 2 X SINGLE REMOTE**

The „Status Menu“ displays the current status of the extender connection. The menu shows the information about the connection, the resolution of the video channel and the USB status. The link status shows if a connection is possible. Connected shows if the kvm files can currently be transferred.

 Video and USB show if data is currently being transferred

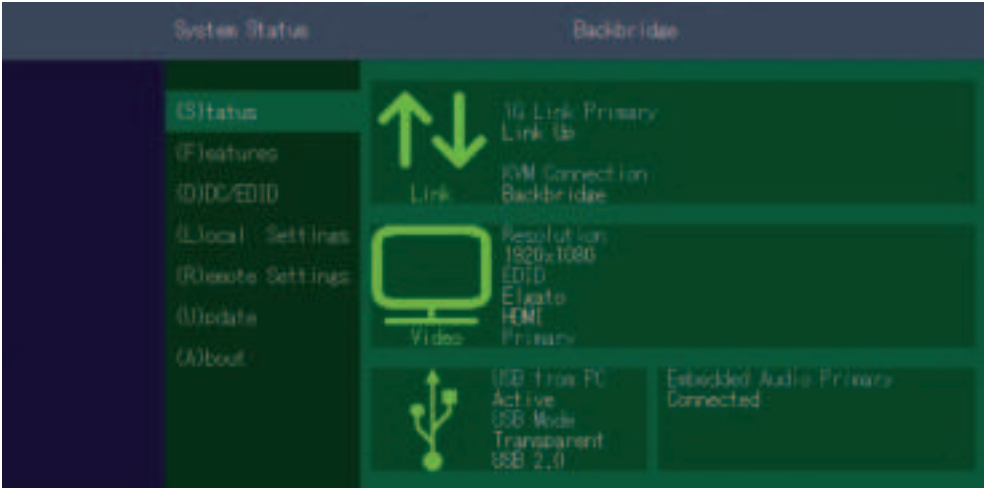

<b>KVM-TEC</b> Gewerbepark Mitterfeld 1 A 2523 Tattendorf Austria www.kvm-tec.com	<b>KVM-TEC ASIA</b> p +9173573 20204 sales.apac@kvm-tec.com  <b>KVM-TEC CHINA</b> - P + 86 1360 122 8145 chinasales@kvm-tec.com www.kvm-tec.com	<b>IHSE GmbH</b> Benzstr.1 38094 Oberteuringen Germany www.ihse.com	<b>IHSE USA LLC</b> 1 Corp.Dr.Suite Cranbury NJ 08512 USA www.ihseusa.com	<b>IHSE GMBH Asia</b> 158Kallang Way,#07-13A 349245 Singapore www.ihse.com	<b>IHSE China Co.,Ltd</b> Room 814 Building 3, Kezhu Road Guangzhou PRC www.ihse.com.cn
--	--	---	---	--	---