

heatmiser®



Model: **PRT-EW**



Table of Contents

Product Image	1	Holiday Programming	20
Table of Contents	2	Frost Protection	21
What is a Programmable Room Thermostat?	3-4	Power ON / OFF	22
Installation Procedure	5-6	Optional Features	23-26
Installing the Batteries	7-8	Re-calibrating the Thermostat	27
Replacing the Batteries	9	Factory Reset	28
Configuring the Thermostat	10	Remote Air Sensor Wiring	29
Pairing with the RC2-W Receiver	10	Notes	30
LCD Display	11-12		
Setting the Clock	13		
Temperature Display	14		
Setting the Comfort levels	15-16		
Locking the Thermostat	17		
Setting the Temperature	18		
Temperature Hold	19		

? What is a Programmable Room Thermostat?

A programmable room thermostat is both a programmer and a room thermostat.

A programmer allows you to set “On” and “Off” periods to suit your own lifestyle.

A room thermostat works by sensing the air temperature, switching on the heating when the air temperature falls below the thermostat setting, and switching it off once this set temperature has been reached.

So a programmable room thermostat lets you choose what times you want the heating to be on, and what temperature it should reach while it is on. It will allow you to select different temperatures in your home at different times of the day (and days of the week) to meet your particular needs and preferences.

Setting a programmable room thermostat to a higher temperature will not make the room heat up any faster. How quickly the room heats up depends on the design and size of the floor heating system.

Similarly reducing the temperature setting does not affect how quickly the room cools down. Setting a programmable room thermostat to a lower temperature will result in the room being controlled at a lower temperature, and saves energy.

The way to set and use your programmable room thermostat is to find the lowest temperature settings that you are comfortable with at the different times you have chosen, and then leave it alone to do its job.

The best way to do this is to set the room thermostat to a low temperature – say 18°C, and then turn it up by 1°C each day until you are comfortable with the temperature. You won’t have to adjust the thermostat further. Any adjustment above this setting will waste energy and cost you more money.

You are able to temporarily adjust the heating program by overriding or using the temperature hold feature. These features are explained further on pages 18 and 19 of this manual.

Programmable room thermostats need a free flow of air to sense the temperature, so they must not be covered by curtains or blocked by furniture. Nearby electric fires, televisions, wall or table lamps may also prevent the thermostat from working properly.



Installation Procedure



Do
Mount the thermostat at eye level.
Read the instructions fully so you get the best from our product.



Don't
Do not install near to a direct heat source as this will affect functionality.
Do not push hard on the LCD screen as this may cause irreparable damage.

This wireless thermostat is designed to be surface mounted.

Step 1

Carefully separate the front half of the thermostat from the back plate by placing a small flat head terminal driver into the slots on the bottom face of the thermostat.

Step 2

If you are installing a remote air temperature probe, terminate the thermostat as shown in the diagram on page 29.


Mark 2 hole positions on the wall using the backplate as a positioning template. Drill at the marked positions and insert a wall plug into each hole.

Step 3

Screw the thermostat back plate securely on the wall.

Step 4

Clip the front of the thermostat back onto the thermostat back plate.

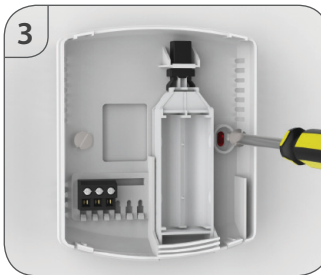



Installing the Batteries

2x AAA batteries have been supplied with this thermostat.

To access the battery holder, push and release the compartment door located on the bottom face of the thermostat.



Insert the batteries in the empty battery holder, ensuring that each battery is orientated for the correct polarity + / - .

Push the battery holder back inside the thermostat until it is secured in its closed position.




Replacing the Batteries

Batteries have a fixed lifespan and will need to be replaced occasionally to ensure the thermostat operates correctly.

The thermostat will inform you when the batteries need to be replaced by displaying the battery icon on screen.

Note: You must replace the batteries within 1 minute of removal in order to retain the current clock and comfort level settings.

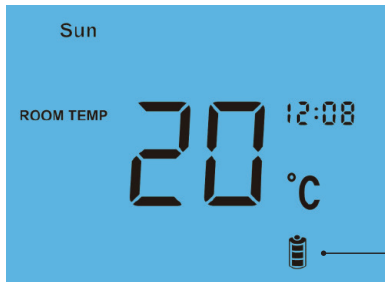

Battery Icon
(Flashes)



Configuring the Thermostat

With the thermostat turned OFF:


- Press & hold the Clock button until the LCD screen comes on 
- You will now see 01 in the top right hand corner. This is feature 01.
- Press the clock again until you see feature 07 (receiver address) 
- Use the Up/Down keys to set the address  
A unique receiver address must be set for each receiver installed.
(RF is disabled if receiver address is set to 00).
- Press A to confirm settings and the display will go blank 



Pairing the RC2-W Receiver

- On the receiver, press and hold the Pairing button until the Comms LED lights up.
- With the thermostat turned OFF, press & hold the A button for 5 seconds .. 
- The thermostat will send a signal for 1 minute and will flash the RF signal icon.
- If pairing is successful, the Comms LED on the receiver will flash.
- Press the Power button on the thermostat once to confirm pairing 

If pairing is unsuccessful, check feature 07 has been configured correctly.
To eliminate a possible signal issue, reposition the thermostat closer to the receiver and repeat the pairing process again.

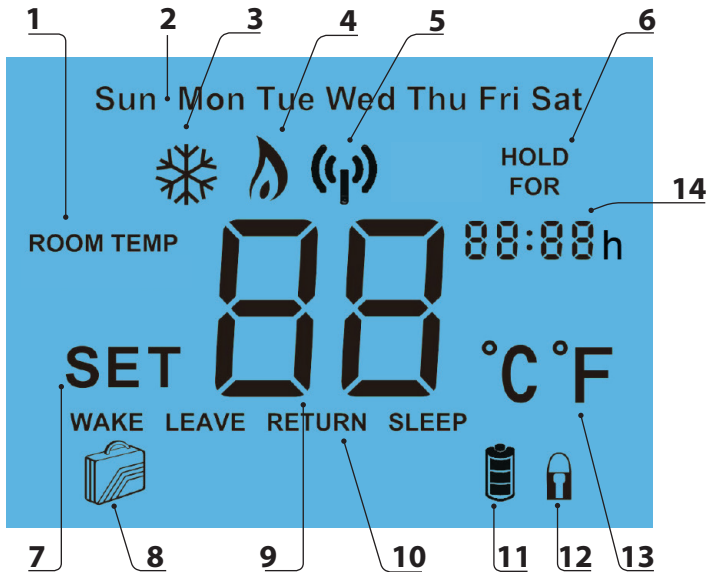

LCD LCD Display


1. Room Temp - Indicates the current temperature sensor mode.
2. Day Indicator - Displays the current day.
3. Frost Icon - Displayed when the thermostat is in frost protection mode.
4. Flame Icon - Displayed when the thermostat is calling for heat, flashes when the Optimum Start function is in operation.
5. RF Icon - Flashes when the thermostat communicates with the receiver.
6. Temperature Hold - Displayed when manually overriding the program, "HOLD FOR" and the time period are displayed.
7. Set - Displayed when changes are made to programs or temperature set points.
8. Holiday Indicator - Displayed when the programmer is in holiday mode.
9. Current Temp - Indicates the current sensor temperature.
10. Program Cycle Indicator - Displayed during programming only to show which period is being altered.
11. Battery Level - Indicates when the batteries require replacement.
12. Keypad Lock Indicator - Displayed when the keypad is locked.
13. Units of Temperature - Degrees Celsius or Fahrenheit.
14. Clock - Digital clock display in 24h format.



Setting the Clock


To set the clock, follow these steps.

- With the thermostat turned ON, press the Clock key twice
- Use the Up/Down keys to set the hours
- Press H to confirm settings
- Use the Up/Down keys to set the minutes
- Press H to confirm settings
- Use the Up/Down keys to set the day of the week
- Press A to confirm settings and return to main display

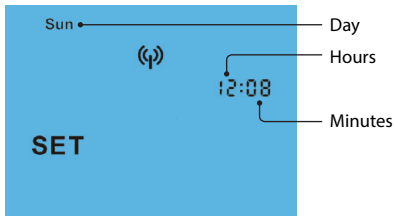


Temperature Display

The temperature display information is driven by two different inputs; the sensor measurement and the target temperature you have set.

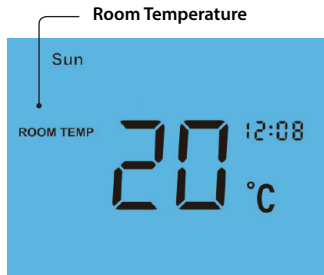

This is the current room temperature.

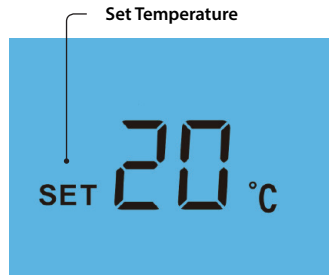

This is the temperature you are trying to achieve in your home.



Comfort Levels Explained

The thermostat provides Weekday/Weekend or 7 Day Programming options. You should consult the "Optional Features" section to select the required mode.

The thermostat is supplied with comfort levels already programmed, but these can be changed easily. The default times and temperatures are;


08.00 - 21°C (Wake) 09.30 - 16°C (Leave) 16.30 - 22°C (Return) 23.00 - 17°C (Sleep)

If you only want to use 2 levels, you should program the unused levels to --.--

Note: For Weekday/Weekend programming, the 4 comfort levels are the same for all weekdays but can be different for the weekends.

For 7 Day programming, each day can have 4 different comfort levels.

- To program comfort levels, press Clock once 

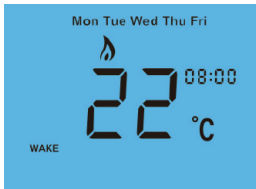

For Weekday/Weekend programming, Mon Tue Wed Thu Fri are displayed on screen.



For 7 Day programming, only Mon is displayed in the day indicator field.

- Use the Up/Down keys to enter the required WAKE time  
- Press H to confirm settings 
- Use the Up/Down keys to enter the required WAKE temperature  
- Press H to confirm settings 
- You will now see "LEAVE" displayed on screen.
- Repeat the programming steps for each period until complete.
- For unused periods enter --.-- and the thermostat will ignore the setting.
- Press A to confirm settings and return to main display 

Note:

- In 7 Day programming mode you can repeat for each day independently.
- In Weekday/Weekend programming mode you will see Sat Sun displayed on screen and can repeat for the weekend.
- To change the programming mode please refer to pages 24-26.*




Locking the Thermostat

The thermostat has a keypad lock facility. To activate the lock follow these steps.

- Press and hold the A and Down keys together for 10 seconds 
- You will see the lock symbol appear on screen 
- To unlock, repeat the steps above until the lock symbol disappears.

Note: The keypad lock indicator is only displayed when the lock is active.

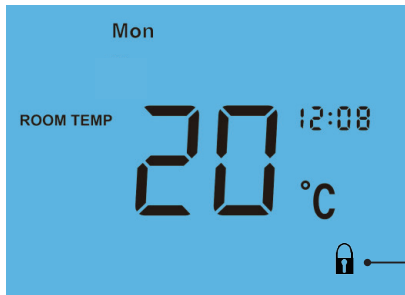

Keypad Lock Indicator



Temperature Control


The Up/Down keys allow you to adjust the set temperature  

When you press either key, you will see the word SET and the desired temperature will be displayed on screen.

Use the Up/Down keys to adjust the SET value  

Press A to confirm settings and return to main display 

Note: This override will be maintained until the next programmed comfort level.

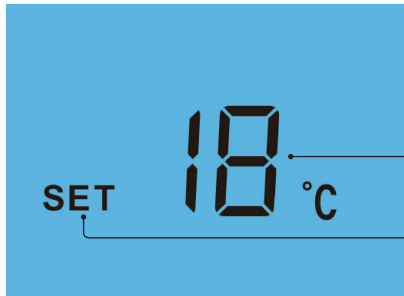

Set Temperature

Set Icon




Temperature Hold

The temperature hold function allows you to manually override the current operating program and set a different temperature for a desired period.

- Press H to commence temperature hold H
- Use the Up/Down keys to enter the required Hold time..... ▲ ▼
- Press H to confirm settings H
- Use the Up/Down keys to enter the required Hold temperature..... ▲ ▼
- Press A to confirm settings and return to main display A

You will see the Hold For indication is displayed on screen.

The time will countdown the set duration and then revert to the normal program.

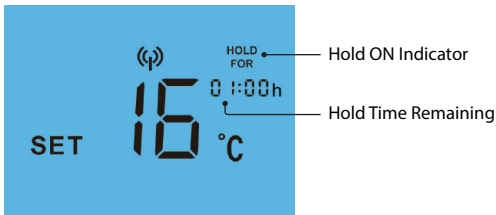

To cancel temperature hold, follow the same steps but reduce the Hold time to 00:00 hours.



Holiday


The holiday function reduces the set temperature in your home to the frost protection temperature setting (see page 23).

The thermostat will maintain this temperature for the duration of the holiday and will then automatically return to the program schedule on your return.

- Press H three times (until you see the suitcase on screen) H
- Use the Up/Down keys to enter the number of days holiday ▲ ▼
- Press A to confirm settings and return to main display A

The display will show a suitcase indicating the thermostat is in holiday mode.

Note: A holiday period does not start until 00:00 the next day. For example, if you set a holiday period on Friday for 2 days, Saturday will be counted as the first day and the thermostat will revert back to the programmed schedule at 00:00 on Monday.

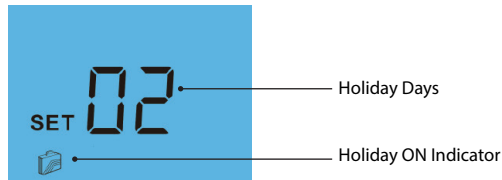

To cancel, follow the same steps but reduce the Holiday duration to 00 days.




Frost Mode

Pressing the Power button  once will place the thermostat in frost protect mode.

In this mode, the thermostat will display the frost icon and will only turn the heating on should the room temperature drop below the set frost temperature (see page 23).

Should the heating be turned on whilst in frost mode, the flame icon will be displayed.

To cancel the frost protect mode, press the Power button once again. 

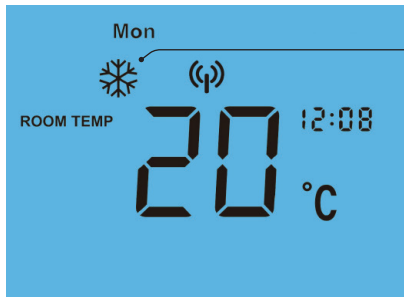

Frost Protection Mode Enabled



Heating On/Off

The heating is indicated ON when the flame icon is displayed.

When the flame icon is absent, there is no requirement for heating to achieve the set temperature but the thermostat remains active.


To turn the thermostat OFF completely, press and hold the Power button..... 
The display and heating output will be turned OFF completely.*

To turn the thermostat back ON, press the Power button once again 

Thermostat completely OFF



Thermostat powered ON

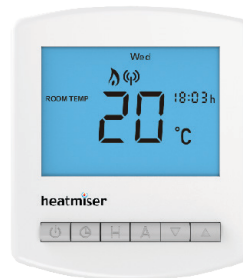

*See Feature 3 on page 23



Optional Features Explained

THE FOLLOWING SETTINGS ARE OPTIONAL AND IN MOST CASES NEED NOT BE ADJUSTED

Feature 01 - Temperature Format: This function allows you to select between °C and °F.

Feature 02 - Switching Differential: This function allows you to increase the switching differential of the thermostat. The default is 1°C which means that with a set temperature of 20°C, the thermostat will switch the heating on at 19°C and off at 20°C. With a 2°C differential, the heating will switch on at 18°C and off at 20°C.

Feature 03 - Frost Protect: You can set whether the thermostat will maintain the frost temperature when the thermostat display is turned off. As a default, this is enabled.

Feature 04 - Frost Protect Temperature: This is the temperature maintained when the thermostat is in frost mode. The range is 07 - 17°C. The default is 12°C and is suitable for most applications.

Feature 05 - Output Delay: To prevent rapid switching, an output delay can be entered. This can be set from 00 - 15 minutes. The default is 00 which means there is no delay.

Feature 06 - Not used on this model.

Feature 07 - Receiver Address: Within one building, up to 32 RC2-W's can be used. Each receiver must have a unique receiver address (01-32).

Feature 08 - Not used on this model.

Feature 09 - Not used on this model.

Feature 10 - Fail Safe: If enabled, the thermostat will send a signal to the receiver every 20 minutes. Should the receiver fail to receive two signals, the receiver will activate the output for 20% of the time. This is to protect the system against a loss of wireless signal and in case the thermostat battery fails whilst you are away.

Feature 11 - Up/Down Temperature Limit: This function allows you to limit the use of the up and down keys. This limit is also applicable when the thermostat is locked and so allows you to give others limited control of the heating system.

Feature 12 - Air Sensor Selection: On this thermostat, you can select which sensor should be used - built in sensor or remote air sensor. A floor sensor **MUST** be connected to the receiver before it will operate.

Feature 13 - Floor Limit: This thermostat uses the floor limiting sensor connected to the receiver to protect the floor surface from overheating. The floor limit is set from the thermostat but stored in the receiver.

Should the RF link fail, the receiver will limit the floor from overheating. The limit can be adjusted from 20-45°C (28°C is Default).

Feature 14 - Optimum Start: Optimum start will delay the start up of the heating system to the latest possible moment to avoid unnecessary heating, so that the dwelling is comfortably warm by the programmed time. The thermostat uses the rate of change (see below) setting to calculate how long the building needs to raise the temperature 1°C (with a rate of change of 20, the thermostat has calculated the building needs 20 minutes to raise the building 1°C). On this thermostat, optimum start works on the Wake and Return comfort levels.

Feature 15 - Rate of Change: Minutes to raise by 1°C.


Feature 16 - Weekday/Weekend or 7 Day Programming: The thermostat offers two programming methods. Weekday/Weekend allows you to program 4 comfort levels for the weekday and 4 different comfort levels for the weekend. In 7 day program mode, each day has 4 comfort levels that can be programmed independently.



Adjusting the Optional Settings

To adjust the optional settings, follow these steps.

- Press and hold the Power button to turn the thermostat OFF 
- Press and hold the Clock key until the display appears as shown below 

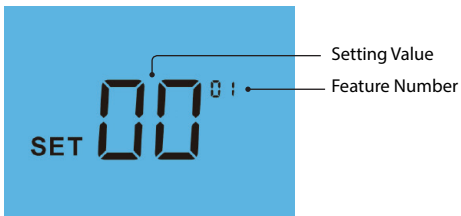

- Use the Clock key to cycle through the features 
- Use the Up/Down keys to change the setting 
- Press A to confirm settings 
- Press the Power button once again to turn the thermostat back ON 



Optional Settings - Feature Table


FEATURE	DESCRIPTION	SETTING
01	Temperature Format	00 = °C, 01 = °F (°C = Default)
02	Switching Differential	01° - 03°C (01°C = Default)
03	Frost Mode	00 = Enabled, 01 = Disabled (00 = Default)
04	Frost Protection Temperature	07° - 17°C (12°C = Default)
05	Output Delay	00 - 15 Minutes (00 = Default)
06	Not in use on this model	
07	RC2-W Address	01-32
08	Not in use on this model	
09	Not in use on this model	
10	Fail Safe	00 = Disabled, 01 = Enabled (01 = Default)
11	Up/Down Limit	00° -10°C (00°C = Default)
12	Sensor Selection	00 = Built in Air Sensor, 01 = Remote Air Sensor
13	Floor Limit	20-45°C (28°C = Default)
14	Optimum Start	00-03 Hours (00 = Default)
15	Rate of Change	Minutes to raise by 1°C
16	Program Mode	00 = Weekday/Weekend 01 = 7 Day Programming



Re-calibrating the Thermostat

If you need to re-calibrate the thermostat, follow these steps.

- Press and hold the Power button to turn the thermostat OFF 
- Press and hold BOTH the Power and Down keys together until the temperature appears on the screen 
- Use the Up/Down keys to configure the new temperature 
- Press A to confirm settings 
- Press the Power button once to turn the thermostat back ON 

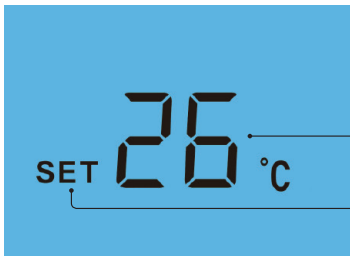

Calibration Temperature Setting

Set Icon




Factory Reset

The thermostat has a reset function to restore all settings to their factory defaults.

To perform a factory reset, follow these steps.


- Press and hold the Power button to turn the thermostat OFF 
- Press and hold the Power and Up keys together until the LCD powers up. All of the icons will be displayed on screen 
- When the icons have disappeared from the screen, the thermostat has been successfully reset.
- Press the Power button once to turn the thermostat back ON 

All icons displayed simultaneously.

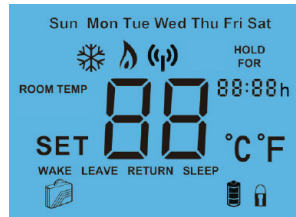

Factory reset is complete.



 

Notes

This image shows a full page of white paper with horizontal dashed lines, typical of primary school writing paper. The lines are evenly spaced and run across the entire width of the page. There are no margins, text, or other markings present.



Heating Professionals:

Request a copy of our product installation guide containing detailed technical specifications for our complete product range:
www.heatmiser.com/guide

Want More Information?

Call our support team on: +44 (0)1254 669090

Or view technical specifications directly on our website:
www.heatmiser.com



PDF



FAQ



Video



Twitter: [heatmiseruk](https://twitter.com/heatmiseruk)



Facebook:
facebook.com/thermostats