

PU15-PRE  
Portable Monitor  
Quick Start Guide



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Thank you for choosing Innocn® !

We hope the Innocn® product you purchased will serve you well. To ensure safety and trouble-free operation of your device, please read the user guide carefully and keep it for future needs.

Please email us for customer service & technical support at [✉ service@innocn.com](mailto:service@innocn.com).

We recommend you go online to our homepage for the most up-to-date guidance for your product, registering Innocn membership; referring to warranty information.

[🌐 http://www.innocn.com](http://www.innocn.com)



## Safety Precautions


---

1. Read all warnings and follow all instructions. Keep this user guide for later reference.
2. Do not use this device near water. To reduce the risk of fire or electric shock, do not expose the device to moisture.
3. Do not place the device on an uneven or unstable surface. The device may fall over resulting in an injury or malfunction.
4. Avoid exposing the device to direct sunlight or other sources of sustained heat.
5. Always use genuine INNOCN components to ensure safety and product performance.
6. To avoid the risk of electric shock or component damage, switch off the power before connecting other components to the display.
7. Disconnect the power plug from the AC outlet if the device will not be used for a long period of time.
8. When connecting to a power outlet, DO NOT remove the grounding prong. Please ensure grounding prongs are NEVER REMOVED.
9. Place the device in a well-ventilated area. Do not place anything on the device that prevents heat dissipation.
10. The power adaptor must be replaced when using different voltage from that specified in the User Guide. For more information, please contact us.
11. Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
12. Do not apply pressure to the LCD screen. Excessive pressure may cause permanent damage to the display.
13. Plastic bags can be dangerous. Keep plastic bags away from babies and children to avoid danger of suffocation.
14. Do not attempt to repair the product by yourself. Opening the back cover may expose you to high voltages, the risk of electric shock, and other hazards. If repair is required, please contact us anytime. (service@innocn.com)
15. If there are visual smoke or sparks, unplug the power cord and contact us (service@innocn.com). Do not try to repair the product yourself.
16. To avoid risk of electric shock, do not touch the power plug and ports with wet hands.


## Table of Contents

Packaging List -----	4
Product Instruction -----	4
Key Instruction -----	4
Input Connector -----	5
OSD(On-Screen Display) Menu -----	6
Troubleshooting(FAQ)-----	11
Product Specification -----	12
Warranty Information-----	13


Packaging List




Monitor x1




Mini HDMI cable x1




Type-C data cable x1




Charger x1




USB Type-C power cable x1




Protective sleeve x1



Quick Start Guide



 
Warranty Card x1



Lens Cloth x1

Product Instruction


Key Instruction

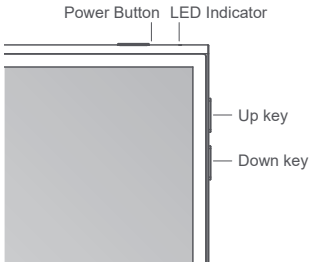

1	<p>Power Button:</p> <p>Long press the power button to turn the monitor on/off</p> <p>Short press the power button to open the OSD menu</p>
2	<p>LED Indicator: Blue: On</p> <p>Orange: Standby mode</p> <p>Dark: Off</p>
3	<p>Up Key:</p> <p>Long press the up-key to increase volume</p> <p>Short press the up-key to show the volume on the left</p>
4	<p>Down Key:</p> <p>Long press the down-key to decrease volume</p> <p>Short press the down-key to display the volume on the left</p>

Product Instruction

 Input Connector

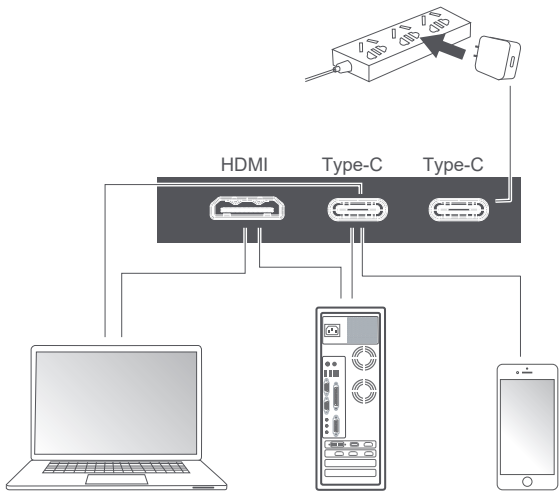

- Notes:
- 1. The monitor is touchable only when the input source is from USB Type-C; for HDMI input source, you need a USB-A to USB Type-C cable(not included) to connect to use the touch function.
  - 2. Please exchange with INNOCN original new accessories if damaged.


OSD(On-Screen Display) Menu

Display the OSD menu: Short press the power button; Swipe down with 2 fingers on the left corner of monitor;




Home		Adjust Brightness,Contrast,Volume
Profiles		7 Profiles are available
Color temperature		Under USER mode, the R G B can be adjusted
Color		Adjust the chrominance color saturation sharpness
TYPE-C		When selected, signal source is Type-C
HDMI		When selected, signal source is HDMI
OSD		When selected, adjust transparency of OSD menu
Gravity Sensor		When selected, device will automatically display vertically/horizontally
Battery display		When selected, monitor supplies power to external devices
Reset		When selected, restore factory settings
EXIT		When clicked, OSD menu disappears

 Home

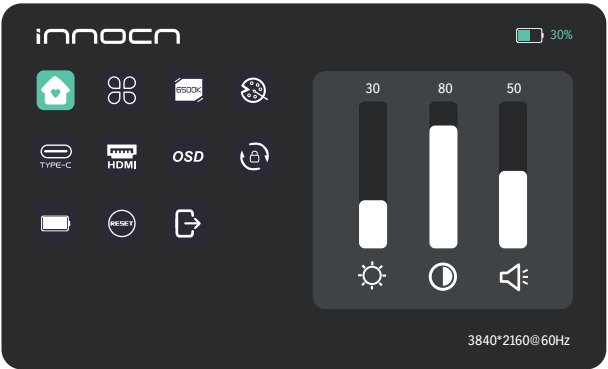

Adjust brightness,contrast, volume

 Profiles

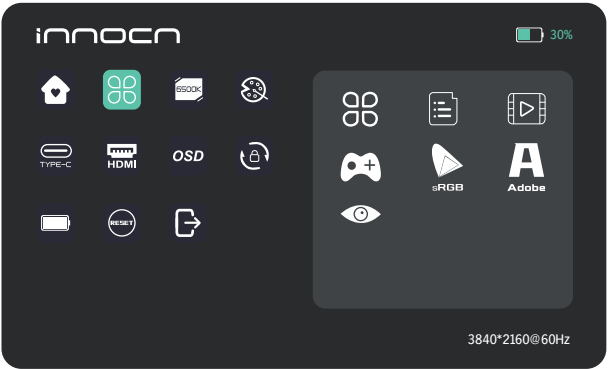


Custom Mode, Reading Mode, Movie Mode, Game Mode, sRGB Mode, Adobe Mode, Eye Protection Mode

## Color temperature



 When USER is selected, R G B can be adjusted

## Color

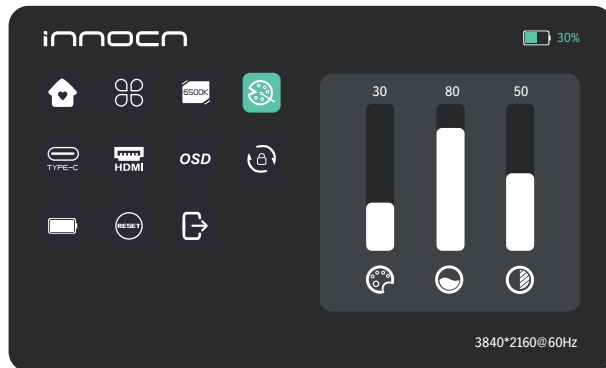

Manually adjust chrominance, color saturation and sharpness

## OSD



When (⌚) is selected, adjust OSD menu display duration

When (🌀) is selected, adjust OSD menu transparency

## Gravity Sensor

 



Turn on/off auto-rotation


PC connection flipped


Mobile phone connection flipped

## Other icons

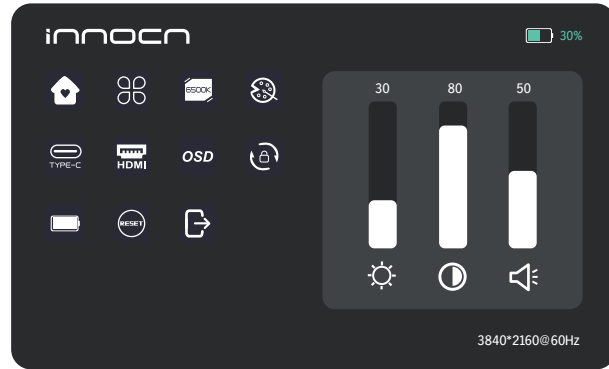





When (  ) is selected, monitor supplies power to external devices

When (  ) is selected, display restores to factory settings

When (  ) is selected, OSD menu disappears

## Troubleshooting

The following table contains general information about common monitor problems you might encounter and the possible solutions.

Common Symptoms	Possible Solutions
No display after turning monitor ON (screen is black but power supply lights is ON)	<ul style="list-style-type: none"> <li>• Ensure that the video cable connecting the monitor and the computer is properly connected and secure.</li> <li>• Make sure if the operating system had entered hibernation, sleep or power-save mode. Press any key (Enter key / Power key) or move the mouse to wake it up.</li> <li>• Check for bent or broken pins in the video cable connector.</li> <li>• Ensure that the correct input source is selected in the Input Source menu.</li> <li>• Replace other identical signal cable (HDMI / Type-C) to take cross-test.</li> </ul> <p><b>Attention:</b> Not every computer/phone's USB Type-C port will support video out signals. Please check your cable and your computer/phone to make sure those will support a video signal.</p>
No display after turning monitor ON (not boot, black screen & no power lights)	<ul style="list-style-type: none"> <li>• Verify that the power outlet is functioning properly using any other electrical equipment. If your device has battery, make sure it's not out of battery.</li> <li>• Make sure the power button is pressed fully and hold for 5s.</li> </ul>
Missing Pixels. LCD screen has spots	<ul style="list-style-type: none"> <li>• Cycle power On-Off.</li> <li>• Pixel that is permanently Off is a natural defect that can occur in LCD technology.</li> <li>• For more information on Innocn Monitor Quality and Pixel Policy, see Innocn warranty information at: <a href="http://www.innocn.com">http://www.innocn.com</a>.</li> </ul>
Safety Related Issues (Visible signs of smoke or sparks)	<ul style="list-style-type: none"> <li>• Do not perform any troubleshooting steps.</li> <li>• Contact Innocn immediately.</li> </ul>
Image does not fill entire viewing area.	<ul style="list-style-type: none"> <li>• Check the resolution setting in your PC.</li> </ul>
The screen appears yellow	<ul style="list-style-type: none"> <li>• Make sure the device was not set to "Eyes Care mode"</li> <li>• Check here: OSD →  → </li> </ul>
Control panel keys do not work	<ul style="list-style-type: none"> <li>• Press only one key at a time.</li> <li>• Make sure to have a valid video signal going through the monitor before you can turn on the OSD.</li> </ul>
I cannot adjust the brightness/ contrast ratio/ color saturation through OSD	<ul style="list-style-type: none"> <li>• Make sure the device was set to "custom mode"</li> <li>• Check here: OSD →  → </li> </ul>

## Product Specification

Product Name	INNOCN 15.6" portable monitor
Product Model	PU15-PRE
Screen Size	15.6"
Screen Type	OLED
Resolution	3840*2160P
Brightness (Typ.)	380±20cd/m²
Touchable	Yes
Speaker	2*1W
Refresh Rate	60Hz
Color Gamut	100% DCI-P3
Display Colors	1074M(RGB8BIT+2FRC)
Contrast (Typ.)	100000:1
Digital Input	Type-C*2、Mini HDMI*1
Phys. Dimension	358*233mm
Phys. Thickness	6.8mm
Net weight	950g
Voltage Rating	DC 20V=== 2.25A
Operating Temp.	0°C~45°C

## Warranty Information

### What is covered in your warranty?

1. Warranty Period: 3 Years for product from date of purchase.
2. This warranty is confined to the first purchaser of the product only.

### This Warranty is not Applicable in any of the Following Cases:

1. The product is not purchased from an Authorized Innocn dealer.
2. The product is not used according to instructions given in the instruction manual.
3. Defects caused by improper use as determined by company personnel.
4. Modification or alteration of any nature is made in the electrical circuitry / or physical construction of the set.
5. Installation / repair work is carried out by persons / agency other than authorized by the company.
6. The original serial number is removed, obliterated or altered from the machine or cabinet.
7. Accidents, Acts of God, lightning, water, fire, public disturbances, improper ventilation, voltage fluctuations or any cause beyond the control of Innocn.



物料号码	108.007.14981		
厂内型号	15K1U-C	厂外型号	PU15-PRE
物料名称	说明书	品 牌	INNOCN 销美
协力厂商		日 期	2021.6.11
规 格	140*197mm		
要 求	105g哑粉纸，骑马钉，四色印刷		
版 本	V01	设 计	梁丽
确 认		核 准	

备注：页码统一朝外

变更list: