





 
## Operating Instructions – Dishwasher Indesit DSIE2B10UK

### Control Panel

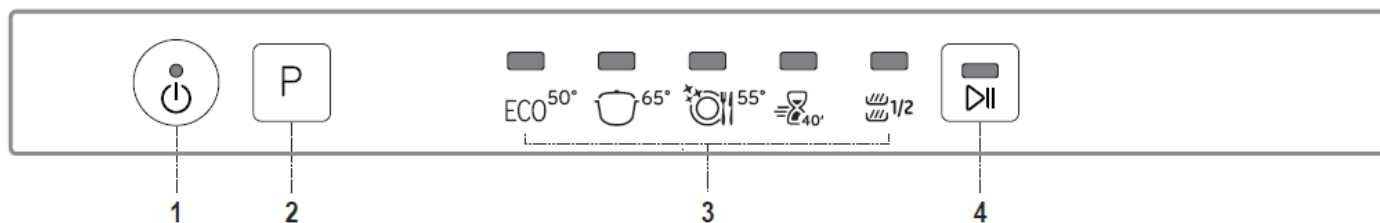

1. ON-OFF/ Reset button with indicator light
2. Programme selection button
3. Programme indicator lights
4. START/ Pause button with indicator light

### Programmes

Program	Drying phase	Detergent container		Duration of wash program (h:min) <sup>*)</sup>	Water consumption (litres/cycle)	Energy consumption (kWh/cycle)
		Tub	B			
1 Eco ECO 50°	✓	✓	✓	4:00	11.5	0.83
2 Intensive  65°	✓	-	✓	2:30	15.0	1.5
3 Normal  55°	✓	-	✓	2:25	15.0	1.35
4 Rapid 40'  50°	-	-	✓	0:40	8.0	0.9
5 Half Load  50°	✓	-	✓	1:15	11.0	0.9

### Starting the dishwasher

- Load the dishwasher
- Check that the upper and lower arms can rotate freely
- Add the detergent.
- Press the On/Off button to switch on the appliance.
- Select the required programme
- Start the programme by pressing the START/ Pause button and closing the door.
- The end of the programme is indicated by beeps and the flashing indicator light of the selected programme. Open the door and switch off the appliance by pressing the ON/OFF button.

Warning! Do not open the dishwasher door whilst the appliance is in operation.

### Unloading the dishwasher

Care must be taken when opening the door as hot steam will escape. Please allow 15-30 minutes before unloading the dishwasher so the dishes can cool. Unload the lower rack first, then the upper rack.