背面

前面

TECHNICAL SPECIFICATIONS

BT Version: 5.0 Playback Time: 6-8 Hour Input Voltage: 3V Working current: 70MA with on/off button Battery: 2* AA dey battery

GENERAL INSTRUCTION AND WARNING

- 1. Read all the instructions before using the product.
 2. Do not use/store this speaker in extreme temperature.
 3. Please store it in cool and dry area, Keep away from anything that generates heat, such as those coldates (Departulations etc.). as stoves, radiator, flammable items etc.

 
 4. In order to have hearing protection and an extended speaker life, Avoid listening on
- maximum volume.

 5. When cleaning the device, Use a soft dry cloth. For more sever stains, Please dampen the cloth with water only. Anything else has the chance of damaging the material.


 6. Only use attachments/accessories specified by the manufacturer.

ACCESSORIES

- 1. Type-C charging cable
- 2. 3.5mm AUX cable 3. Belt



THUNDER BASS 100X BUTTON DEMONSTRATION

 

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications to device will void the user's authority to operate the device.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of t he FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- --Regrient or relocate the receiving antenna.
- -Increase the separation between the device and receiver. -- Connect the device into an outlet on a circuit different
- from that to which the receiver is connected
- -- Consult the dealer or an experienced radio/TV technician for held

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

AUDIO FUNCTIONS INSTRUCTION



Press the button to boost the sound of playing audio. Press one time for Turbo Level 1
Press two time for Turbo Level 2. Button's LED brightness will also vary.
Long Press the button to turn on TWS mode. (Refer TWS MODE Section)



 
there is any abnormal Jam or device doesn't work properly then short press the reset bu reset the machine. RESET BUTTON on the rear side of device near Charging port.

1. BT MODE









- 1.2 Flashing of Blue Light indicates that the partybox is ready to pair.
 1.3 Turn on the Bluetooth device and Search for "Electro Thunder Bass"
- Connect and paired.
- Connect and paired.

 1.4 The voice prompt will say BLUTEOOTH CONNECTED when it is paired successfulland It will say BLUTEOOTH DISCONNECTED when unpaired successfully.
- 1.5 After connected successfully, Start experiencing the Wireless marvelous sound
- 2. AUX MODE
- 2.1 Press the INPUT button to turn on AUX function, The Voice Prompt will say AUX MODE.
- 2.2 Connect 3.5mm AUX cable to the AUX port on the rear side of PARTYBOX.

3. USB / SD CARD MODE

3. Unsert the USB Flash Drive/SD Card in the port on rear side to play the music.
3.2 If any other function is playing then it will change to USB/SD Card mode after inserting drive. The Voice Prompt will say USB MODE/SD Card mode.
3.3 Fast Forward/ Backward of music is workable in USB/SD Card mode only.



 4.1 Power on the Second PARTYBOX for TWS pairing, Turn on the Bluetooth mode.
 Blinking of Blue Light indicate that Second PARTYBOX is ready to pair.
 4.2 Press the BASS BOOST buttons of both the PARTYBOX as at the same time. The VoicePrompt will say TWS Mode. TWS mode will not work if any Bluetooth device is already connected.

airea yd. connected.
Al 3 After Successfully connected the voice prompt will say TWS PAIR CONNECTED.
Now, Start experiencing the True Wireless Stereo sound.
Al 4 To play via Bueucota hudio device follow the Bluetoch Connectivity steps and connect to PARTYBOX.
Al 5 General operations like Play/Pause/Volume/Next/Previous can be performed by

either of the PARTYBOX.

. KARAOKE FUNCTION

5.1 To use the Karaoke function insert the MIC cable Port into the MIC Port at the rear side. (Not included)

5.2 To use Wireless Karaoke function, Turn on the Wireless MIC Switch. Once the Power is ON, It will connect automatically with the PARTYBOX.





5.3 MIC Volume Adjustment- Long Press the LED Button to Adjust the MIC VOLUME The voice prompt will say MIC Volume, Use Volume Knob UP/Down to increase and decrease the MIC volume

54. MIC EXCHANGE Adjustment - Again Long Press the LED Button to Adjust the MIC ECHO. The voice prompt will say MIC ECHO. Use Volume Knob UP/Down to increase and decrease the MIC Echoes.





2BB37-ELLCTB100X-A

User manual

100mm 100mm 100mm