
CEILING FAN LIGHT

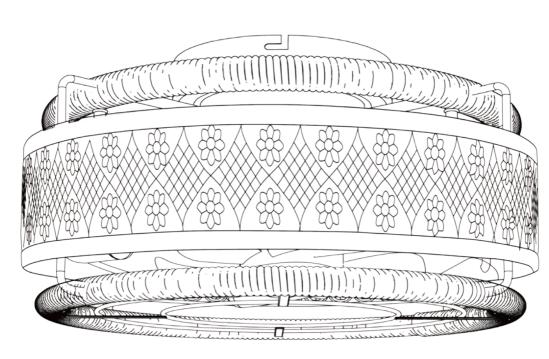

Instruction Manual

Safety Precautions

The information contained in the following pages has been prepared to ensure your maximum enjoyment of your fan

Please remove the fuse or turn off the circuit breaker to cut off the power before installing the fan. Ensure all electrical connections are in compliance with local laws, regulations and national eletrical codes. If you are not familiar with electrical installation and wiring, please hire a qualified electrician or consult the wiring manual.

- For your safety, all electrical connections and disconnections should be performed by a qualified electrician.
- 2. Any action performed for the electrical connection of the device must be carried out after ensuring that the general power supply is disconnected, by removing the corresponding fuse or disarming the protective switch in order to ensure total isolation of the power supply.
- 3. When deciding where to mount the fan, be sure that there is at least 30 inches(76 cm) of space between the fan and any wall or other obstruction that the fan blades could collide with. The greater this distance, the more effective the air flow produced. After the fan is mounted, be sure that the blades are no less than 7ft(2.1 m) above the ground.
- 4 . The anchor point for the fan must be able to support a weight of at least 100 pounds(45 kg). If mounting on a ceiling junctionbox, be sure that the fan is adequately supported to prevent loosening or turning.
- 5. The fan's electrical connection must be "grounded" (the fan's ground cable connected to the installation's grounding network) in order to avoid any branching that may be dangerous to people.
- 6. Do not connect the fan's power supply to any dimmers, potentiometers, or light switches, as it will cause the fan tomalfunction and/or will damage the motor. The fan must be directly connected to a properly protected installation circuit(magnetothermal differential switch with the adequate size for the fan's consumption and technical specifications). Only use the fan's control to turn it on or stop it.
- 7. It is recommended to not use these types of fans along with gas installations simultaneously in the same room.
- 8. The fan must be not be moving and must have come to a complete stop before changing its direction of rotation. This will prevent damage to its motor and to the control unit, when applicable.
- 9. Do not insert anything that could hit the fan's blades into its pathway while it is moving, as this could cause damage to people, can damage the blades, and can offset the balance of the unit, causing vibrations and wobbling.
- 10. After installing the fan, ensure that all fastenings are secure and tightened in order to avoid any noise caused by loose elements.
- 11. Due to the fan's movement, certain fastenings may become loose. Check all fastenings twice per year at a minimum in order to ensure that they are sufficiently tight. If necessary, they must be retightened.
- 12. The motor housing can be cleaned with a soft brush or a lint-free cloth to avoid scratching the surface. Clean the blades with a lint-free cloth. Important: Turn off the main power supply before starting any maintenance. Do not clean the fans with water or a damp cloth.

CAUTION: The important warnings and instructions noted in this manual are not guaranteed to cover all possible occurrences. Common sense, prevention and care cannot be included in all products. These factors can and must be provided only by the user who maintains and enjoys this fan light.

Package Contents

Tools Needed




















- 1.Tapping screw
- 2.Plastic anchors
- 3. Round hanging plate 4. Lighting and fan

5.Remote control

Assembly Instructions

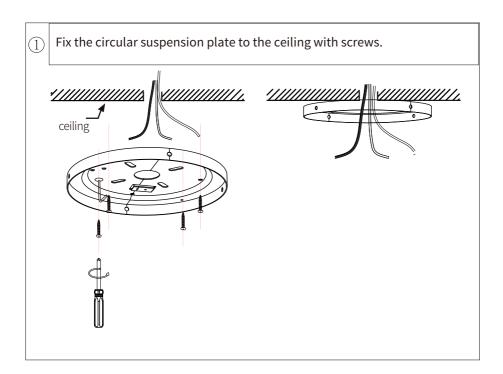


Assembly Instructions

\bigcirc connection

 Connect the yellow, gray and white wire ports with the corresponding colors of the drive

Connect the red, black and white wire ports with the corresponding colors of the drive

3. Connect the live line and zero line of the drive to the power supply

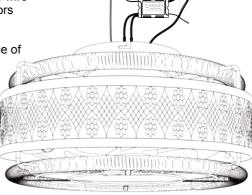


A WARNING


To avoid fire or electric shock accidents, please ensure that the power to the main fuse box is turned off. (Figure 1)

NOTE: If you are not sure if the outlet box is grounded, contact a licensed electrician for advice, as it must be grounded for safe operation.


A WARNING

The fan must be hung in such a location that there is at least 10 feet of clearance between the floor and the blades. (Figure 2)

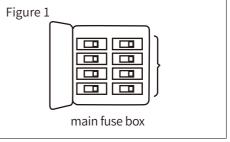

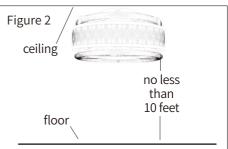

Assembly Instructions

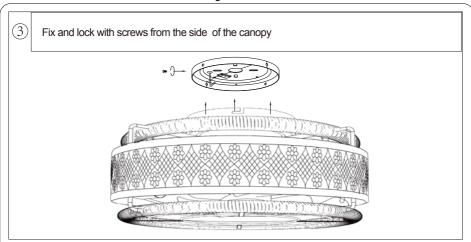

Remote Control (Esmitter) Operation

Please install the AAA/1.5V battery (not included) before using the remote control. Please store the remote control in a place away from excessive heat or humidity.

Light On/Off Light On/Off

ALL OFF Turn off lights and fans

Natural wind

R/F Fan rotates forward/reverse

1,2,3,4,5,6 Fan speeds

FAN OFF FAN OFF

1H Fan Stops After 1 Hour

2H Fan Stops After 2 Hour

4H Fan Stops After 4 Hour

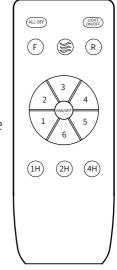


Figure 3