 


Television

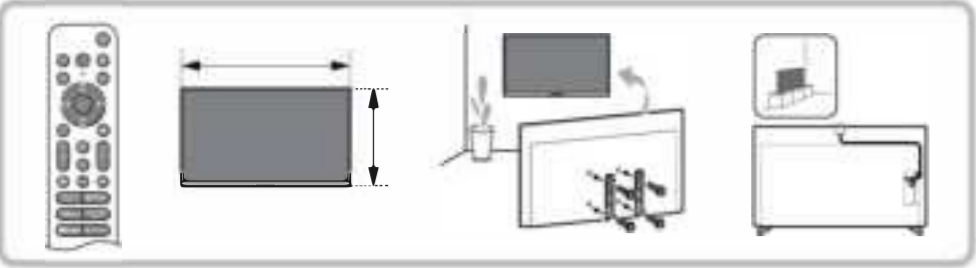


*Read this manual before using this product.

Dimensions and weight (without Table-Top Stand)

	(mm)/(inches)		(kg)/(lb.) ^{*1}	
	(A)	(B)	(C)	(W)
XR-98X90L	2199 / 86 5/8 2199 / 86 5/8	1255 / 49 1/2 1255 / 49 1/2	85 / 3 3/8 85 / 3 3/8	67.2 / 148.1 67.2 / 148.1
XR-85X90L / 85X90CL	1891 / 74 1/2 1891 / 74 1/2	1085 / 42 3/4 1085 / 42 3/4	59 / 2 3/8 59 / 2 3/8	44.5 / 98.1 44.5 / 98.1
XR-75X90L / 75X90CL	1668 / 65 3/4 1668 / 65 3/4	959 / 37 1/8 959 / 37 1/8	59 / 2 3/8 59 / 2 3/8	35.4 / 78 35.4 / 78
XR-65X90L / 65X90CL	1445 / 57 1445 / 57	831 / 32 3/4 831 / 32 3/4	57 / 2 1/4 57 / 2 1/4	24.2 / 53.4 24.2 / 53.4
XR-55X90L	1225 / 48 1/4 1225 / 48 1/4	707 / 27 1/8 707 / 27 1/8	56 / 2 1/4 56 / 2 1/4	16.9 / 37.3 16.9 / 37.3

^{*1} (Approx.)

 
Dimensions and weight (Table-Top Stand)

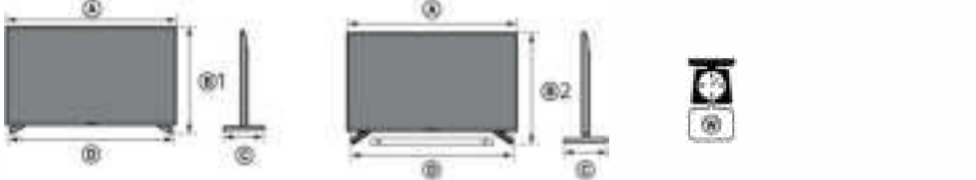

	(mm)/(inches)		(kg)/(lb.)*1			
	(A)	(B1)	(B2)	(C)	(D)	(W)
XR-98X90L	2199 / 86 5/8 2199 / 86 5/8	1305 / 51 1/2 1305 / 51 1/2	— —	465 / 18 3/8 465 / 18 3/8	1536 / 60 1/2 1536 / 60 1/2	68.9 / 151.8 68.9 / 151.8
XR-85X90L / 85X90CL	1891 / 74 1/2 1891 / 74 1/2	1120 / 44 1/8 1120 / 44 1/8	1160 / 45 3/4 1160 / 45 3/4	464 / 18 3/8 464 / 18 3/8	1549 / 61 1549 / 61	45.9 / 101.2 45.9 / 101.2
XR-75X90L / 75X90CL	1668 / 65 3/4 1668 / 65 3/4	992 / 39 1/8 992 / 39 1/8	1032 / 40 3/4 1032 / 40 3/4	395 / 15 5/8 395 / 15 5/8	1426 / 56 1/4 1426 / 56 1/4	36.6 / 80.7 36.6 / 80.7
XR-65X90L / 65X90CL	1445 / 57 1445 / 57	861 / 34 861 / 34	901 / 35 1/2 901 / 35 1/2	345 / 13 5/8 345 / 13 5/8	1209 / 47 5/8 1209 / 47 5/8	25 / 55.1 25 / 55.1
XR-55X90L	1225 / 48 1/4 1225 / 48 1/4	738 / 29 1/8 738 / 29 1/8	778 / 30 3/4 778 / 30 3/4	345 / 13 5/8 345 / 13 5/8	1067 / 42 1/8 1067 / 42 1/8	17.7 / 39 17.7 / 39

^{*1} (Approx.)

Optional Camera and Microphone Unit (not supplied) Cable Management

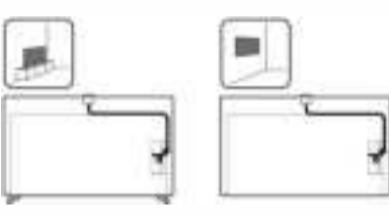

- Note**
- Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
 - Read the supplied safety documentation for additional safety information.

Location of the identification label
Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.

IMPORTANT NOTICE FOR MEXICO
Operation of this equipment is subject to the following two conditions: (1) it is possible that this equipment or device may not cause harmful interference and (2) this equipment or device must accept any interference, including interference that may cause undesired operation.

For information related to the certificate number, refer to the package label and / or product.

Note:
This product uses the following module for wireless functionalities:
Model: DHUR-SY63
Brand: Wistron NeWeb Corporation

WLAN:
2.4 GHz (2.4000 GHz - 2.4835 GHz)
5 GHz (5.150 GHz - 5.850 GHz)
Bluetooth®:
2.4 GHz (2.4000 GHz - 2.4835 GHz)

Information for the remote control with voice command included with this product:
Model: RMF-TX810U*
Brand: Sony

Note: Uses the following device for wireless functionalities:
Model: UE878
Brand: UEI

^{*1} To see the model name of the remote control, open the remote control cover and see the label on the remote control.

Safety Information
Notice for customers in the United States of America

Supplier's Declaration of Conformity
Trade Name: SONY
Model: XR-98X90L / XR-85X90L / XR-85X90CL / XR-75X90L / XR-75X90CL / XR-65X90L / XR-65X90CL / XR-55X90L

Compatible Wall-Mount Bracket Information
Use the following Sony Wall-Mount Bracket with your TV model.

Sony TV Model No.	Sony Wall-Mount Bracket Model No.
XR-75X90L / 75X90CL / 65X90L / 65X90CL / 55X90L	SU-WL855 ^{*1}

Note: The picture of remote controller is only for reference and is subject to the real one.

The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

Use with other Wall-Mount Brackets^{*2} may cause instability and could result in property damage or injury.

- ^{*1} Only for limited region/country/model.
- ^{*2} For instructions on using the Wall-Mount Bracket with your TV please go to <https://www.sony.com/am/support> for your TV model and download "Wall-Mount Bracket".


Before setting up your TV
Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See "Installing the TV to the Wall" if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand (refer to the Setup Guide).
Be sure to consider the following while setting up your TV:

- Disconnect all cables when carrying the TV.
- Two or more persons (three or more persons for 214.8 cm (85 inches), four or more persons for 247.7 cm (98 inches) and above TV) are needed to transport a large TV set.
- Correct hand placement while carrying the TV is very important for safety and to avoid damage.
- When handling or mounting the TV set, do not lay down the TV (for applicable TV model only).

XR-98X90L



XR-85X90L / 85X90CL

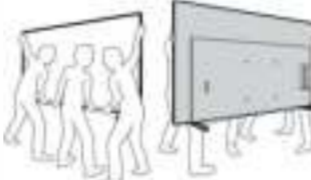

XR-75X90L / 75X90CL / 65X90L / 65X90CL / 55X90L



Securing the TV
Sony strongly recommends taking measures to prevent the TV from toppling over. Unsecured TVs may topple and result in property damage, serious bodily injury or even death.


- Preventing the TV from Toppling**
- Secure the TV to a wall and/or stand.
 - Do not allow children to play or climb on furniture and TV sets.
 - Avoid placing or hanging items on the TV.
 - Never install the TV on:
 - slippery, unstable and/or uneven surfaces.
 - furniture that can easily be used as steps, such as a chest of drawers.
 - Install the TV where it cannot be pulled, pushed, or knocked over.
 - Install the TV so that the TV's TableTop Stand does not protrude out from the Stand (not supplied). If the TableTop Stand protrudes out from the Stand, it may cause TV set to topple over, fall down, and cause personal injury or damage to the TV.



- Route all AC power cords and connecting cables so that they are not accessible to curious children.


Recommended Measures to Secure the TV
Consider the following measures when securing your TV to a Stand (not supplied).

- 1 Secure the Stand for the TV.
Make sure the Stand can adequately support the weight of the TV. Use two angle braces (not supplied) to secure the Stand. For each angle brace use the appropriate hardware to:
 - Attach one side of the angle brace to the wall stud.
 - Attach the other side to the Stand.

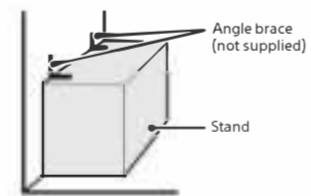


- 2 Secure the TV to the Stand.
Use the optional hardware listed as follows (not supplied):
 - M6 machine screws (screwed into the TV's TableTop Stand) (XR-98X90L only).
 - M6 machine screws (screwed into the TV's rear cover) (except XR-98X90L).
 - A screw or similar (attach it to the Stand).
 - Rope or chain (strong enough to support the weight of the TV). Make sure that there is no excess slack in the rope or chain.


XR-98X90L

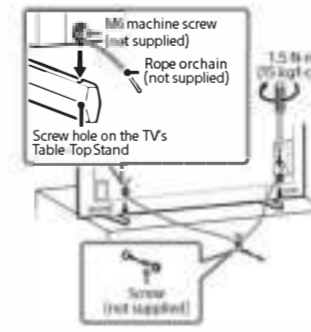

XR-85X90L / 85X90CL / 75X90L / 75X90CL / 65X90L / 65X90CL / 55X90L

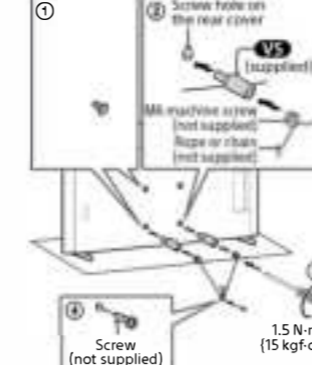


The length of the M6 machine screw differs depending on the rope or chain diameter. Please refer to below illustration.

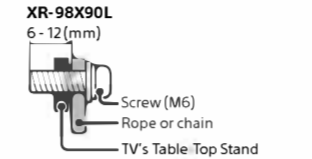


XR-85X90L / 85X90CL / 75X90L / 75X90CL / 65X90L / 65X90CL / 55X90L




- 3 Anchor the TV to the wall by using bolts, wall anchor and chain (or rope).

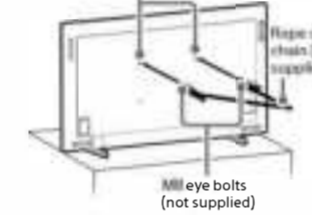

XR-85X90L / 85X90CL / 75X90L / 75X90CL / 65X90L / 65X90CL / 55X90L

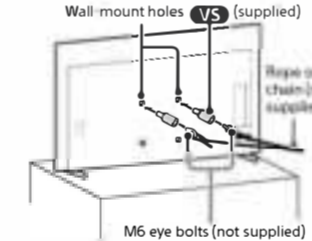


 Please refer to below illustration for M8 eye bolt length.

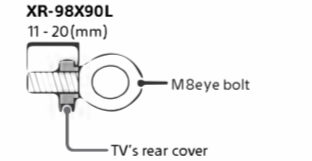

Please refer to below illustration for M6 eye bolt length.

XR-85X90L / 85X90CL / 75X90L / 75X90CL / 65X90L / 65X90CL / 55X90L

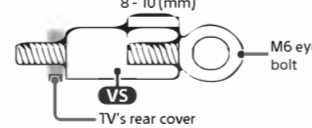

- Note**
- Your TV is shipped with screws attached to the rear of the TV depending on the TV model. (They are fastened in the screw holes for wall mounting.) Be sure to remove the upper two screws prior to anchoring the TV to a wall.
 - Securing the TV to the Stand without securing the TV and the Stand to the wall provides minimum protection against the TV toppling over. For further protection, be sure to follow the three measures recommended.

The BRAVIA® 4K TV Experience
Thank you for choosing Sony! Your new BRAVIA® TV opens the door to the "4K TV Experience". This document will help you get the most out of your TV. Please take a moment to register your TV at:

The BRAVIA® 4K TV Experience

Thank you for choosing Sony! Your new BRAVIA® TV opens the door to the "4K TV Experience". This document will help you get the most out of your TV. Please take a moment to register your TV at:

Note

- For supported PC formats, refer to the online Help Guide.

Guidelines for IR Remote Control

 
- Point your remote control directly at the IR sensor located on your TV.
- Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.




- Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.
- If you are having problems with the remote control, reinsert or replace your batteries and make sure that they are correctly inserted.

Installing the TV to the Wall

Using the optional Wall-Mount Bracket (SU-WL855 only)* (not supplied)



- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- Sony is not liable for any damage or injury caused by mishandling or improper installation.
- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the TableTop Stand. Keep the screws away from small children.

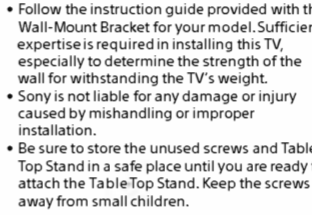

Note

- Read the supplied safety documentation for additional safety information.
- Only for limited region/country/model.


Using the optional Wall-Mount Bracket (except SU-WL855) (not supplied)

This TV's instruction manual only provides the steps to prepare the TV for Wall-Mount installation before it is installed on the wall.

Your TV can be mounted to a wall using a suitable Wall-Mount Bracket (not supplied). If the TableTop Stand is attached to the TV, the TV may require detaching the TableTop Stand; see "Detaching the TableTop Stand from the TV". Prepare the TV for the Wall-Mount Bracket before making cable connections.

- For product protection and safety reasons, Sony strongly recommends that installation of your TV on the wall be performed by qualified professionals. Do not attempt to install it yourself.**
- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
 - The screws for installing the Wall-Mount Bracket to the TV are not supplied.
 - Refer to the following table for wall-mount hole pattern.

Model Name	Wall-mount hole pattern	
	(A) × (B)	(C) × (D)
XR-98X90L	600 × 400 mm	
XR-85X90L / 85X90CL	400 × 400 mm	
XR-75X90L / 75X90CL	300 × 300 mm	
XR-65X90L / 65X90CL	300 × 300 mm	
XR-55X90L	300 × 300 mm	

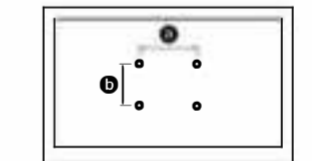


- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the TableTop Stand. Keep the screws away from small children.

Note


- Read the supplied safety documentation for additional safety information.
- For more detailed information, visit Sony Customer Support website.^{*}
- Only for limited region/country/model.

- 1 Remove the stand covers.

XR-98X90L

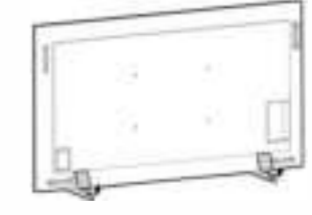


- 2 Remove the screws from the rear of the TV.

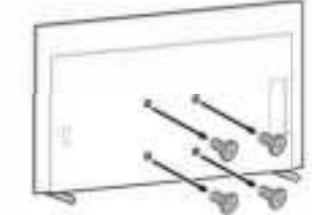


- 3 Attach the Wall-Mount Attachment (supplied with the TV) to the rear of the TV (to make it parallel with the wall).

XR-85X90L / 85X90CL / 75X90L / 75X90CL / 65X90L / 65X90CL / 55X90L

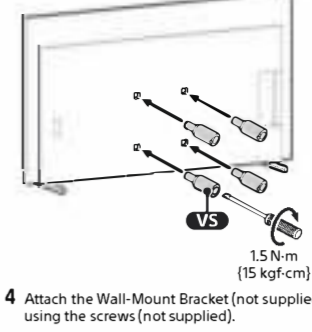

- 4 Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).

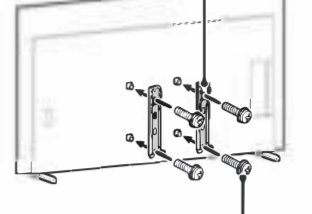


Note

- If using an electric screwdriver, set the torque at approximately 1.5 N·m (15 kgf·cm).
- Be sure to fasten the Wall-Mount Attachment when attaching them to the TV. Use only a flat head screwdriver to install the Wall-Mount Attachment. Use of another tool might result in over torquing the Wall-Mount Attachment and damaging the TV.

Detaching the Table-Top Stand from the TV

To detach the TableTop Stand from the TV, remove the screws .

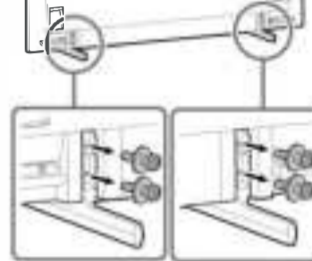

XR-85X90L / 85X90CL / 75X90L / 75X90CL / 65X90L / 65X90CL / 55X90L

- 1 Remove one side of the TableTop Stand at a time. Firmly hold the TableTop Stand securely with both hands while the other people lift up the TV.



- 2 Repeat the previous step and remove the other side of the TableTop Stand.

- Note**
- Be careful when lifting the TV as the TableTop Stand is detached, the TableTop Stand may topple over and cause personal injury.
 - Take care when removing the TableTop Stand from the TV to prevent it from falling over and damaging the surface that the TV is sitting on.
 - Do not remove the TableTop Stand for any reason other than to install corresponding accessories on the TV.
 - Be sure the TV is vertical before turning on. To avoid uneven picture uniformity do not power on the TV with the LCD panel facing down.

XR-98X90L only

- When attaching the TableTop Stand again, be sure to fasten the screws (previously removed) to the original holes on the rear of the TV.

Except XR-98X90L

- Three or more people are required to detach the TableTop Stand.
- Be careful not to use excessive force while detaching the TableTop Stand from the TV as it may cause the TV set to fall resulting in personal injury or physical damage to the TV.
- Take care when handling the TableTop Stand to prevent damage to the TV.

Troubleshooting

General troubleshooting for issues like: black screen, no sound, frozen picture, TV does not respond, or network is lost, do the following steps.

- 1 Restart your TV by pressing the power button on the remote control for about five seconds. The TV will restart. If the TV does not recover, try unplugging the AC power cord then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord. Or, press the power button on the TV for about 40 seconds until the TV turns off.

- 2 Refer to the Help menu shown below.

- 3 Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV software updated. Software updates provide new features and performance improvements.

- 4 Perform the factory data reset.

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV.

It takes time to initialize the system. Wait for about one minute, then operate it again.

How to reset the TV to factory settings
WARNING: The reset will clear all of your customized settings including the parental lock setting.

- You can reset the TV to factory settings by selecting [Factory data reset]. How to select [Factory data reset], refer to the online Help Guide.
- To force factory data reset, unplug the AC power cord. Press and hold (Q) button on the TV, then plug in the AC power cord.
- For security purposes, be sure to remove all personal and account information before discarding, selling or passing your TV to someone else by: unlinking/unregistering, signing out of and deactivating all network services as well as factory reset the TV.

The remote control does not function.


- Replace the batteries.

The parental lock password has been forgotten.

- Enter 435

SONY

Television

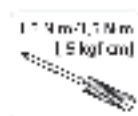

BRAVIA XR

XR-98X90L

8 1 4 0 0 0 1 4 2 A


Setup Guide

1



• Accessory type and quantity may vary depending on the model.


2

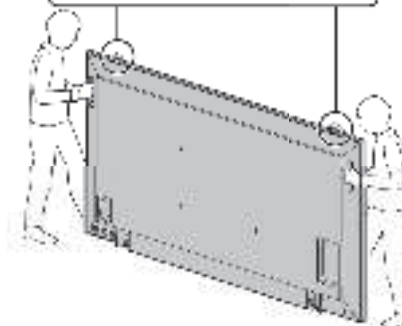


Please make sure to install the handles before manipulating your TV.

• The image shown here is for illustrative purposes only and may be subject to change.


3

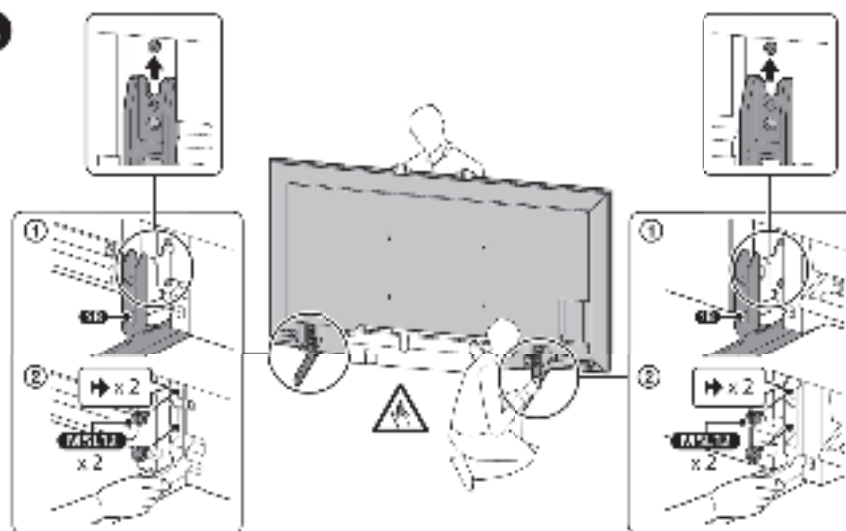


4

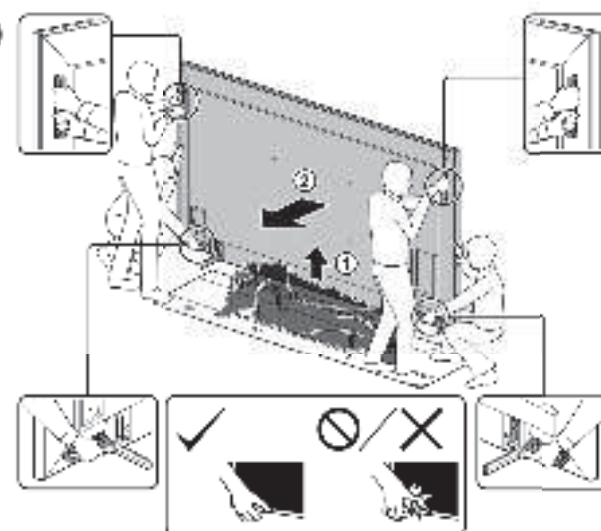


*1 Only for limited region/country/model.

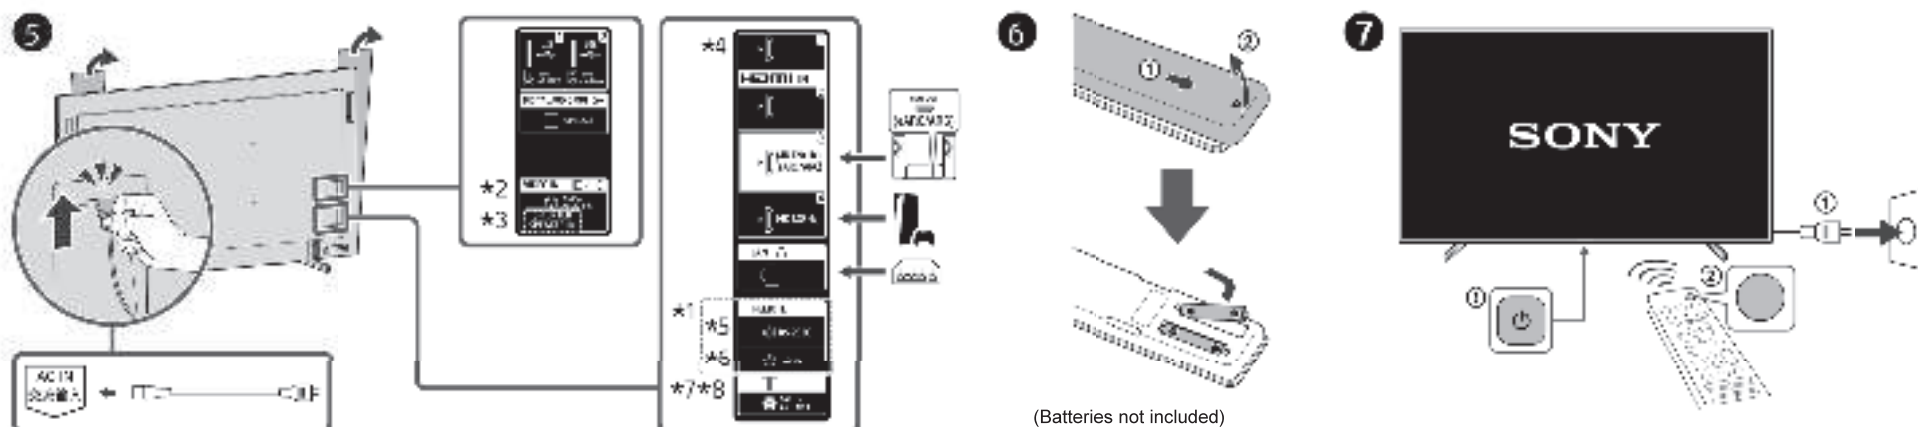

• The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

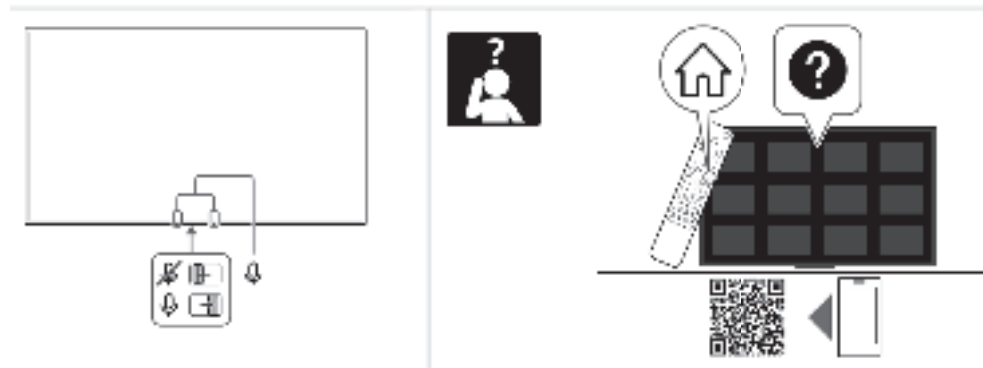

- *2
- 1. L/R
 - 2. Audio
 - 3. Video
 - 4. S-Video
 - 5. *2.0

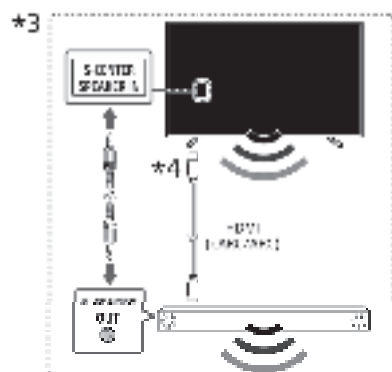

- *4
- 1. L/R
 - 2. Audio
 - 3. Video
 - 4. S-Video
 - 5. *2.0

- *7
- 1. L/R
 - 2. Audio
 - 3. Video
 - 4. S-Video
 - 5. *2.0

• The cables mentioned in this guide is not supplied with your unit.



814000142A

PRINTED IN MEXICO Elbrd: J.E.
OBPN: 5-048-782-12(2) SC: 03-31-2025_2P MODEL: XR98X90L_B