Reverb

Quick Start Guide



Box Contents

Reverb Earbuds









C81 USB-C Dongle







2 Sets Eartips (S/L) USB-C Cable

USB-C to A Adapter

Overview

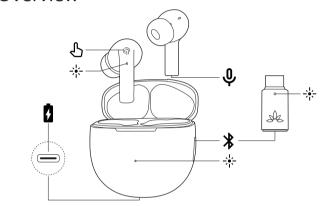


Charging

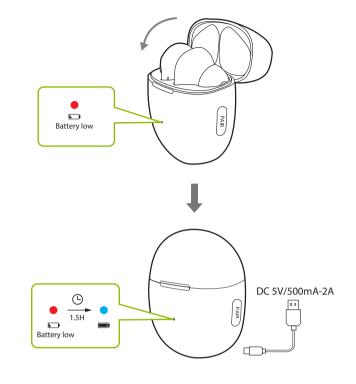

Contact Us


- Support Tickets avantree.com/submit-a-ticket
- Support Email support@avantree.com
- USA / CA +1 800 232 2078 (9am-6pm PST, Mon-Fri)
 - **UK** +44 20 8068 2023 (9am-6pm, GMT, Mon-Sat)
 - **DE** +49 32221097297 (11am-9pm, CET, Mon-Sat)
 - FR +33 176340312 (11am-9pm, CET, Mon-Sat)
 - IT +39 06 9480 3330 (9am-6pm, CET, Mon-Sat)
 - **ES** +34 931786261 (9am-6pm, CET, Mon-Sat)
 - **AU** +61 2 8310 9897 (11am-7pm, AEST, Mon-Fri)
- FAQ avantree.com/support/reverb
- Product Registration avantree.com/product-registration

Touch Panel

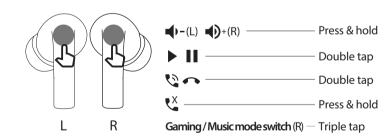

NOTE: The touch panel is very sensitive. Please avoid touching by mistake and cause no sound issue.

How to Wear

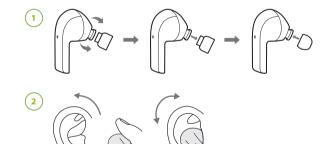

NOTE: Clean earbuds regularly to avoid build up of earwax which can obstruct audio.








Dispose of the packaging and this product in accordance with the latest provisions

Z-PKQG-TW180T-VC

Use with PC

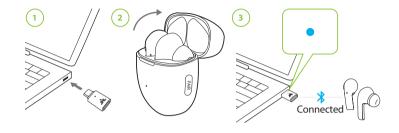

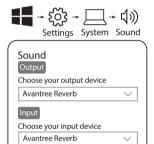

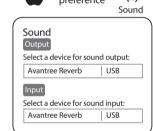

Audio devices
Avantree Reverb


Speakers Avantree Reverb

Microphones
Avantree Reverb




NOTE: A solid white LED indicates talk mode. A Blue LED indicates music mode. The dongle will auto-switch between talk & music modes. You can also manually swap modes by double-clicking the dongle's MFB button.

² Use with Cellphone

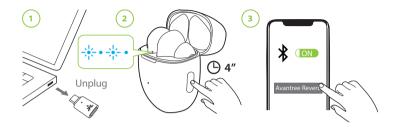


Subsequent Use

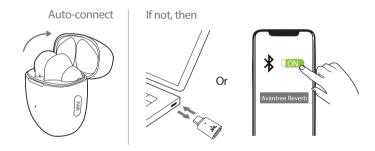

Devices should auto-connect when you turn them back on. If not, plug and unplug the dongle and / or select "Avantree Reverb" on your phone.

Use with PS5

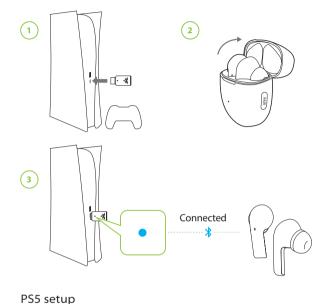





NOTE: A solid white LED indicates talk mode. A Blue LED indicates music mode. Each time the dongle turns on, it will enter music mode by default. Double-click the dongle's MFB button to enter talk mode when chatting.