 


COFFEE MAKER

INSTRUCTION MANUAL

MODEL NO.: CM1443A-UL
ITEM NO.:CM3743-BLACK
CM3743-BLACK-CS

Read this manual thoroughly before using and save it for future reference

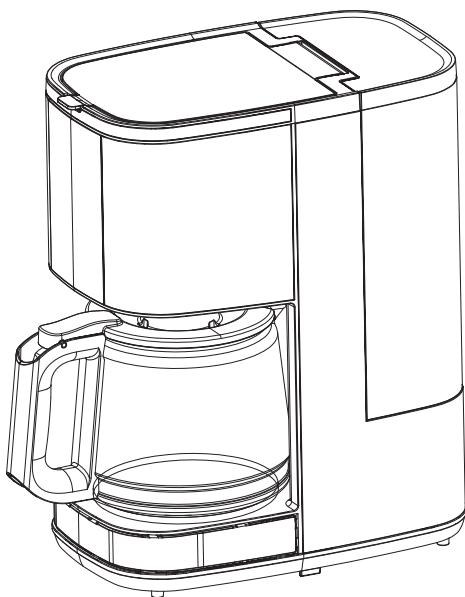

Thank you for purchasing this product! If you have questions about the product such as missing parts, damaged products, product assembling and operation etc, please contact us via customer service phone:213-4467172 or 661-4358826.

 
IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the followings:

1. Read all instructions.
2. Do not let the coffee maker operate without water.
3. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
4. To protect against fire, electric shock and injury to persons, do not immerse cord or plug in water or other liquid.
5. Close supervision is necessary when your appliance is operating. Do not leave the appliance on the standby state for a long time. And never allow the children or uninformed persons to operate the appliance.
6. Unplug from outlet when not in use and before cleaning. Allow to cooling down before putting on or taking off parts, and cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
8. The use of attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
9. Do not use outdoors.
10. Place appliance on flat surface or table, do not let cord hang over edge of table or counter, or touch hot surface.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Do not use appliance for other than intended use and place it in a dry environment.
13. To disconnect, remove plug from wall outlet. Always hold the plug. But never pull the cord.
14. Some parts of appliance are hot when operated, so do not touch with hand directly. Use handles or knobs only.
15. The container is designed for use with this appliance. It must never be used on a range top.
16. Do not clean container with cleansers, steel wool pads, or other abrasive material.
17. Never leave the empty carafe on the keeping warm plate otherwise the carafe is liable to crack.

18. Never use the appliance if the carafe shows any signs of cracks or carafe having a loose or weakened handle. Only use the carafe with this appliance. Use carefully as the carafe is very fragile.
19. Do not set a hot container on a hot or cold surface.
20. The appliance must not be immersed.
21. This appliance is intended to be used in household and similar applications as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments
22. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
23. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
24. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
25. Children shall not play with the appliance.

KNOW YOUR COFFEE MAKER

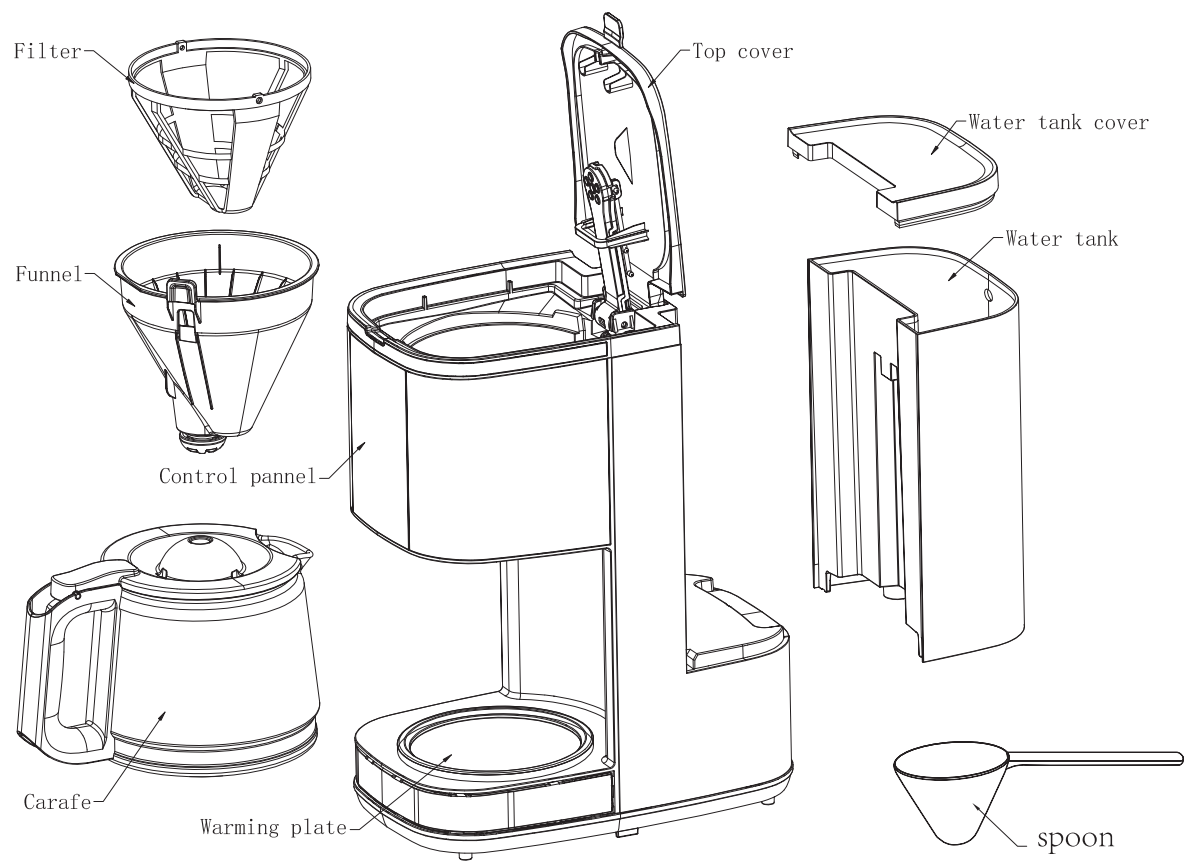





 




CONTROL PANEL



BEFORE THE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add water into water tank to the max level and brew water for several times without coffee powder, then discard the water. Clean all detachable parts thoroughly with warm water.

USING YOUR COFFEE MAKER

1. Open the water tank cover and fill the water tank with drinking water. The water level should not exceed the MAX level as indicated on the water level gauge.
2. Open the top cover and place the funnel into the funnel support, make sure it is assembled correctly, otherwise the top cover cannot be closed. Place a filter into the funnel.
3. Add coffee powder into the filter. Usually a cup of coffee needs a level spoon of coffee powder, but you may adjust according to personal taste. Close the top cover completely.
4. Insert the carafe onto the warming plate horizontally.
5. Plug the power cord into the outlet, the LED display indicates "AM12:00" flickeringly. If you want to adjust the coffee strength, you can press  button once, the  indicator in the LED display will illuminate, and then press the  button and the appliance will brew thick coffee. If you do not want to adjust the coffee strength, just press  button again, the  indicator disappears.
6. Press  button, the  indicator in the LED display illuminate, and then the appliance begins to work.
7. The brewing process can be interrupted by pressing the  button at any time, the  indicator in the LED display will extinguish, indicating your coffee maker shuts off.

NOTE: You can take out carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds.

8. Remove out carafe to serve when finish brewing (about one minute later after the coffee stops dripping out.)

NOTE: The coffee you get will less than the water you have added, as some water is absorbed by coffee ground and adhere to the plastic.

9. When the process is finished, if you do not want to enjoy immediately, make the coffee maker be energized, and the coffee can be kept warm on the warming plate. And the






appliance will shut off automatically after 2 hours . For an optimum coffee taste, enjoy it just after brewing.

10. Always turn the coffee maker off and disconnect the power supply when not use.

NOTE: Pay attention to pour the coffee out, otherwise you may be hurt as the temperature of coffee just finished is high.



DELAY BREW FUNCTION



If you do not want the coffee maker to start operation immediately, for example now it is 8:00 am, you hope that the coffee maker will automatically start working at 1:00pm, firstly follow steps 1 to 5 of **USING YOUR COFFEE MAKER** and then you can set the automatic start function as follows:


1. Set the current time that is 8:00am by pressing the buttons of  and .
2. Press  button once, its corresponding indicator flashes, the LED display indicates "AM 12:00" . Set the automatic start time that is PM 1:00 by pressing the buttons of  and  .

NOTE: The time cycle is 24 hours.

Press the  button in power on state, the LED display will show the time set last time.

3. After setting the auto-start time, press  button, the appliance will enter into the delay-brew mode.
4. When the time reaches the auto-start time, the  indicator in the LED display will illuminate at the same time, which means that the appliance will start to brew coffee.

NOTE: After the delay-brew mode is activated, you can cancel the delay-brew function by pressing the  button, and then the appliance will enter into the standby mode. You can also press  button to make the appliance brew thick coffee under the delay-brew mode.

5. When the automatic start time is up and the coffee brewing process is completed, if you do not want to enjoy immediately, make the coffeemaker be energized, and the coffee can be kept warm on the warming plate for 2 hours. And the appliance will shut off automatically after 2 hours. You can cancel the Keep warm function by pressing the "  " button. For an optimum coffee taste, enjoy it just after brewing.






CLEANING AND MAINTENANCE

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

- 1) Clean all detachable parts after each use in hot, sudsy water.
- 2) Wipe the product's exterior surface with a soft, damp cloth to remove stains.
- 3) Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.
- 4) Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner to clean it.
- 5) Replace all parts and keep for next use.

REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, periodically you should clean away the mineral deposits left by the water according to the water quality in your area and the use frequency, we recommend removing mineral deposits as follows:

1. When the coffee maker needs to be performed descaling, the  indicator will automatically appear and flash slowly.
2. Fill the water tank with water and descaler to the MAX level as indicated on the water level gauge (the scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use "household descaler", you may also use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid)).
3. Insert the carafe onto the warming plate.
4. Ensure the funnel is assembled in place.
5. Press the  button once and indicator  will flash quickly, then press the  button once, indicator  will be solid on, and then the appliance will perform descaling.
6. After finish descaling, the appliance will enter into the standby mode and the number of working cycle will be zeroed and recounted.
7. Rinse by operating the appliance with potable water at least 3 times.

NOTE: The user can perform descaling at any time by following the above operation even though the descaling prompt is not shown.

HINTS FOR GREAT-TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “CLEANING AND MAINTENANCE” section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee’ flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

Thank you for purchasing this product! If you have any question about the product, such as missing parts, damaged products, product assembling, and operation, please contact us via:

213-4467172 or 661-4358826

IMPORTANT

Please call our customer service department for any consulting:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS

Veillez appeler le service à la clientèle pour toutes questions au:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Address: ROWAN ELECTRIC APPLIANCE LLC
750S. Valley View Avenue, San Bernardino, CA 92408
Phone: 213-4467172 or 661-4358826

8:30am-5:30pm P.S.T. Monday to Friday