 
 
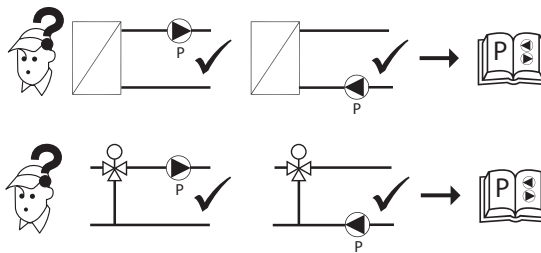 
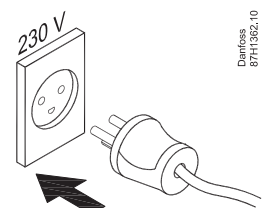 
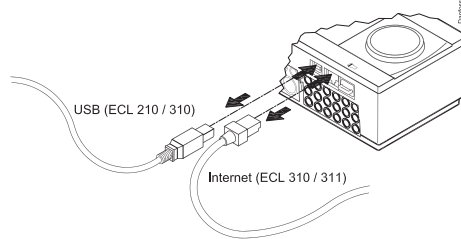 


Installation Guide

# ECL Comfort 310, P501, 230 Volt (code no. 087H3842)

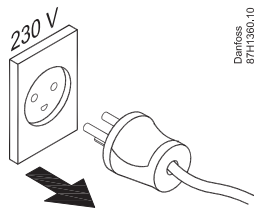 


**P501.1, ex. a:**  
**P501.2, ex. a:**

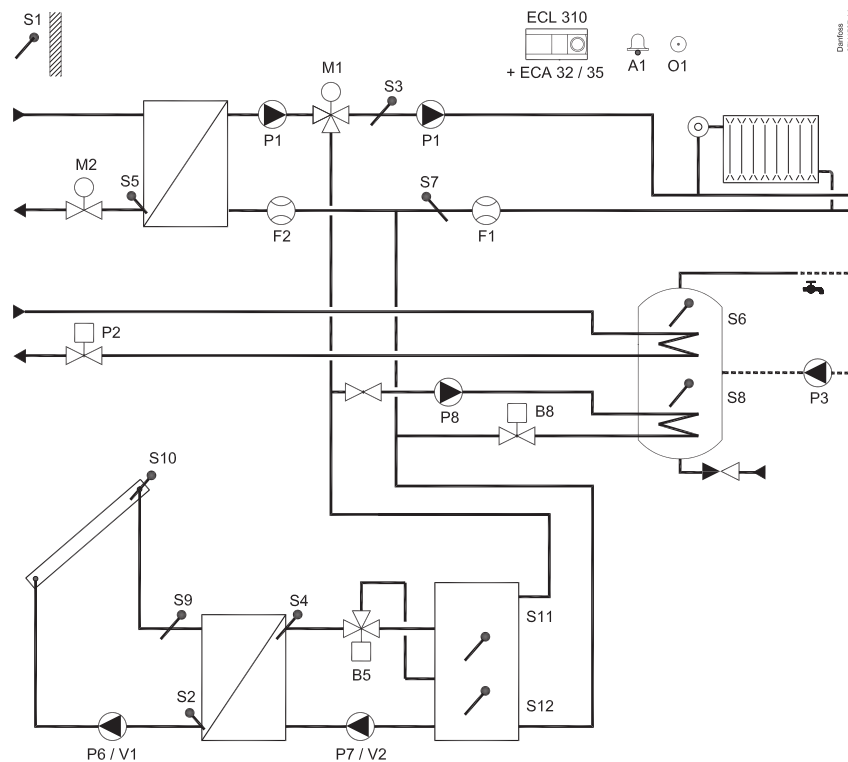


# Installation Guide, ECL Comfort 310, P501


**P501.1, ex. b:**  
**P501.2, ex. b:**

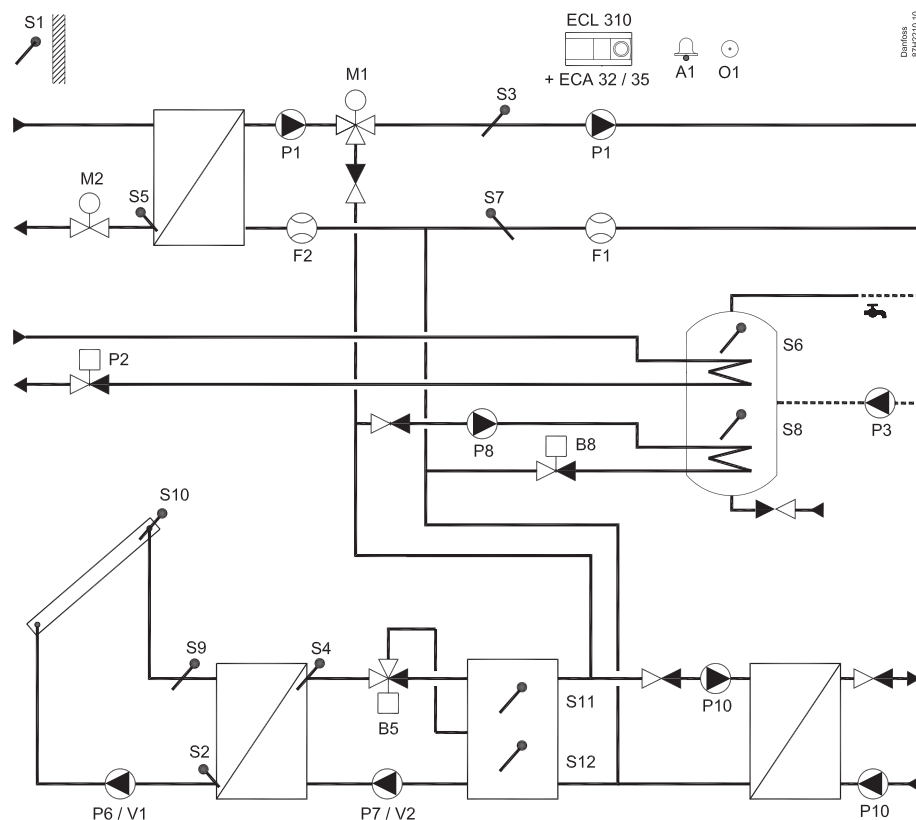


**P501.1, ex. c:**  
**P501.2, ex. c:**

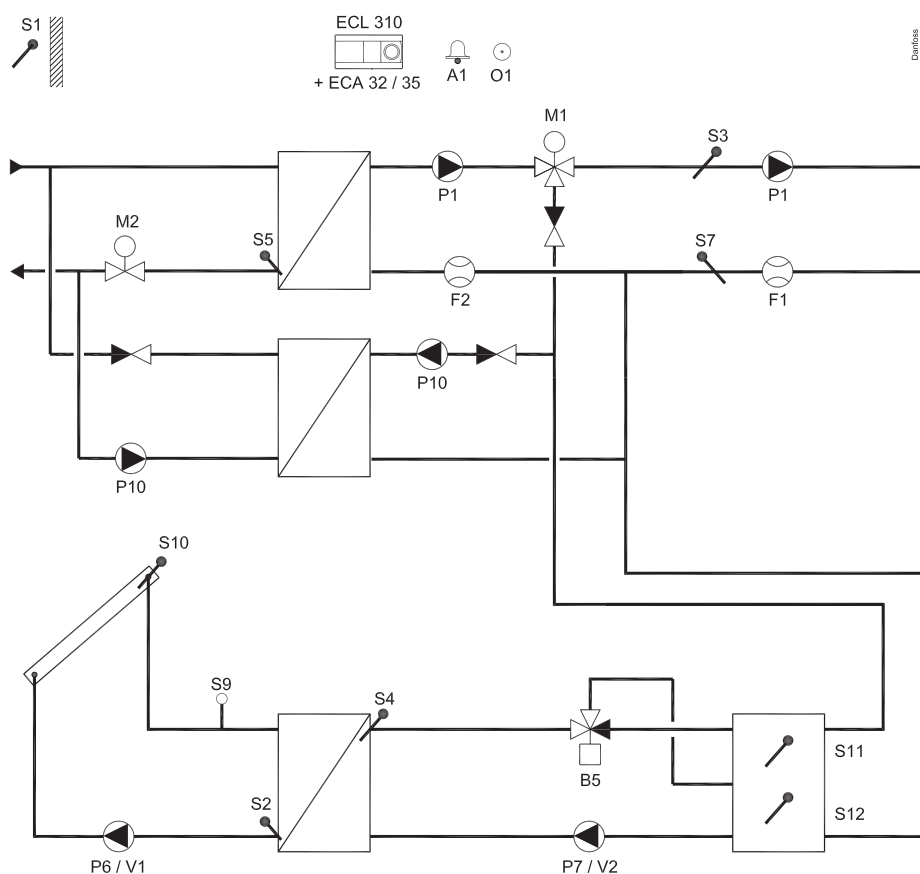 


P501.11, ex. a:

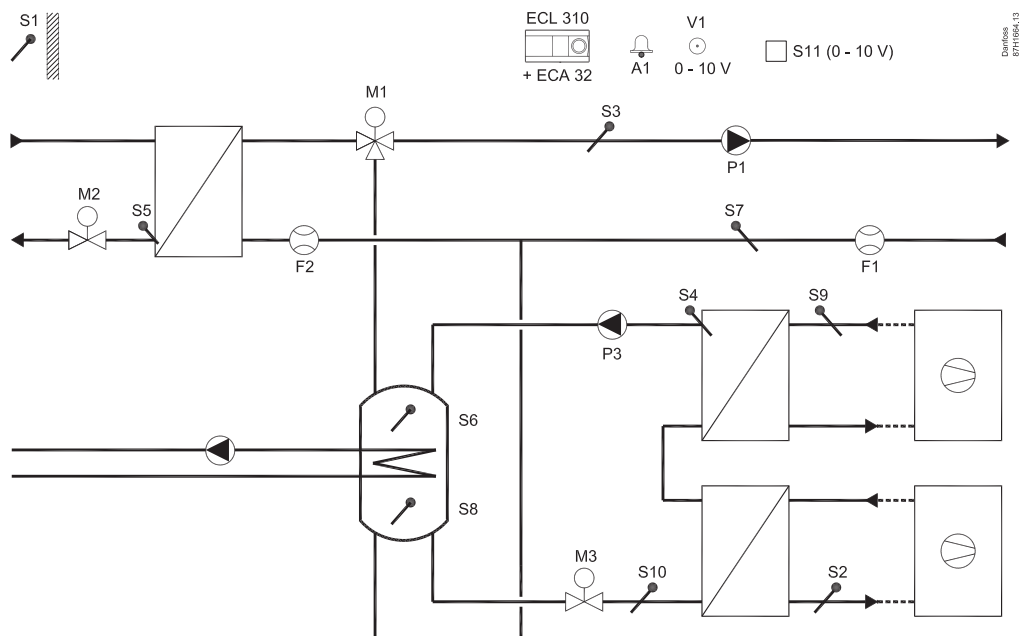 


P501.12, ex. a:

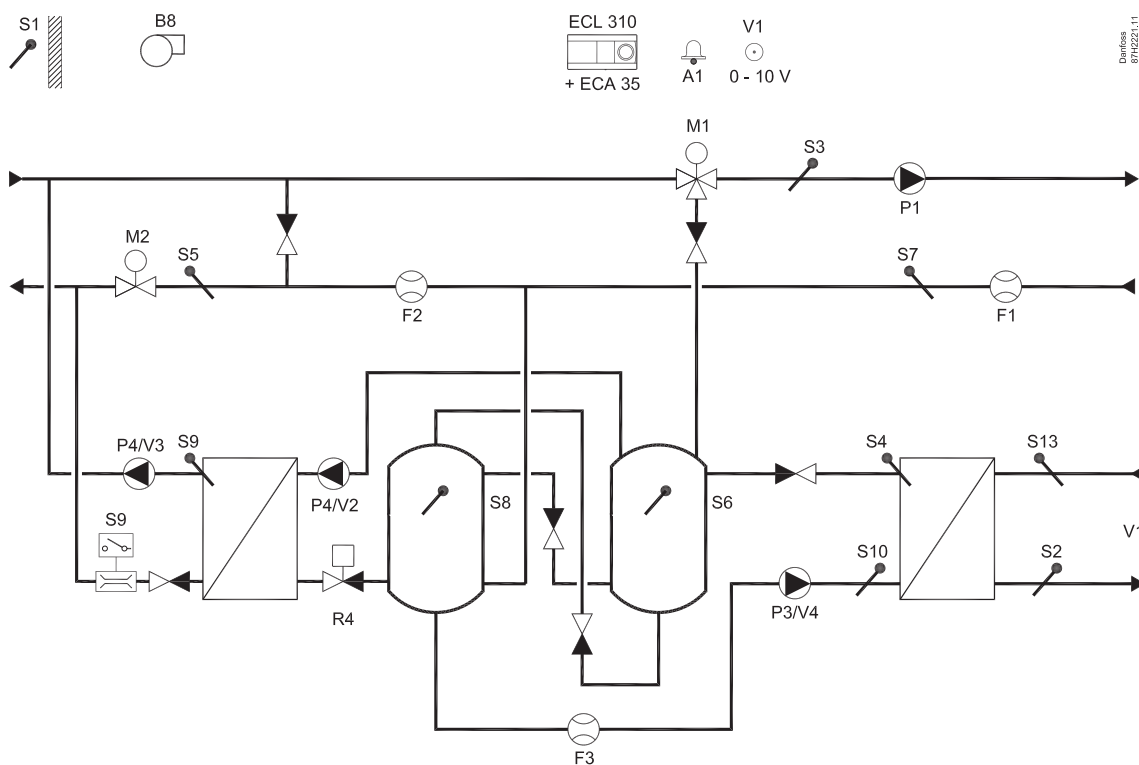 


**P501.12, ex. b:**

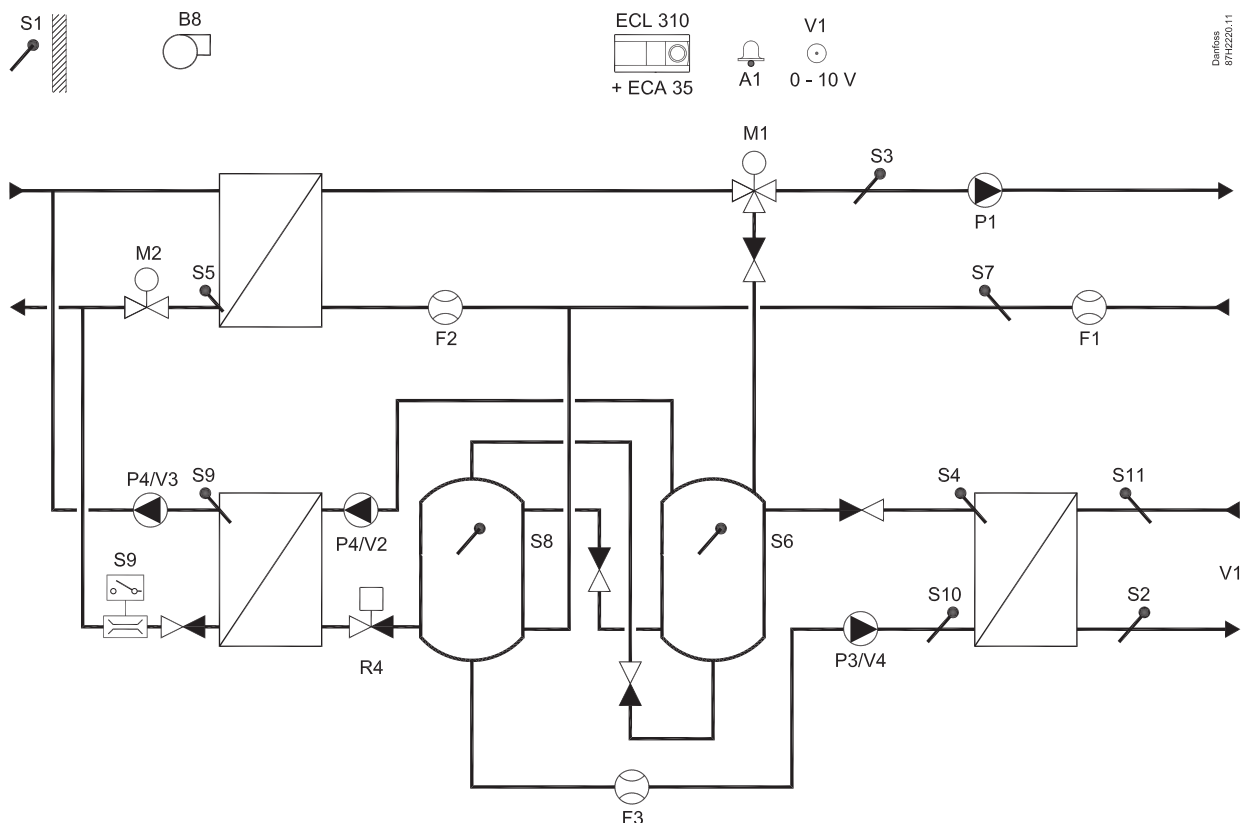 

**P501.12, ex. c:**

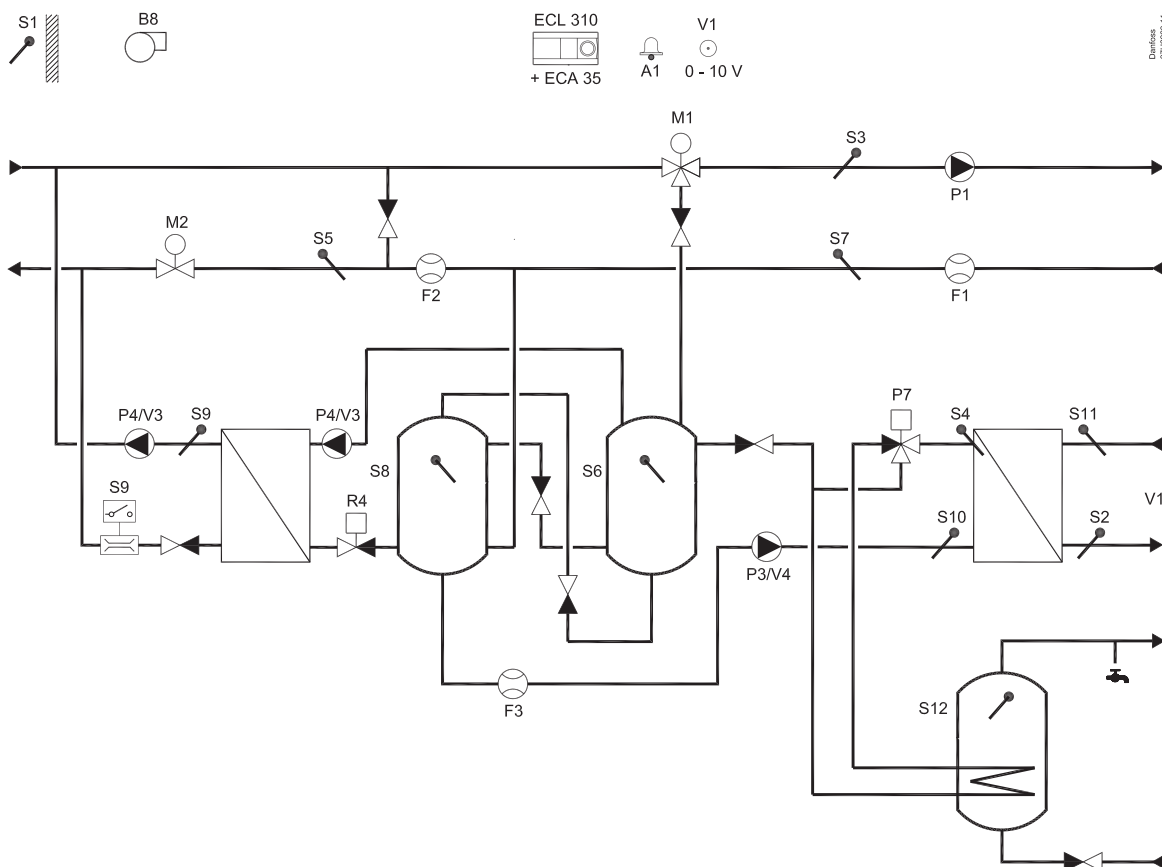 


**P501.12, ex. d:**

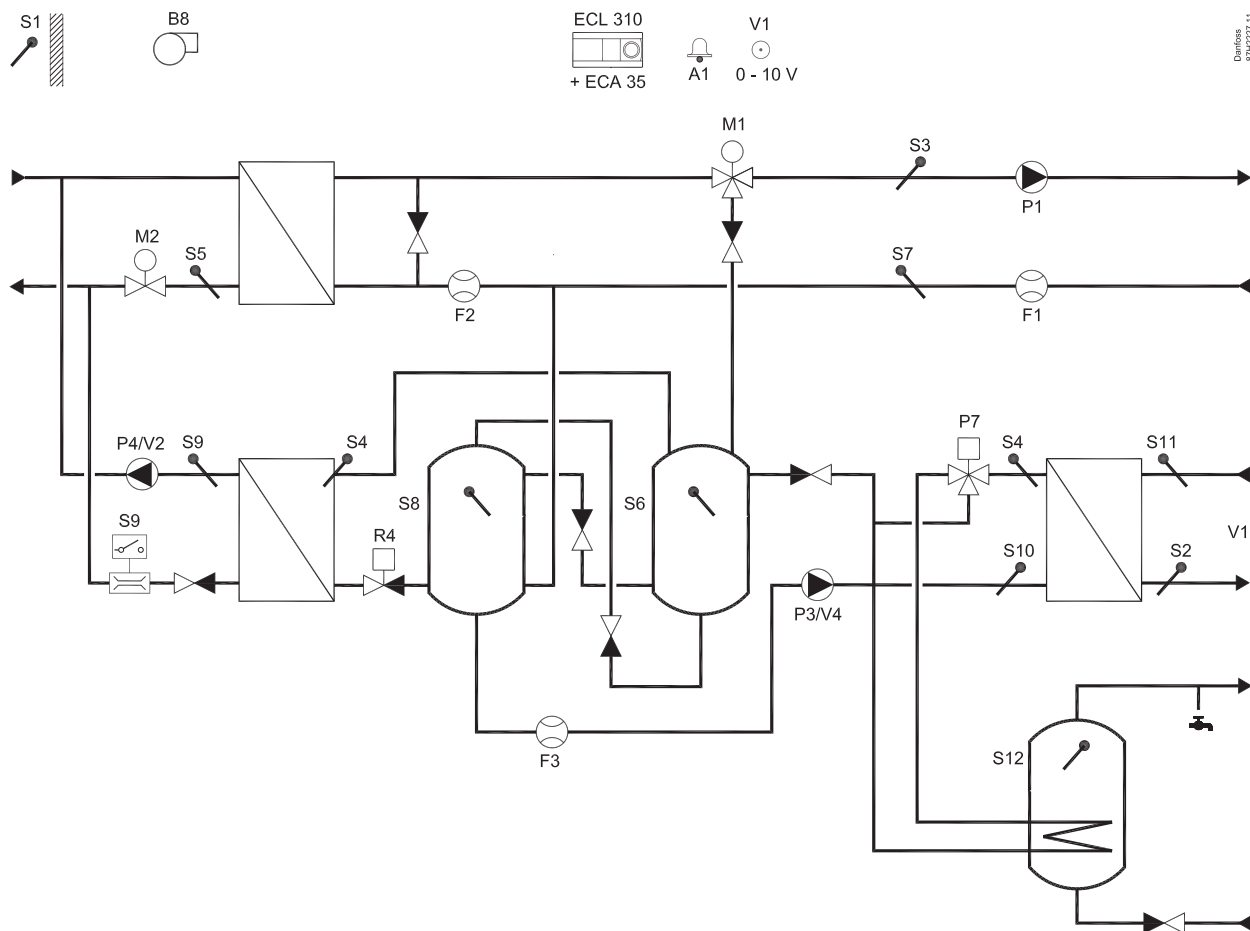 


Danfoss  
8714227.11

**P501.12, ex. e:**

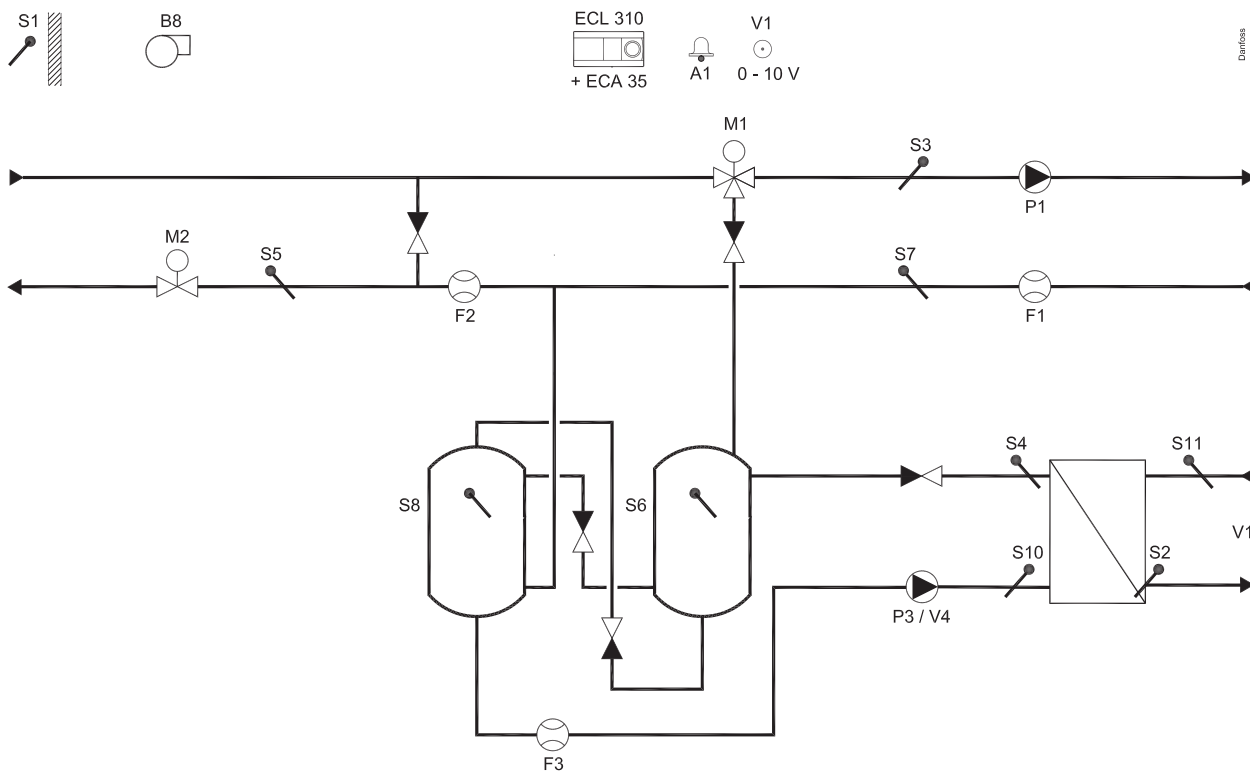 


Danfoss  
8714228.11


**P501.12, ex. f:**

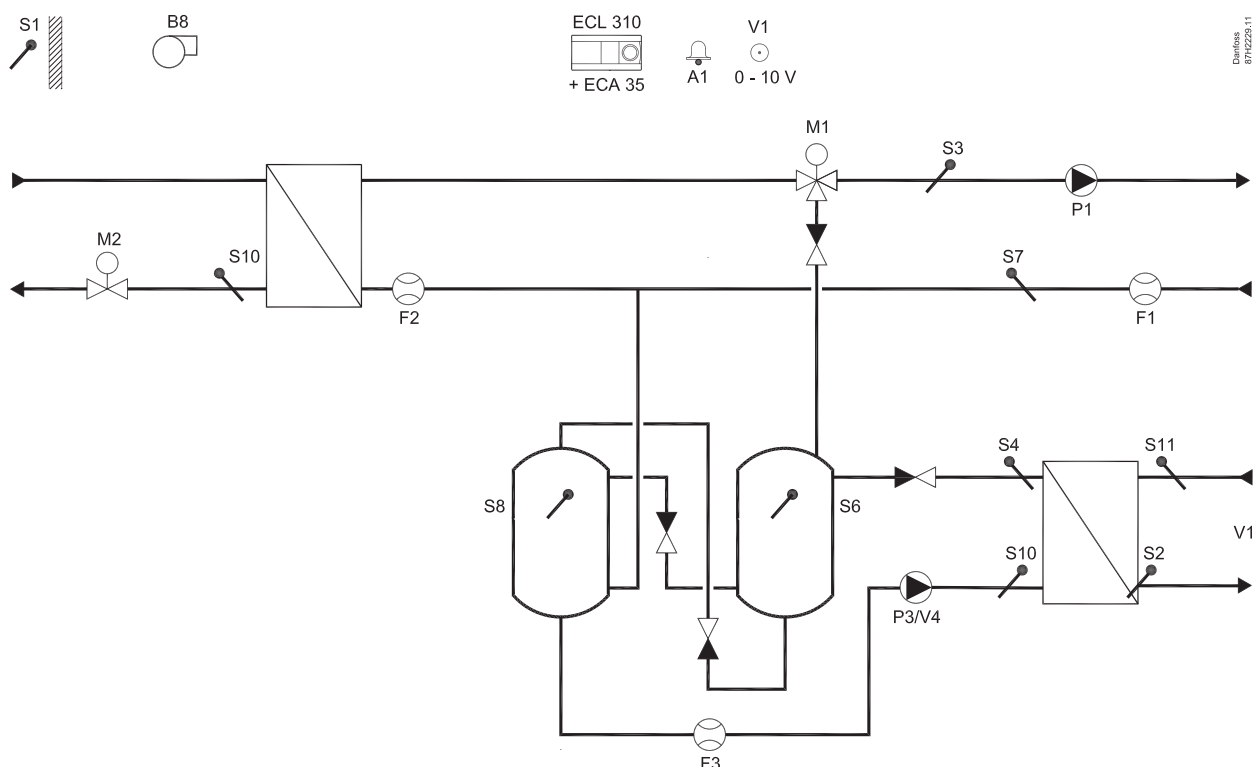 

**P501.13, ex. a:**

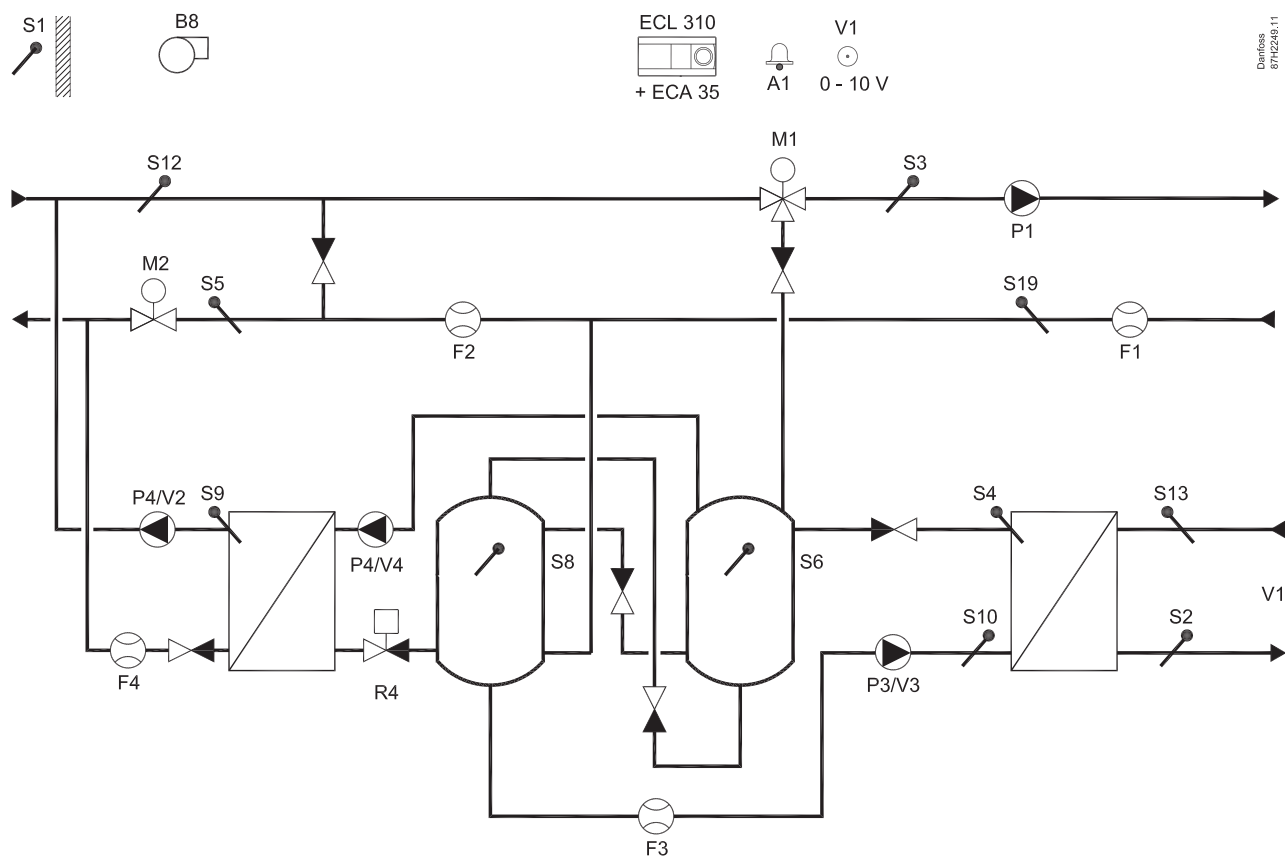 


P501.13, ex. b:

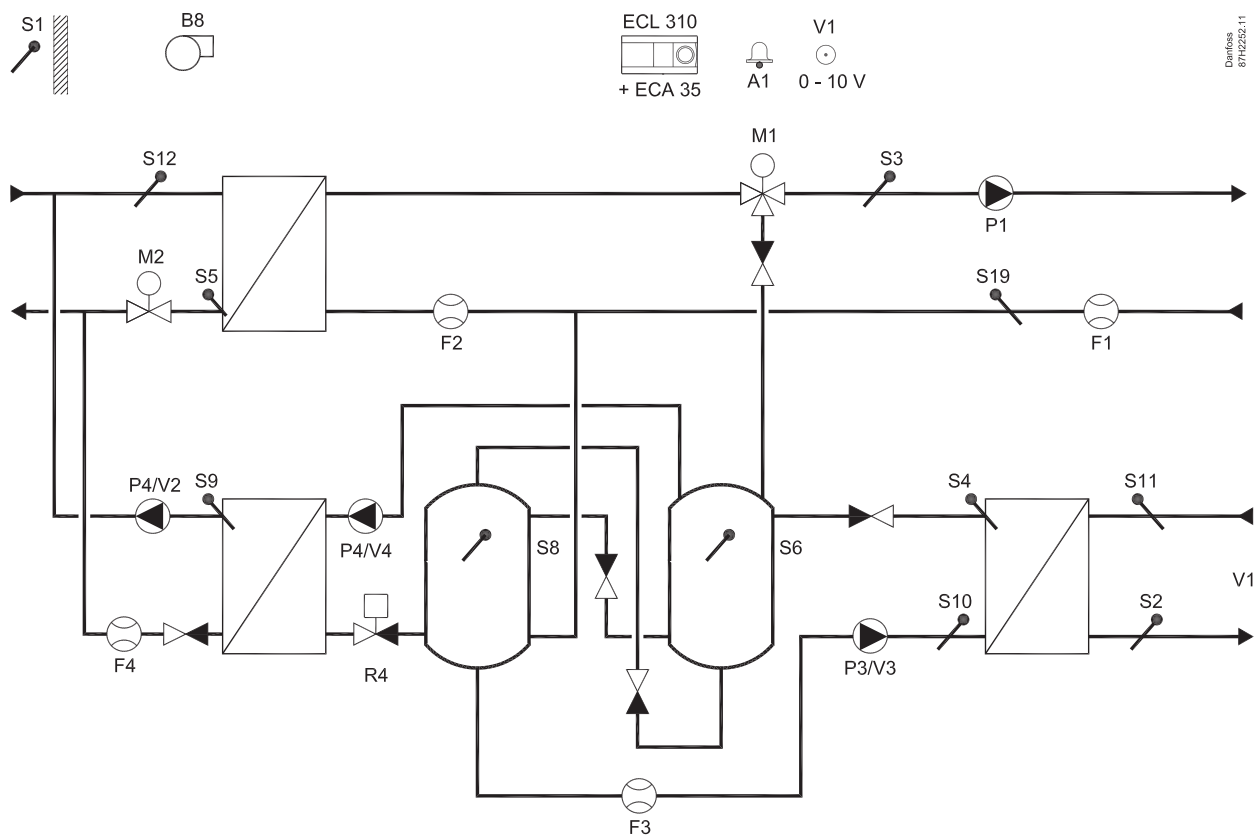 


Danfoss  
87H2252.11

 P501.13, ex. e:

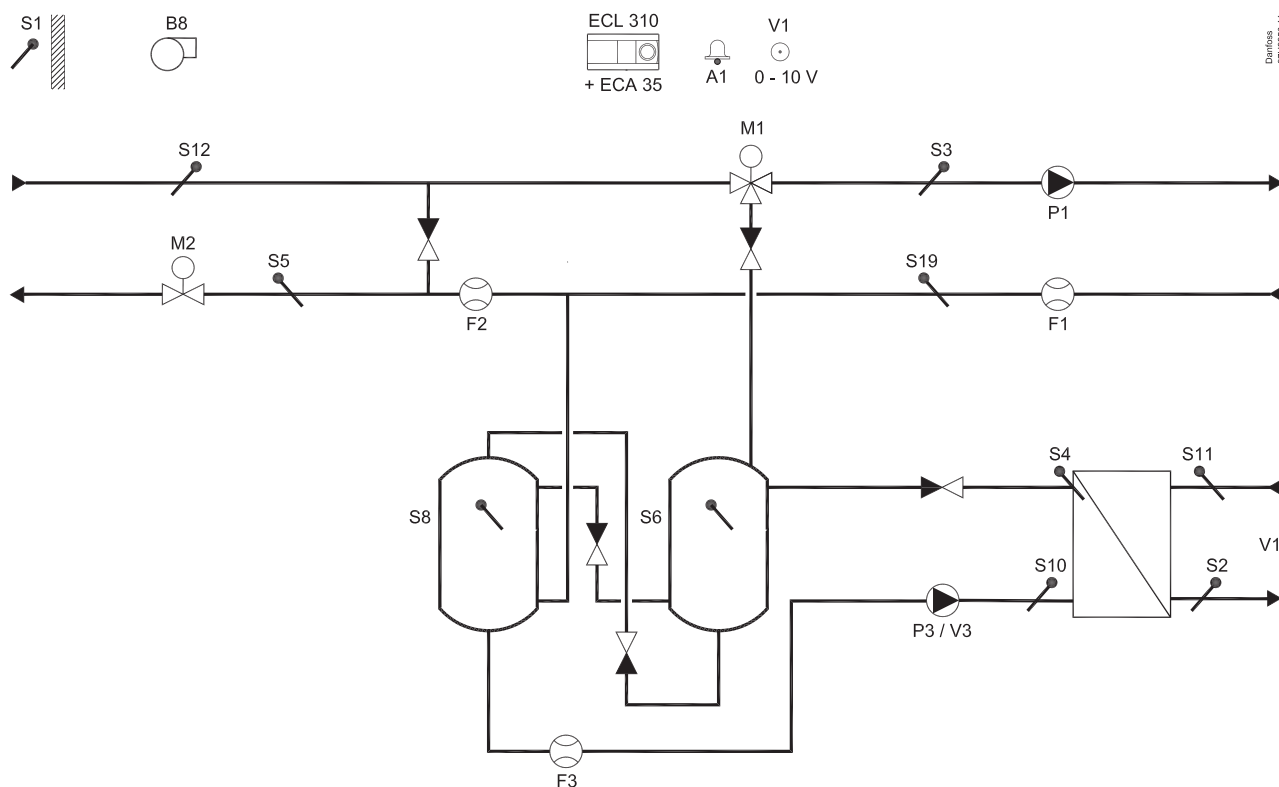


Danfoss  
87H2250.11

**P501.13, ex. f:**

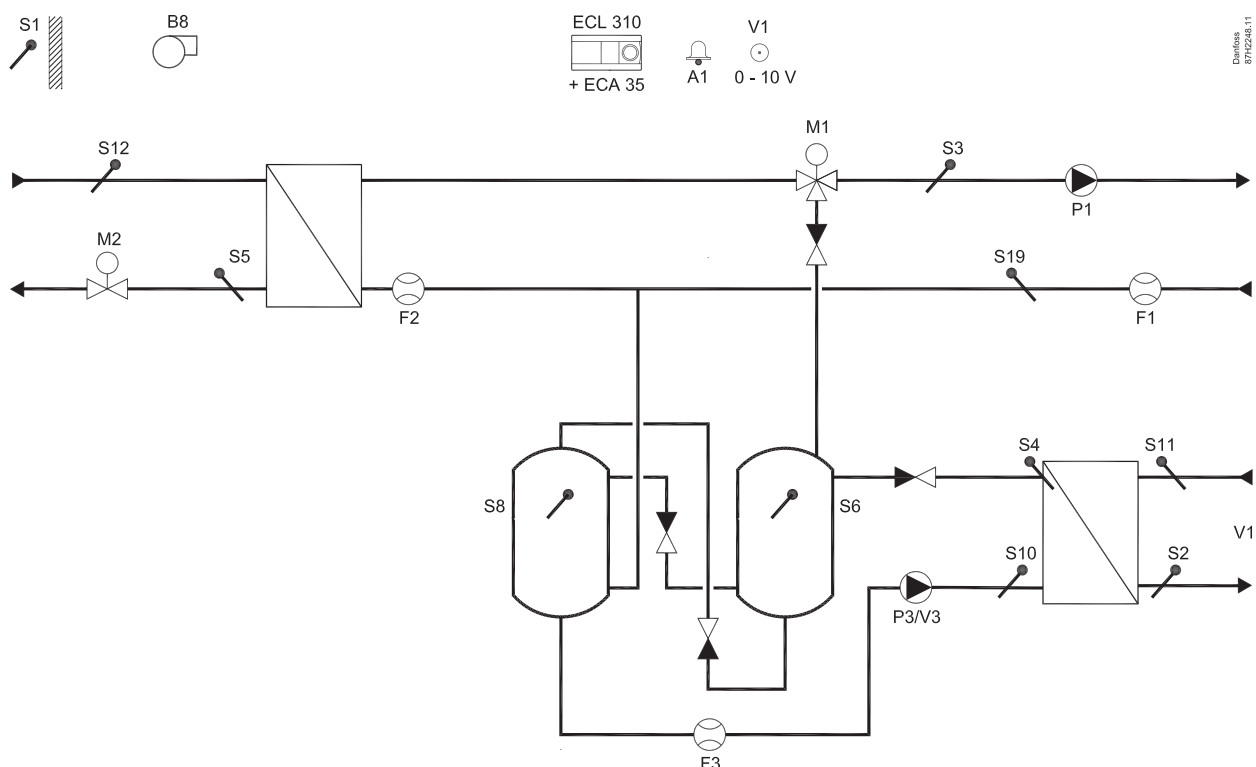 

Danfoss  
87H2248.11

**P501.13, ex. i1:**

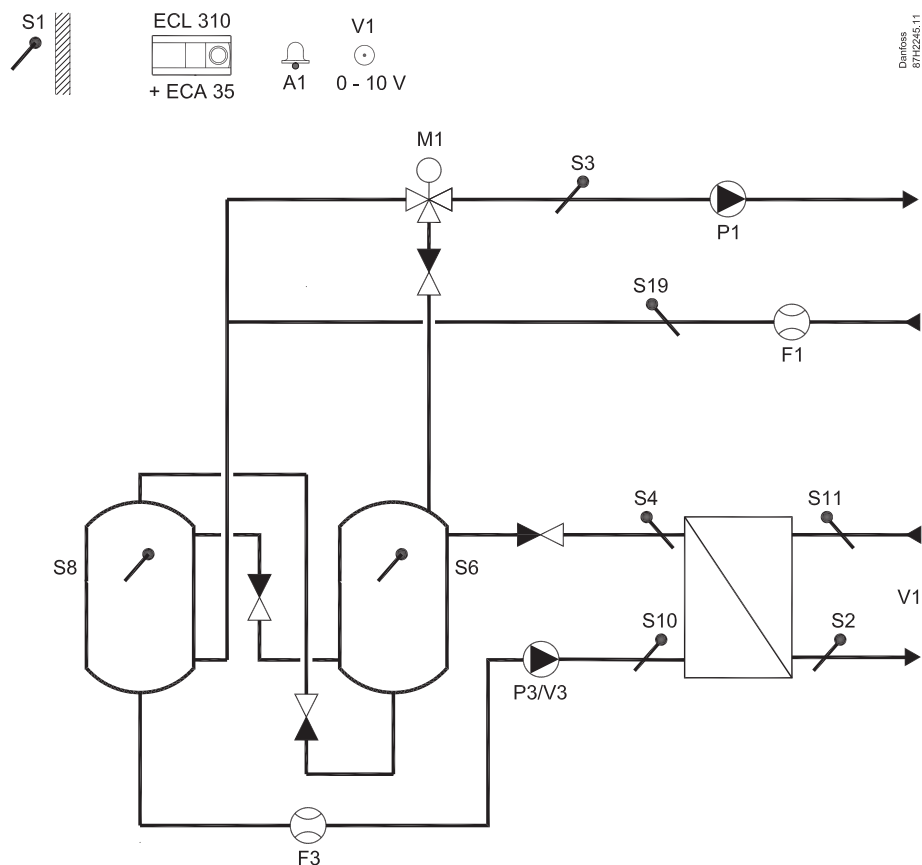 


Danfoss  
87H2245.11

## P501.1

 
**P501.2**

**ECL 310, 230 V a.c.:**

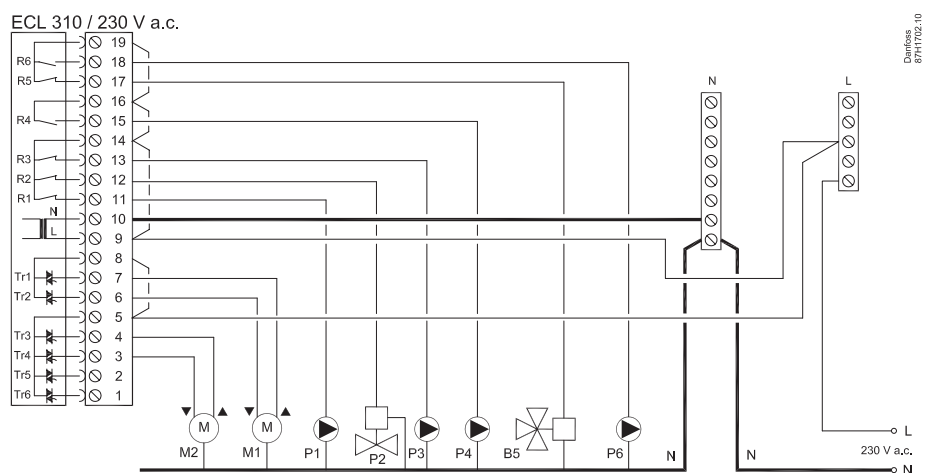


**P501.13**

 **ECL 310, 230 V a.c.:**

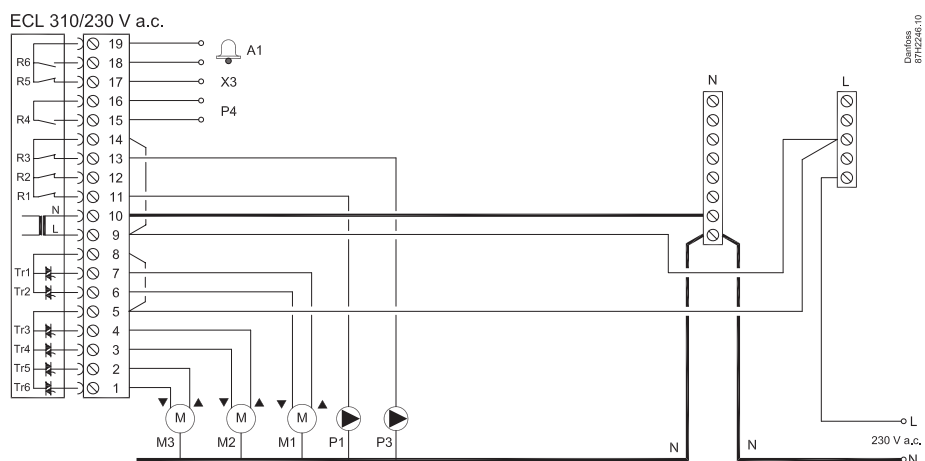


|         | ECA 32 | ECA 35 |
|---------|--------|--------|
| P501.1  | X      | X      |
| P501.2  | X      | X      |
| P501.11 | X      |        |
| P501.12 |        | X      |
| P501.13 |        | X      |

 ECA 32 / 35

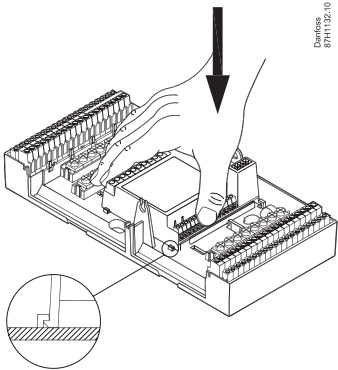

 P501.1  
P501.2  
ECA 32 / ECA 35  
P7, B8, O1, A1

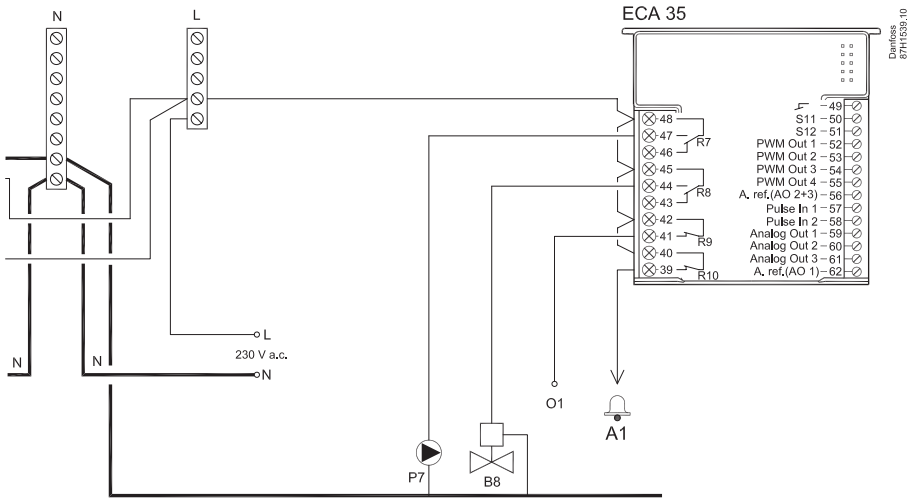

**P501.12**


**P501.13**

**ECA 35**

**P7 (P501.12)**


**X1 (B8)**

 **X2 (P501.13)**

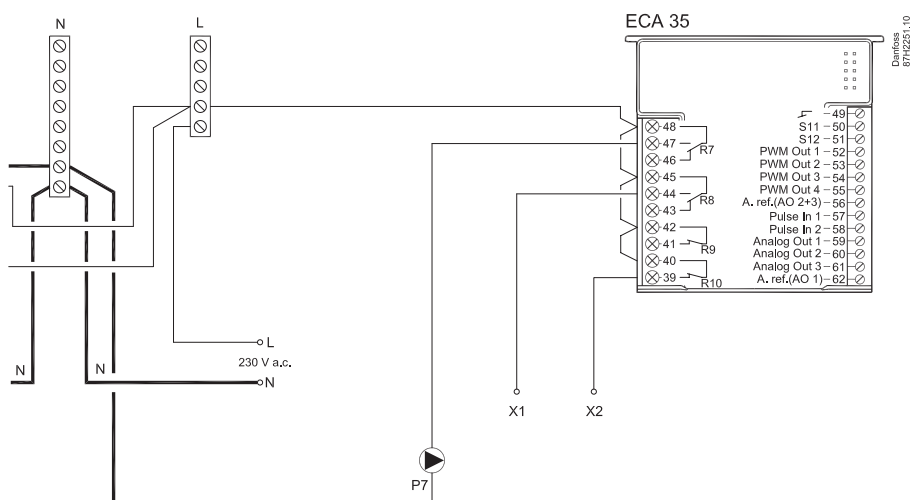


# Installation Guide, ECL Comfort 310, P501

 
**P501.1**  
**P501.2**  
**ECA 35**  
**PWM Out 1**

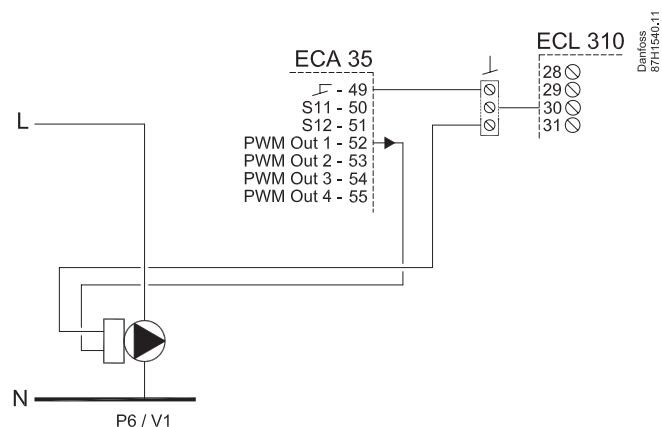

 
**P501.1**  
**P501.2**  
**ECA 35**  
**PWM Out 2**

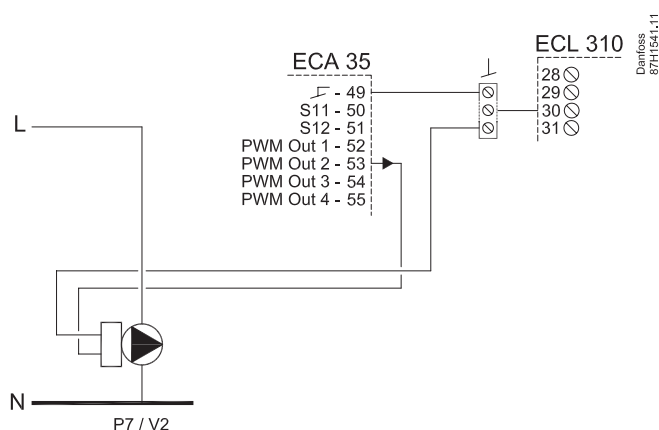

 
**P501.1**  
**P501.2**  
**ECA 32 / 35**  
**P6 / V1, Analog Out 1**  
**0 - 10 V**

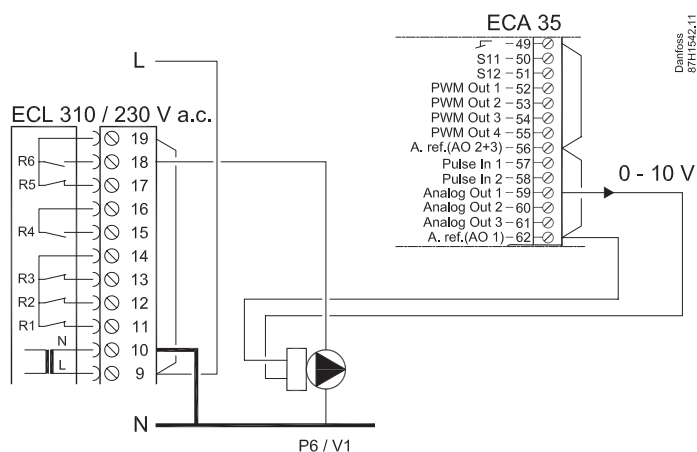

 
**P501.1**  
**P501.2**  
**ECA 32 / 35**  
**P7 / V2, Analog Out 2**  
**0 - 10 V**

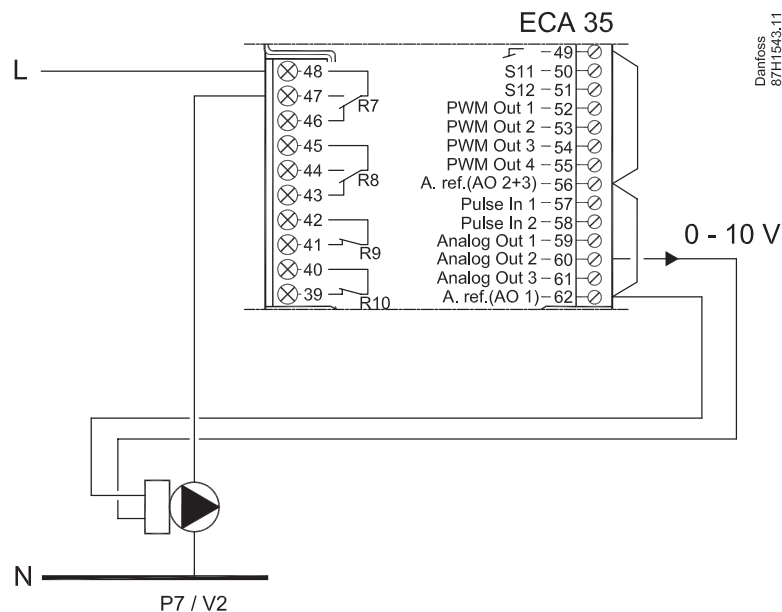

 
**P501.11**  
**ECA 32**  
**V1, Analog Out 1**  
**0 - 10 V**

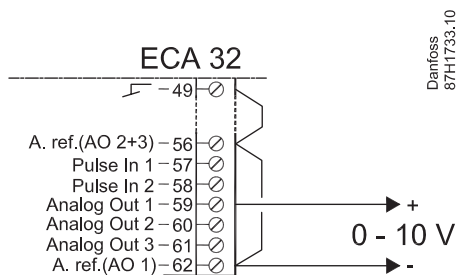

 
**P501.11**  
**ECA 32**  
**V3, Analog Out 3**  
**0 - 10 V**

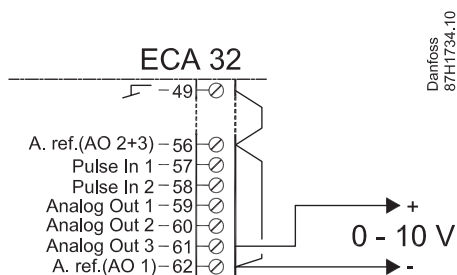

 P501.12  
P501.13  
ECA 35  
V1, V2, V3  
0-10 V

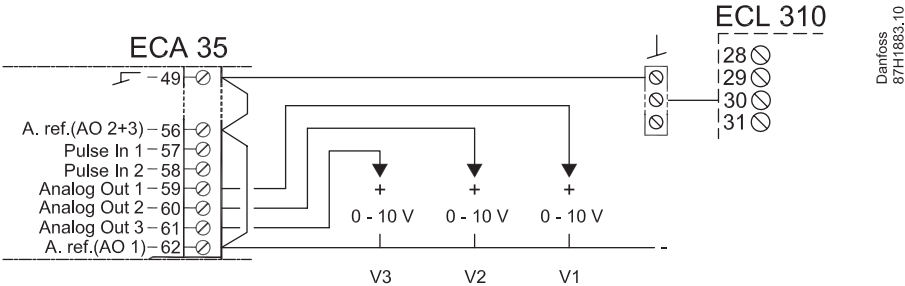

 
P501.12  
P501.13  
ECA 35  
V2, V3, V4  
PWM

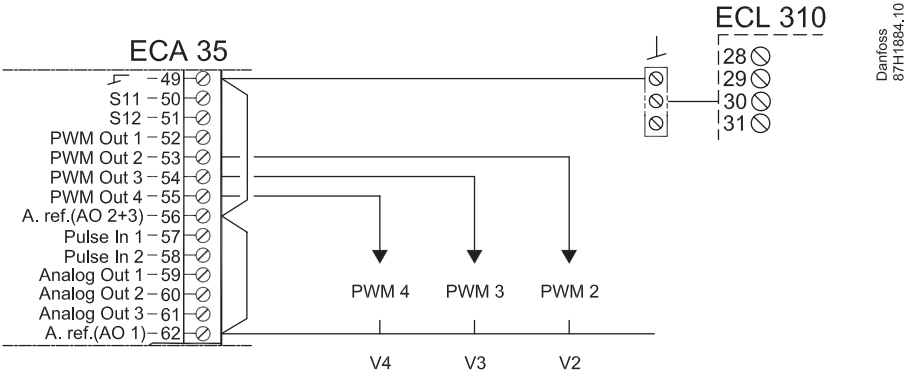


**230 V a.c. / 24 V a.c., safety thermostat**

**1-step closing**

 
ECL 210 / 310 / 311

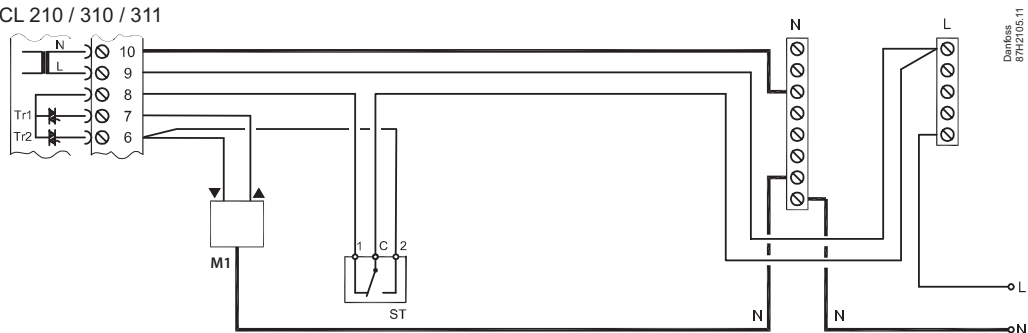


ECL 210 / 310 / 311

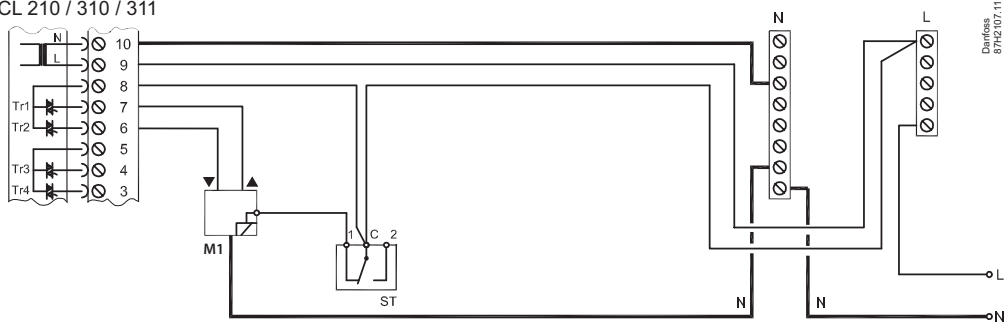 

ECL 210 / 310


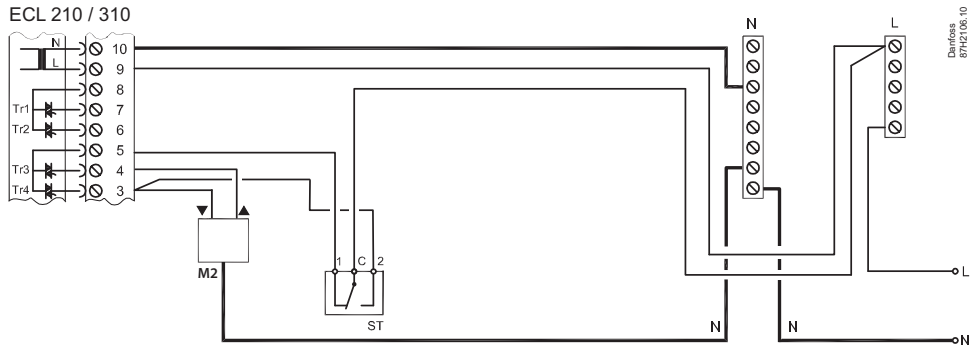 


ECL 210 / 310


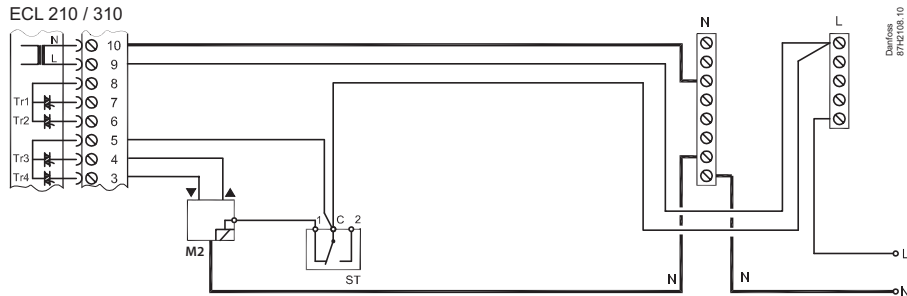 


Installation Guide, ECL Comfort 310, P501

  230 V a.c. / 24 V a.c., safety thermostat  
2-step closing

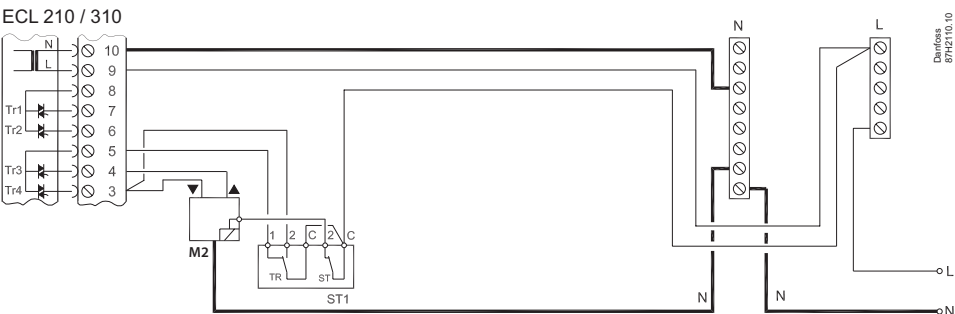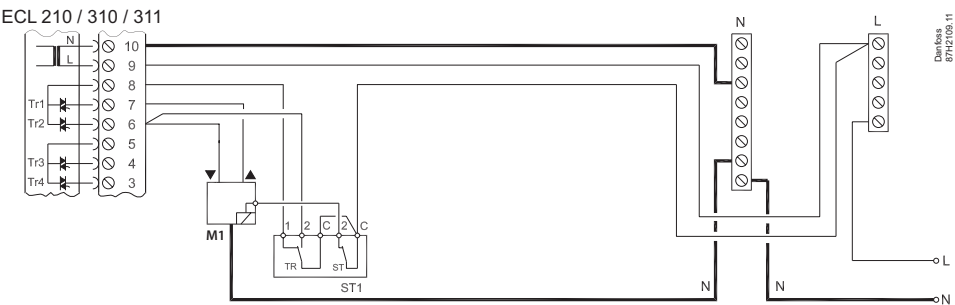

Pt 1000 (1000 Ω / 0 °C)

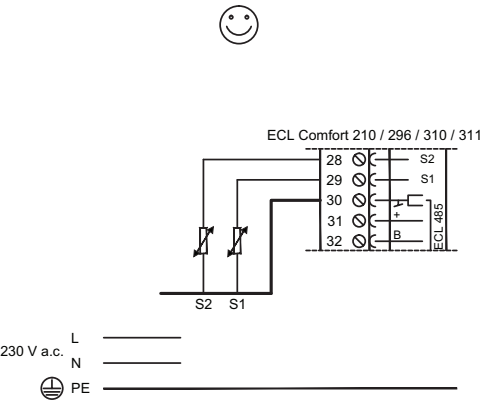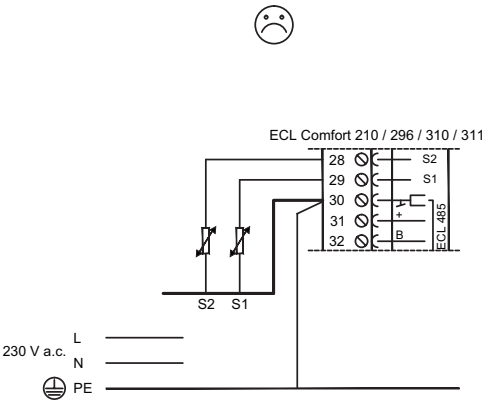  


**Pt 1000**


|                | S1 | S2 | S3 | S4 | S5 | S6 | S7 | S8 | S9 | S10 |
|----------------|----|----|----|----|----|----|----|----|----|-----|
| <b>P501.1</b>  | x  | x  | x  | x  | x  | x  | x  | x  | x  | x   |
| <b>P501.2</b>  | x  | x  | x  | x  | x  | x  | x  | x  | x  | x   |
| <b>P501.11</b> | x  | x  | x  | x  | x  | x  | x  | x  | x  | x   |
| <b>P501.12</b> | x  | x  | x  | x  | x  | x  | x  | x  | x  | x   |
| <b>P501.13</b> | x  | x  | x  | x  | x  | x  |    | x  | x  | x   |

**P501.1, P501.2, P501.11, P501.12**

 **Pt 1000 (1000  $\Omega$  / 0 °C)**

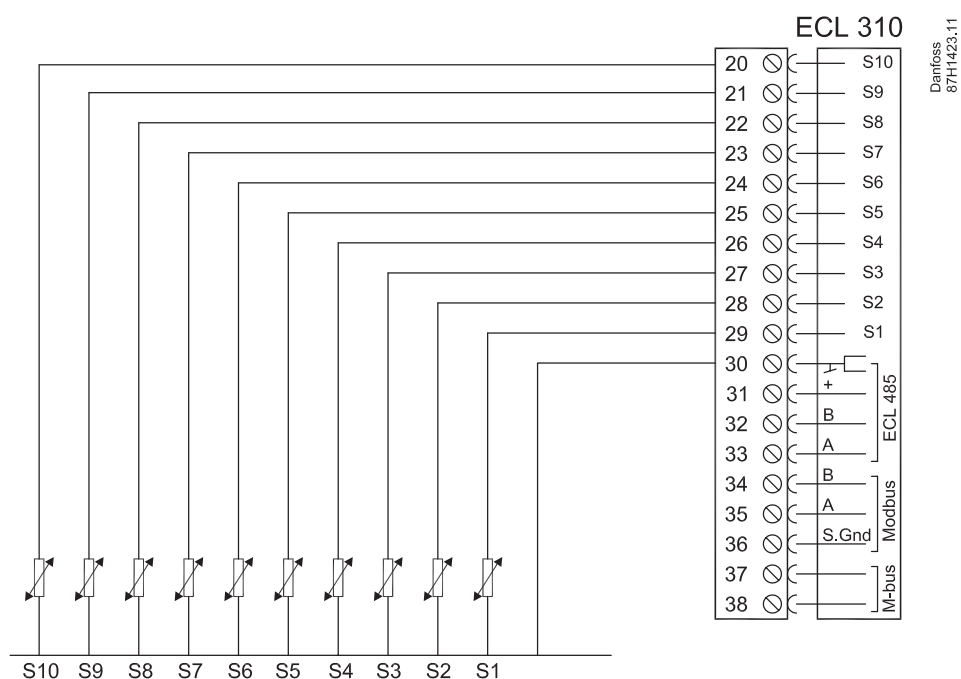

P501.13  
Pt 1000 (1000 Ω / 0 °C)

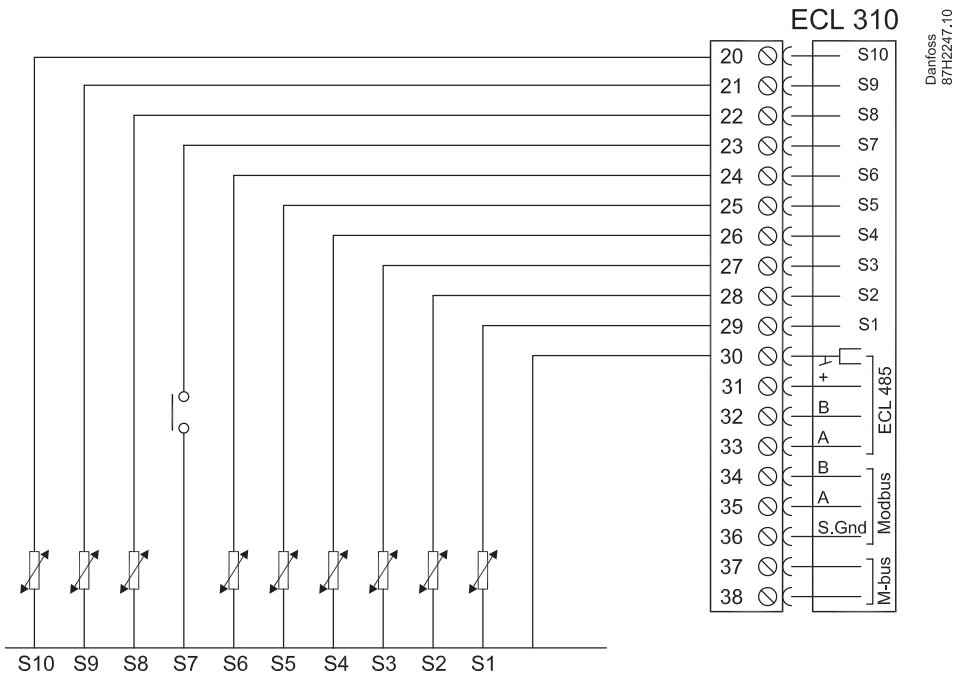 


|         | ECA 32   |         |         |     |         |     |
|---------|----------|---------|---------|-----|---------|-----|
|         | S11      | S12     | S13     | S14 | S15     | S16 |
| P501.1  | Pt 1000  | Pt 1000 |         |     |         |     |
| P501.2  | Pt 1000  | Pt 1000 |         |     |         |     |
| P501.11 | 0 – 10 V |         | Pt 1000 |     | Pt 1000 |     |
| P501.12 |          |         |         |     |         |     |
| P501.13 |          |         |         |     |         |     |

|         | ECA 35   |         |     |     |     |     |
|---------|----------|---------|-----|-----|-----|-----|
|         | S11      | S12     | S13 | S14 | S15 | S16 |
| P501.1  | Pt 1000  | Pt 1000 |     |     |     |     |
| P501.2  | Pt 1000  | Pt 1000 |     |     |     |     |
| P501.11 | 0 - 10 V |         |     |     |     |     |
| P501.12 | Pt 1000  | Pt 1000 |     |     |     |     |
| P501.13 | Pt 1000  | Pt 1000 |     |     |     |     |


**P501.1**

 **ECA 32 / 35, S11, S12, Pt 1000**

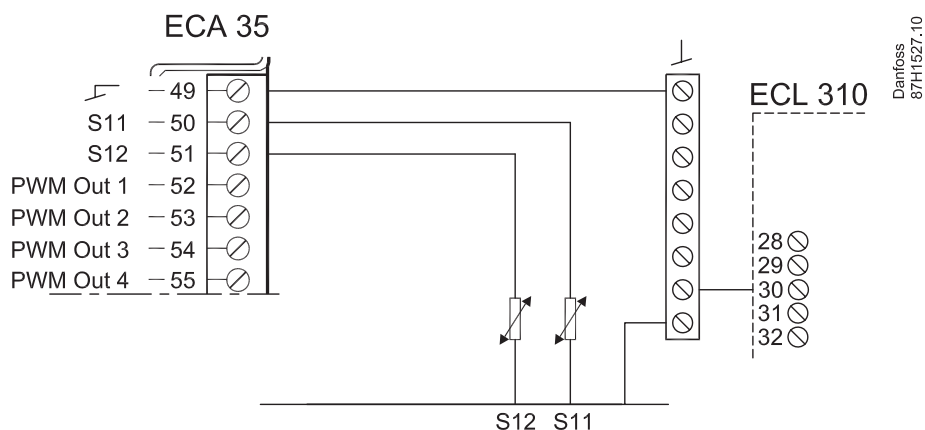

**P501.11**

 
**ECA 32, S11, 0 - 10 V**

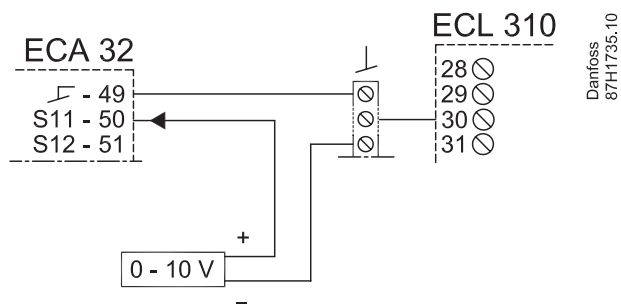

**P501.11**


**ECA 32**

 **S13, S15, Pt 1000**

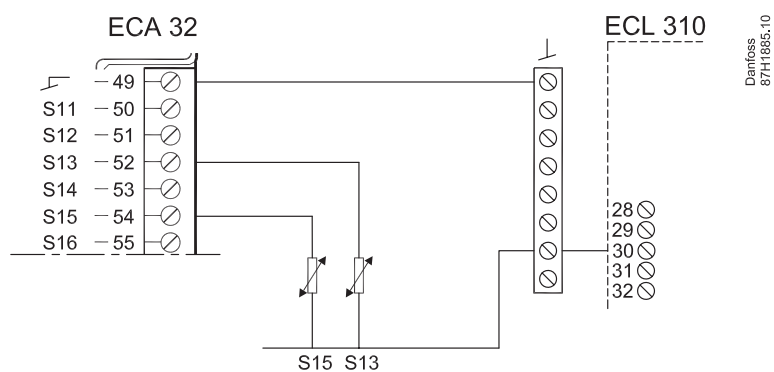


## Installation Guide, ECL Comfort 310, P501

 
**P501.12**  
**P501.13**  
**ECA 35**  
**S11, S12**

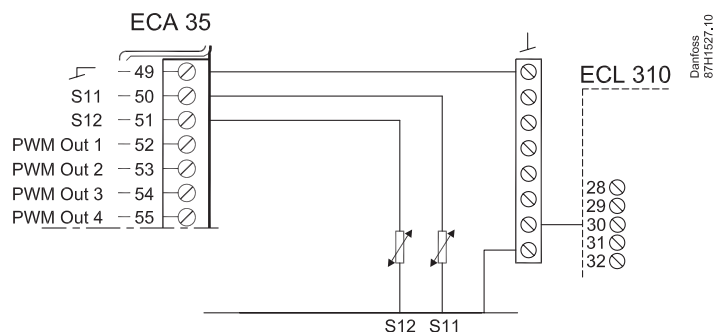


## ECA 30 / 31

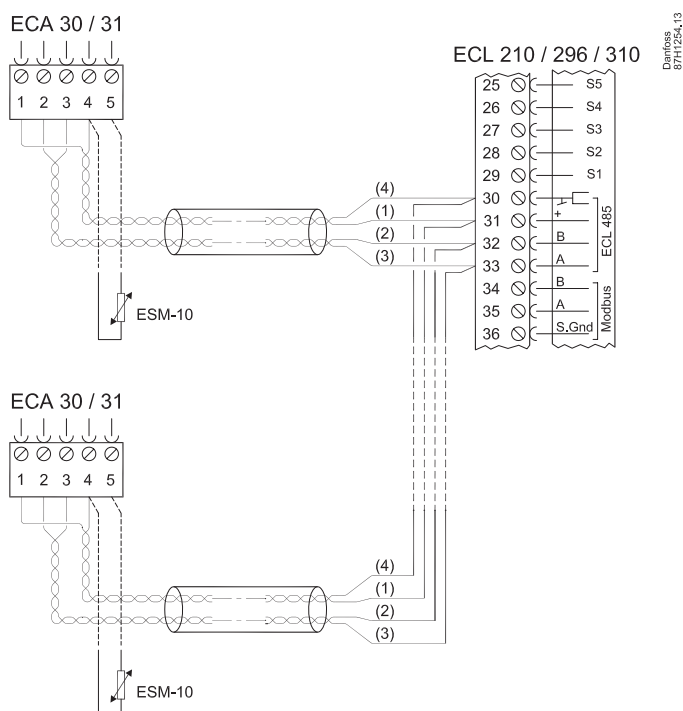 


## Master / slave

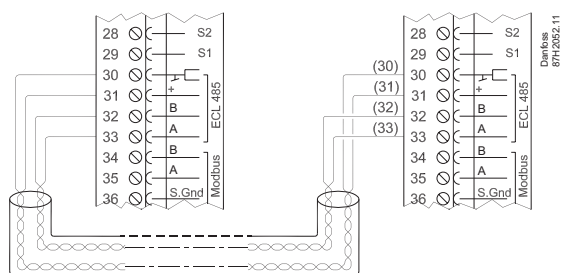 

# Modbus

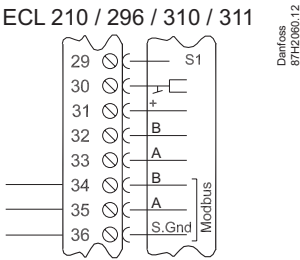 


# M-bus

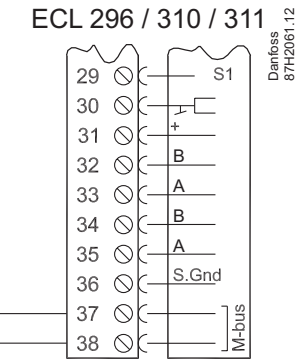 

**P501.1, P501.2, P501.11, P501.12, P501.13:**



**F1+ F2+F3+F4**

 **M-bus**

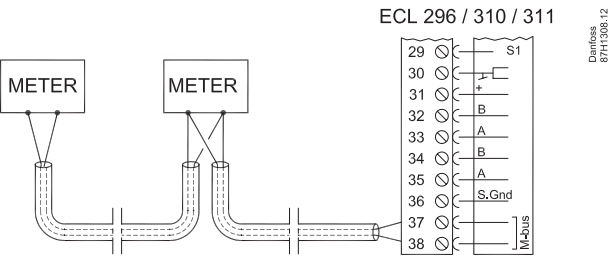


|         | F1      | F2 | F3 | F4 |
|---------|---------|----|----|----|
| P501.1  | x       | x  |    |    |
| P501.2  | x       | x  |    |    |
| P501.11 | x       | x  | x  |    |
| P501.12 | x       | x  | x  |    |
| P501.13 | x (S19) | x  | x  | x  |

  Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

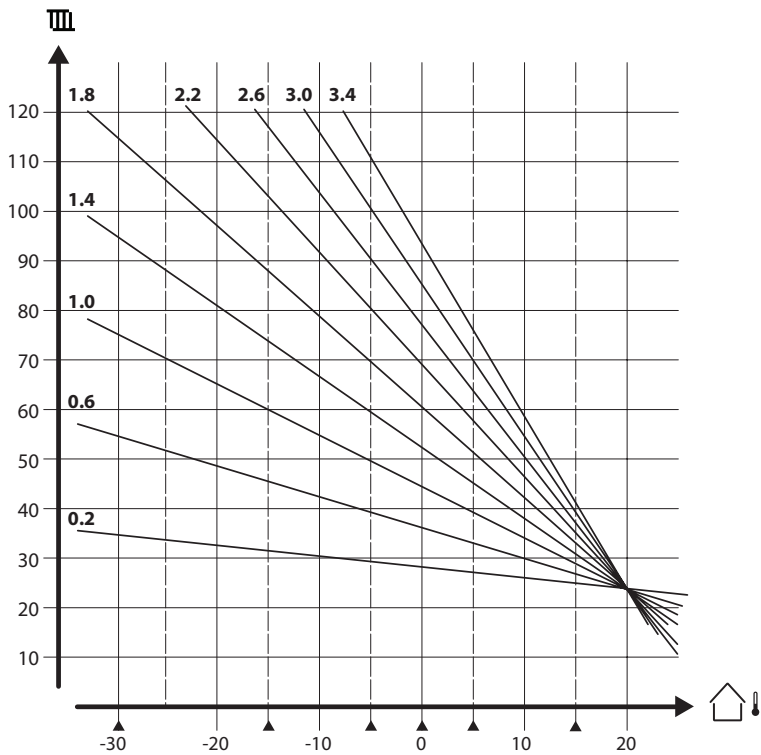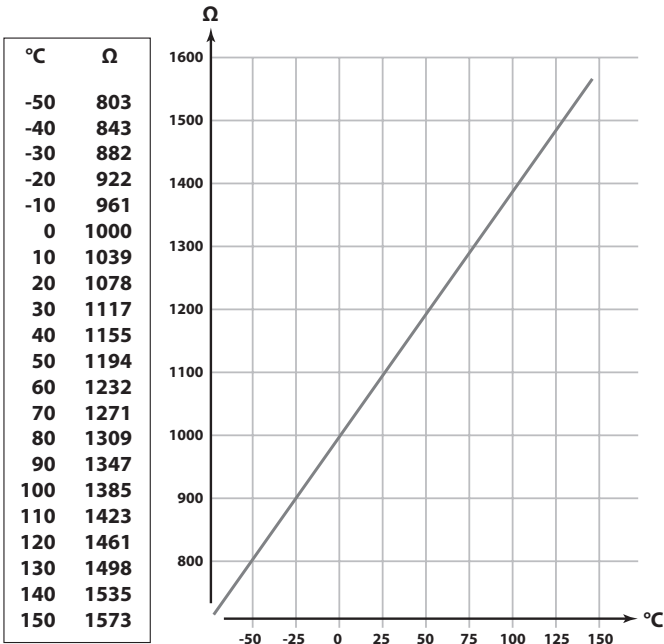


ECA 30

 
1

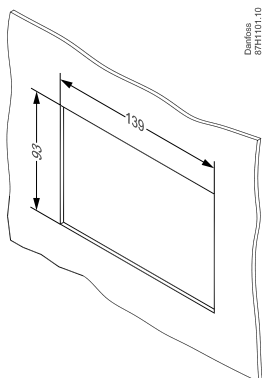


2

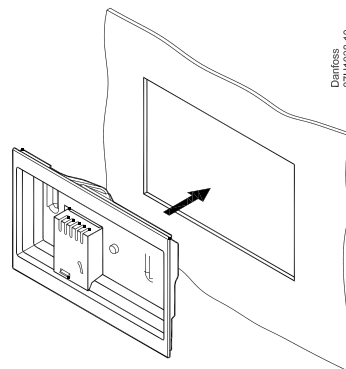 


3

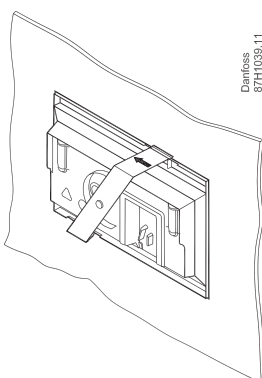 


4

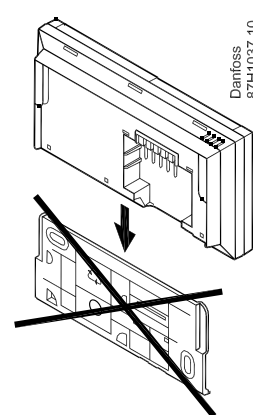 


5

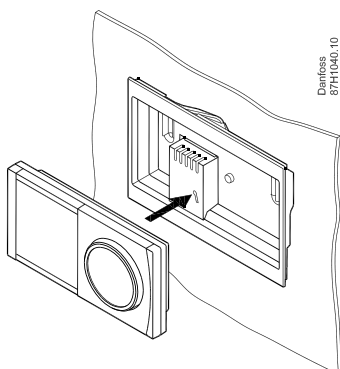 


6

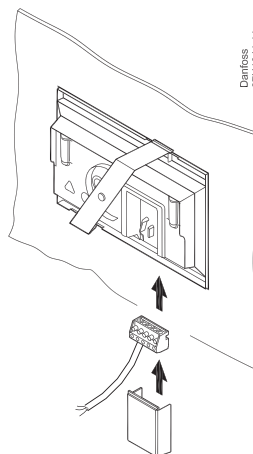 

7

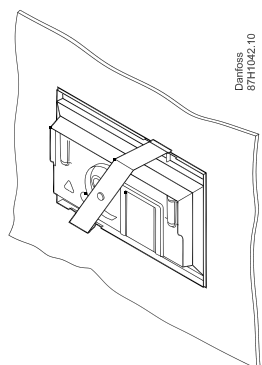 


8

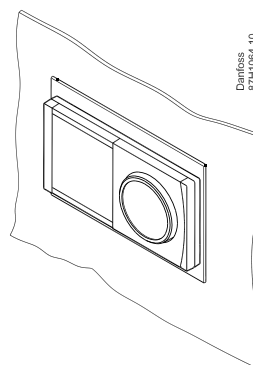 


# Installation Guide, ECL Comfort 310, P501


Danfoss  
87H1021.11

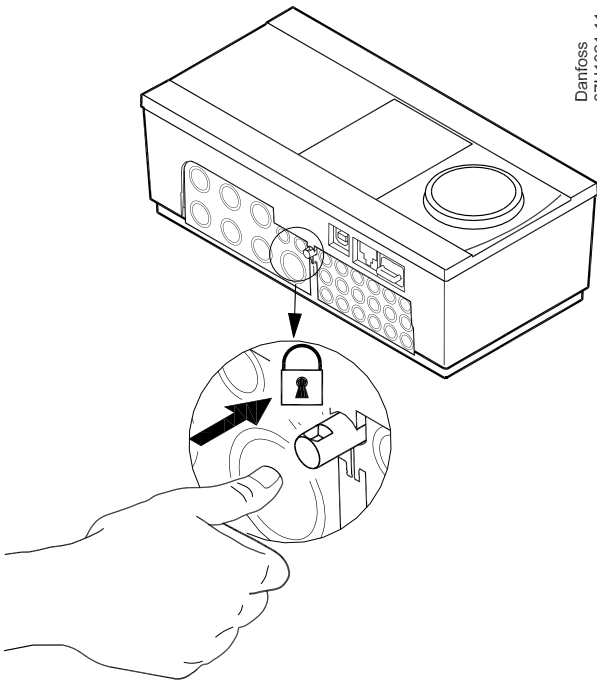


Danfoss  
87H1017.11

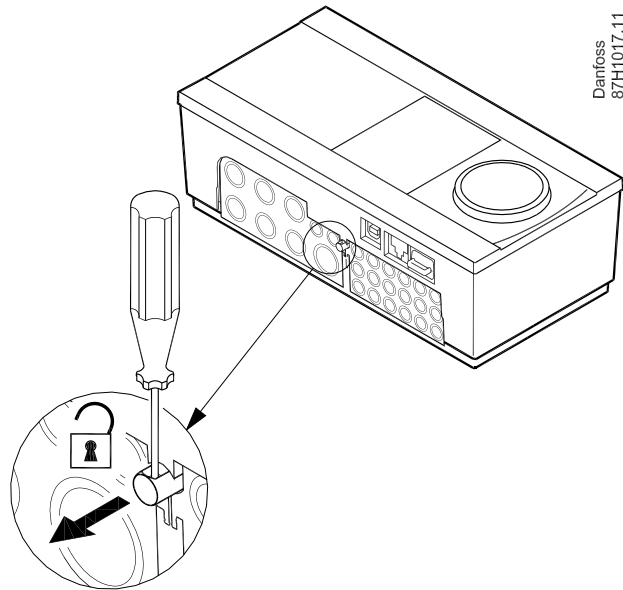

Danfoss  
87H1073.11

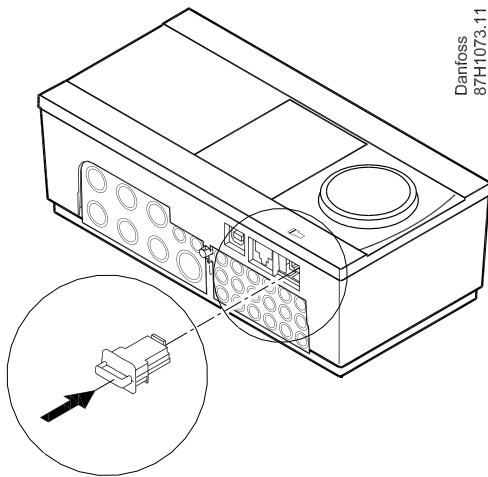

Danfoss  
87H1074.11

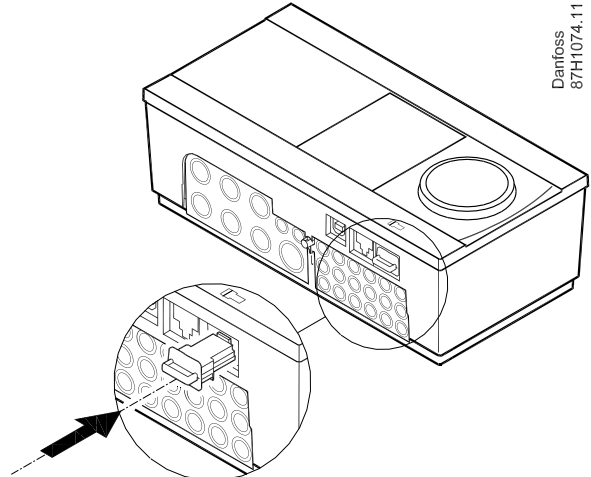 

?  **ECL Comfort 310, P501: [www.danfoss.com](http://www.danfoss.com)**

?  **<https://www.youtube.com/user/DanfossHeating>**  
-> Playlists -> How-to Videos -> District Energy installation videos



**Danfoss A/S**  
Climate Solutions • [danfoss.com](http://danfoss.com) • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.  
All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.