

bella™ Flip & Store Waffle Maker

Quick Start Guide

1. Unlock your waffle maker by pressing the button on the back of the unit and turn counter clock-wise. Unlock the clasp of the handle.




2. Prepare your batter.
Plug your waffle maker in and orange light will turn on.



3. Wait for light to illuminate white.
Add $\frac{3}{4}$ - 1 cup of batter to the center of cooking plate.
NOTE: Do not use non-stick sprays as they can cause build up on the cooking plates.



4. Close the lid, and using the handle flip the waffle maker to the other side.
NOTE: Do not lock the handle.

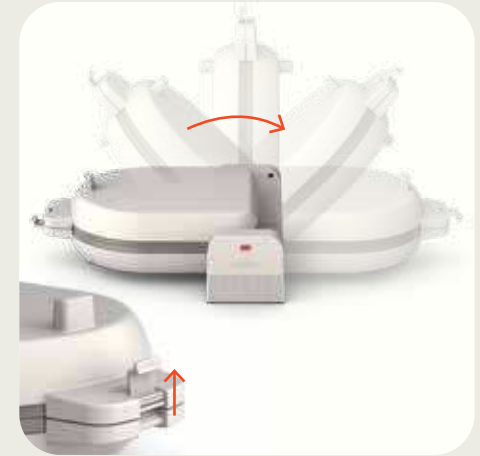

5. Cook for about 2 $\frac{1}{2}$ minutes or until the indicator light turns back to white. Lift the handle to open.

NOTE: If the waffle pulls, continue to cook and check every minute for doneness.



6. Once fully cooked, remove waffle & repeat for as many waffles as desired.

NOTE: Waffles cook faster because extra heat has been retained.



TO STORE:

1. Lock the handle with the clasp.
2. Lift and hold the waffle maker upright. Press and turn the button clockwise to lock into position.
3. Wrap the cord and store.



Please read the detailed instructions provided in the instruction manual.

bella™ Waflera reversible Flip & Store

Guía de inicio rápido

1. Desbloquee la waflera presionando el botón en la parte posterior de la unidad y gírelo en sentido antihorario. Desbloquee el sujetador del asa.



2. Prepare la masa. Enchufe la waflera y se encenderá la luz naranja.



3. Espere que la luz se encienda en blanco. Agregue 1 taza de masa al centro de la placa de cocción.
- NOTA:** No use aerosoles antiadherentes ya que pueden generar acumulaciones en las placas de cocción.



4. Cierre la tapa y use la manija para invertir la waflera al otro lado.
- NOTA:** No bloquee el asa.



5. Cocine por unos 2 ½ minutos o hasta que la luz indicadora se vuelva a tornar blanca. Levante el asa para abrirla.

NOTA: Si el waffle no se separa, siga cocinando y verifique cada minuto para ver si está listo.



6. Una vez que esté totalmente cocido, quite el waffle y repita con todos los waffles que quiera.

NOTA: Los waffles se cocinan más rápido porque se ha retenido un calor adicional.



PARA ALMACENAR:

1. Bloquee el asa con el sujetador.
2. Levante y sostenga en vertical la waflera. Presione y gire el botón en sentido horario para bloquear en posición.
3. Envuelva el cable y almacene.



Lea las instrucciones detalladas presentes en este manual de instrucciones.