G.E.



Thank you for purchasing the Garett Kids Focus 4G R

In case of failure/damage, please stop using the product and contact

the Garett service centre. Any attempts to make your own repairs may

Li-----

- operation. Users should pay special attention when using the smartwatch in the vicinity of medical devices such as pacemakers, hearing aids and
- other electronic medical devices.
- resulting threat to life and health. Protect the device from heat sources and direct sunlight
- Do not store the device in damp places or high temperatures, because
- it may cause electric shock or fire.
- The device is not resistant to long-term immersion in water
- Do not swim or dive while wearing the device
- damage the device and result in invalidation of the warranty. The device should only be cleaned with a soft, slightly damp cloth. Do no Nano SIM card slot
- use strong detergents or any other stimulants to clean the product.

I not guarantee that the smartwatch will be waterproof while swimming. The forces acting on the device during swimming



INSTALLATION OF NANO SIM CARD Put the watch on your wrist and adjust the strap length so as to ensure First, remove the screw that secures the Nano SIM card port cover(4) on the left side of the watch

service and caller ID function;

code is required when starting up the phone - if so, the PIN lock is active

Since the device uses an internet connection, we recommend purchasing

an internet package from the operator to avoid additional costs.

A 1 GB/month package is sufficient. The costs of internet connection

voice calls and text messages are specified in the price list of your mobil

I SIM cards offered by operators as data-only, e.g. those designed

and will need to be disabled in the phone settings or by contacting the

The card must support 2G/3G/4G modes, have an active internet

- towards the display and the cut corner of the
- properly.

After start-up



click anywhere on the screen to confirm your selection.



you to view the number of steps taken (the function should be

By touching the screen you will enter the selected function. Afte

Swipe up on the home screen to access the pedometer. It allows

The smartwatch is operated using a touch screen and a function

tray, arranging it according to the illustrative

3. Insert the tray into the watch, making sure it fits

Install the SIM card when

diagram in the picture, i.e. with the card chipn

enabled in the Garett Tracker application in the tab Activi To start the device, press and hold the function button(2) to Pedometer> Measurement).

switching off (in the case of an installed SIM card, the functio button (2) serves as the SOS button

in case the smartwatch does not start up, try to charge

Charging voltage should not exceed 5V.

The recommended charging current is maximum 1.

installing the Garett Tracker app on your phone. The main menu of the smartwatch is described later in the manual. The device will be fully functional after registration and configuration of the watch via the Garett

Android

1. When the Nano SIM card is properly installed in the watch and

recommend checking out this video - scan the QR code

- battery level

2. After starting the watch, the home screen will appear, displaying the t

and date. Swiping down on the home screen or menu will display: Wi-Fi signal, GSM signal, internet connection, battery level and quick menu

3. Wait until the GSM signal (icon - ||) and internet connection (icon - 1) SIM card meets all the requirements described above and that the watch

ettings>Turn off) and restart the watch. If the GSM signal appears by internet connection continues to be unavailable (no icon - 1), the problem

1. The smartwatch is charged using the magnetic cable attached to the

touch the contacts of the charging cable. Then connect the other end of

the cable to a USB port on your computer or USB power adapter. When it is

connected properly, the charging animation will appear on the watch

after several minutes. Before switching on the watch for the first time is recommended to charge it for about 2 hours

- GSM signal

4G[™] ¼ - internet connection

may be due to an incorrect APN configuration. You can configure the APN via special configuration text messages, described later in the manual in the

Remember to grant the app the required consents refuse, selected functions of the app may not work properly of

Region: Europe and Africa ____________

7.After filling in all the details, c

password may consist of 6-12 characters

Polish characters and special characters

9.On the next screen, scan the QR code using the button \longrightarrow from the sticker of the back of the watch (REG CODE) of

a new account or change the app 3.To register a new account, click the

displayed as the name of the device 4.In the first field, enter your e-mail associated with your account.

5. Then retype the verification code for the image generated on the right

Please remember or note down the e-mail address and passw

6.In the last field, enter your password which together with the e-mail address will be used to log in to the app. The

13. After filling in all the details, click OK, and the device and Garett Tracker ap

will be fully functional.

the app will be displayed, showing the map with the last watch location.

the watch settings. The code can be als

10. Enter the device name and it will be

11. The next step is to choose y relationship with the user of the

12.Optionally, enter the phone number

the device, which will facilitate



used to register the watch, because the account to which the __________

location is determined based on

indicated position of the devic Irzad Woie

> NOTE: When using any function of th Garett Tracker app or trying to configure the settings, the following message may means that the smartwatch has no

configuration is described later in the manual in the TROUBLESHOOTI

fter completing the registration and

location displays the source of location ata (GPS/LBS/WiFi) address time

the last location and watch battery level

) To ensure the most accurate

location, the smartwatch must be in an open area, in order to have an accurate and stable GPS signa When there is no GPS signal, e.



Re-registration will be possible only after obtaining permission



and radius of the area (max. 2 km).

- Remote camera: Take a photo

using the watch camera and ser

- Activity: Configuration and displa

Video chat: The ability to make video calls between the

administrator and the

of the activities performed by the

Due to the large amount of

data transmitted during a video

call, a high-bandwidth internet

of poor quality with interruptions in video transmission

watch user, up to several days back.

contacts which will be displayed in the phone book of the wat within range of the network, has an internet connection, and the Time zone: Configure the time zone of the watch

(PL: East: GMT + 1:00). number to activate the function. The watch will automatically ca back the phone number entered within 30 seconds. The watch

____________ When configuring the functions SOS Numbers - and Voice monitor - . enter the numbers without the country code user to dial and make a call to any number (including those not necessary, add 0048 before the number for PL). Using the

entered in the phone book). If you do not want the watch user to be able to contact numbers not entered in the phone book, tu _______

- Modes of operation: Select the refresh frequency of the watc

Tracking mode – refreshes every 1 minute (reduces the running)

Normal mode – refreshes every 10 minutes.

phone number provided. - Family members: List o SMS notifications

administrators who can manage the watch. - Phone book: The

function on the watch. Turning on this function allows the watch

accept incoming calls using the green phone icon, and reject

) - Turn off watch: Turn off the watch remotely

Turn off the watch

Restore factory settings

the watch loses GPS signal. lephone book function. View contacts previously sa

- SMS notifications: Turn on/off and configure text

 Restart watch: Restart the smartwatch.

> Restore factory settings: The properties of the properties ability to reset the watch to factory settings.

 Delete account: Send a request to delete the account from the app server. The account should be deleted within one hour.

Depending on the device model, the functions of the Garet Tracker app described above may vary. In the event of an problems, we encourage you to contact our Technical S

Numeric keypad: The ability to turn on/off the numeric keyp

ability to turn on/off the GPS position - Phone: Numeric keypad function. It allows you to dial any function of the watch. number (even from outside the phone book) and making t

connection. The ability to disable the function through the Garett LBS: The ability to turn on/off the tracking function of the watch Tracker application in the tab Management>Numeric keyboard.

based on the nearest mobile network transmitter in the event that

via the Garett Tracker application. Dial the number and press t 1- Watch finder: The ability to search for your watch - this function phone icon to start the call. We interrupt the conversation by triggers an audible alarm.

pressing the red phone icon or the function button(2). Yo

between the administrator and the associated smartwatch, grou

underground car parks, making video calls may not be possibl

the calls may be of poor quality with interruptions in video

on the watch (max. 3). To take a photo click the camera icon at

- Gallery: The watch's gallery function. Press the photo, then <

(green field) or the last text message (purple field) sent from t

the button at the bottom of the screen while dictating the mess

watch administrator. It will appear in the Garett Tracker app under

(max. 15 seconds). Release the button to send the message to the

bottom of the screen once. The photo will be saved in the device's

gallery. There is the ability to send the photo to the administrate

1 - Video call: Video calls function. The ability to make video calls

chat is also available. Select a person and press the green phone ic to make a call. You can terminate the call by pressing the red phone icon or the function button(2). You can accept incoming calls using he function button(2). There is the ability to adjust the volume during a call – use the speaker icon Due to the large amount of data transmitted during a video call, a high-bandwidth internet connection is required. LTE connection recommended. In locations with poor mobile network coverage. such as areas outside cities or towns, shopping malls or

1. The device does not turn on: Connect the device to a wall charger for approx. 2 hours Date and time: Set the date and time, Theck whether the device is properly connected.

2. No GSM signal (icon - fill):

TROUBLESHOOTING

eck whether the SIM card format is correct

Garett Tracker app: "The device is offline"):

Play T-Mobile Virgin Mobile pw,123456,apn,internet# Correct response:

apn:internet:user::passwork::userdat

After receiving the response, send another message - its content dep

Check whether the SIM card is inserted properly in the slot (as specified

he SIM card meets all the requirements (described a apn:plus;user:;passwork:;userdata

Orange, NJU Mobile:

Correct response:

3. No internet connection (no icon - IIII or the following message in the apn:internet:user:internet:passwork:internet:userdata

heck whether the SIM card meets all the requirements (describe After receiving the correct response, send a text message

Enter the APN configuration

(the SIM card must be inserted and the watch must be on: the message

You will receive a message stating "reset..", and the smartwatc

restart in order to save the settings. After a few minutes, the watch Content of the first text message should connect to the internet. If you do not receive responses to any of the messages, change the numbers "123456" to "523681" i

ontent of the text message and then repeat the entire configuration

After a while you should receive a response to your phone contain detailed information about the watch, i.e. the software version, ID, IMEI, IF address and other information. For the watch to work properly, the ip url

. Inaccurate GPS location:

neck whether the watch has a GPS signal (icon - The watch must be in an open area (if the watch loses GPS signal, e.g. field must contain:

ip url:52.28.132.157; port:8001;

If the ip_url field differs from the example provided, please

contact our Technical Support Department: serwis@garett.p

because it is inside a building, the location is determined based on the nearest mobile network transmitter

on the operator of the SIM card in the watc

Check that neither your number nor the number on the watch is blocked

Calling the watch is impossible – busy signal or user unavailable

* Check the current operating mode on the device (Normal mode

to visit the Technical Support section on our website (scan the QR

Battery saving mode are the recommended options)

the Whitelist option is turned on (if your number is no

saved in the phone book and the Whitelist is on, the watch will reject

Calling from the watch is impossible:

pw,123456,apn,plus Check whether the watch has a GSM signal (icon - IIII) Correct response

Check that the numeric keypad function is turned on or that there are

contacts saved in the phone book of the watch.

pw,123456,apn,internet,internet,internet 7. During calls, you cannot hear the other person in the smartwatch

Check that the speaker on the watch has not been muted (you

the sound volume in the watch settings).

to the number on the watch:

8. Short battery life:

Content of the text message * Check that the watch charging time was not too short (t)

pw,123456.reset# recommended charging time is approx. 2 hours).

More information about this device is available at www.garett.pl. Visit our website to see more products and accessories

கினி Dedicated appro

CSM module:

The product is covered by a 24-month manufacturer's warranty. The warranty

Fargowa 18/1413

commercial waste.

WARRANTY/CLAIMS

does not cover; defects and damage caused by the user or as a result of improper use (misuse), mechanical damage and damage resulting from using accessories and/or consumables other than those provided with th device. When lodging a complaint, fill in the warranty card supplied with the device and send the device accompanied with proof of purchase to the address of the service centre provided on the warranty card.

> Contact details are available on the website: www.garett.eu

Manufacturer:

Processor:

Weight:

∑ max. 54 a

Face dimensions

54,5 x 49 x 15,5 mr

Warranty:

25 - 520 Kielce

Proper disposal of the

product (waste electric

its service life. To avoid harm to the environment and human health as a esult of uncontrolled waste disposal, please separate the product from other types of waste and recycle responsibly in order to promote reuse of material resources as a regular practice. For information about where and how to recycle this product in a way that is safe for the environment, household users should contact the retail outlet at which they purchased the product. authorities. Business users should contact their supplier and check the ter-

of the purchase agreement. Do not dispose of the product with other

(€F© RoHS @ 🗘

s indicated by the marking on the product or in the related content, the






www.garett.eu









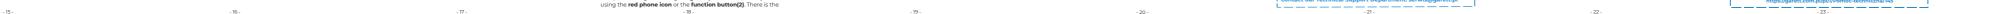

Stopwatch: Stopwatch function

- Calculator: Simple math calculator function

) Depending on the device model, the functions of the Garett

Tracker app described above may vary. In the event of any

problems, we encourage you to contact our Technical Support
