



THE DISPLAY CHOICE
OF PROFESSIONALS™

www.agneovo.com

PB3701A LCD Display
User Manual

TABLE OF CONTENTS

SAFETY INFORMATION.....	1
CE	1
Waste Electrical and Electronic Equipment-WEEE.....	1
Turkey RoHS.....	1
Ukraine RoHS	1
PRECAUTIONS.....	2
Cautions When Setting Up	2
Cautions When Using.....	3
Cleaning and Maintenance.....	3
Notice for the LCD Display	4
CHAPTER 1: PRODUCT DESCRIPTION.....	5
1.1 Unpacking	5
1.2 Package Contents	5
1.3 LCD Display Overview	6
1.3.1 Input/Output Terminals	6
1.4 Remote Control	7
1.4.1 General Functions	7
1.4.2 Inserting the Batteries in the Remote Control	8
CHAPTER 2: Adjusting the settings.....	9
2.1 Setting Menu	9
2.1.1 Settings Menu Tree	9
2.2 Configuring the Settings	11
2.2.1 Network and Internet.....	11
2.2.2 Connected Devices	12
2.2.3 Apps & Notifications	12
2.2.4 Display.....	13
2.2.5 Sound.....	14
2.2.6 Storage.....	14
2.2.7 Memory	14
2.2.8 Privacy.....	14
2.2.9 Location.....	15
2.2.10 Screenshot.....	15
2.2.11 System.....	16
2.2.12 About Device	19
CHAPTER 3: Multimedia menu.....	20
3.1 Explorer.....	20
3.1.1 Explorer Menu	20
3.1.2 Edit the File	20
3.2 Video	21
3.3 Partner App Zone	22

TABLE OF CONTENTS

3.4 Software Uninstallation & Installation	22
3.4.1 Uninstallation	22
3.4.2 Installation	22
CHAPTER 4: USB upgrade SOP	23
4.1 Upgrade the firmware	23
CHAPTER 5: APPENDIX	24
5.1 Cleaning	24
5.2 Troubleshooting	25
CHAPTER 6: SPECIFICATIONS	26
6.1 Display Specifications	26
6.2 Display Dimensions	27

SAFETY INFORMATION

CE



WARNING: This equipment is compliant with Class A of EN55032/CISPR 32. In a residential environment this equipment may cause radio interference.

Waste Electrical and Electronic Equipment-WEEE



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product

For Private Households in the European Union. To help conserve natural resources and ensure the product is recycled in a manner that protects human health and the environment, we would like to bring your attention to the following:

- The crossed-out dustbin on the device or outer packaging indicates the product is compliant with European WEEE (Waste Electrical and Electronic Equipment) Directive
- Always dispose of the old devices separately from household waste
- Batteries should be removed beforehand and disposed separately to the right collection system
- You are responsible with regard to the deletion of personal data on old devices before disposal
- Private households can hand in their old devices free of charge
- For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product

Turkey RoHS

Türkiye Cumhuriyeti: EEE Yönetmeliğine Uygundur.

Ukraine RoHS

Обладнання відповідає вимогам Технічного регламенту щодо обмеження використання деяких небезпечних речовин в електричному та електронному обладнанні, затвердженого постановою Кабінету Міністрів України від 3 грудня 2008 № 1057.

PRECAUTIONS



Symbols used in this manual

	This icon indicates the existence of a potential hazard that could result in personal injury or damage to the product.
	This icon indicates important operating and servicing information.

Notice

- Read this User Manual carefully before using the LCD display and keep it for future reference.
- The product specifications and other information provided in this User Manual are for reference only. All information is subject to change without notice. Updated content can be downloaded from our web site at www.agneovo.com.
- To protect your rights as a consumer, do not remove any stickers from the LCD display. Doing so may affect the determination of the warranty period.

Cautions When Setting Up

- Do not place the LCD display near heat sources, such as a heater, exhaust vent, or in direct sunlight.
- Do not cover or block the ventilation holes in the housing.
- Place the LCD display on a stable area. Do not place the LCD display where it may subject to vibration or shock.
- Place the LCD display in a well-ventilated area.
- Do not place the LCD display outdoors.
- To avoid the risk of shock or permanent damage to the set, do not expose the display to dust, rain, water or an excessively moist environment.
- Do not spill liquid or insert sharp objects into the LCD display through the ventilation holes. Doing so may cause accidental fire, electric shock or damage the LCD display.

PRECAUTIONS

Cautions When Using

- Use only the power cord supplied with the LCD display.
- The power outlet should be installed near the LCD display and be easily accessible.
- If an extension cord is used with the LCD display, ensure that the total current consumption plugged into the power outlet does not exceed the ampere rating.
- Do not allow anything to rest on the power cord. Do not place the LCD display where the power cord may be stepped on.
- If the LCD display will not be used for an indefinite period of time, unplug the power cord from the power outlet.
- To disconnect the power cord, grasp and pull by the plug head. Do not tug on the cord; doing so may cause fire or electric shock.
- Do not unplug or touch the power cord with wet hands.
- When turning off the display by detaching the power cord, wait 6 seconds before re-attaching the power cord for normal operation.
- Do not knock or drop the display during operation or transportation.

Cleaning and Maintenance

- To protect your display from possible damage, do not put excessive pressure on the LCD panel. When moving your display, grasp the frame to lift; do not lift the display by placing your hand or fingers on the LCD panel.
- Unplug the display if you need to clean it with a slightly damp cloth. The screen may be wiped with a dry cloth when the power is off. However, never use organic solvent, such as, alcohol, or ammonia-based liquids to clean your display.
- If your display becomes wet, wipe it with dry cloth as soon as possible.
- If a foreign substance or water gets in your display, turn the power off immediately and disconnect the power cord. Then remove the foreign substance or water, and send the unit to the maintenance center.
- In order to maintain the best performance of your display and ensure a longer lifetime, we strongly recommend using the display in a location that falls within the following temperature and humidity ranges.
 - ◆ Temperature: 0-40°C (32-104°F)
 - ◆ Humidity: 20-80% RH



Warning:



Unplug the power cord from the power outlet and refer to qualified service

personnel under the following conditions:

- ◆ When the power cord is damaged.
- ◆ If the LCD display has been dropped or the housing has been damaged.
- ◆ If the LCD display emits smoke or a distinct odor.

PRECAUTIONS

Notice for the LCD Display

- In order to maintain the stable luminous performance, it is recommended to use low brightness setting.
- Due to the lifespan of the lamp, it is normal that the brightness quality of the LCD display may decrease with time.
- When static images are displayed for long periods of time, the image may cause an imprint on the LCD display. This is called image retention or burn-in.
 - ◆ To prevent image retention, do any of the following:
 - Set the LCD display to turn off after a few minutes of being idle.
 - Use a screen saver that has moving graphics or a blank white image.
 - Execute the ANTI-BURN-IN function of the LCD display. See **SYSTEM 2 > ANTI-BURN-IN** section.
 - Switch desktop backgrounds regularly.
 - Adjust the LCD display to low brightness settings.
 - Turn off the LCD display when the system is not in use.
 - ◆ Things to do when the LCD display shows image retention:
 - Turn off the LCD display for extended periods of time. It can be several hours or several days.
 - Use a screen saver and run it for extended periods of time.
 - Use a black and white image and run it for extended periods of time.
- There are millions of micro transistors inside the LCD display. It is normal for a few transistors to be damaged and to produce spots. This is acceptable and is not considered a failure.
- **IMPORTANT:** Always activate a moving screen saver program when you leave your display unattended. Always activate a periodic screen refresh application if the unit will display unchanging static content. Uninterrupted display of still or static images over an extended period may cause “burn in”, also known as “after-imaging” or “ghost imaging”, on your screen. This is a well-known phenomenon in LCD panel technology. In most cases, the “burned in” or “after-imaging” or “ghost imaging” will disappear gradually over a period of time after the power has been switched off.
- **WARNING:** Severe “burn-in” or “after-image” or “ghost image” symptoms will not disappear and cannot be repaired. This is also not covered under the terms of your warranty.

CHAPTER 1: PRODUCT DESCRIPTION

 
1.1 Unpacking

- This product is packed in a packaging box which contains standard accessories.
- Any other optional accessories will be packed separately.
- Considering the size and weight of the display, it is recommended that this product is carried out by two persons.
- After opening the packaging box, ensure that the included items are in good condition and complete.

1.2 Package Contents

When unpacking, check if the following items are included in the package. If any of them is missing or damaged, contact your dealer.

☐ LCD Display




☐ Quick Start Guide




☐ Remote Control




☐ Power Cord

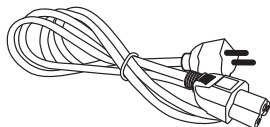


☐ HDMI Cable

 

☐ IR receiver cable

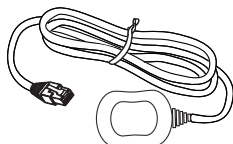

☐ Battery x 2

 


Note:

- ◆ Remote control is shipped with the supplied AAA batteries.
- ◆ You might like to save the package box and packing material for shipping the display.

PRODUCT DESCRIPTION

1.3 LCD Display Overview

1.3.1 Input/Output Terminals

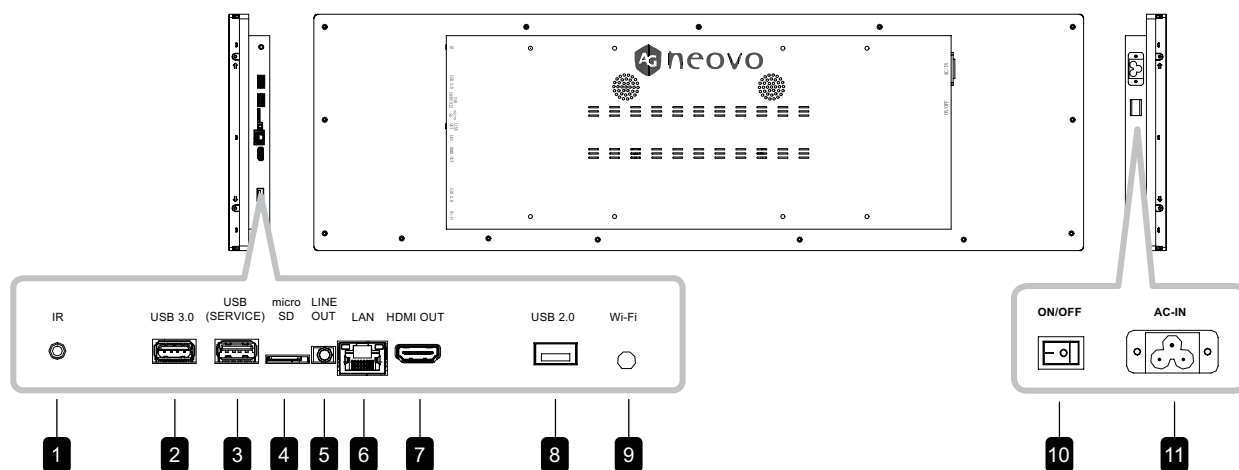


- | | |
|---|---|
| 1 IR
IR signal input. | 7 HDMI OUT
Connects HDMI signals output. |
| 2 USB 3.0
Connects USB 3.0 signal. | 8 USB 2.0
Connects USB 2.0 signal. |
| 3 USB(SERVICE)
USB Port for firmware upgrade. | 9 Wi-Fi
Wi-Fi Antenna Installation. |
| 4 microSD
MicroSD Card Slot | 10 ON/OFF
Switch the main power on/off. |
| 5 LINE OUT
Connect audio signals input
(3.5 mm Stereo Audio Jack). | 11 AC IN
AC power input from the wall outlet. |
| 6 LAN
For internet connection with an Ethernet
cable. | |

PRODUCT DESCRIPTION

1.4 Remote Control

1.4.1 General Functions

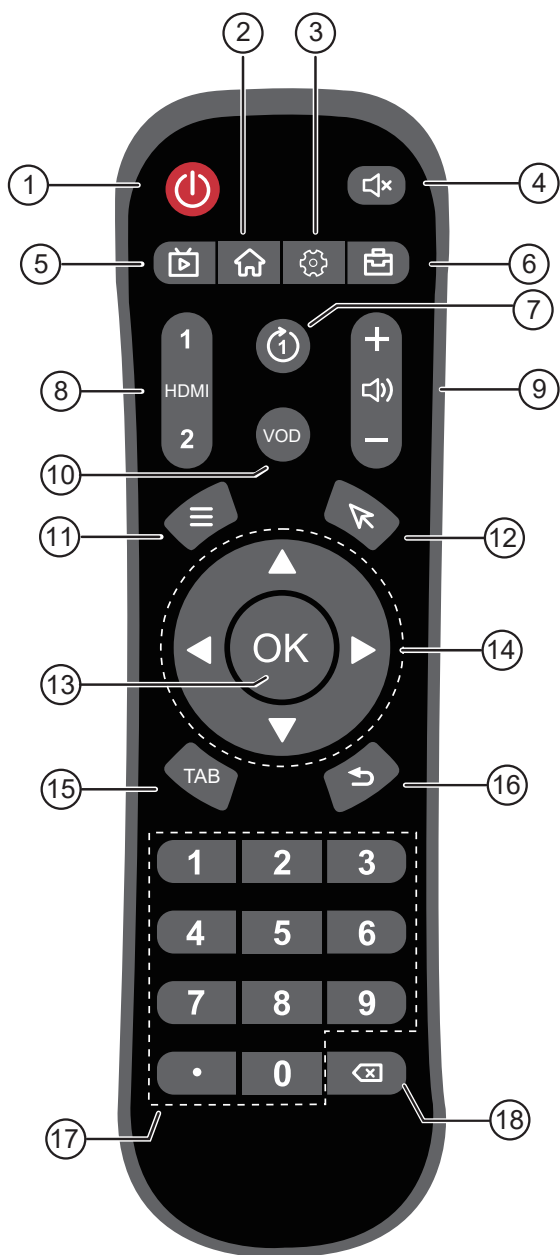

Note:

- ♦ Remark: When the product is different from the picture, the product prevails.

- 1 [POWER] button**
Turns the display on/off.
- 2 [HOME] button**
Returns to the Home page.
- 3 [SETTINGS] button**
Opens the Settings menu.
- 4 [MUTE] button**
Turns the mute function on or off.
- 5 [PLAY/PAUSE] button**
No function.
- 6 [TOOL] button**
Opens the Tool menu.
- 7 [REFRESH/RESET] button**
No function.
- 8 [HDMI] button**
No function.
- 9 [VOLUME] button**
Adjusts volume. Press **[+]** to increase volume or press **[-]** to decrease volume.
- 10 [VOD] button**
No function.
- 11 [MENU] button**
No function.
- 12 [BACK] button**
No function.
- 13 [OK] button**
Confirms an entry or selection.
- 14 [UP] [DOWN] [LEFT] [RIGHT] Navigation buttons**
Navigates through menus, selects items, and adjusts values.
- 15 [TAB] button**
No function.
- 16 [PREVIOUS] [NEXT] buttons**
Returns to the previous screen (Android OS) or exits the Settings menu.
- 17 [NUMERIC KEYS] button**
No function.
- 18 [EXIT] button**


PRODUCT DESCRIPTION

1.4.2 Inserting the Batteries in the Remote Control

The remote control is powered by two 1.5V AAA batteries.

To install or replace batteries:

- 1 Press and then slide the cover to open it.
- 2 Align the batteries according to the (+) and (-) indications inside the battery compartment.
- 3 Replace the cover.

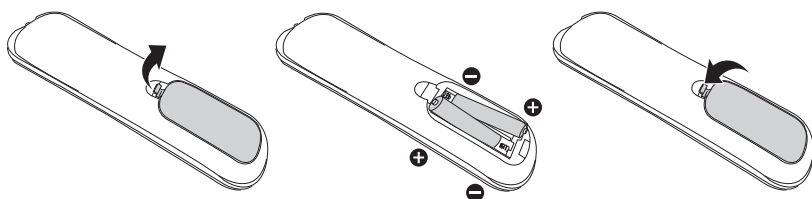


1.4.3 Handling the Remote Control

- Do not subject to strong shock.
- Do not allow water or other liquid to splash the remote control. If the remote control gets wet, wipe it dry immediately.
- Avoid exposure to heat and steam.
- Other than to install the batteries, do not open the remote control.

1.4.4 Operating Range of the Remote Control

Point the top of the remote control toward the display's remote control sensor (on the left or right side) when pressing a button.

When using the remote control, the distance from the remote control to the sensor on the display should be less than 6m/20ft, and the horizontal and vertical angles should be less than 30°.

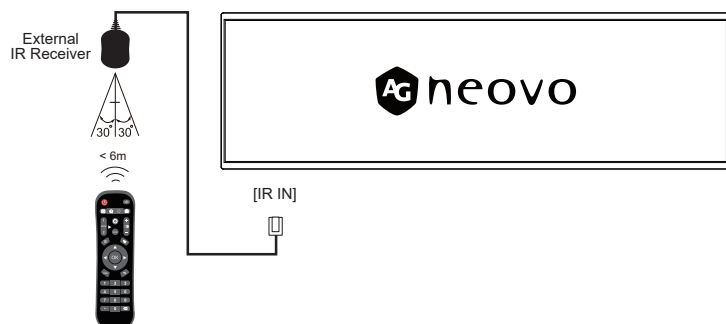

Caution:

The incorrect use of batteries can result in leaks or bursting. Be sure to follow these instructions:

- ◆ Place “AAA” batteries matching the (+) and (-) signs on each battery to the (+) and (-) signs of the battery compartment.
- ◆ Do not mix battery types.
- ◆ Do not combine new batteries with used ones. It causes shorter life or leakage of batteries.
- ◆ Remove the dead batteries immediately to prevent them from liquid leaking in the battery compartment. Don't touch exposed battery acid, as it can damage your skin.

Note:

- ◆ If you do not intend to use the remote control for a long period, remove the batteries.
- ◆ The remote control may not function properly when the remote control sensor on this display is under direct sunlight or strong illumination, or when there is an obstacle in the path of signal transmission.

CHAPTER 2: ADJUSTING THE SETTINGS

2.1 Settings Menu

#	Menu Navigation	Operation
1	Display the Setting menu.	Select the  button on the menu.
2	Enters the submenu.	1 Press the ↑ or ↓ button to select the main menu item. 2 Press the or OK button to enter the submenu. 3 Press the ↑ or ↓ button to select the submenu item. 4 Press the OK button to enter the adjustment mode.
3	Adjusts the settings.	
4	Closes the Settings menu.	Press < button or the right button on the mouse to exit the Settings menu.

2.1.1 Settings Menu Tree

Main Menu	Submenu	Remarks
1. Network and Internet	• Wi-Fi • Ethernet • Hotspot & Tethering • Data Saver • VPN • Private DNS	See page 11.
2. Connected Devices	• Bluetooth	See page 12.
3. Apps & Notifications	• App Info • Default Apps • Permission Manager	See page 12.
4. Display	• Brightness • Adaptive Brightness • Screen Rotation • Wallpaper • Font Size • Screen Timeout • HDMI • Hide Status Bar • Hide Navigation Bar	See page 13.
5. Sound	• Media Volume • Click Sound	See page 14.

ADJUSTING THE SETTINGS

Main Menu	Submenu	Remarks
6. Storage	• Manage Storage	See page 14.
7. Memory	• Manage Memory	See page 14.
8. Privacy	• Password Setting	See page 15.
9. Location	• App Access to Location • WLAN & Bluetooth Scanning	See page 15.
10. Screenshot	• Delayed Screenshot Settings • Show Screenshot Button in Status Bar	See page 16.
11. System	• Language & Input • Date & Time • Power Management • Reset Options • Anti-Burn-In	See page 16.
12. About Device	• Device Name • Legal Information • Model • Android Version • System Resolution & Refresh Rate • IP Address • Wi-Fi MAC Address • Device Wi-Fi MAC Address • Bluetooth Address • Uptime • Firmware Version • Monitor ID	See page 18.

ADJUSTING THE SETTINGS

2.2 Configuring the Settings

2.2.1 Network and Internet

Item	Function	Operation	Range
Wi-Fi	Wi-Fi Switch: Enable or disable Wi-Fi. Available Networks: View and connect to available Wi-Fi networks.	- Switch  to turn on/off the Wi-Fi - Search available networks from the device	On/Off
	Saved Networks: Manage saved Wi-Fi networks. Wi-Fi Preferences: Configure Wi-Fi preferences, such as auto-connect and network notifications	- Press the ↑ or ↓ button to select the setting. - Press the OK button to confirm.	N/A
Ethernet	View network IP address, subnet mask, gateway, domain name, IP mode, etc.	- Press the ↑ or ↓ button to select the setting. - Press the OK button to confirm.	- IP address - Netmask - Gateway - DNS1 - DNS2 - Ethernet IP mode
Hotspot & Tethering	Wi-Fi Hotspot: Turn on/off Wi-Fi hotspot, set hotspot name and password, automatically turn off hotspot when no devices are connected, security, QR code.	- Switch  to turn on/off the Wi-Fi hotspot - Press the ↑ or ↓ button to select the setting. - Press the OK button to confirm.	On/Off - Hotspot name - Security - Hotspot password - Turn off hotspot automatically
	Bluetooth Tethering: Share mobile internet via Bluetooth. Ethernet Tethering: Share mobile internet via Ethernet.	Switch  to turn on/off the Bluetooth tethering and ethernet tethering	On/Off
VPN	Add VPN: Add new VPN configurations. VPN List: Manage configured VPNs.	Press + to add VPN profile	N/A
Private DNS	Allow users to use encrypted DNS queries.	- Press the ↑ or ↓ button to select the setting. - Press the OK button to confirm.	Off/Automatic/Private DNS provider hostname

ADJUSTING THE SETTINGS

2.2.2 Connected Devices

Item	Function	Operation	Range
Bluetooth	Pair new device: View and connect to available Bluetooth devices. 	Select "Pair new device" to check the available device for pairing	N/A
	Connection preferences: Enable or disable Bluetooth, casting, printing, receiving files via Bluetooth.	1 Press the ↑ or ↓ button to select the setting. 2 Press the OK button to confirm.	N/A


2.2.3 Apps & Notifications

Item	Function	Operation	Range
App Info	Check the information for each app in device.	1 Press the ↑ or ↓ button to select the app. 2 Press the OK button to get the information of the app.	- Notification Management - Permissions - Storage & cache - Mobile data & Wi-Fi - Open by default - Display over other apps - Modify system settings - Install unknown apps - Screen time - Force stop - Disable
Default App	Browser app: Set default browser app. Home app: Set default home app. Home settings: access notification dots and select whether to add app icons to home screen.	1 Press the ↑ or ↓ button to select the app. 2 Press the OK button to confirm.	N/A


ADJUSTING THE SETTINGS

Item	Function	Operation	Range
Permission Manager	Manage the permission of each app in the device	1 Press the ↑ or ↓ button to select the app. 2 Press the OK button to confirm.	• Calendar • Location • Files and media • Microphone

2.2.4 Display

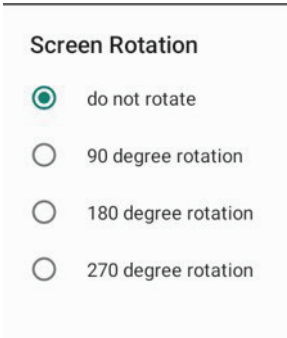Item	Function	Operation	Range
Brightness	Adjust the brightness of the screen.	1 Press the OK button to turn on the slide bar  2 Press ← or → button to adjust the brightness	0~100%
Adaptive Brightness	Enable adaptive brightness to allow the screen to automatically adjust its brightness based on your environment and activities.	Switch  to turn on the adaptive brightness for the screen.	On/Off
Screen Rotation	Rotate the screen into the display orientation	1 Press the ↑ or ↓ button to select.  2 Press the OK button to confirm.	• Do not rotate • 90 degree rotation • 180 degree rotation • 270 degree rotation
Wallpaper	Choose wallpaper source and set wallpaper.	1 Press the ↑ or ↓ button to select the source. 2 Press the OK button to confirm.	• Gallery • Live Wallpapers • Wallpapers
Font Size	Adjust system font and interface element scaling.	Move the slide bar to adjust the font size. 	N/A

ADJUSTING THE SETTINGS

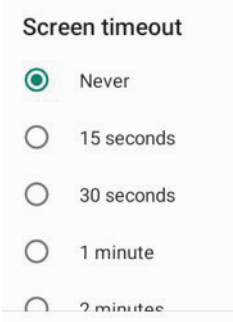Item	Function	Operation	Range
Screen Timeout	Set the screen auto-sleep time.	1 Press the ↑ or ↓ button to select.  2 Press the OK button to confirm.	• Never • 15 seconds • 30 seconds • 1 minute • 2 minutes • 5 minutes • 10 minutes • 30 minutes
HDMI	Select the resolution and screen zoom level for the HDMI output.	1 Press the ↑ or ↓ button to select. 2 Press the OK button to confirm.	N/A
Hide Status Bar	Hide the status bar at the top of the screen	Switch  to hide the status bar.	On/Off
Hide Navigation Bar	Hide the navigation bar at the bottom of the screen	Switch  to hide the navigation bar.	On/Off

2.2.5 Sound

Item	Function	Operation	Range
Media Volume	Adjust the media volume for the display	Move the slide bar to adjust the media volume 	0~100
Click Sound	Choose whether to enable click sound effects.	Switch  to turn on the click sound.	On/Off

2.2.6 Storage

View used/free space, clear cache, large files and manage the current storage of the device.

ADJUSTING THE SETTINGS

2.2.7 Memory

View total capacity, average usage, available capacity, performance memory usage by apps.

2.2.8 Privacy

Item	Function	Operation	Range
Password	Show password Briefly display characters when typing.	Switch  to display characters while you type the password.	On/Off

2.2.9 Location


Item	Function	Operation	Range
App access to location	Show the apps that have the permission to access the device's location.	1 Press the ↑ or ↓ button to select. 2 Press the OK button to confirm.	N/A
Wi-Fi and Bluetooth scanning	• Wi-Fi scanning: allow apps and services to scan for Wi-Fi networks at any time. • Bluetooth scanning: Allow apps and services to scan for nearby devices at any time.	Switch  to access the scanning from Wi-Fi or Bluetooth	N/A

ADJUSTING THE SETTINGS



2.2.10 Screenshot

Item	Function	Operation	Range
Delayed Screenshot Settings	Set how many seconds before taking a screenshot.	1 Press the ↑ or ↓ button to select. 2 Press the OK button to confirm.	• No delay • 15 seconds later • 30 seconds later • 1 minute later • 2 minute later • 3 minute later • 4 minute later • 5 minute later
Show Screenshot Button in Status Bar	Show Screenshot Button in Status Bar	Switch  to show screenshot button in status bar	On/Off

 
2.2.11 System

Item	Function	Operation	Range
Languages & Input	• Language: change system language.	1 Press the OK button to enter. 2 Add a language from the language list  3 Move the language to the top as the default language	English (default) and other Android's native system language.
	• On-Screen Keyboard: Manage on-screen keyboards: Google Pinyin Input, Android Keyboard.	1 Press the OK button to enter. 2 Select the on-screen keyboards by switching  on.	• Android Keyboard (AOSP) • 谷歌拼音输入法
	Physical Keyboard • Use On-Screen Keyboard: keep it on screen while physical keyboard is active. • Keyboard shortcuts: display available shortcuts for keyboard.	Switch  to enable the on-screen keyboard	On/Off

ADJUSTING THE SETTINGS

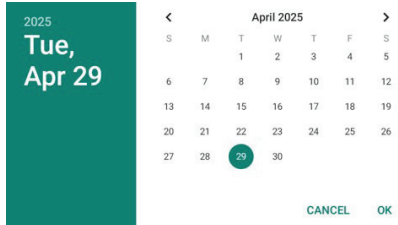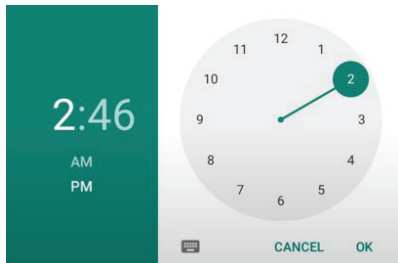Item	Function	Operation	Range
Date & Time	Date: set the date for the device	1 Press the navigation button to select the date. 2 Press OK button to confirm. 	Date Menu
	Time: set the time for the device	1 Press the navigation button to select the date. 2 Press OK button to confirm. 	Clock Menu
	Use 24-Hour format: Enable or disable to use 24-hour format	Switch  to enable the 24-hour format for timer.	On/Off
Reset Options	Reset Wi-Fi, mobile & Bluetooth: this will reset all network settings, including: wifi, mobile data, Bluetooth.	Press OK button to confirm and reset the settings.	N/A
	Reset app preferences: this will reset all preferences for disabled apps, disabled app notifications, default applications for actions, background data restrictions for apps, any permission restrictions. You will not lose any app data.	Press OK button to confirm and reset the settings.	N/A
	Erase all data (factory reset): this will erase all data from your device's internal storage.	Press OK button to confirm and reset the settings.	N/A

ADJUSTING THE SETTINGS

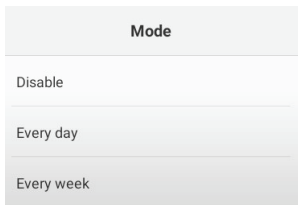Item	Function	Operation	Range
Power Management	Timer switch: Control boot time and shutdown time for the display.	1 Select the mode.  2 Set the time for booting and shutting down the device. 3 Click “Add group” to add another timeslot for booting and shutting down the device. 4 Click “Save” to enable the scheduling.	N/A
	Screen On/Off: Control screen on and off time for the display (only turn on/off the backlight)	1 Click “Add” to set the schedule for screen on and off. 2 Type in Start time and End time. (The format is hh:mm:ss) 3 Click “Save” to enable the scheduling.	N/A
Anti-Burn-In	Enable the function of Anti-Burn-In for the LCD display to slightly expand the image size and shifts the position of pixels in four directions (up, down, left, and right). *Note: While enable Anti-Burn-In, the function will be executed every two hours.	Switch  to enable.	On/Off

ADJUSTING THE SETTINGS

2.2.12 About Device

View this LCD display's information:


- Device Name
- Legal Information
- Model
- Android Version
- System Resolution & Refresh Rate
- IP Address
- Wi-Fi MAC Address
- Device Wi-Fi MAC Address
- Bluetooth Address
- Uptime
- Firmware Version
- Monitor ID

Item	Function	Operation	Range
Device Name	Show the device name of the device. You can change the name on your own.	1 Press OK button to enter. 2 Use the keyboard to change the device name.	N/A
Monitor ID	Show the monitor ID of the device. You can change the ID on your own.	1 Press OK button to enter. 2 Use the keyboard to change the monitor ID.	1~255

CHAPTER 3: MULTIMEDIA MENU

3.1 Explorer


3.1.1 Explorer menu

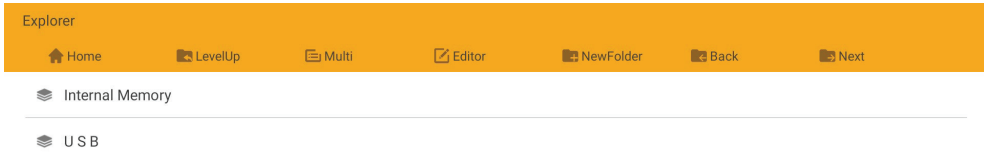


Item	Function
Home	Go back to the front page of Explorer.
LevelUp	Go back to the upper file.
Multi	Select multiple file by clicking Multi.
Editor	Edit the file with functions include copy, delete, move, paste, rename, send, and create shortcut.
NewFolder	Add a new folder to the exiting file.
Back	Go back to the previous folder.
Next	Go to the next folder.

3.1.2 Edit the file

If you want to move a file, click [Multi-Select], select the file to be moved, the file name of the selected file will turn yellow, and then click [Edit].

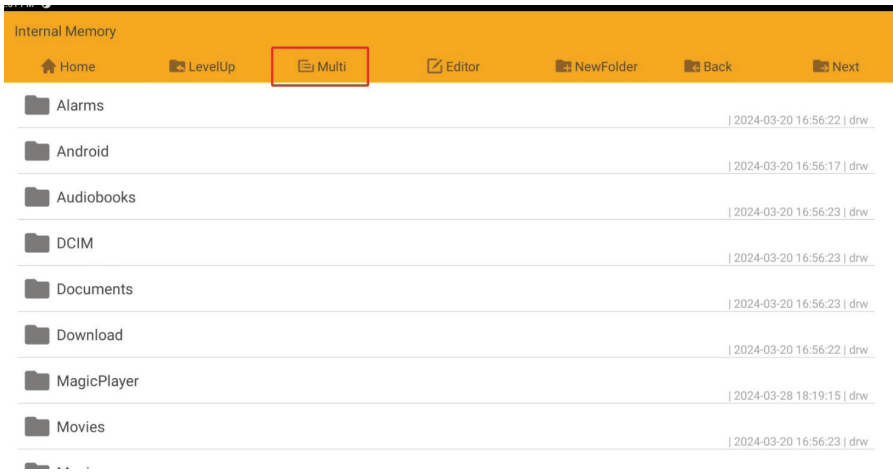


Click [Edit] after the pop-up dialog box, click [Move], and then move the selected file to the specified location. You can also copy, delete, past, and rename etc. the file by clicking [Edit].

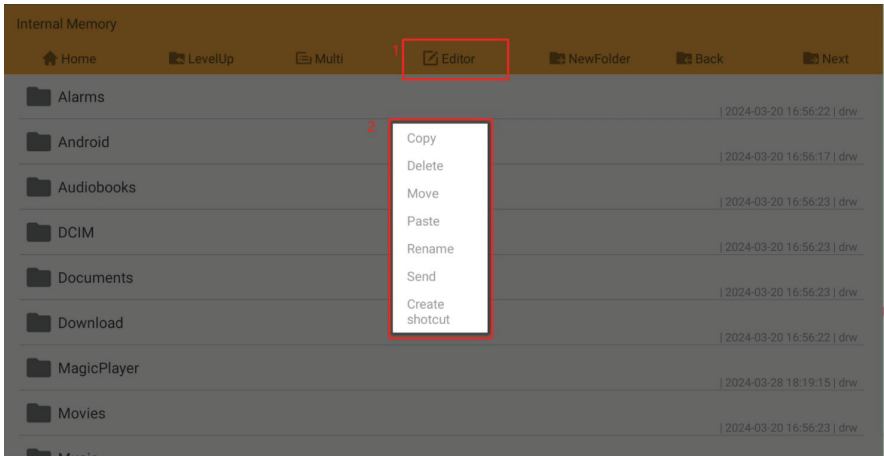


MULTIMEDIA MENU

3.2 Video

You can play the video from the internal memory or USB file. Select the specific video and click on it or press **OK** button on it from the remote controller.

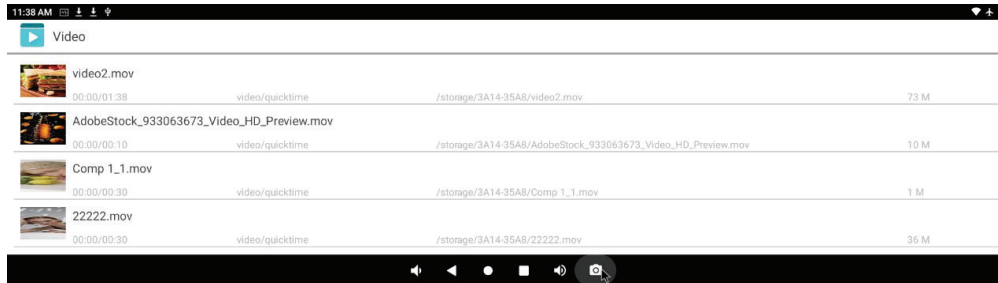


While playing the video, press **...** button at the bottom of the screen to do more setting for the video.

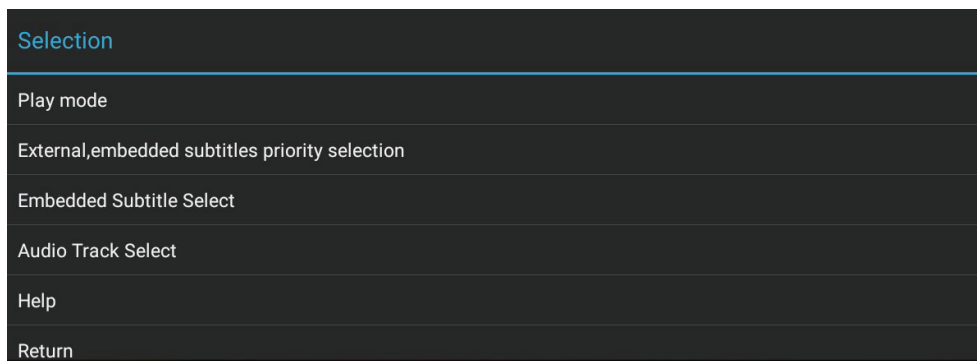

Item	Function
Play mode	Select the play mode for video to play the video once, repeat, or repeat playing all videos in the file.
External, embedded subtitles priority selection	No function
Embedded subtitle select	No function
Audio track select	No function
Help	Learn more about the function button at the bottom of the screen.
Return	Close the setting.


When you enter [Help], you can find more information about each button function at the bottom of the screen.

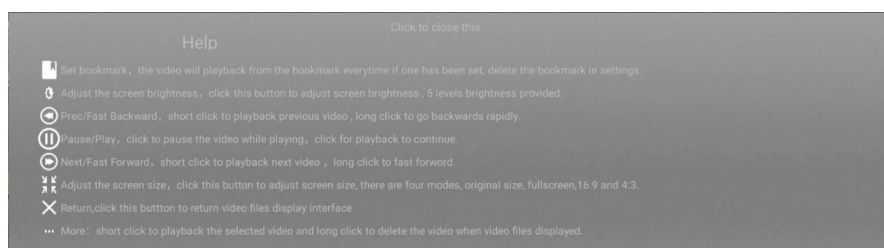

MULTIMEDIA MENU

3.3 Partner App Zone


You can download and install our software partners' CMS from Partner App Zone. While enter Partner App Zone, you can find multiple selection of CMS. Select one of them and install it to the device, you can start your content management by the functional CMS software.

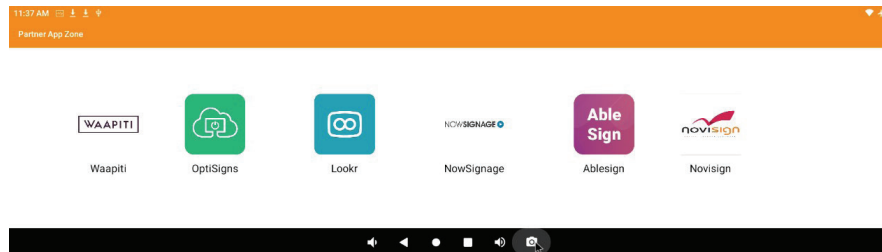

3.4 Software Uninstallation & Installation

3.4.1 Uninstallation

Long-press the program icon with the left mouse button, then drag it to [uninstall] to uninstall the app.

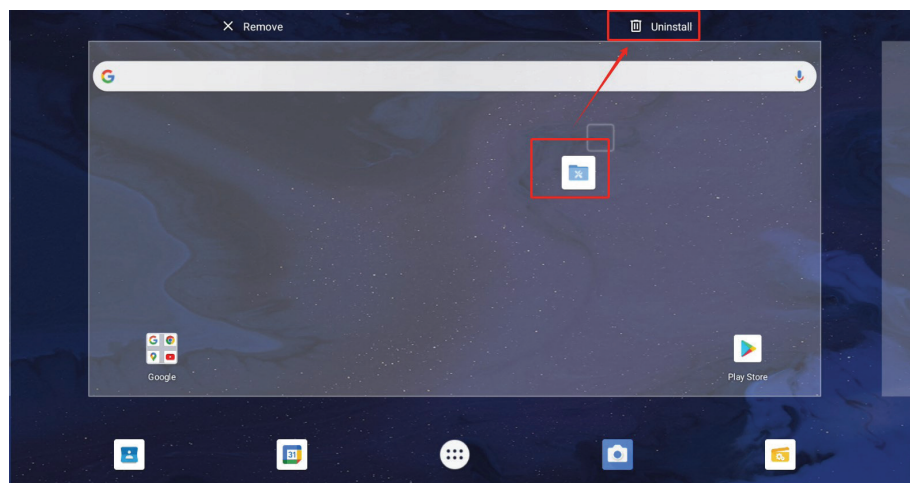

3.4.2 Installation

Click [Explorer ], select the file with APK extension to install.




CHAPTER 4: USB UPGRADE SOP


4.1 Upgrade the firmware

Step1: Name the upgrade file “**update.zip**”, put it in the root directory of the USB drive.

(Note: the format of the USB drive should be “FAT/FAT32”)

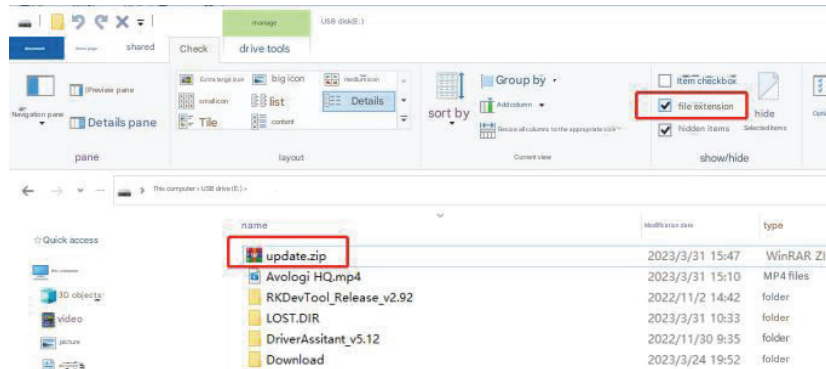

Step2: Plug the USB drive into the device. After plugging, the system will prompt whether to update after recognition. Click “**install**”, the system will automatically reboot after the update, the whole upgrade process is about 2-4 minutes.

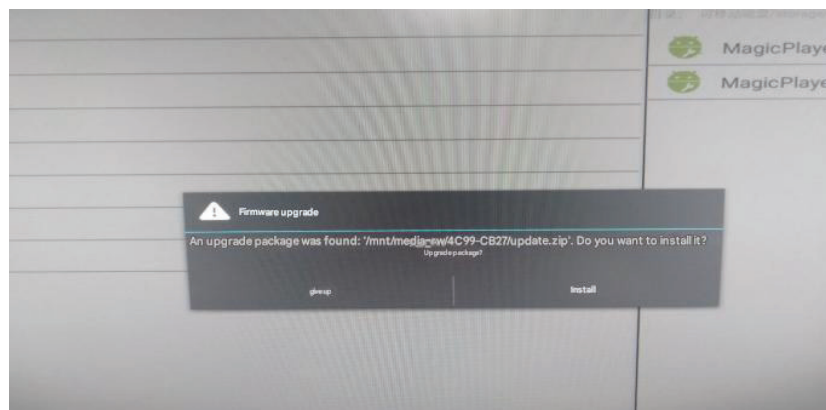

CHAPTER 5: APPENDIX

5.1 Cleaning

Caution When Using the Display

- Do not bring your hands, face or objects close to the ventilation holes of the display. The top of the display is usually very hot due to the high temperature of exhaust air being released through the ventilation holes. Burns or personal injuries may occur if any body parts are brought too close. Placing any object near the top of the display could also result in heat related damage to the object as well as the display itself.
- Be sure to disconnect all cables before moving the display. Moving the display with its cables attached may damage the cables and thus cause fire or electric shock.
- Disconnect the power plug from the wall outlet as a safety precaution before carrying out any type of cleaning or maintenance procedure.

Front Panel Cleaning Instructions

- The front of the display has been specially treated. Wipe the surface gently using only a cleaning cloth or a soft, lint-free cloth.
- If the surface becomes dirty, soak a soft, lint-free cloth in a mild detergent solution. Wring the cloth to remove excess liquid. Wipe the surface of the display to remove dirt. Then use a dry cloth of the same type to dry.
- Do not scratch or hit the surface of the panel with fingers or hard objects of any kind.
- Do not use volatile substances such as insect sprays, solvents and thinners.

Cabinet Cleaning Instructions

- If the cabinet becomes dirty, wipe the cabinet with a soft, dry cloth.
- If the cabinet is extremely dirty, soak a lint-free cloth in a mild detergent solution. Wring the cloth to remove as much moisture as possible. Wipe the cabinet. Use another dry cloth to wipe over until the surface is dry.
- Do not allow any water or detergent to come into contact with the surface of the display. If water or moisture gets inside the unit, operating problems, electrical and shock hazards may result.
- Do not scratch or hit the cabinet with fingers or hard objects of any kind.
- Do not use volatile substances such as insect sprays, solvents and thinners on the cabinet.
- Do not place anything made from rubber or PVC near the cabinet for any extended periods of time.

APPENDIX

5.2 Troubleshooting

Follow the solutions below to solve these common problems, and contact us if the problem persists.

Symptom	Possible Cause	Remedy
The Power indicator does not come on	• The monitor is not powered on.	• Check if the power cord is connected, and switch ON the monitor.
The Power indicator is on, but no image is displayed	• The Video wire is detached or connected improperly. • No video signal input.	• Connect or replace the video wire, and ensure proper and correct connection. • Check the signal source, and check if it is properly connected at the output end.
Image jerking or ripple	• There exists an electric device that interferes with the video signals.	• Turn off the electric device, or relocate the monitor.
Dim or extremely bright screen	• Low or high brightness/contrast.	• Check the brightness/contrast settings, or restore to default settings.
Colour difference	• Improper chromatic saturation. • Improper RGB values or colour temperature.	• Check the chromatic saturation. • Adjust the RGB values or reset the colour temperature. • Restore to default settings.
Image distortion	• Improper aspect ratio.	• Reset the aspect ratio.

CHAPTER 6: SPECIFICATIONS

6.1 Display Specifications


PB3701A		
Panel	Panel Type	LED-Backlit TFT LCD (IPS Technology)
	Panel Size	37"
	Max. Resolution	1920 x 540
	Pixel Pitch	0.469mm
	Brightness	700 cd/m ²
	Contrast Ratio	1000:1
	Viewing Angle (H/V)	178°/178°
	Display Colour	16.7M
	Response Time	5 ms
	Surface Treatment	Anti-Glare Treatment (Haze 25%), 3H Hard Coating
Frequency (H/V)	H Freq.	30 kHz - 81 kHz
	V Freq.	56 Hz - 76Hz
Output	HDMI	x 1
External Control	LAN	RJ45 x 1
	IR In	Stereo Audio Jack (3.5mm)
Wireless	Wi-Fi/Bluetooth	2.4G Wi-Fi 802.11b/g/n, BT 4.2
Embedded Player	OS	Android 11
	CPU	RK3566
	Memory	2G
	USB	32G
Other connectivity	USB	2.0 x 1 (Service Port) 2.0 x 1(Media Playback) 3.0 x 1(Media Playback)
	Micro SD Card Slot	Yes
	Audio Out	Stereo Audio Jack (3.5 mm)
	Internal Speakers	5W x 2
Power	Power Supply	Internal
	Power Requirements	AC 100-240V, 50/60 Hz
	On Mode	35W(On)
	Standby Mode	< 0.5W
	Off Mode	0W
Operating Conditions	Temperature	0°C-40°C (32°F-104°F)
	Humidity	10%-90% (non-condensing)
Storage Conditions	Temperature	-20°C-60°C (-4°F-140°F)
	Humidity	5%-95% (non-condensing)
Mounting	VESA FPMPI	Yes (400 x 200 & 200 x200 mm)
Dimensions	Bezel Width	11.9 mm (Top/Bottom) 5.6 mm (Left/Right)
	Product w/o Base (W x H x D)	914.9 x 280.9 x 48.8 mm (36.0" x 11.0" x 1.9")
	Packaging (W x H x D)	1000.0 x 380.0 x 115.0 mm (39.3" x 14.9" x 4.5")
Weight	Product w/o Base	7.2 kg (15.9 lb)
	Packaging	9.6 kg (21.2lb)

Note:

♦ All specifications are subject to change without prior notice.

SPECIFICATIONS

4.2 Display Dimensions

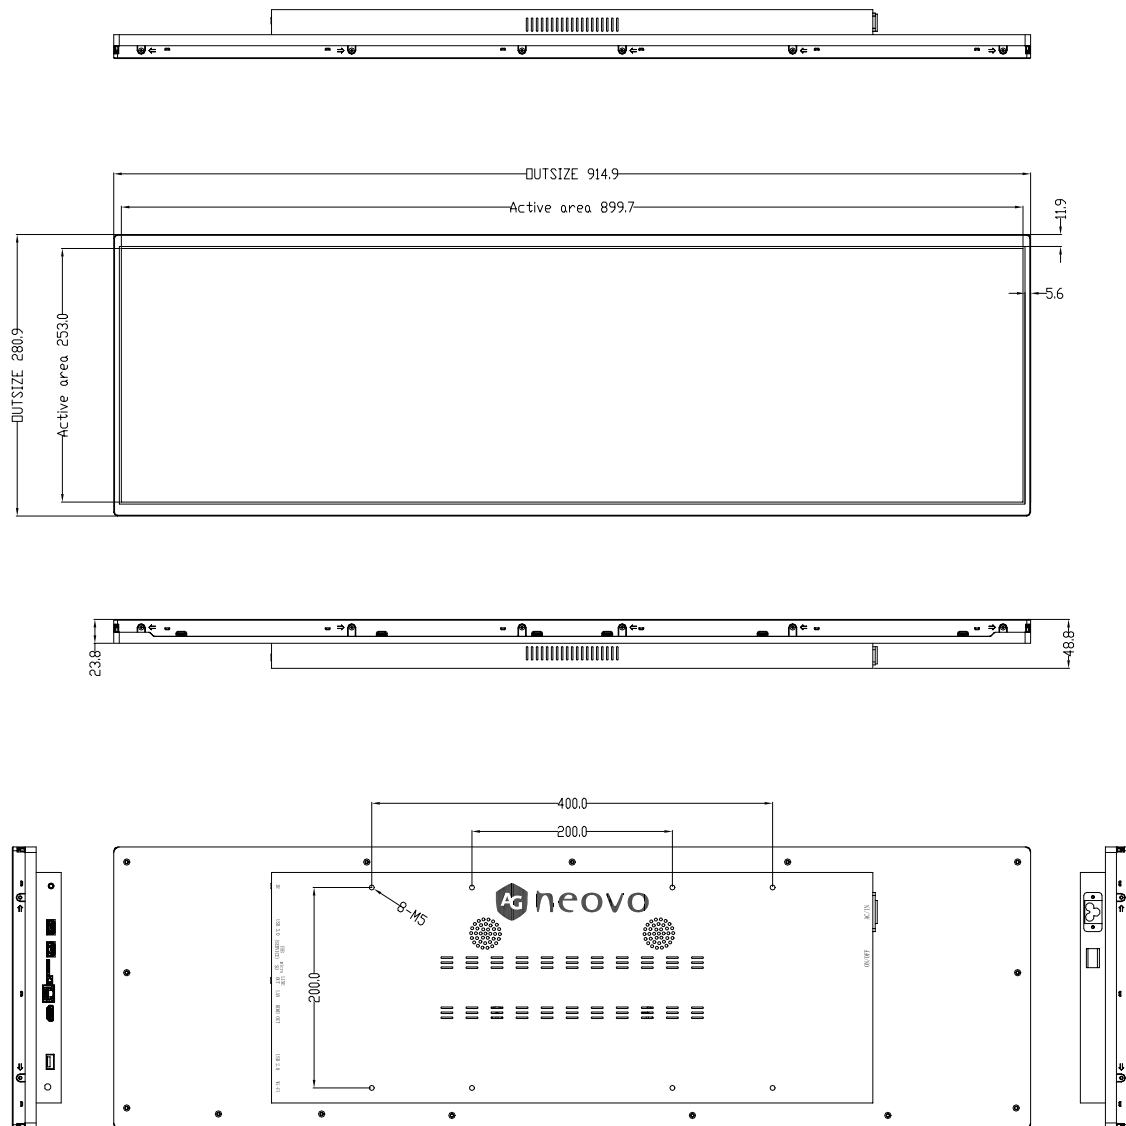

AG Neovo

Company Address: 5F-1, No. 3-1, Park Street, Nangang District, Taipei, 11503, Taiwan.

Copyright © 2025 AG Neovo. All rights reserved.

PB3701A Eprel registration number: 2278811

PB3A10_UM_V010