 


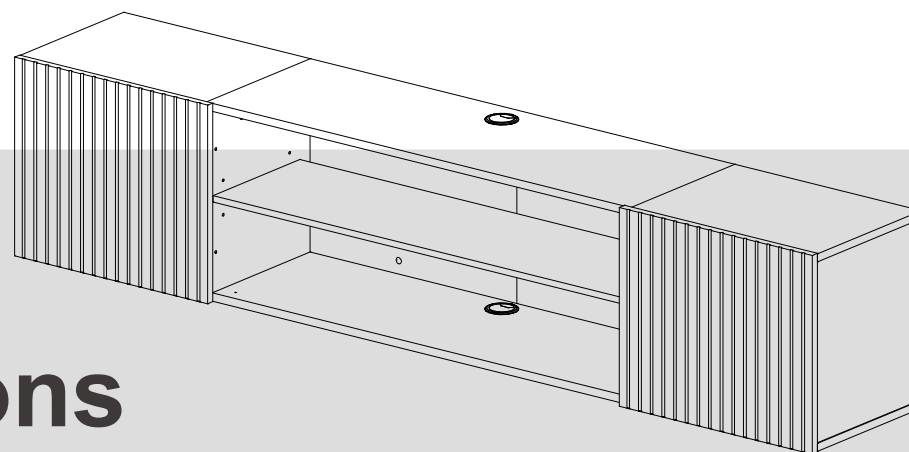

Assembly Instructions

MODEL **W15A1184B**

IMPORTANT: please read this manual carefully before beginning assembly of this product. keep this manual for future reference.

1

★ Thank you for choosing our products please read the instructions carefully before installation, and please keep the instructions properly

Tips and tricks

1. Do not attempt to move this furniture without first removing all equipment
2. Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over onto the child.
3. Please contact us using the details shown for further advice

⚠ **WARNING** If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

2

★ ¡Gracias por elegir nuestros productos, por favor lea las instrucciones cuidadosamente antes de la instalación, y guárdelas correctamente!

Consejos y trucos

1. Si no quita todos los equipos en el primer lugar, no intente mover este mueble
2. Cuando los niños suben a los muebles con el equipo de audio y / o video, la muerte o las lesiones graves podrían ocurrir. El control remoto o los juguetes colocados en el mueble pueden estimar a un niño a subir en él y el mueble podría volcarse sobre el niño.
3. Póngase en contacto con nosotros utilizando los detalles mostrados para obtener más sugerencias.

⚠ **ADVERTENCIA** Si las piezas faltan o están dañadas, no devuelva el producto dañado a su distribuidor; póngase en contacto con los Servicios al Cliente. ¡Nunca utilice las piezas dañadas!

3

★ Vielen Dank für Ihre Auswahl für unsere Produkte, lesen Sie bitte die Anweisungen sorgfältig vor Ihrer Installation und halten Sie bitte die Anweisungen richtig!

Tips and tricks

1. Versuchen Sie bitte nicht, diese Möbel zu bewegen, ohne zuerst alle Geräte zu entfernen
2. Wenn die Kinder auf Audio und / oder Videogerätemöbel klettern, kann Tod oder schwere Verletzungen kommen. Eine Fernbedienung oder Spielzeug kann die Kinder ermutigen, die auf die Einrichtung gestellt wird, sich auf die Einrichtung zu klettern. Dies bewirkt, dass die Möbel auf Ihre Kinder umfallen könnte.
3. Bitte kontaktieren Sie uns mit den Details für weitere Beratung

⚠ **WARNING** Wenn irgendwelche Teile fehlen oder beschädigt sind, geben Sie bitte den beschädigten Artikel nicht an Ihren Händler zurück; Kontaktieren Sie bitte mit dem Kundendienst. Verwenden Sie bitte niemals beschädigte Teile!

4

★ 弊社の製品を選んでくれてありがとうございます。インストールする前に説明書をご覧ください、それに当説明書を適切に保存してください。

提示と技巧

1. 設備を全て開かない場合、当設備を移動することはできません。
2. 子どもがステレオまたはビデオの設備の上に登ると、体を壊したり、ひどく傷ついたりする恐れがある。設備のリモコンと玩具によって、子どもが設備の上に登りたがっているかも知れないので、設備は子どもの身の上に倒れる危険がある。
3. 設備の使用に関する詳細な情報を弊社にご連絡してください。

⚠ **警告** どんな部品が紛失したり壊れたりする場合でも、そのままディーラーのところへ返送しないでください、顧客サービスセンターに連絡してください。壊れた部品を使用しないでください。

5

★ Nous vous remercions d'avoir sélectionné nos produits, lisez les instructions attentivement avant l'installation, et gardez les instructions correctement s'il vous plaît!

Conseils et astuces

1. Ne tentez pas de déplacer ce mobilier sans enlever tout l'équipement.
2. Des dégâts ou des blessures graves pourraient survenir lorsque les enfants grimpent sur des meubles audio et / ou vidéo. Une télécommande ou des jouets placés sur le meuble pourraient encourager un enfant à grimper sur le meuble, il en résulte que le meuble pourrait basculer sur l'enfant.
3. Contactez-nous en utilisant les détails affichés pour obtenir les conseils s'il vous plaît

⚠ **AVERTISSEMENT** S'il y a des pièces manquantes ou endommagées, ne renvoyez pas l'article endommagé à votre vendeur; Contactez le service clientèle. Ne jamais utiliser de pièces endommagées!

6

 
★ Grazie per aver scelto i nostri prodotti, si prega di leggere attentamente le istruzioni prima dell'installazione e rispettare le istruzioni corrette!

Suggerimenti e trucchi


1. Non tentare di spostare questo mobile senza prima rimuovere tutte le apparecchiature
2. Possono verificarsi morti o gravi lesioni quando i bambini salgono su mobili per arredamento audio e/o video. Un telecomando o i giocattoli messi sull'arredamento possono incoraggiare un bambino ad arrampicarsi sull'arredamento, e di conseguenza l'arredamento può piegarsi sul bambino.
3. Vi preghiamo di contattarci utilizzando i dettagli mostrati per ulteriori consigli

⚠ **AVVERTENZA:** Se mancano o sono danneggiate parti, non restituire l'elemento danneggiato al rivenditore; Contattare il Servizio Clienti. Non utilizzare mai parti danneggiate!

WHAT'S IN THE BOX

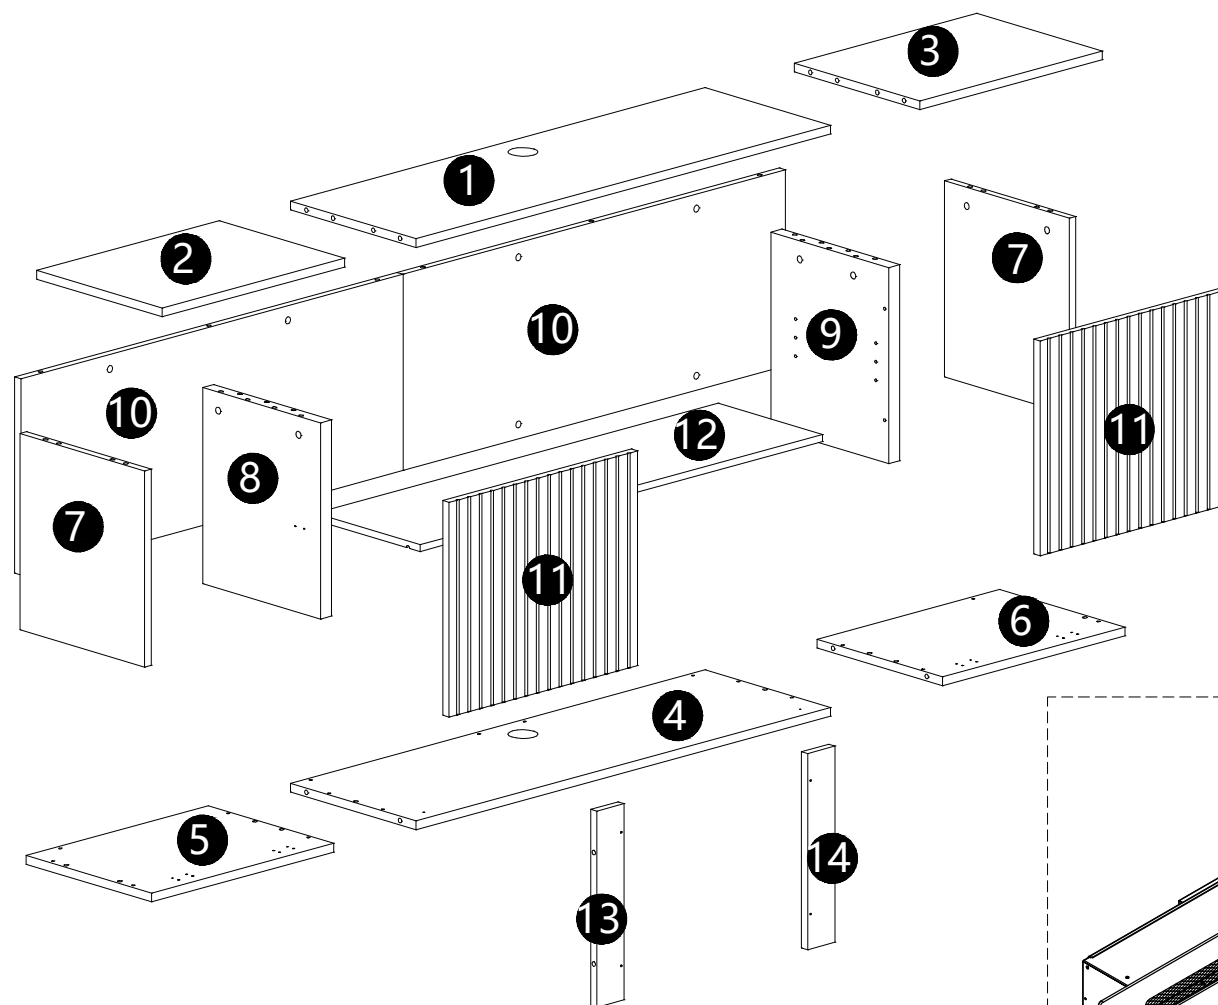


WHAT'S IN THE BOX

 

Cam bolt

 A x 28




Cam lock

B x 36




Wooden dowel

 C x 28



Cam bolt

 D x 4



Left support rod

E x 1



 
Screw

F x 32



Crash pad

G x 4




Right support rod

H x 1




Screw

 I x 8




Wire cap

 J x 2




Hinge

 K x 4




Screw

 L x 12



Horizontal bubble

 M x 1



Hexagon socket
key

N x 1



Shelf support pin

O x 4



L-iron

P x 4



Cover

Q x 18



S1

Cabinet hanger



S2



S3

S x 4

 


S4



S5

Anchor and screw

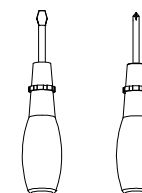

Tools Required
(Not included)

 
INSTALLATION STEPS

1

1a. Wood Stud Wall Mounting

Fit for 406mm(16") , 610 mm(24 ")stud


Tools Required
(Not included)




Stud Finder






 
Pencil

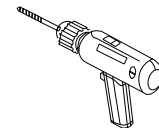


Drill Wood Drill Screw driver

 


Φ4mm (5/32")

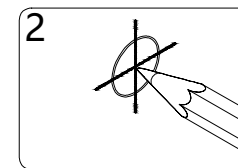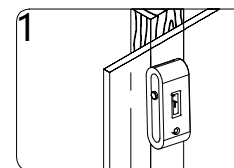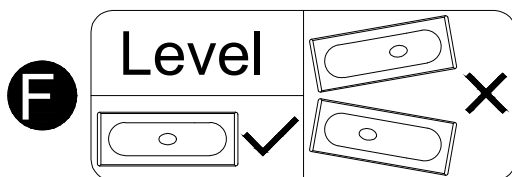    

 Find and mark the exact location of mounting holes



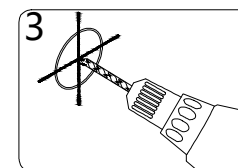


Drill pilot holes

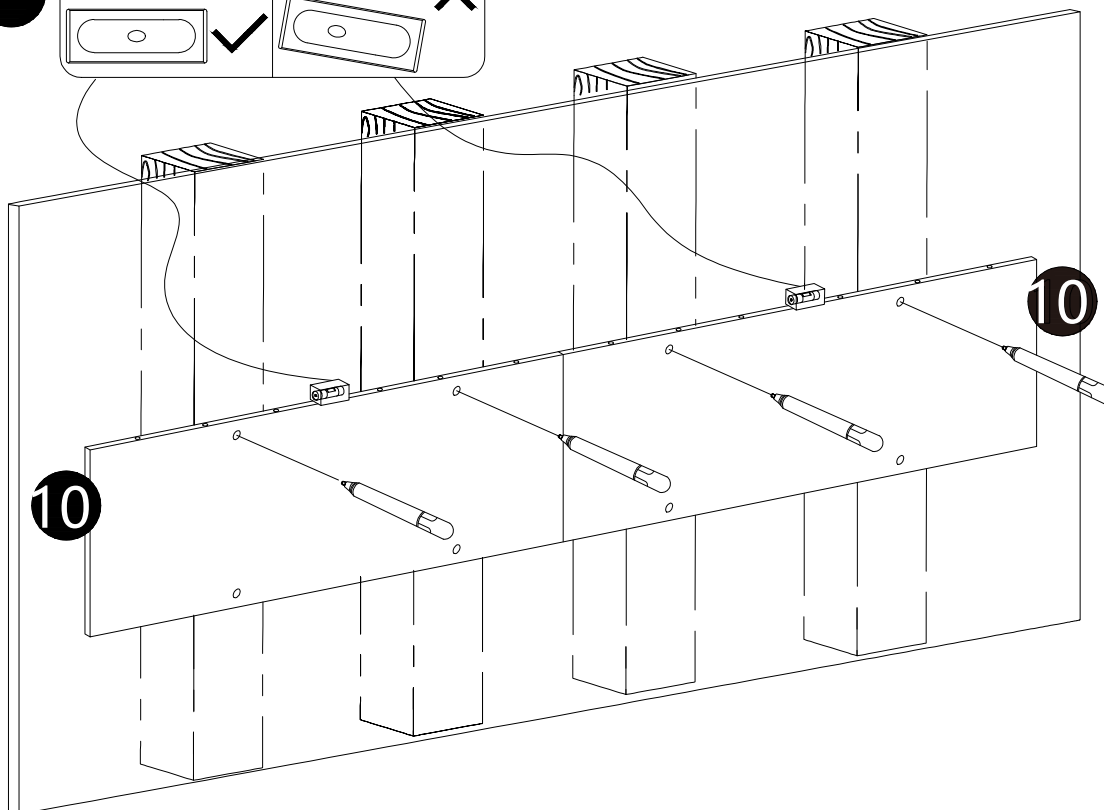 


1a. Wood Stud Wall Mounting

   Fit for 406mm(16") , 610 mm(24 ")stud

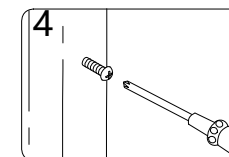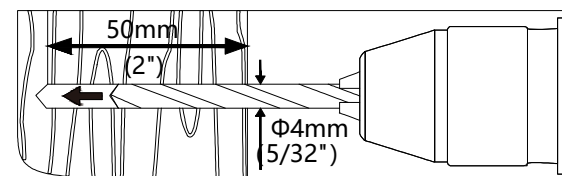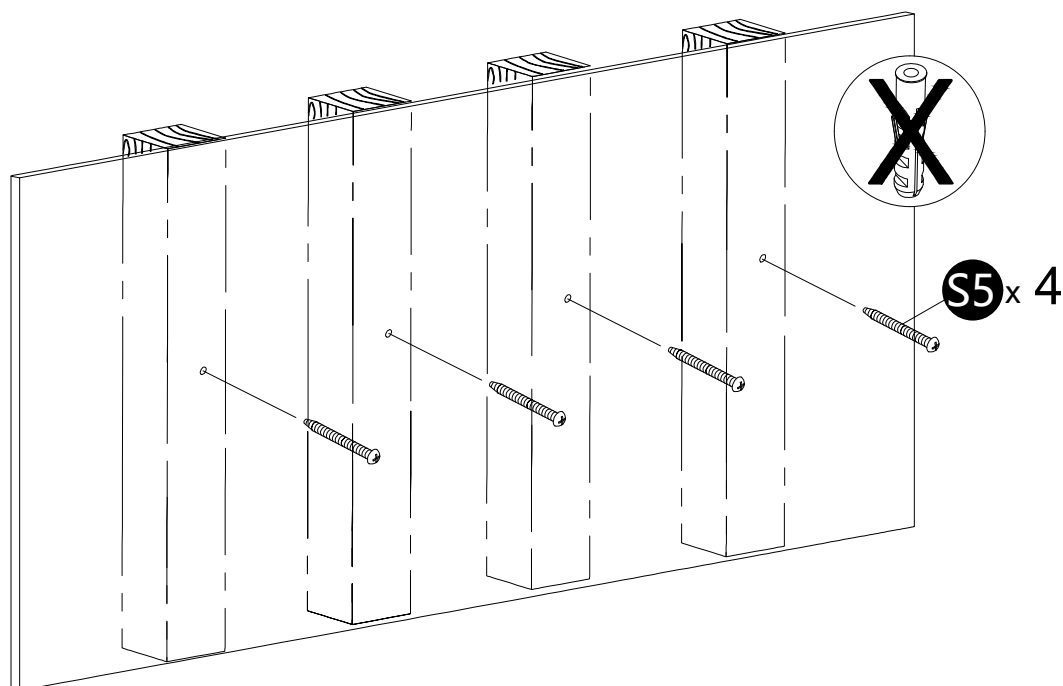

Screw **S5** on the wall

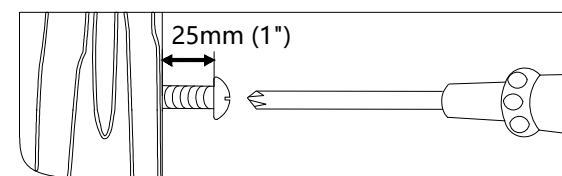 

WARNING

 
- Make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

1b . Solid Brick and Concrete Mounting


Tools Required
(Not included)




Pencil

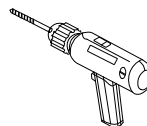


Drill

 



Φ11mm (7/16")
Wood Drill

 


Hammer

 


Screw driver

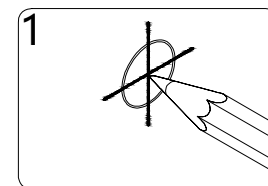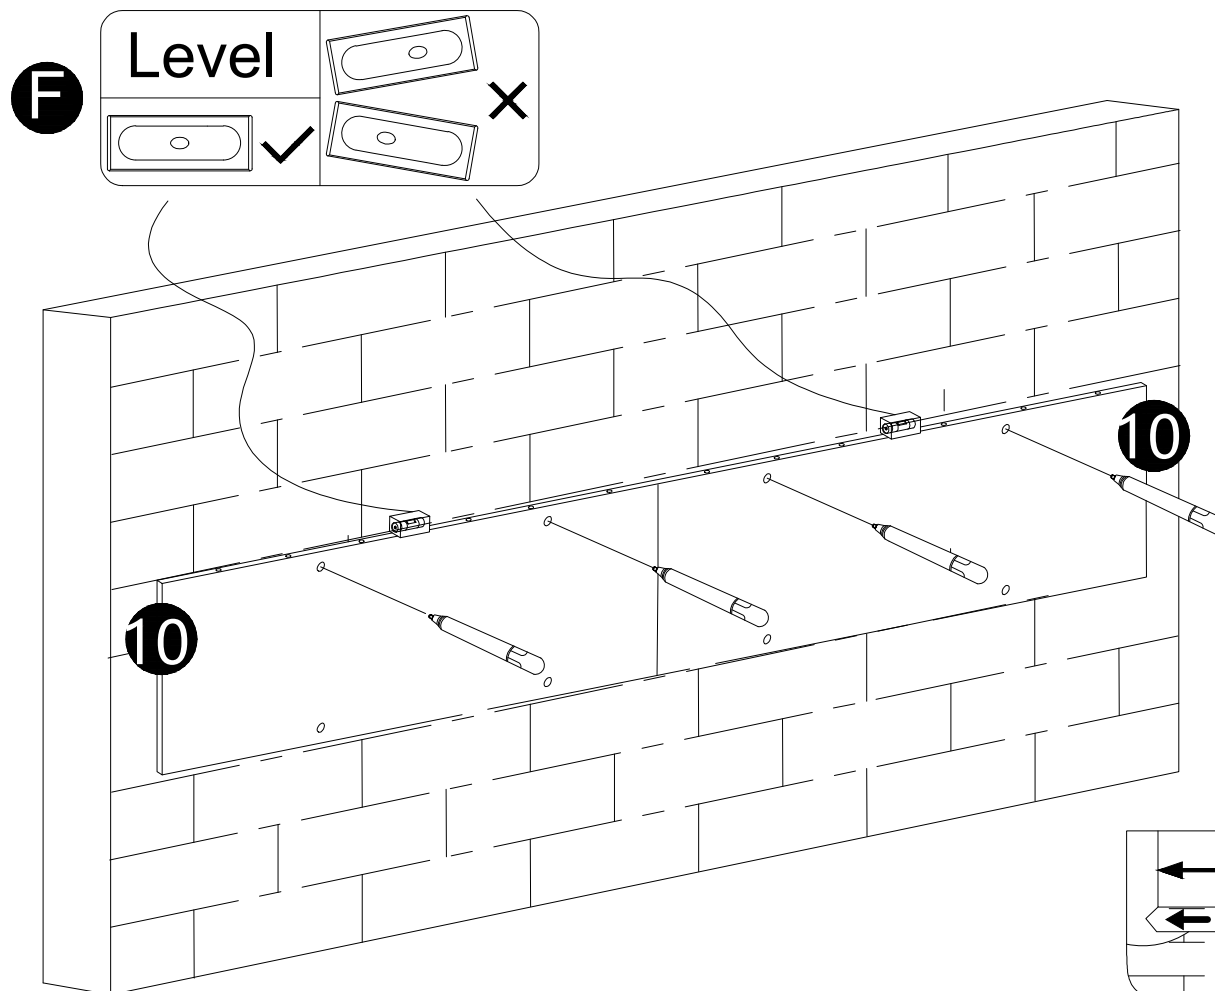  

 1
Mark the exact
location of
of mounting holes

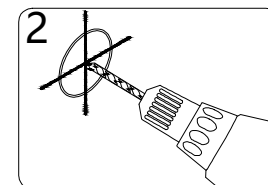





2
Drill pilot holes

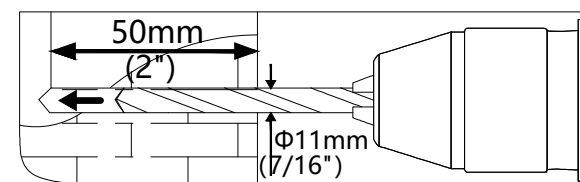 


INSTALLATION STEPS

4

    1b . Solid Brick and Concrete Mounting

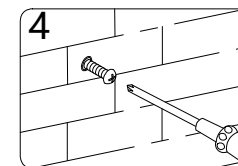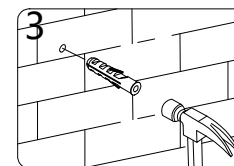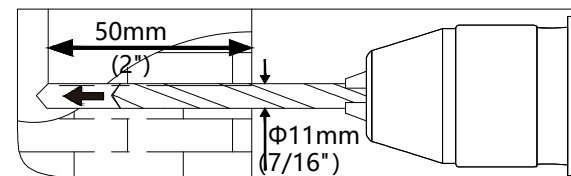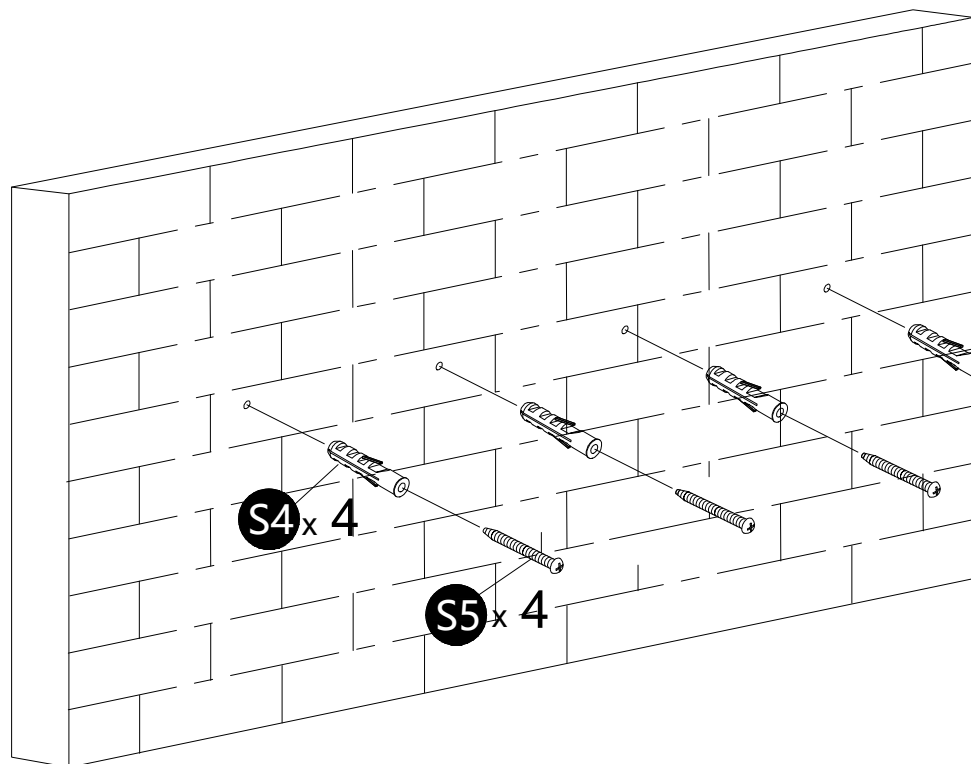

 Secure wall anchors
Screw **S5** on **S4** into
drilled holes the wall
with hammer

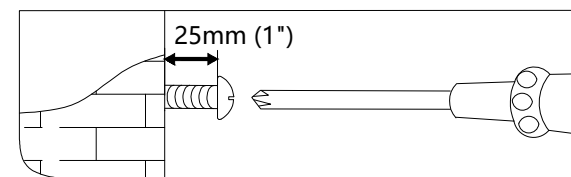


WARNING

- Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

5

 INSTALLATION STEPS

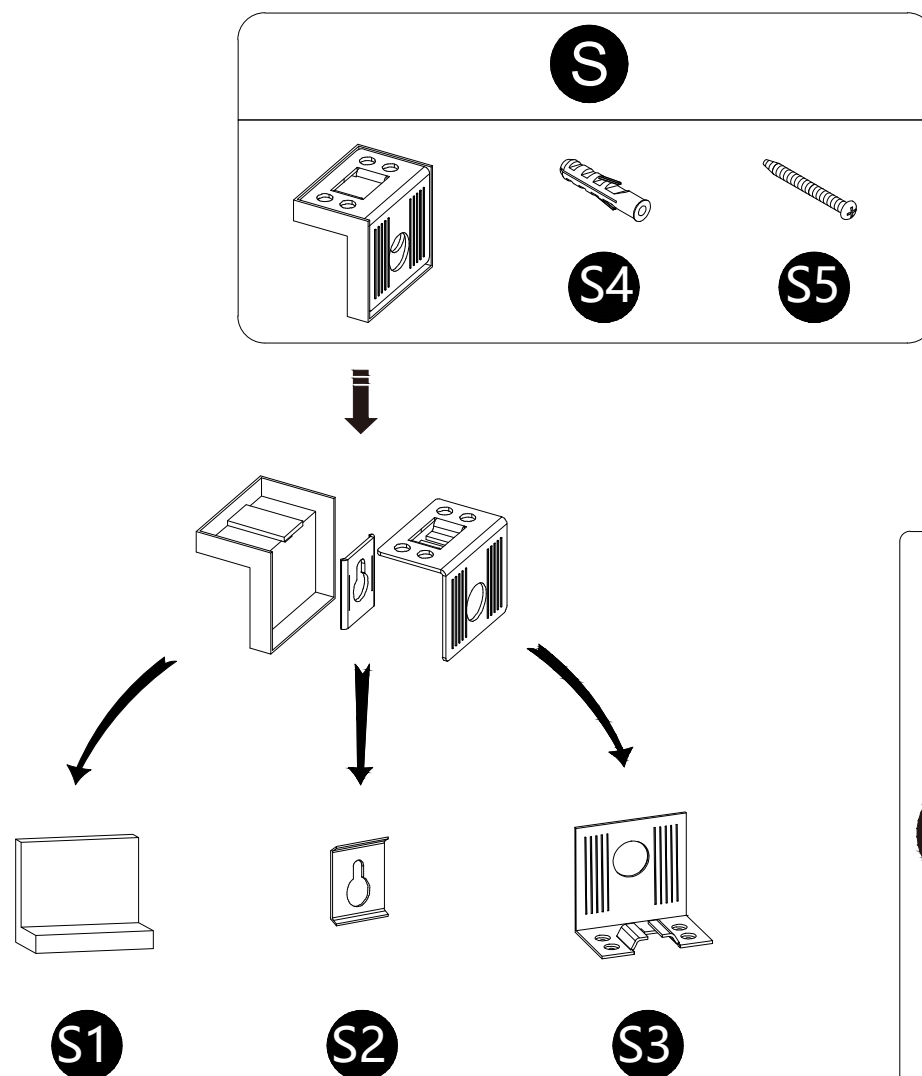


Tips:




Please disassemble the wall hanging accessories before hanging the product on the wall. To make sure you can use this product properly!!

INSTALLATION STEPS

 6



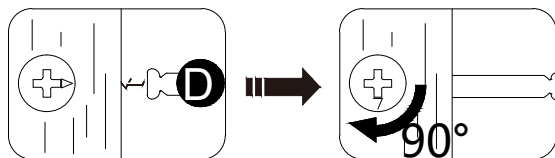


 - Insert dowels (C) into panels (1,4).
- Insert cam locks (B) to panels (1),
- then insert parts (D) into panels (1).
- Rotate the cam locks (B) 90 ° to secure the parts (D).

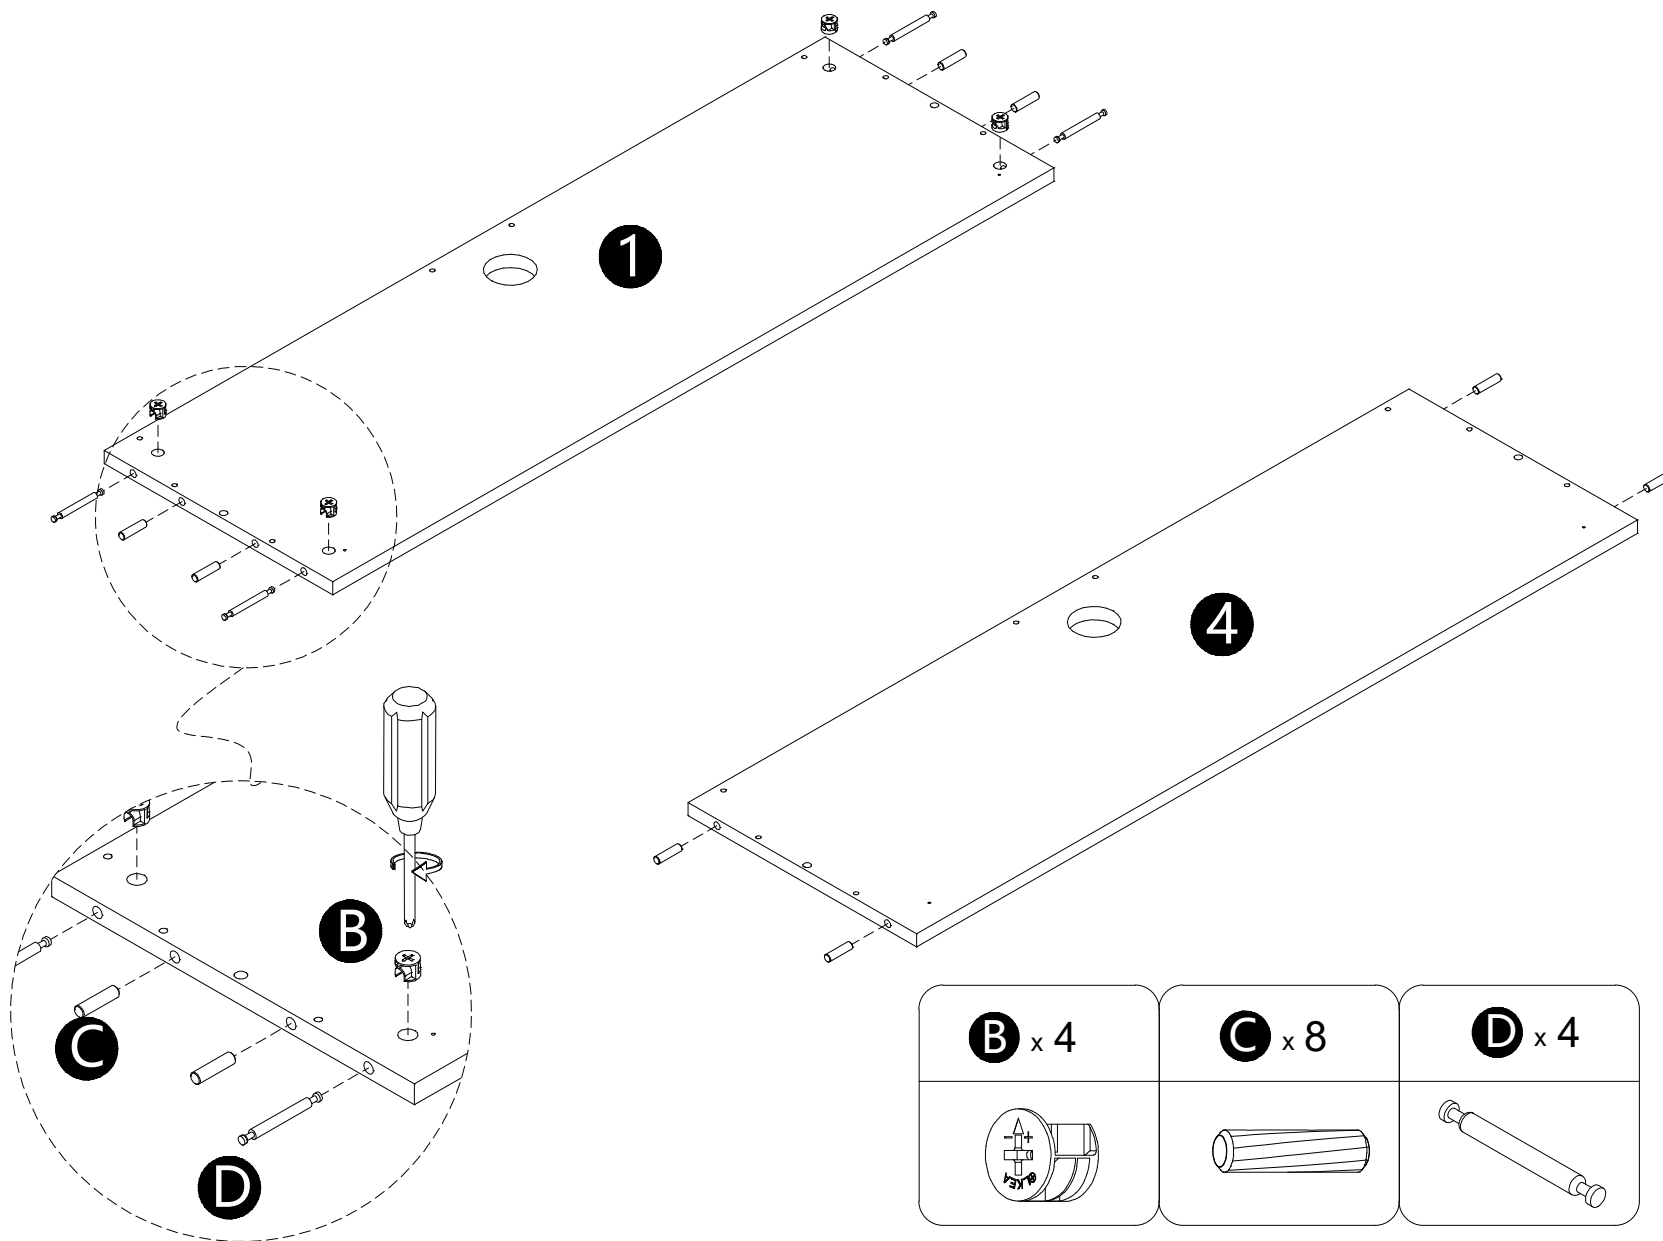


INSTALLATION STEPS

   7

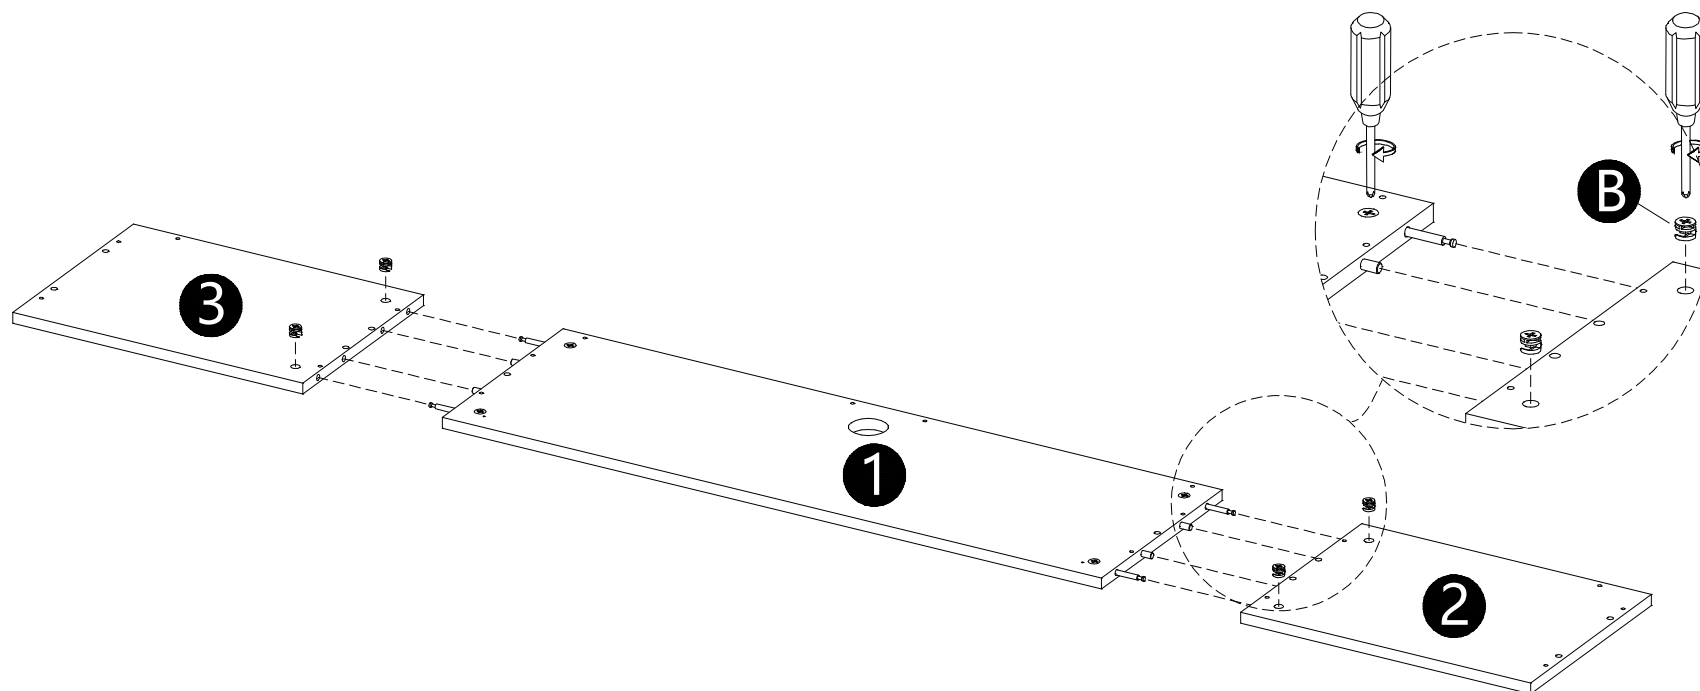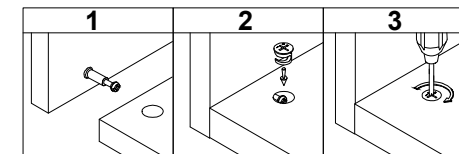
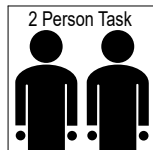


 - Attach panels (2,3) to panel (1) correctly.
- Insert and secure cam locks (B) to panels (2,3) to lock them,
- then secure parts (B) on the other side of parts (D).

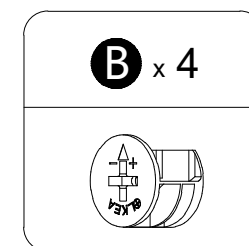


INSTALLATION STEPS

  8

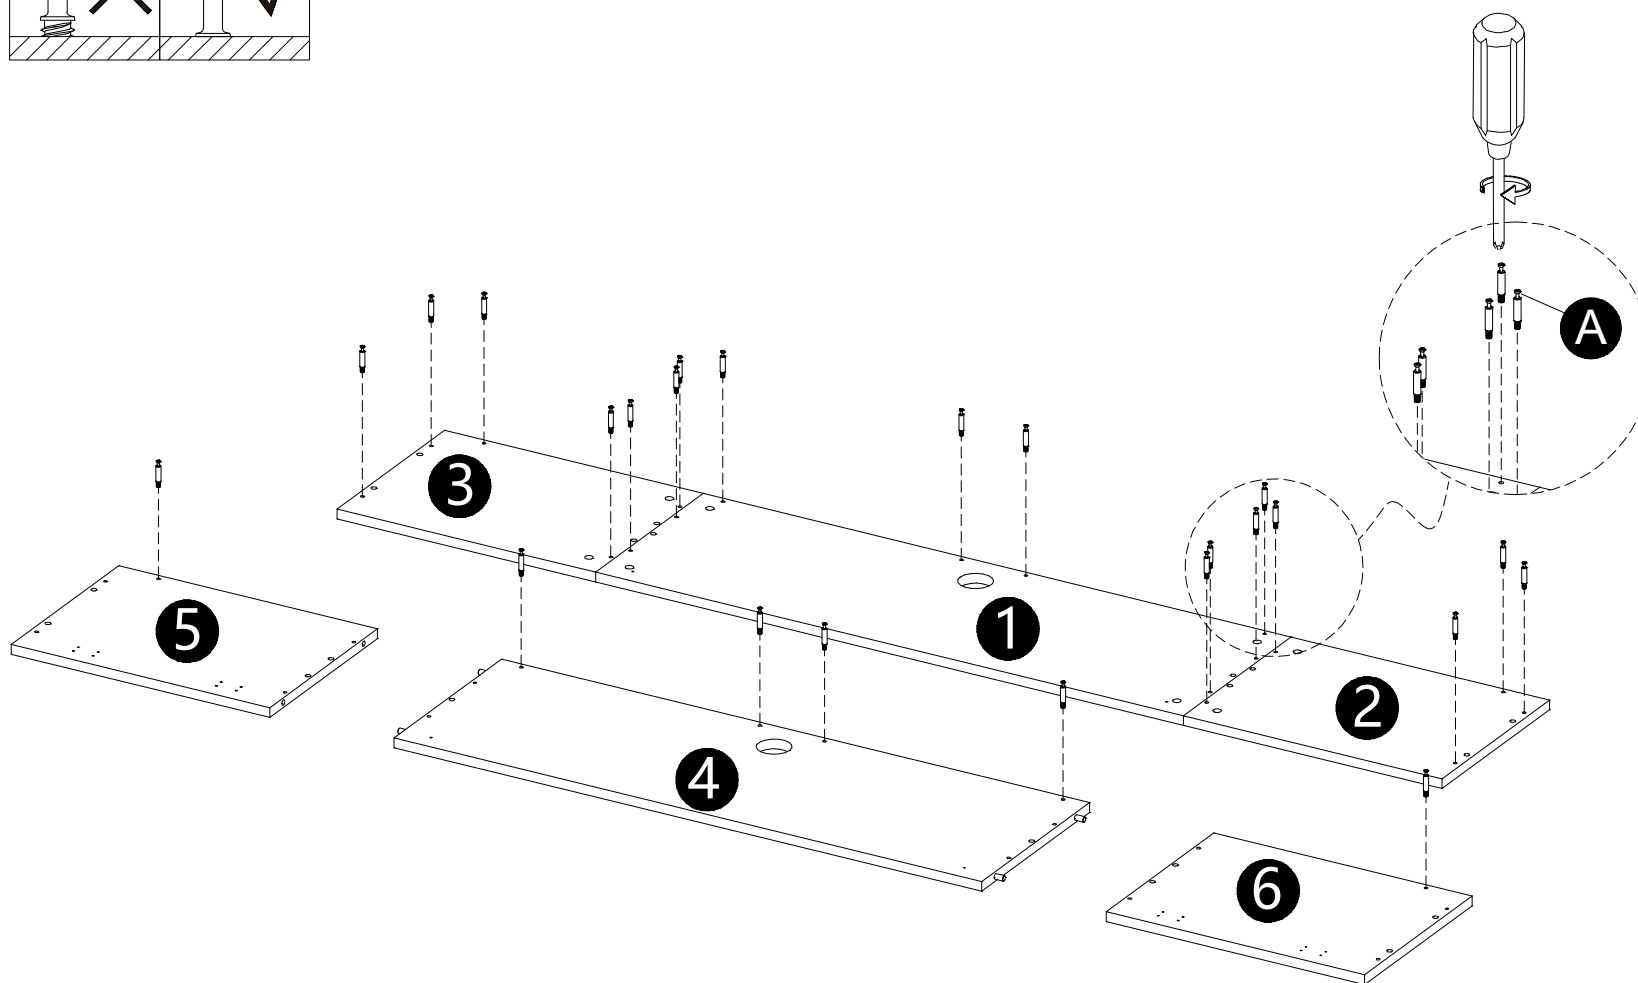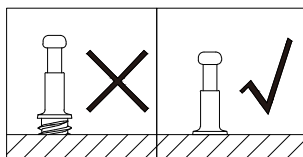


·Screw bolts (A) into panels
(1,2,3,4,5,6).

 A x 24




INSTALLATION STEPS

 9

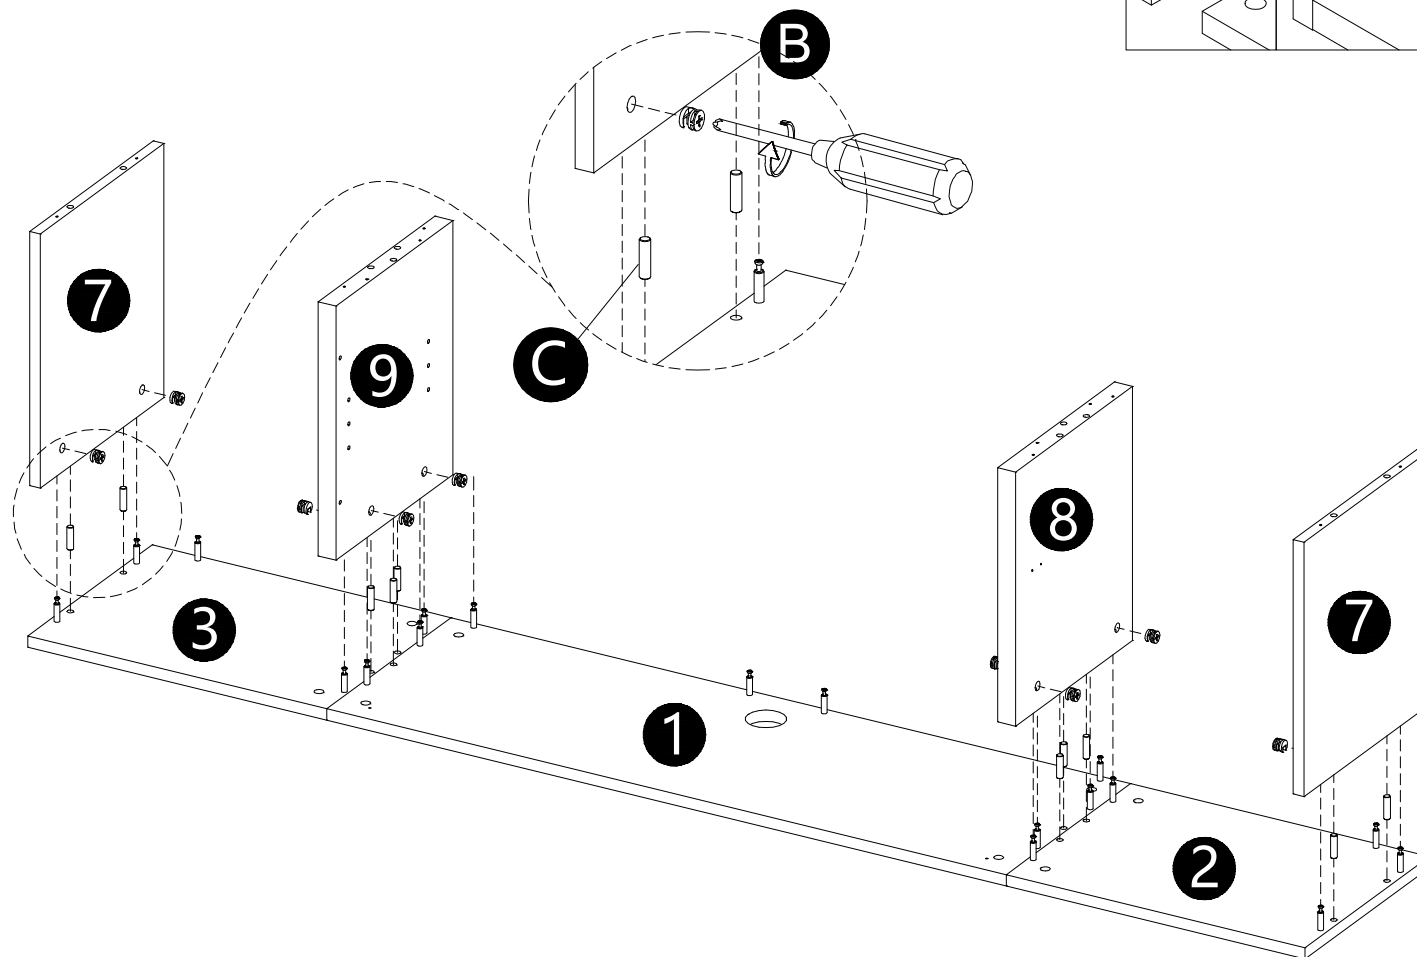


 - Insert dowels (C) into panels (7,8,9).
- Attach panels (7,8,9) to panels (1,2,3) correctly.
- Insert and secure cam locks (B) to panels (7,8,9) to lock it.

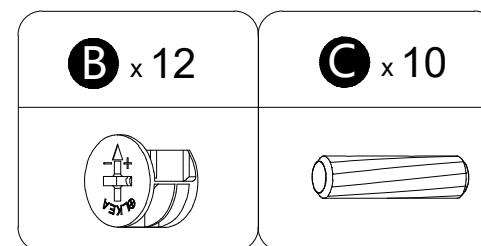

10

 INSTALLATION STEPS

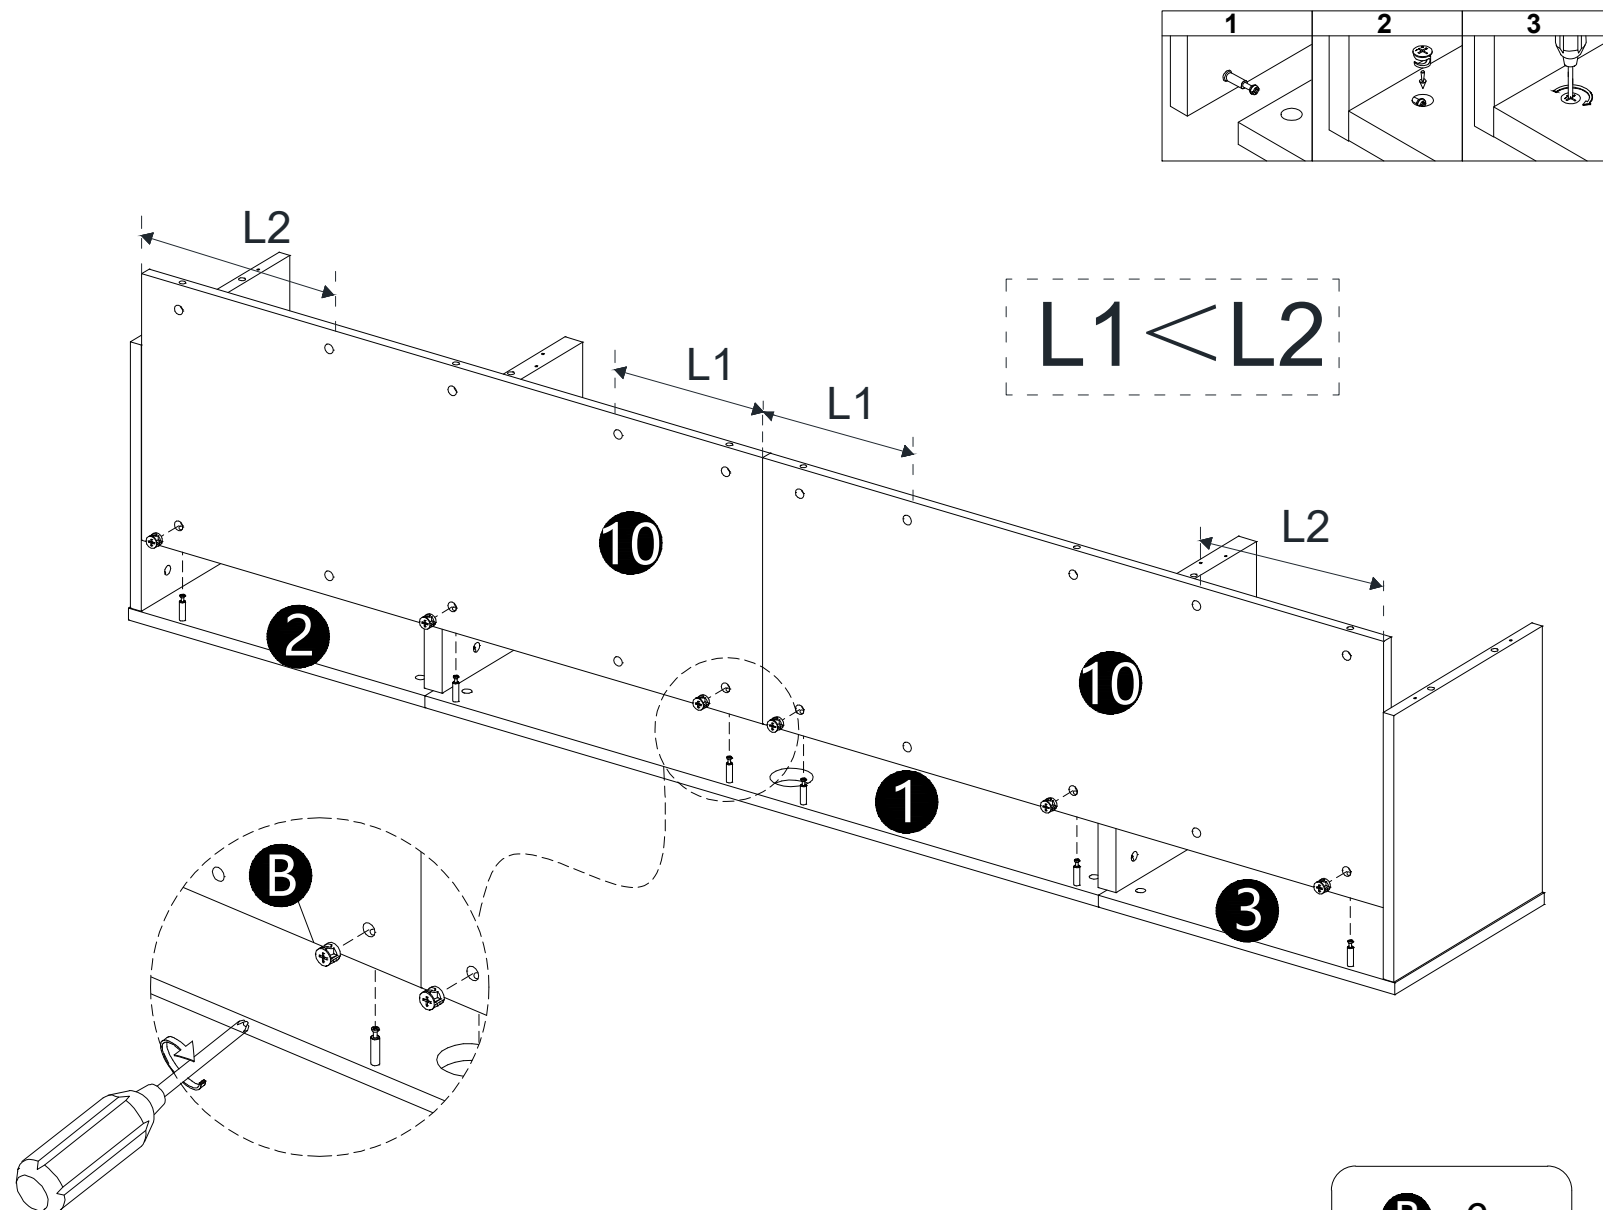


- Attach panels (10) to panels (1,2,3) correctly.
- Insert and secure cam locks (B) to panels (10) to lock it.

B x 6




11

 INSTALLATION STEPS



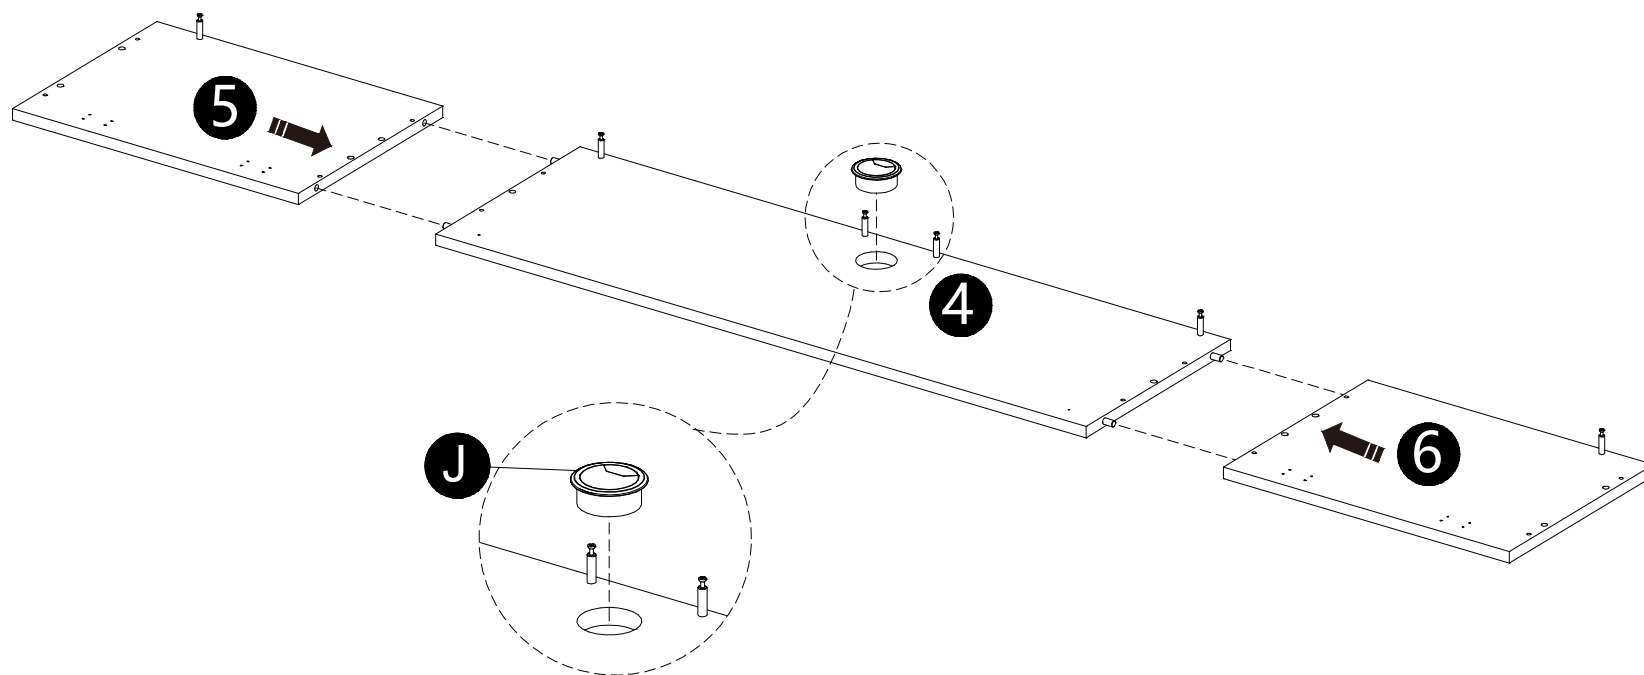


 - Insert dowels (C) into panels (5,6).
- Attach panels (5,6) to panel (4) correctly.
- Attach part (J) to panel (4).

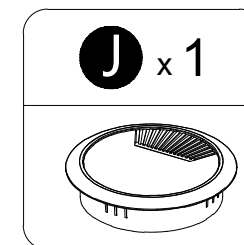

12

   
INSTALLATION STEPS

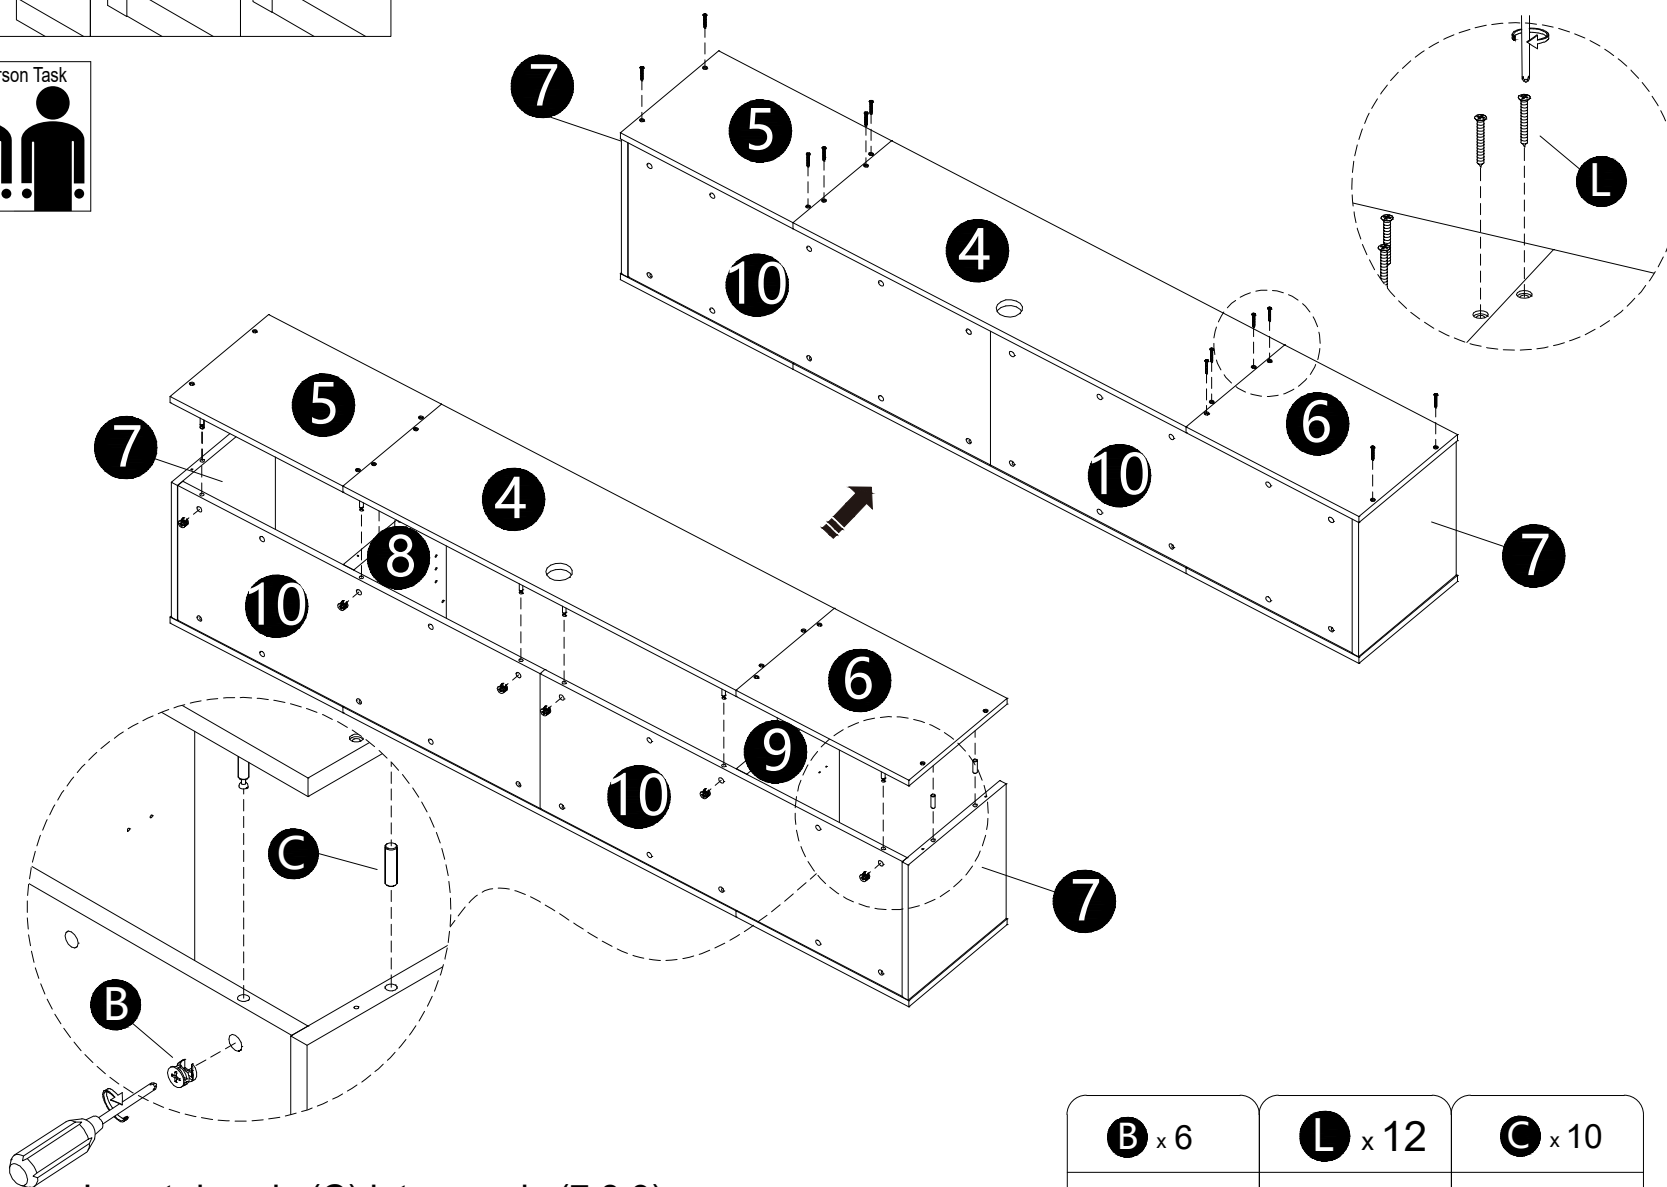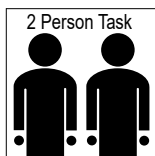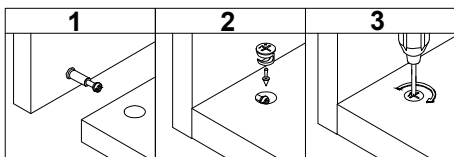


- Insert dowels (C) into panels (7,8,9).
- Insert and secure cam locks (B) to panels (10) to lock it.
- Attach panels (4,5,6) to panels (7,8,9) with screws (L).

13

 INSTALLATION STEPS

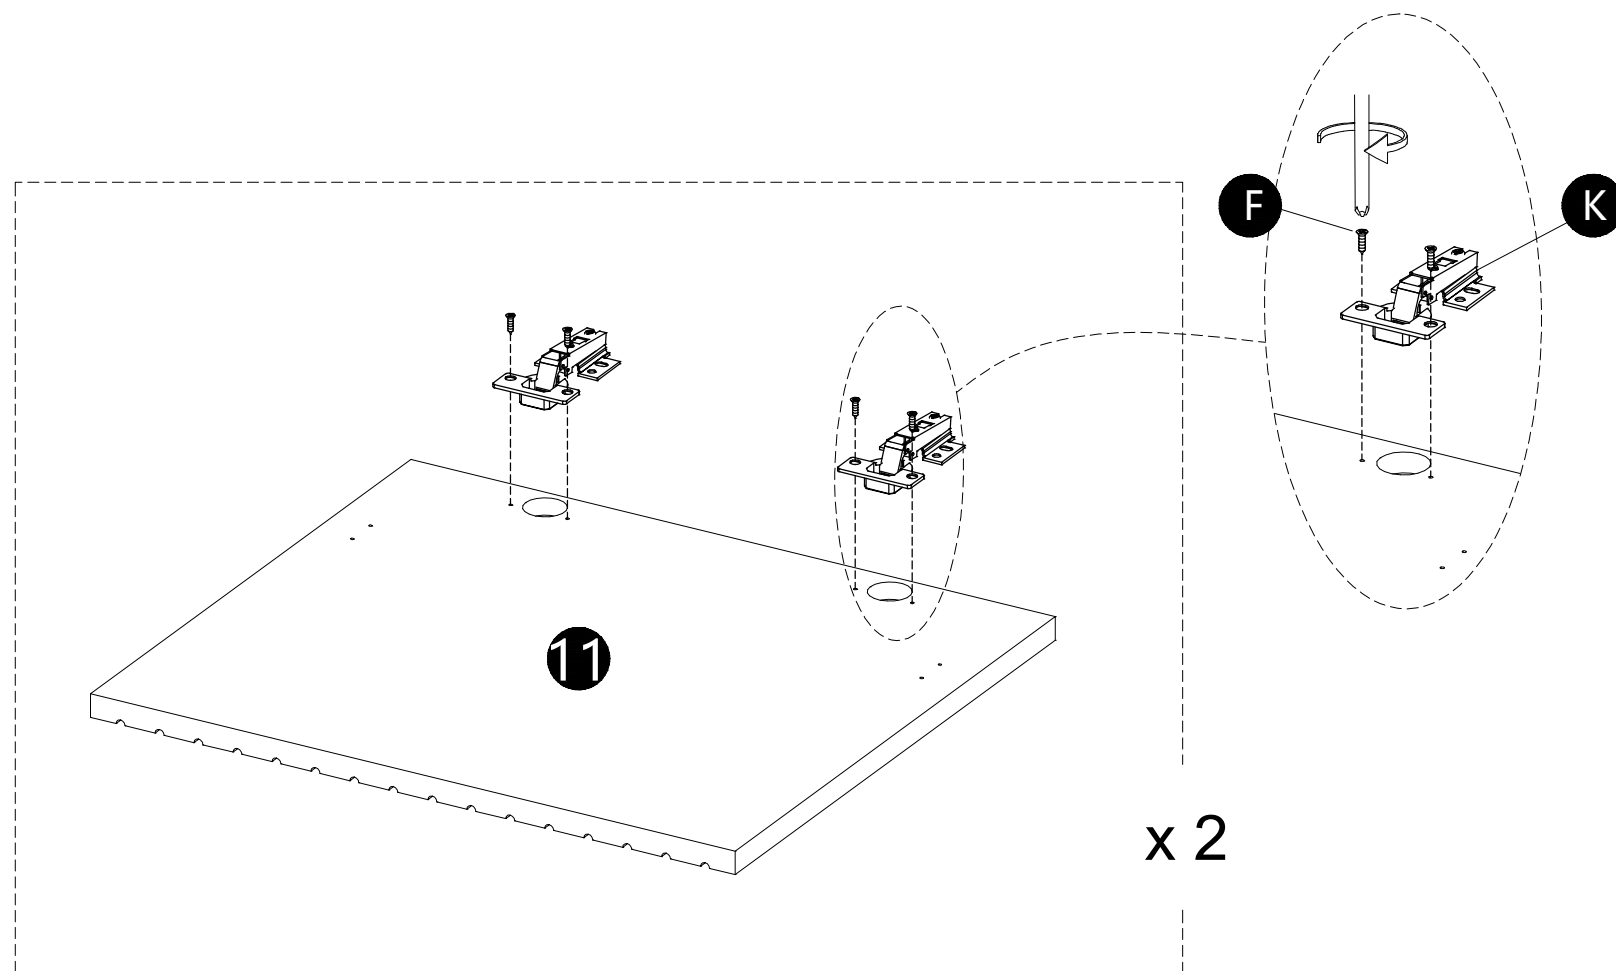


 · Attach parts (K) to panel (11) with screws (F) correctly.

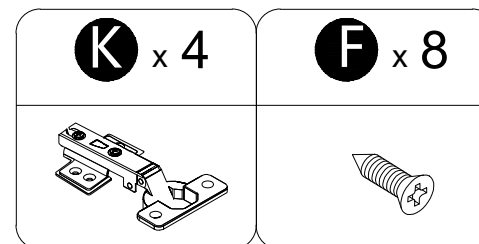

14

 INSTALLATION STEPS

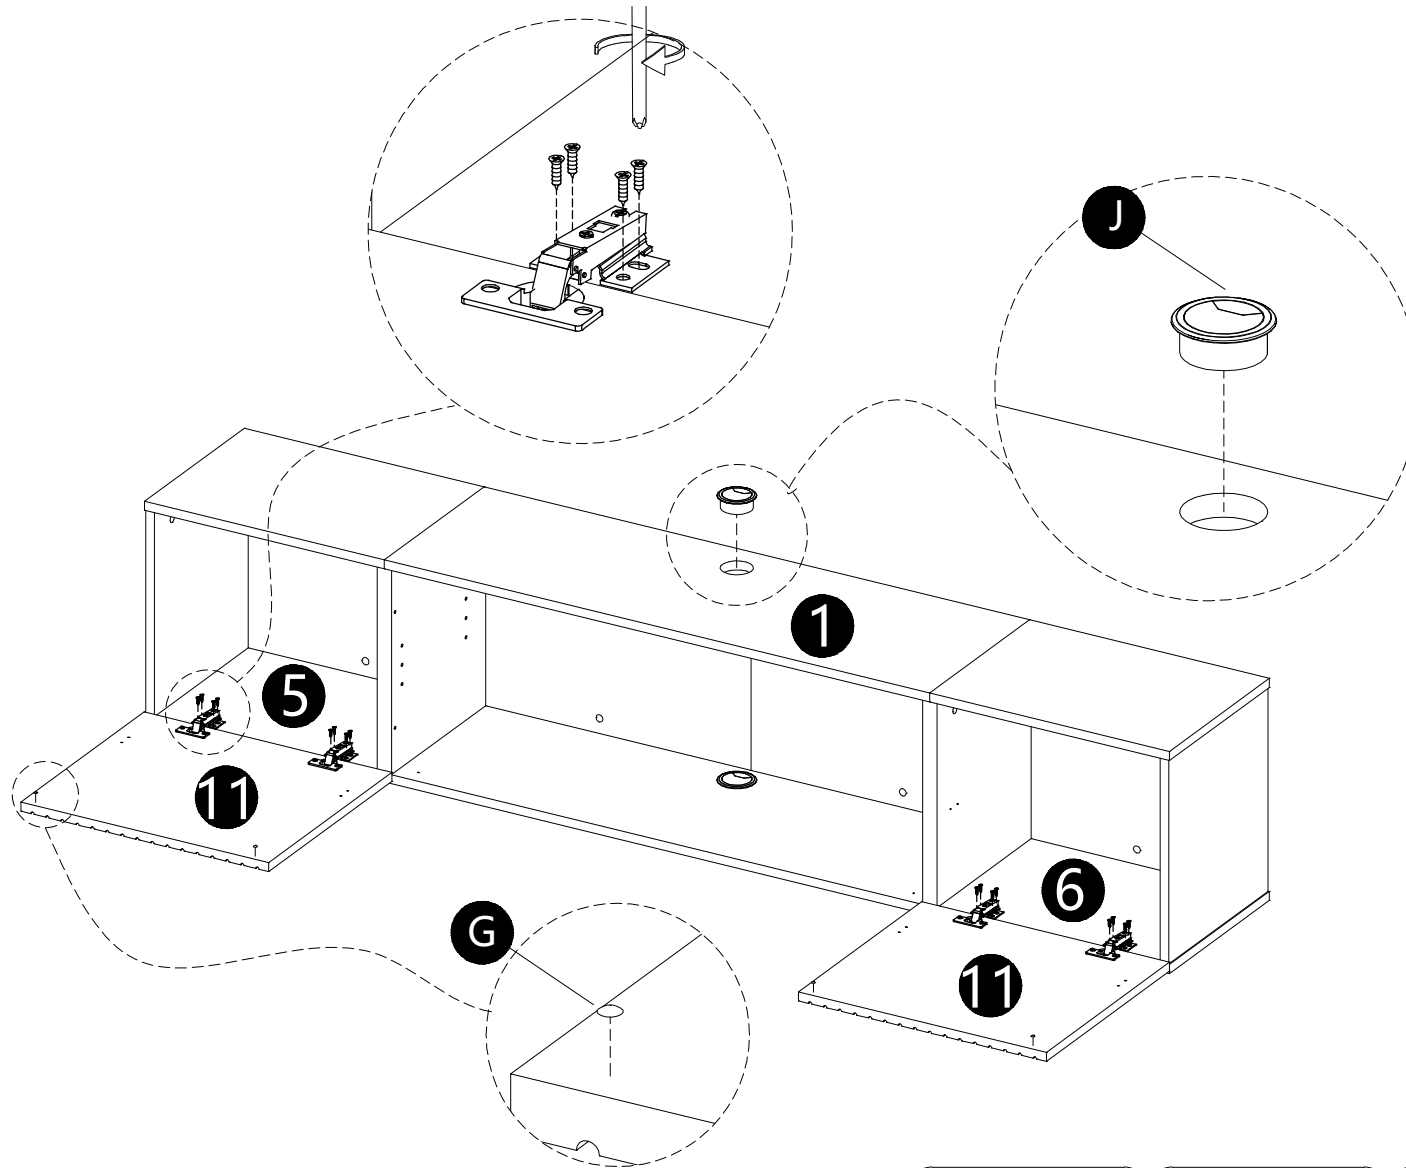


- Attach parts(11) to panels (5, 6) with screws (F) correctly.
- Insert parts (G) into panels (11).
- Attach part (J) to panel (1).

G x 4	J x 1	F x 16

15

 INSTALLATION STEPS


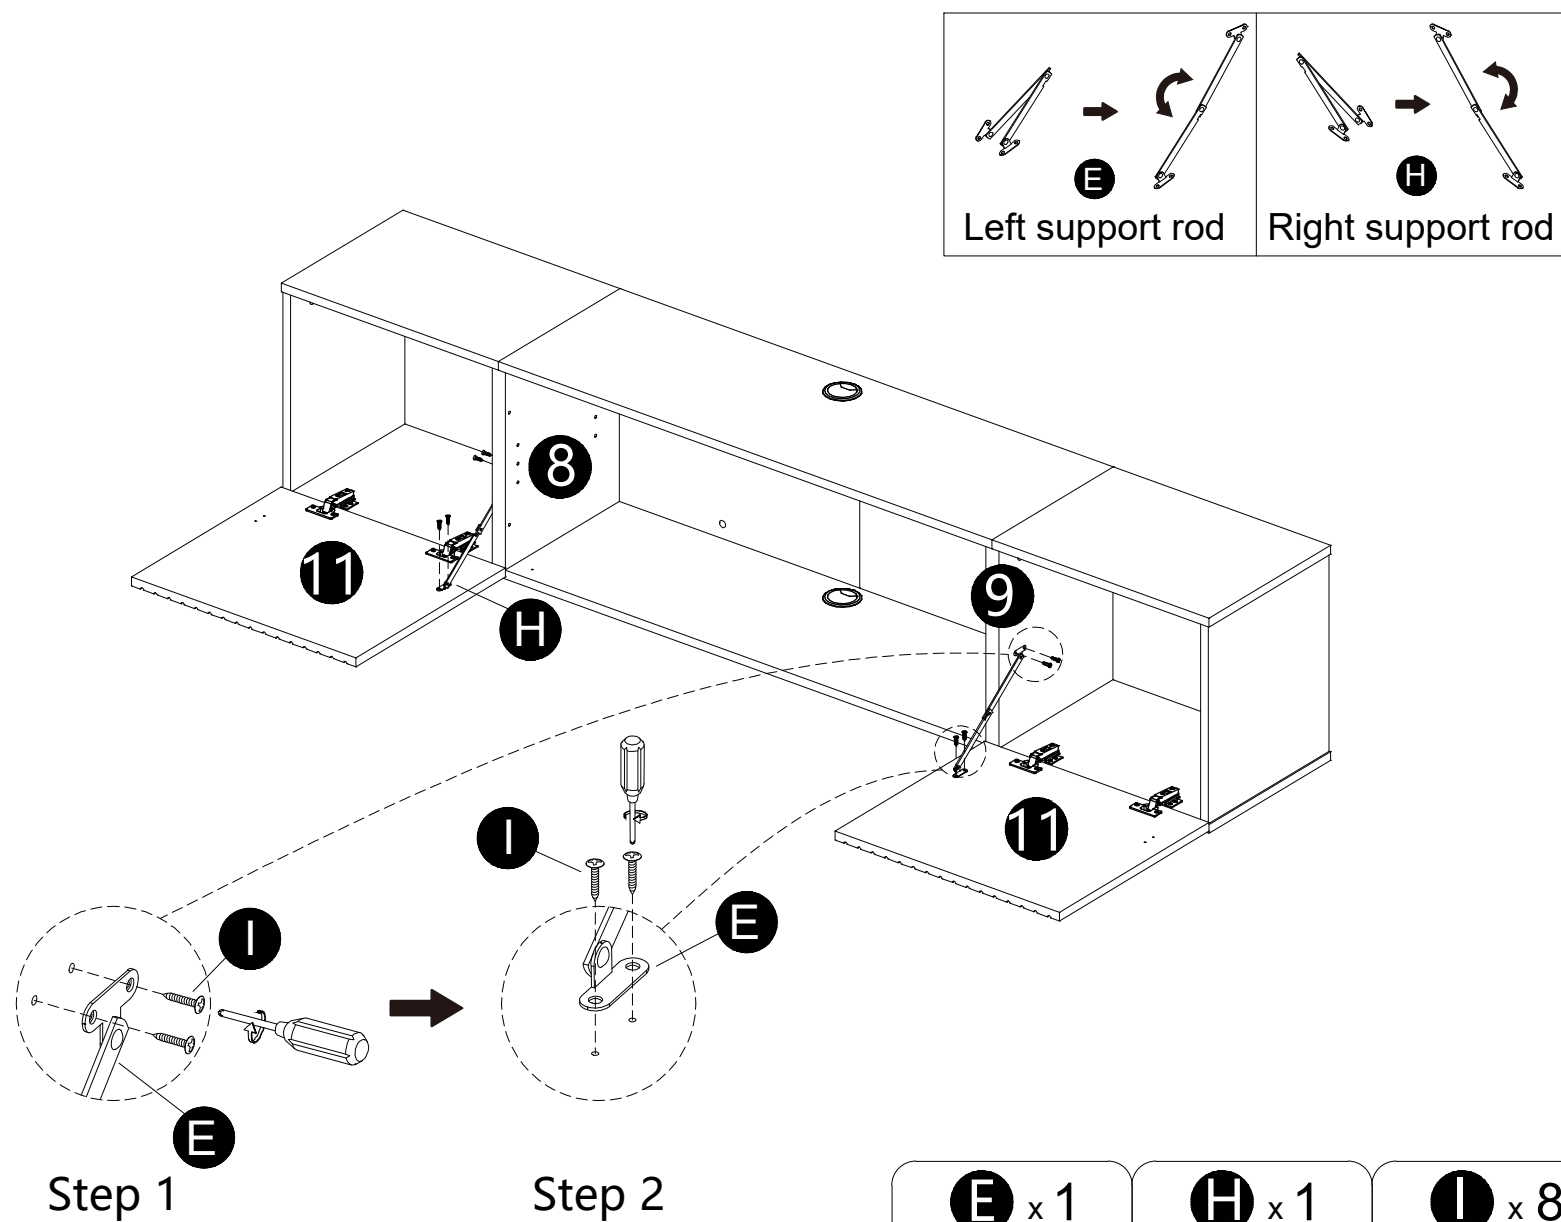


· Attach parts (E,H) to panels (8,9,11) with screws (I) correctly.

E x 1	H x 1	I x 8

16



 
 
INSTALLATION STEPS

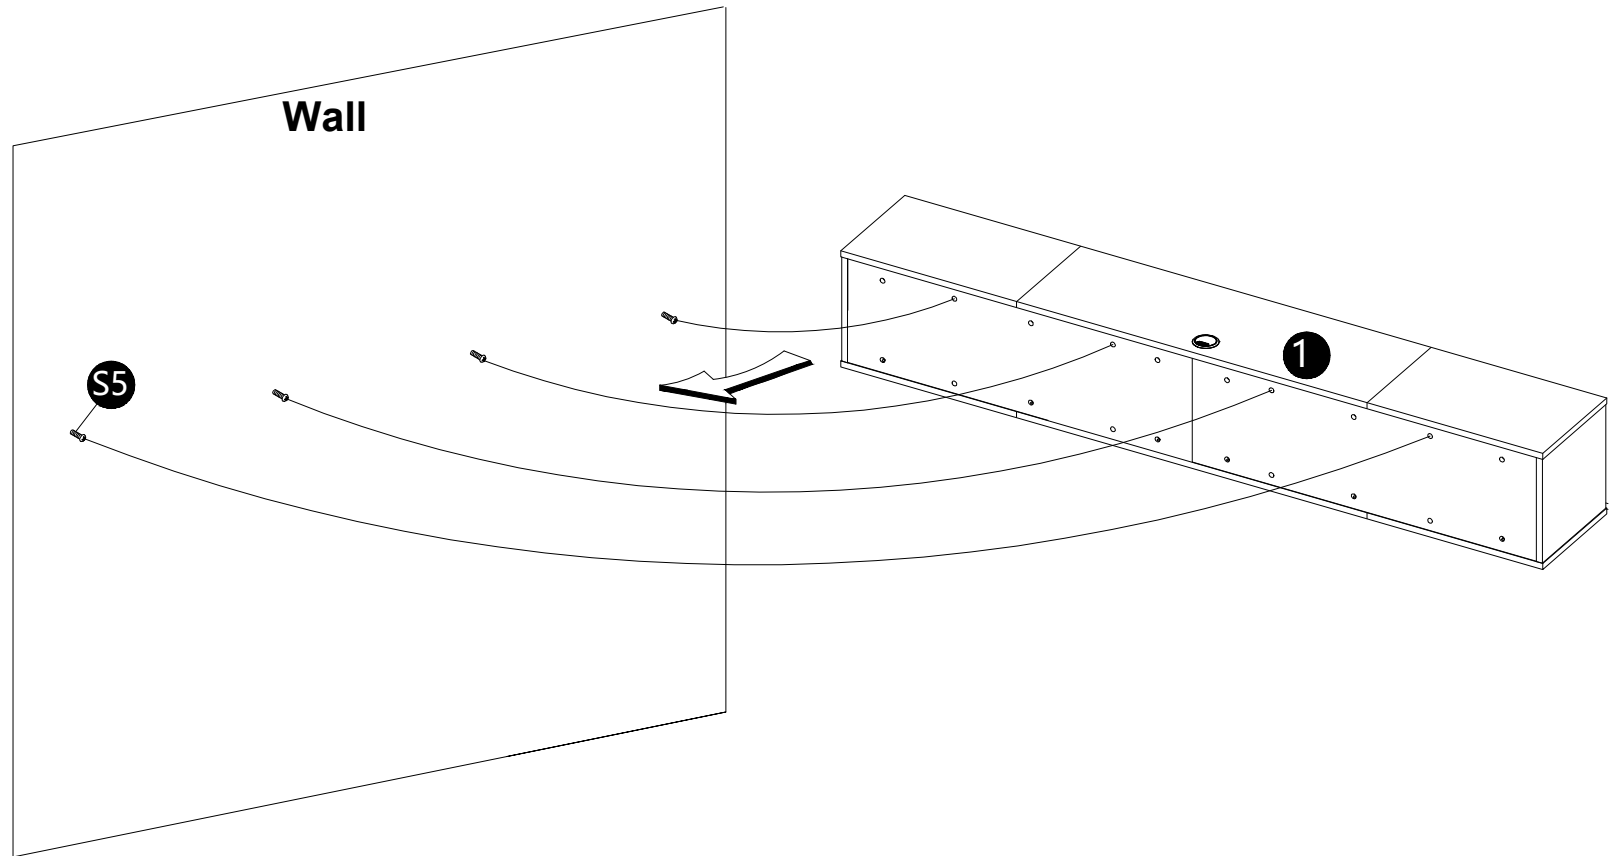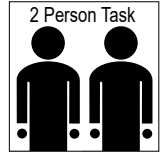



- With help from another person, Hang the cabinet onto the screws (S5) carefully.

17

    INSTALLATION STEPS

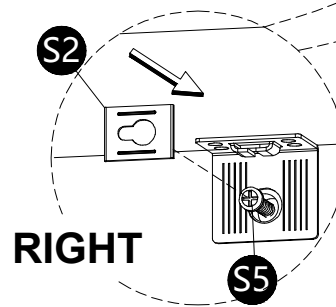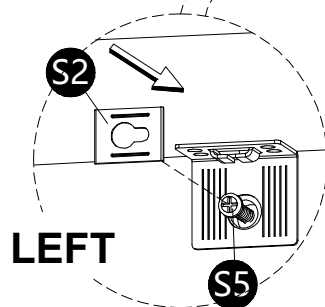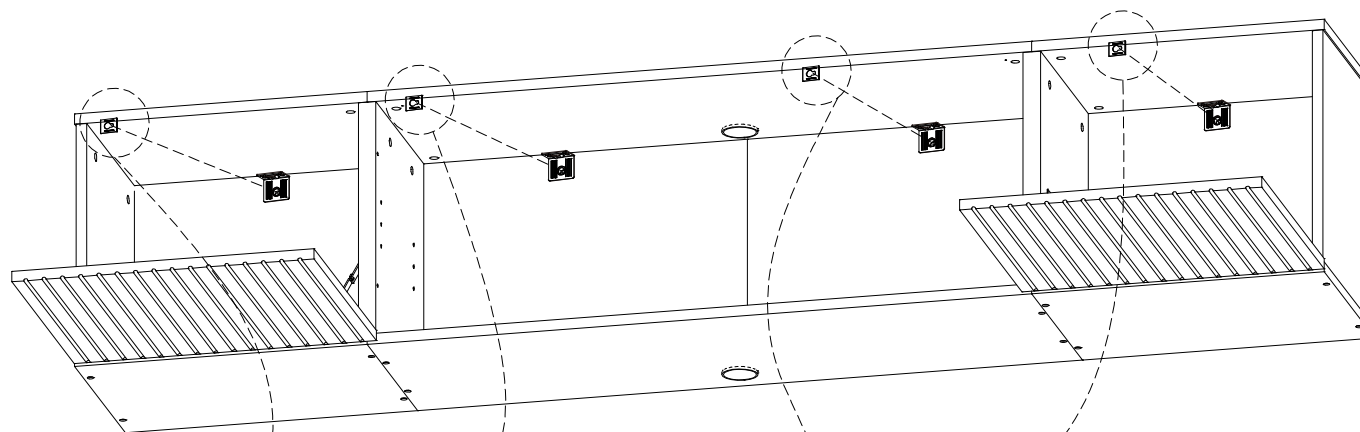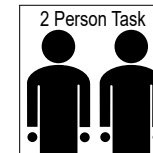

 
 
- Secure parts (S2) onto the screws (S5), then screws and tighten screws (S5).
- Part (S2) must be installed correctly to ensure safe use.

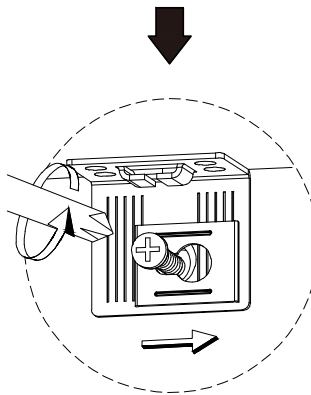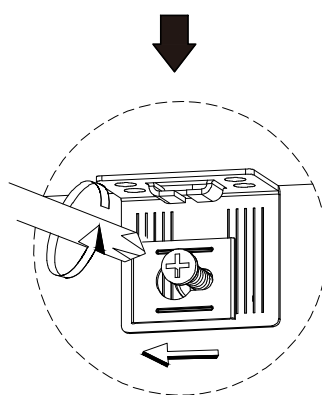

S2 x 4	S3 x 4

18

  INSTALLATION STEPS

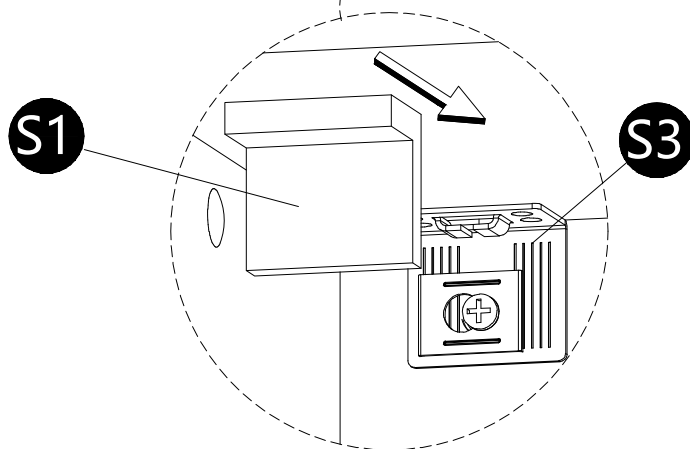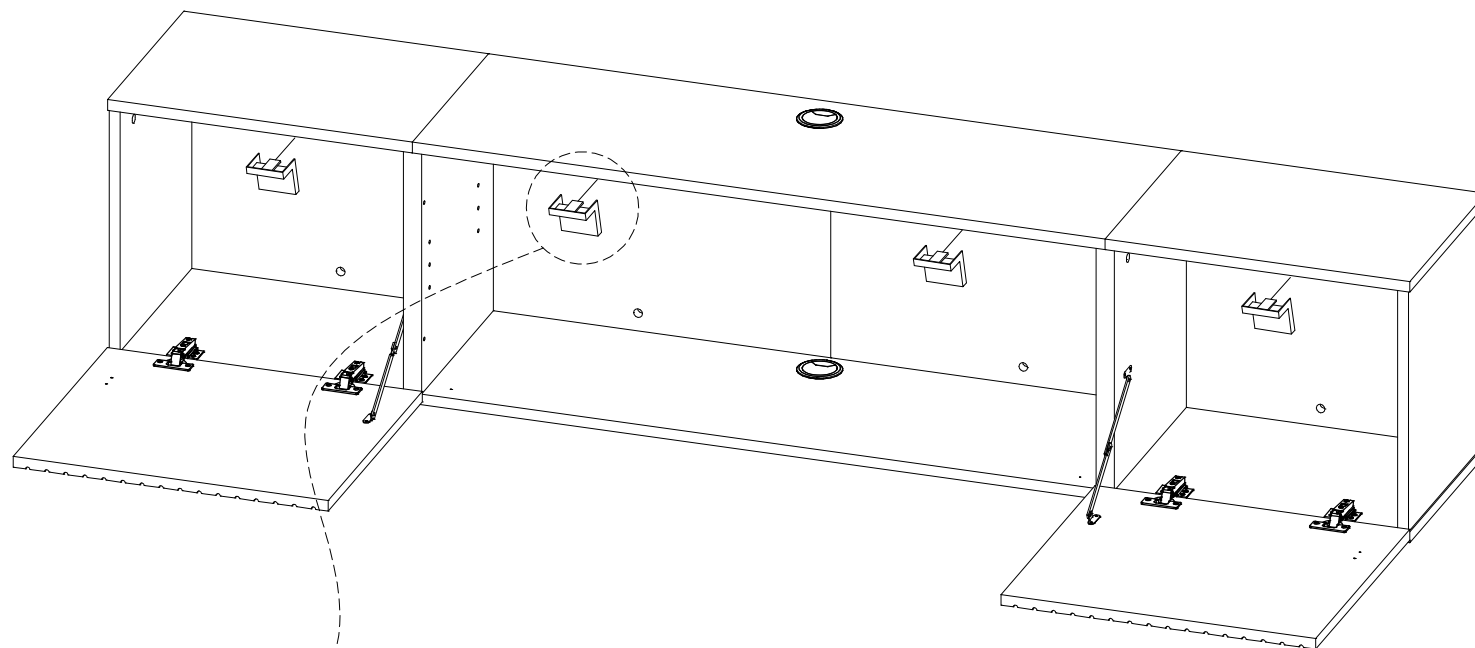

· Secure parts (S1) onto the parts (S3).

 
S1 x 4




19

INSTALLATION STEPS


Adjust Height / 高さを調節

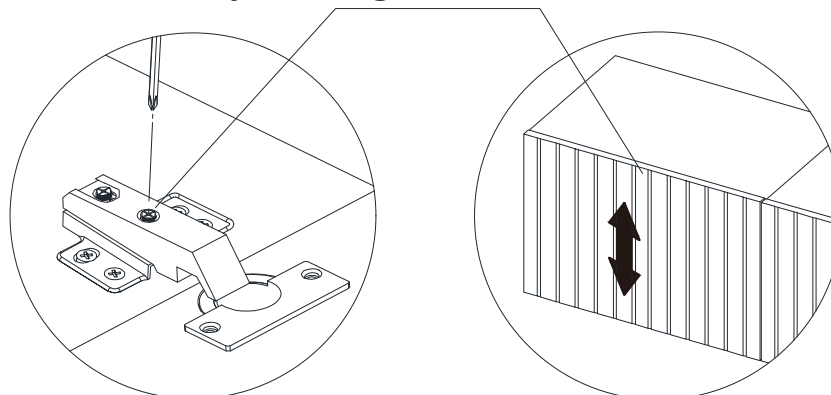

Adjust front and back / 前後を調節

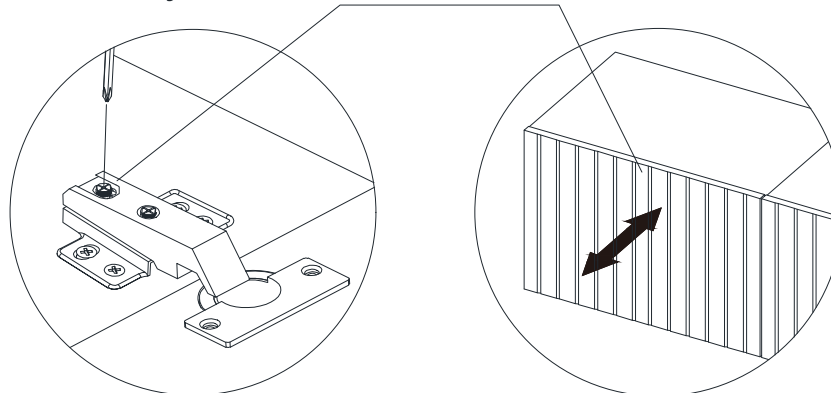 


Adjust Left and right 左右を調節

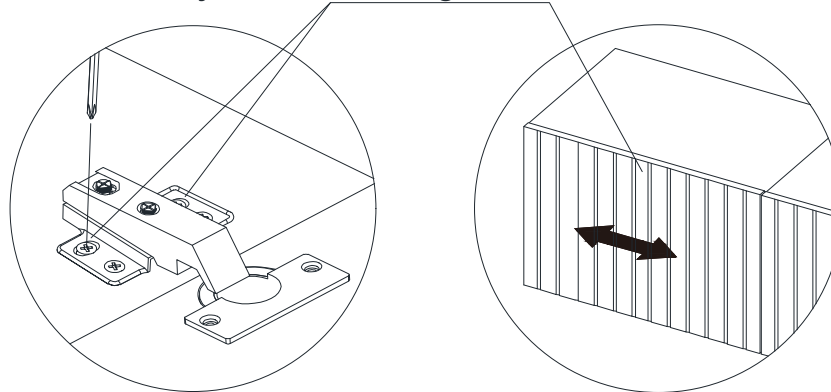 

INSTALLATION STEPS

20

 
Option A (Floating TV stand)

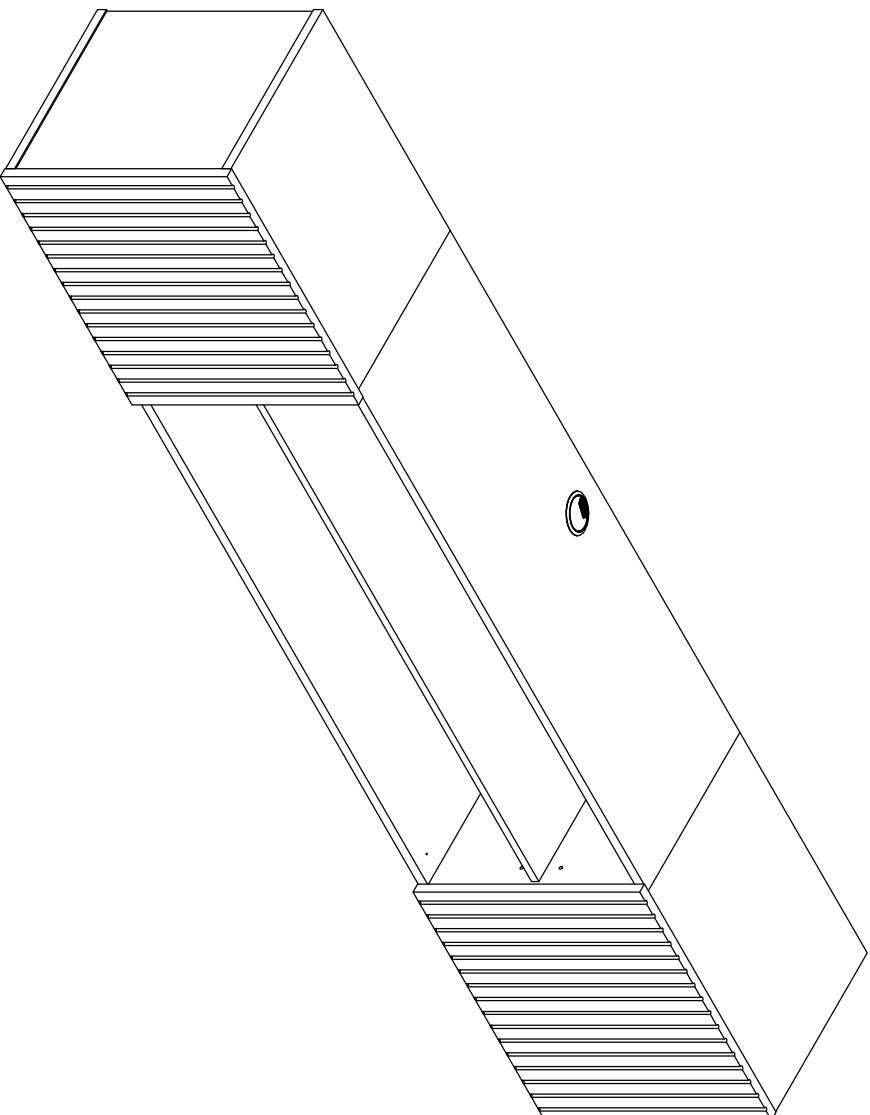


21

INSTALLATION STEPS

 Option A
(Floating TV stand)

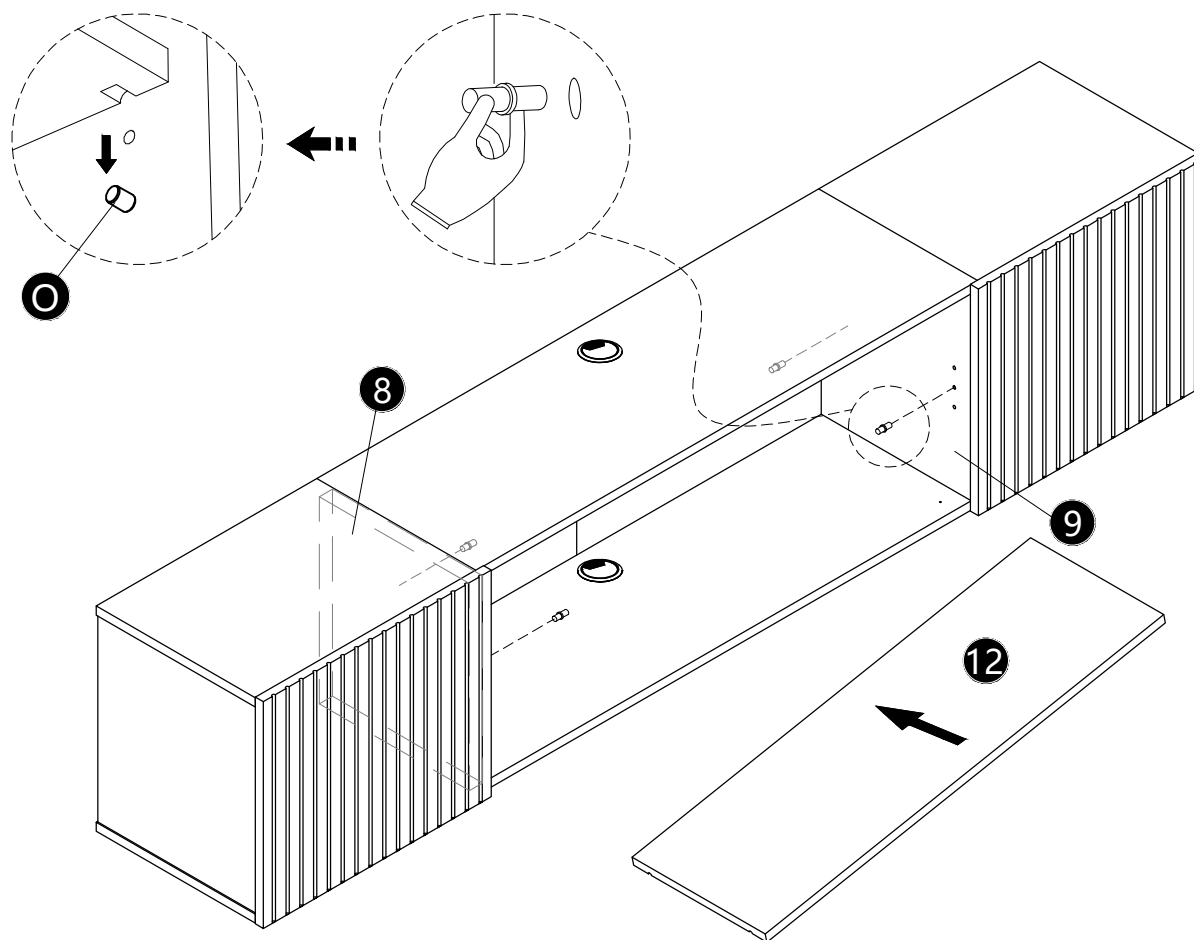


 - Attach panel (12) to panels (8,9) using parts (O).

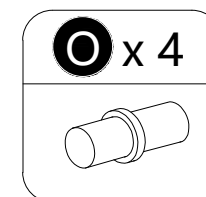


22

 
INSTALLATION STEPS

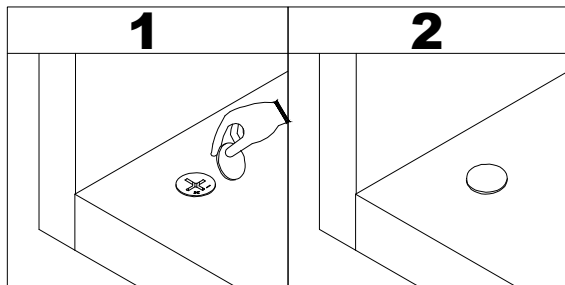

 · Stick stickers (Q) on cam locks (B) and the holes.

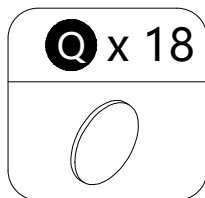

 
Option A (Floating TV stand)
Final Assembly

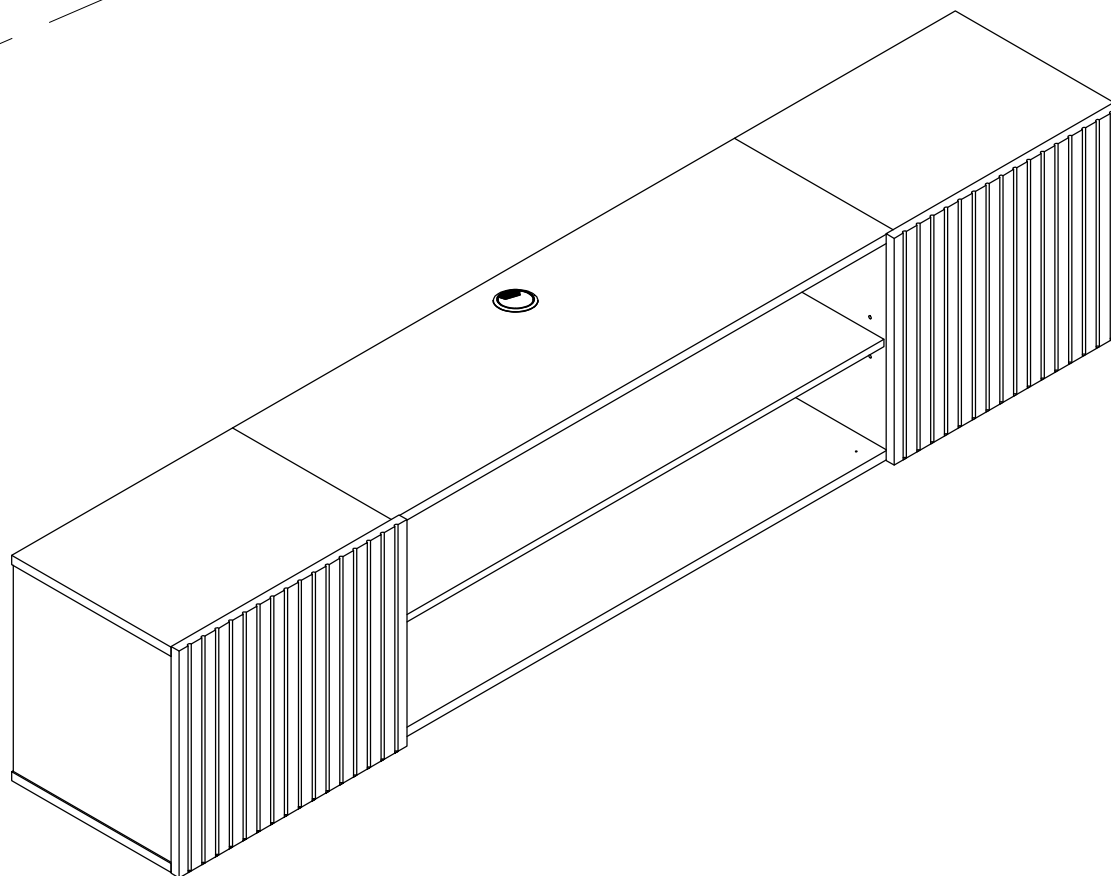

INSTALLATION STEPS


23

 Option B (Fireplace)

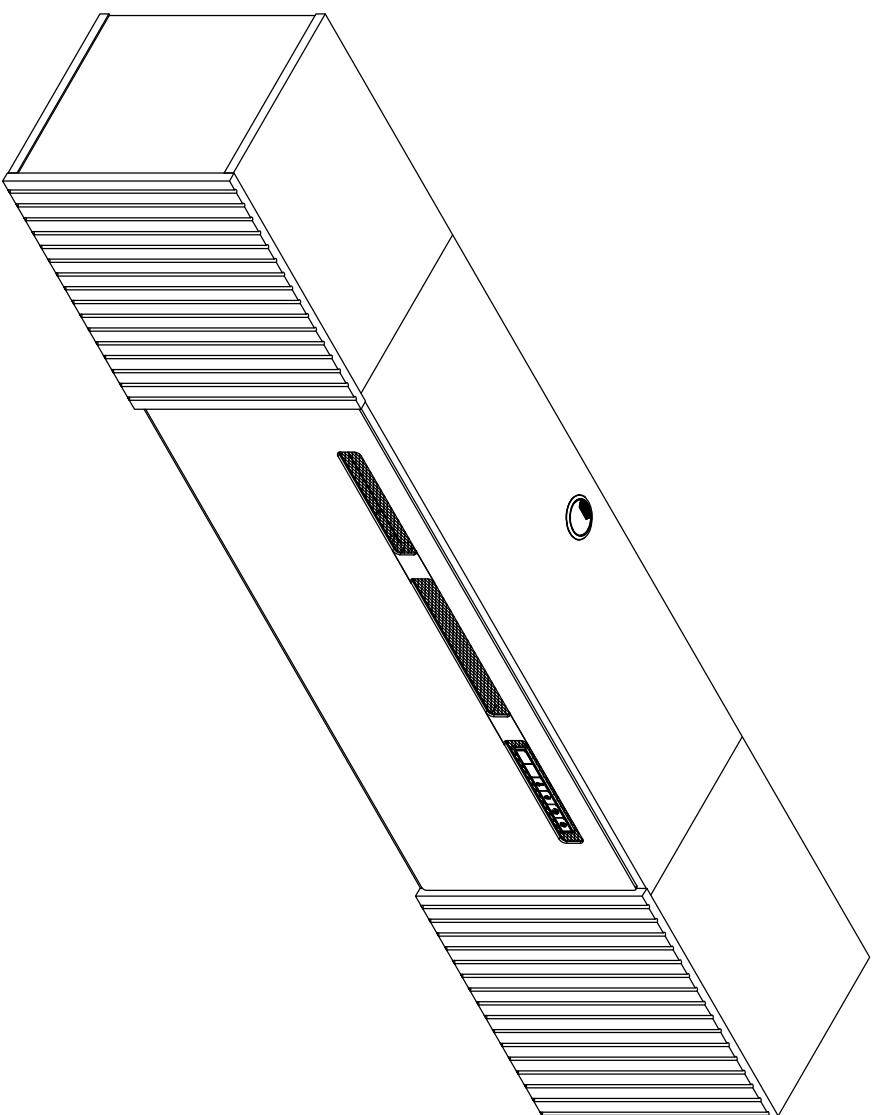

24

 INSTALLATION STEPS

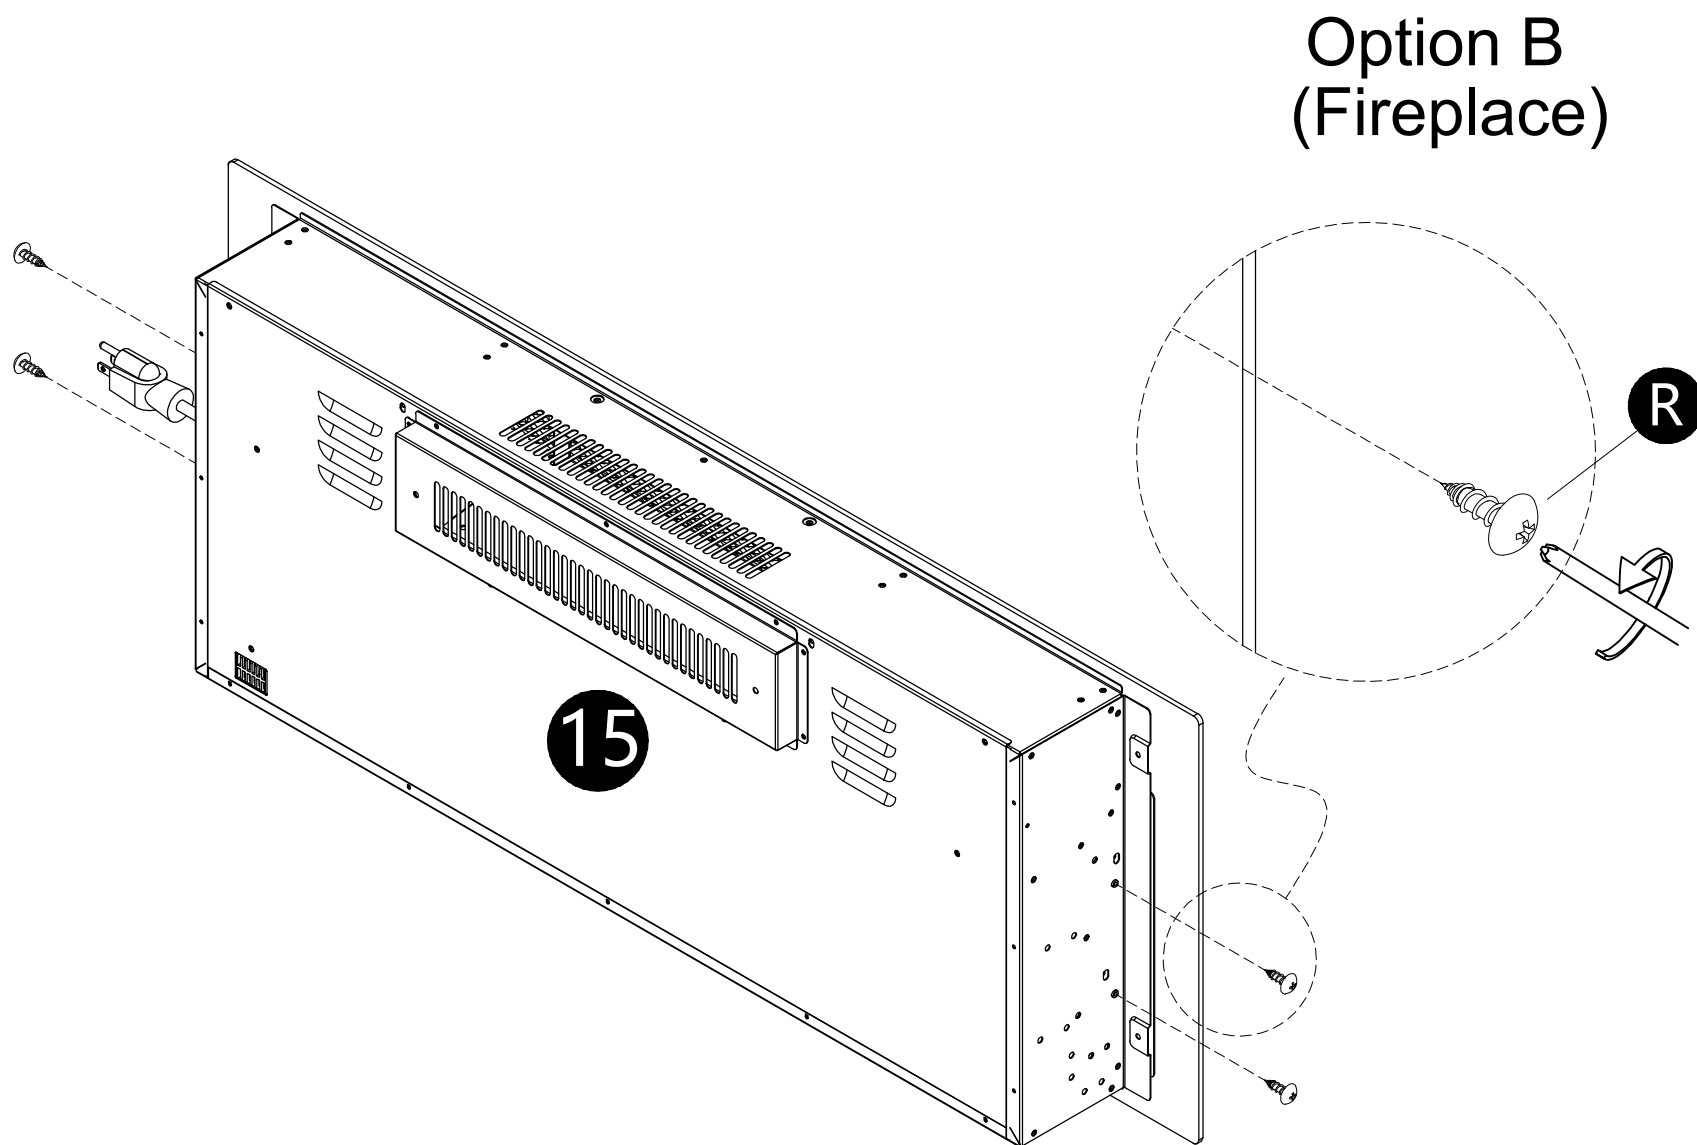


Before attaching fireplace to TV stand, unscrew four silver screws on the both sides of fireplace.

25

INSTALLATION STEPS

 
Option B
(Fireplace)

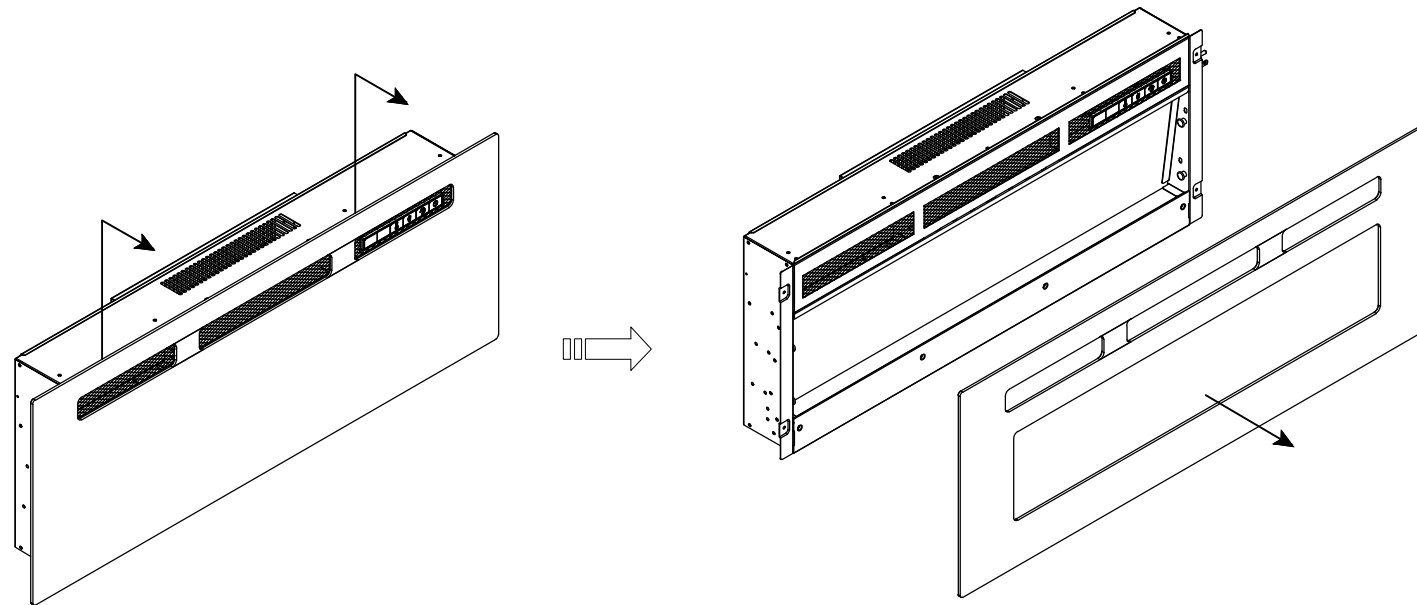


Carefully remove the front glass, and place it on a soft and clean surface.

26

 
INSTALLATION STEPS

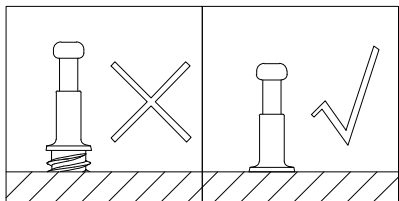

Option B
(Fireplace)

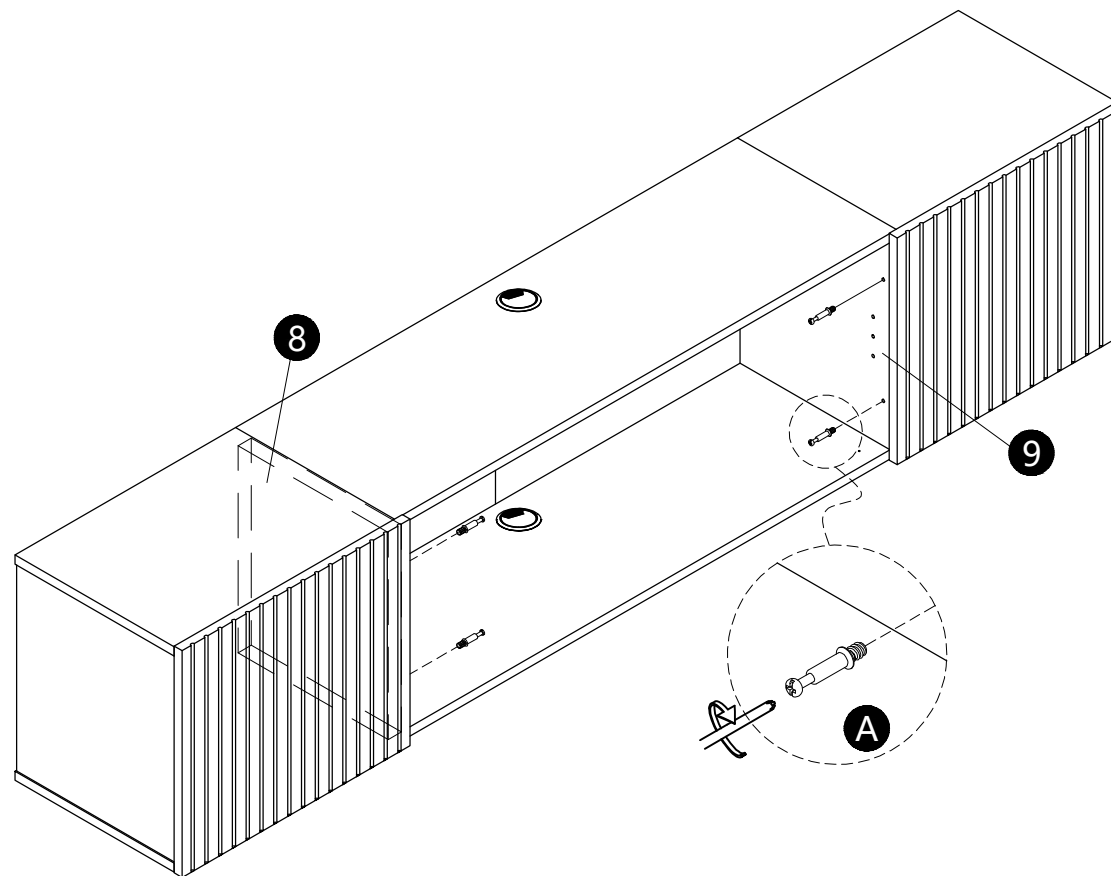 


 
- Screw cam bolts (A) into panels (8,9).

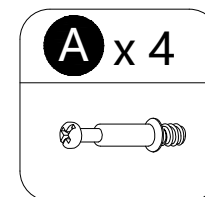


27

INSTALLATION STEPS

  Option B
(Fireplace)

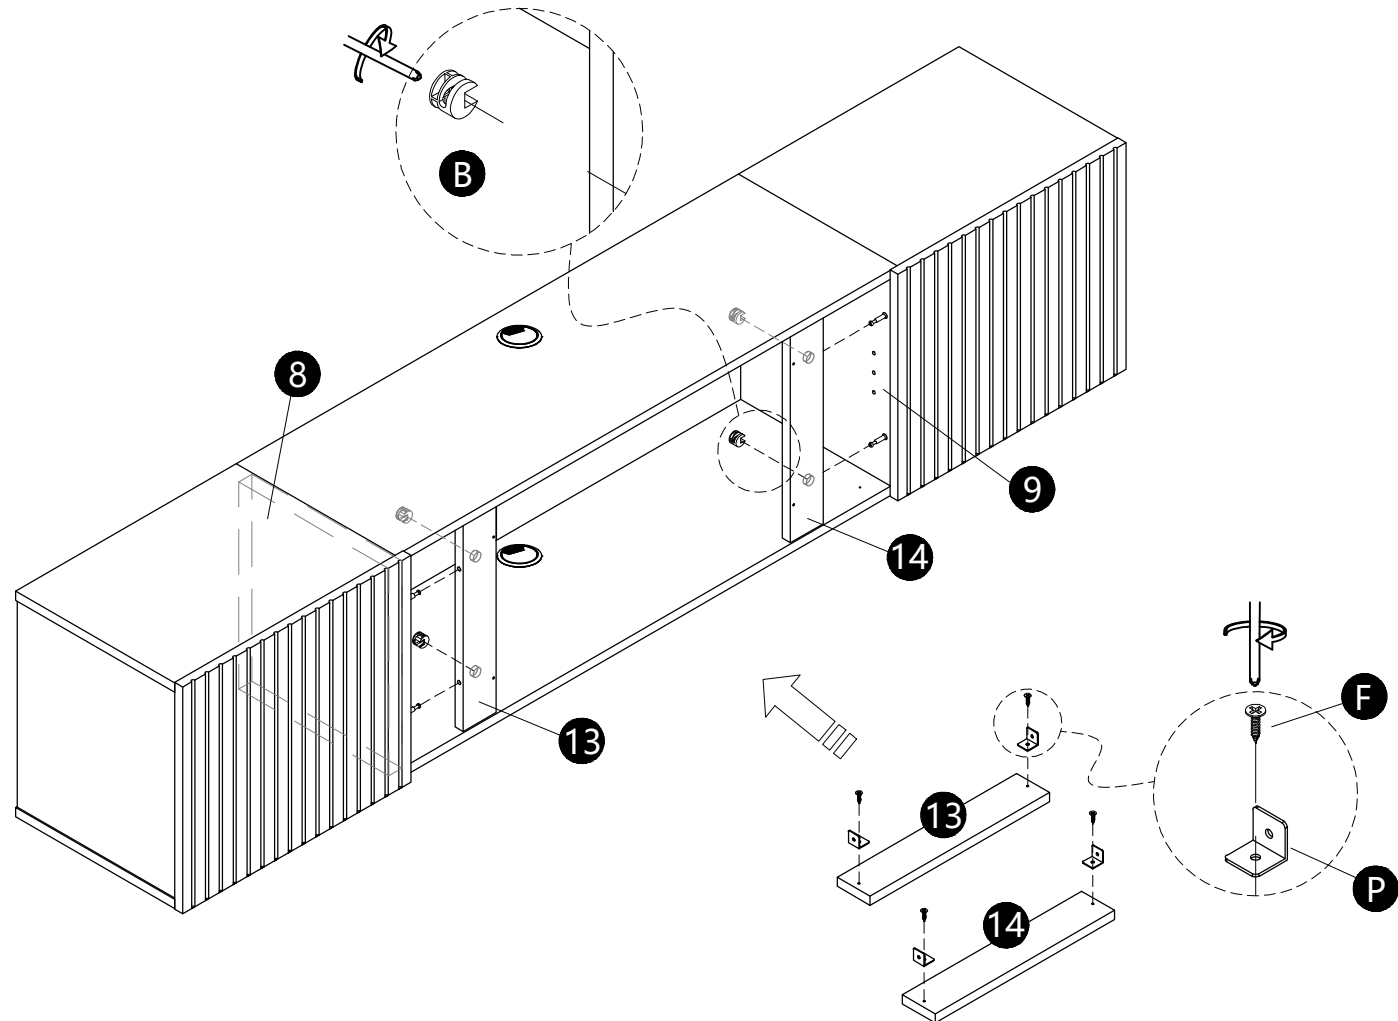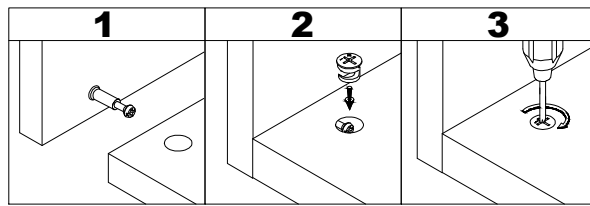

 
- Attach parts (P) to panels (13,14) with screws (F) correctly.
- Attach panels (13,14) to panels (8,9).
- Insert and secure cam locks (B) to panels (13,14) to lock it.

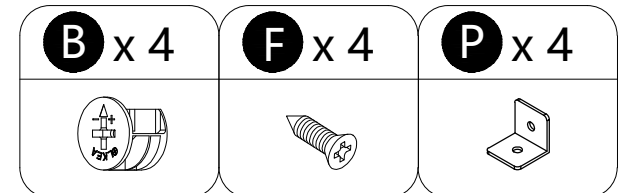

28

INSTALLATION STEPS

 Option B (Fireplace)

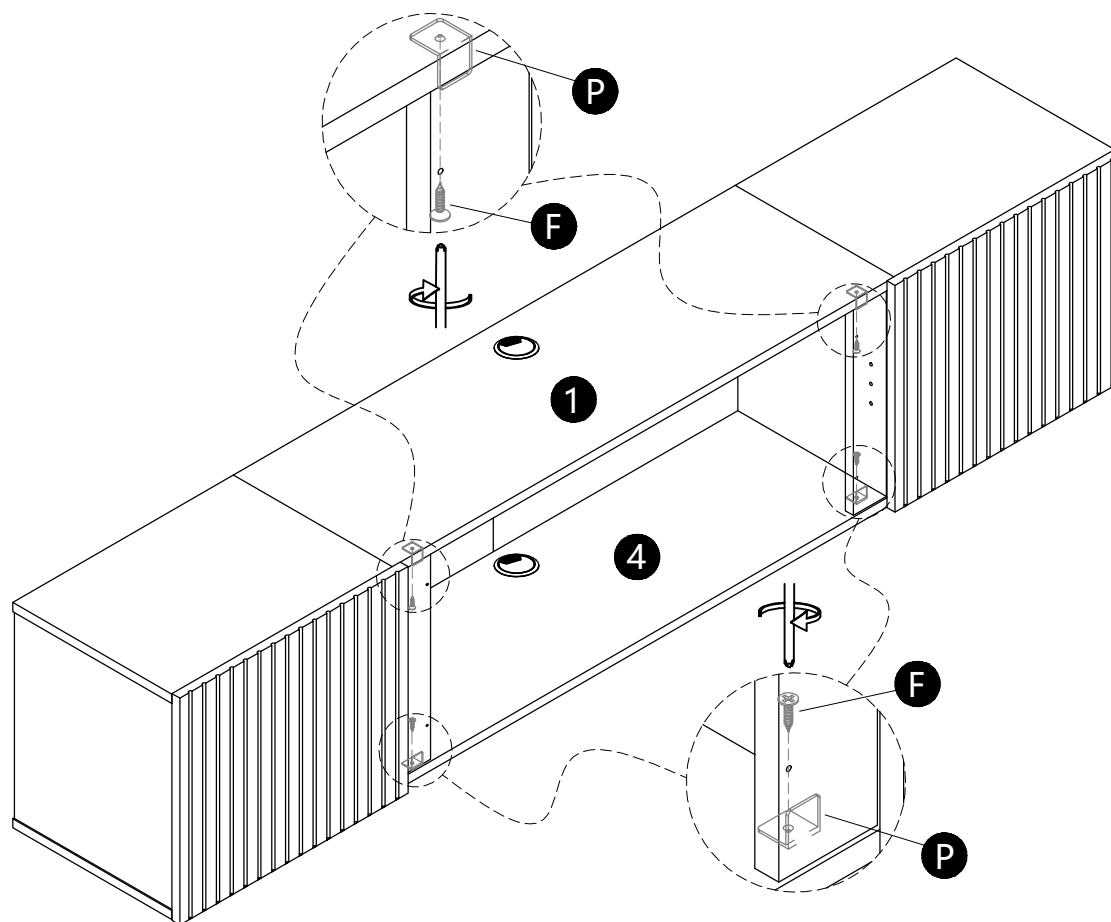


- Attach parts (P) to panels (1,4) with screws (F) correctly.

F x 4




29

 INSTALLATION STEPS

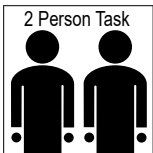

Option B (Fireplace)

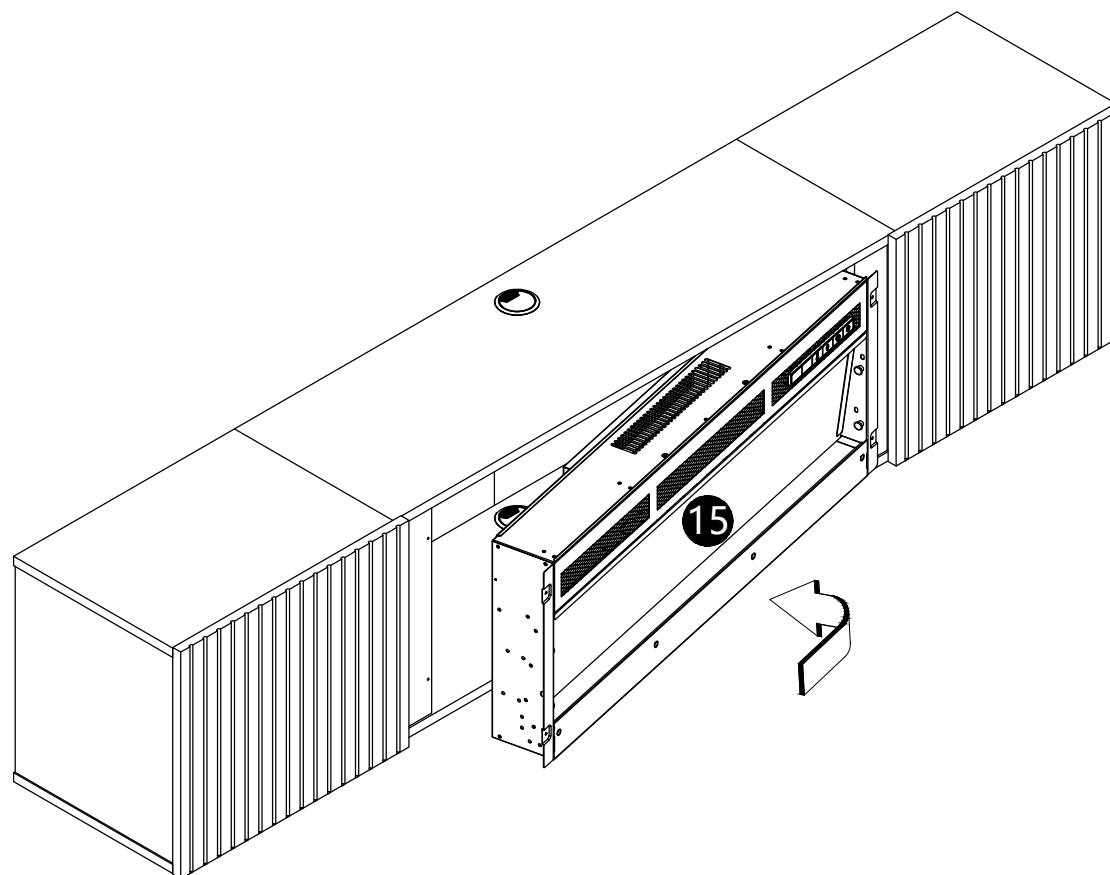 


- Insert fireplace (15) from front of the unit correctly.

30


INSTALLATION STEPS

 Option B (Fireplace)

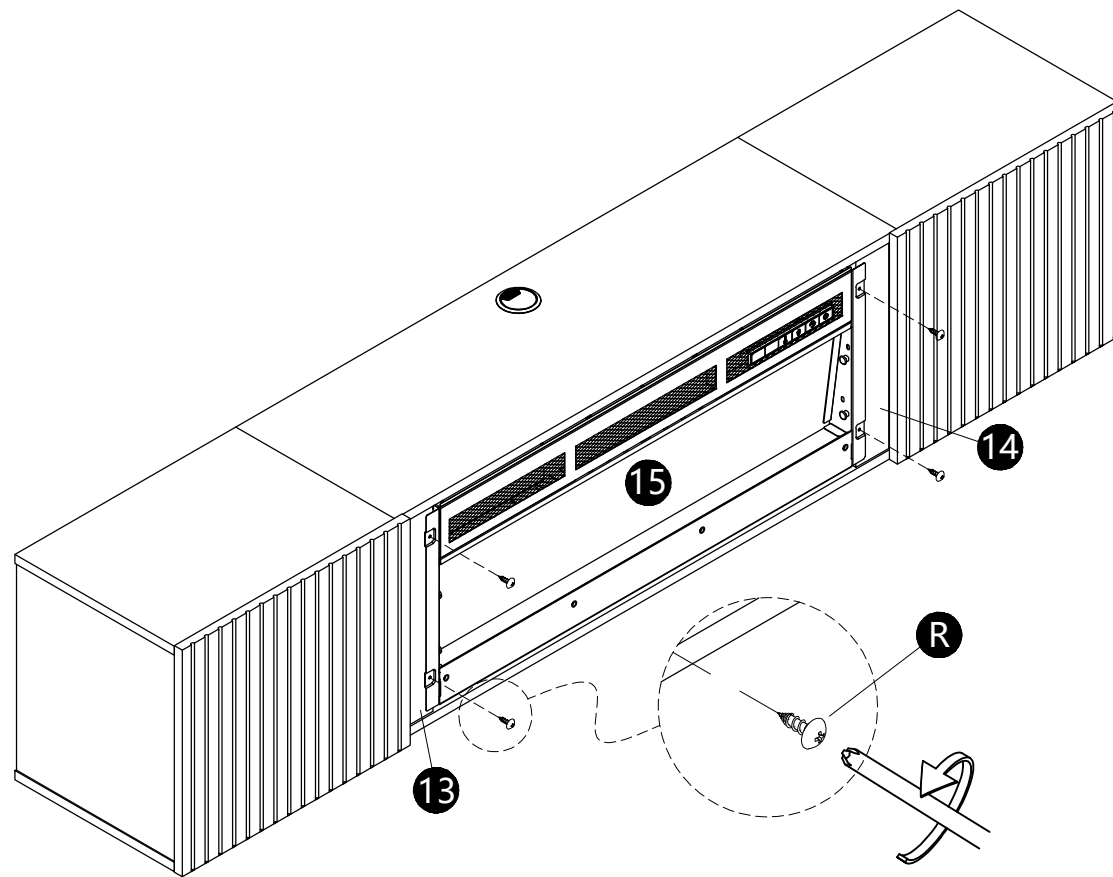

- Attach fireplace (15) to panels (13,14) with screws (R) correctly.


 
R x 4



31

INSTALLATION STEPS

  
Option B
(Fireplace)

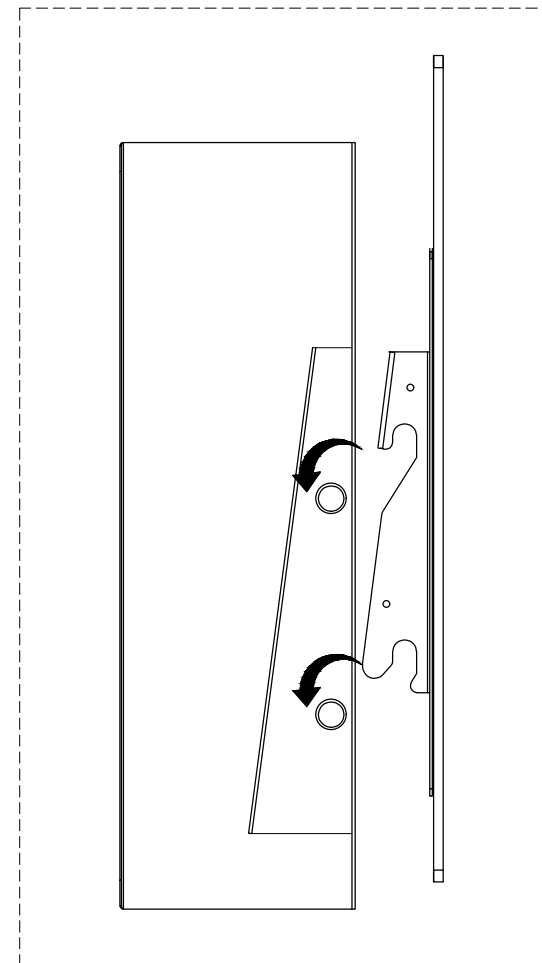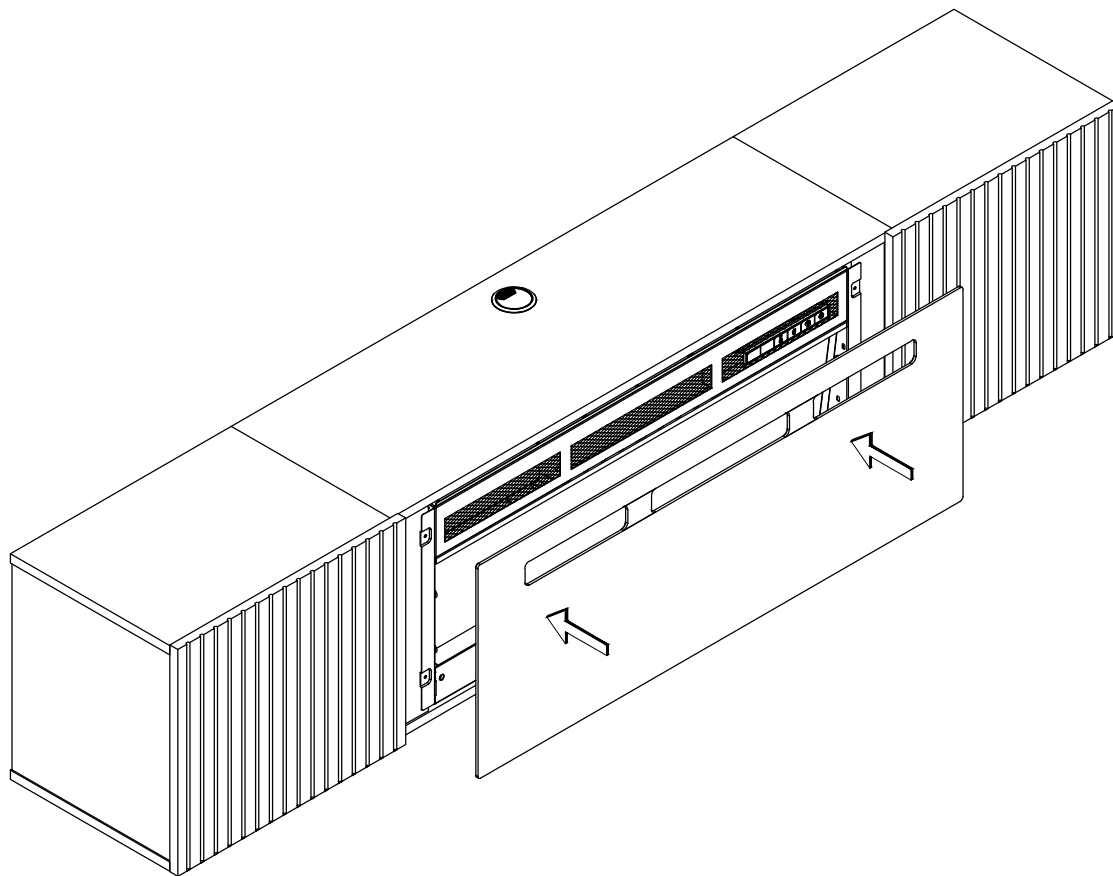


- Attach the glass front to the fireplace.

32

 
INSTALLATION STEPS

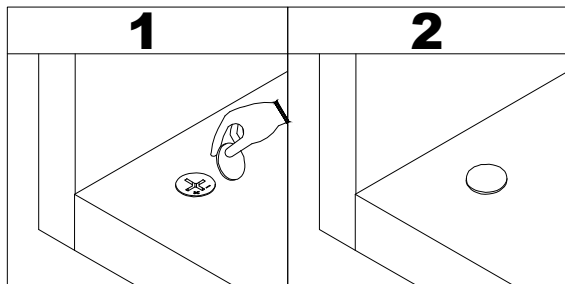

 · Stick stickers (Q) on cam locks (B) and the holes.

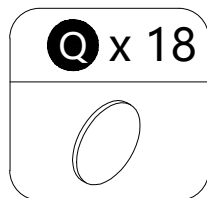

Option B (Fireplace)
Final Assembly

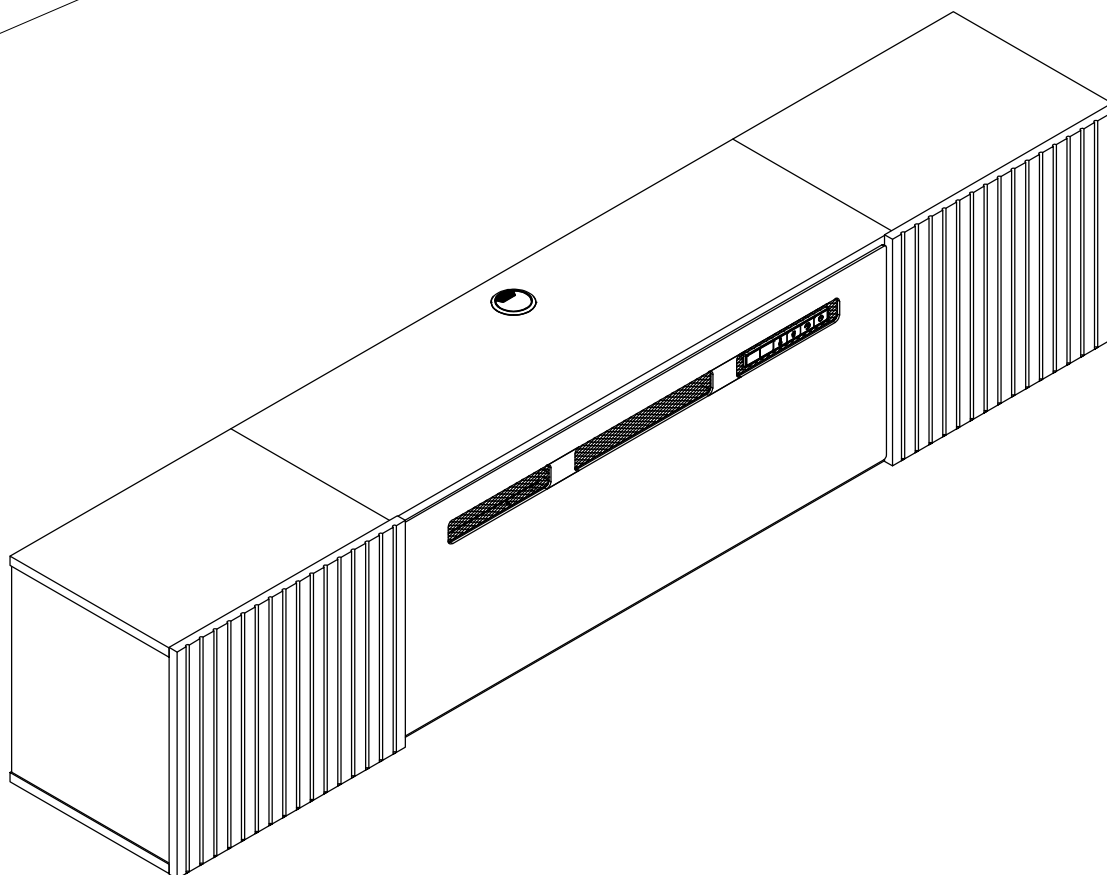 

Dear customer:

Thanks for your purchase in our store.

Any questions, please contact us via **Support @ s-wampat.com** with below details:

1. Purchase platform & order number
2. Model number & Instruction version#
3. The detailed photo (faulty part, damage part, if some parts are missing,
please circle it/them on the manual instruction) and send us.



We'll reply as soon as we receive your message(usually within 24 hours).