



Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	TV/Radio /
	Shift + 0
	Smart / List
	Guide / EPG / -/-
	Menu / Home

Original	Replacement
	Fav / Marker / PC
	Exit / Cancel / Clear
	Up
	CH+ / Page+
	Down
	CH- / Page-
	Left
	Vol-
	OK
	Right
	Vol+
	Red / Netflix / Search
	Audio / Lang I/II
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Display / Media
	Blue / Prime Video / Random





The image shows a black remote control with a variety of buttons. At the top, there are three large buttons: a red power button, a black 'SLEEPER MUTE' button, and a yellow 'EJECT' button. Below these are four blue buttons labeled 'TV', 'DVD', 'SAT', and 'AUX'. The main body of the remote contains numerous buttons for channel navigation (up, down, left, right, and center 'OK'), volume control ('+', '-', 'VOL'), and other functions like 'MUTE', 'RECALL', 'TEXT', and 'INFO'. A numeric keypad is located at the bottom, with buttons for digits 0-9, a 'GUIDE' button, and a 'FAV MARKER' button. The Mandis logo and website URL 'www.mandis.tv' are printed at the very bottom.