



anko

Cat Scratcher Box Easter

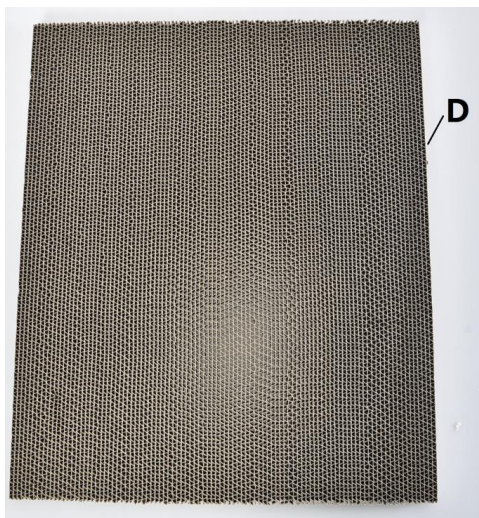

Contents

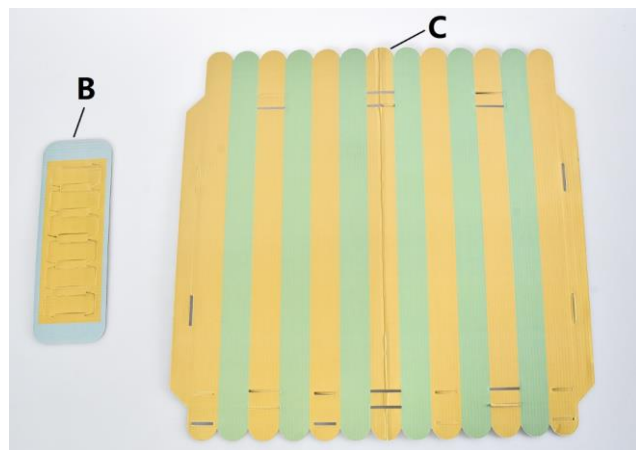


A. Bottom & Side paper x 1 pc	B. Connector Tabs x 6 pcs	C. Top paper x 1 pc	D. Paper Scratcher x 1 pc
-------------------------------	---------------------------	---------------------	---------------------------

Assembly Instructions

Step 1.

Connect the corners of part A together using the existing tabs that are on Part A. Refer to the image below:

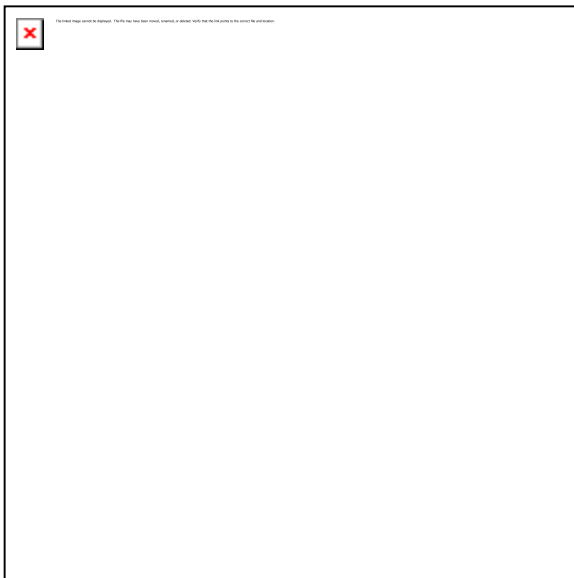

Step 2.

Place paper scratcher part D onto the floor of part A.



Step 3.

Connect the top part C onto the front and back sides of part A using the existing tabs that

are on Part A. Refer to the image below:



Step 4.

Tuck the sides of part C into the sides of Part A, use the blue tabs that are on part A to secure the roof.



Step 5.

Use the connector tabs Part B to secure Part C onto Part A. Remember to fasten them firmly.





WARNING: Pet toy – Not intended for children.

It is the responsibility of the pet owner if this toy is suitable for their pet's style of play.

No pet toy is indestructible and can be damaged during play.

For your pet's safety, inspect regularly and remove if damaged.

Always supervise your pet during play.