



RAZER KISHI ULTRA

MASTER GUIDE

Enter a new era of mobile gaming with the power of a full-fledged pro console controller. The **Razer Kishi Ultra** forges into new terrain as the greatest mobile controller ever created. Meticulously designed with console-class ergonomics, immersive haptics, and Razer Chroma RGB, the Razer Kishi Ultra delivers a true console experience with zero compromise.

CONTENTS

1. WHAT'S INSIDE 3

2. WHAT'S NEEDED 4

3. LET'S GET YOU COVERED 5

4. TECHNICAL SPECIFICATIONS..... 5

5. GETTING STARTED 6


6. USING THE CONTROLLER..... 8

7. SAFETY AND MAINTENANCE 14

8. LEGALESE..... 15

1. WHAT'S INSIDE


- Razer Kishi Ultra

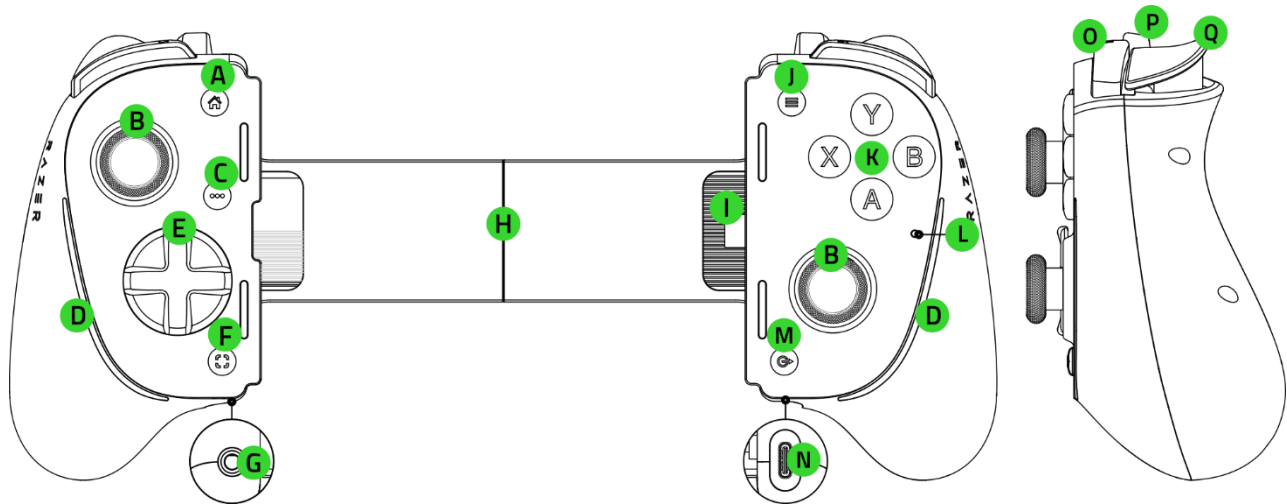

- | | |
|---|-------------------------------------|
| A. Home button | I. USB Type C connector |
| B. Clickable analog thumbsticks (L3/R3) | J. Menu button |
| C. Options button | K. Mecha-tactile ABXY buttons |
| D. Controller lighting Powered by Razer Chroma™ RGB | L. Status indicator |
| E. 8 Way Mecha-tactile D-pad | M. Razer Nexus button |
| F. Share button | N. USB Type C port* |
| G. 3.5 mm audio + mic port | O. Bumpers (L1 / R1) |
| H. Extendable bridge | P. Multi-function buttons (L4 / R4) |
| | Q. Triggers (L2/R2) |

**Only supports PC connection and passthrough charging. USB Type C audio and other accessories are not supported.*

- 3 pairs of interchangeable rubber cushions**

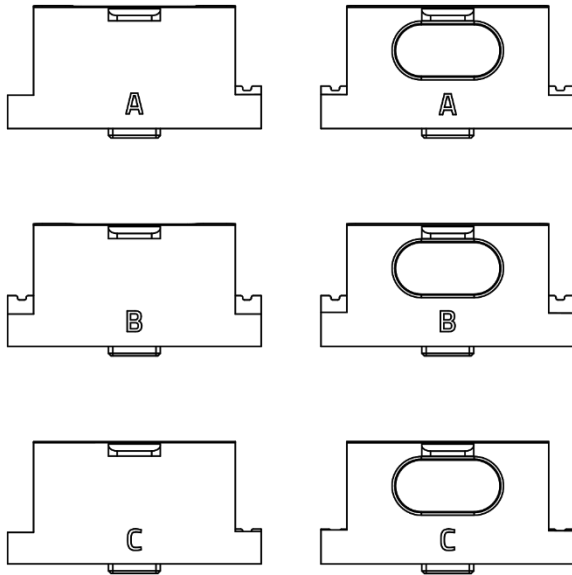

***Rubber cushions A are pre-installed with the controller*

- Important Product Information Guide

2. WHAT'S NEEDED

- Mobile device or PC with a USB Type A / Type C port
 - iOS 17 / Android™ 12 or higher[†]
 - Windows® 11 64-bit^{††}
- Internet connection for app installation

[†]Compatible with iPhone 15 Pro Max, iPhone 15 Pro, iPhone 15 Plus, iPhone 15, iPad mini (6th generation), Razer Edge, Samsung Galaxy S23 Series, and Google Pixel 6 / 7 / 8.


^{††}External cable required, sold separately.

3. LET'S GET YOU COVERED



Register your product and score exclusive benefits

razerid.razer.com/warranty

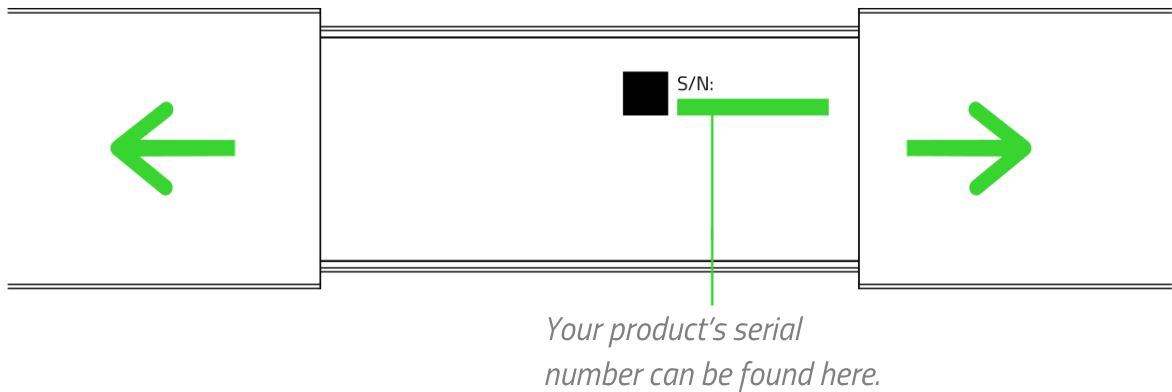

4. TECHNICAL SPECIFICATIONS


- Pro grade USB Type C game controller
- Console-inspired ergonomic form factor
- Full-size, console-class buttons and analog sticks
- Pass through charging
- Latency-free USB Type C connectivity
- Razer Sensa HD Haptics
- 3.5mm audio port with mic support
- Chroma addressable RGB
- Mecha-Tactile ABXY buttons and 8 Way Mecha-Tactile D-Pad
- Compatible with Android tablets up to 8-inches*

**Max allowable device length shall be 203.2 mm.*

5. GETTING STARTED


SETTING IT UP

A. With your mobile device

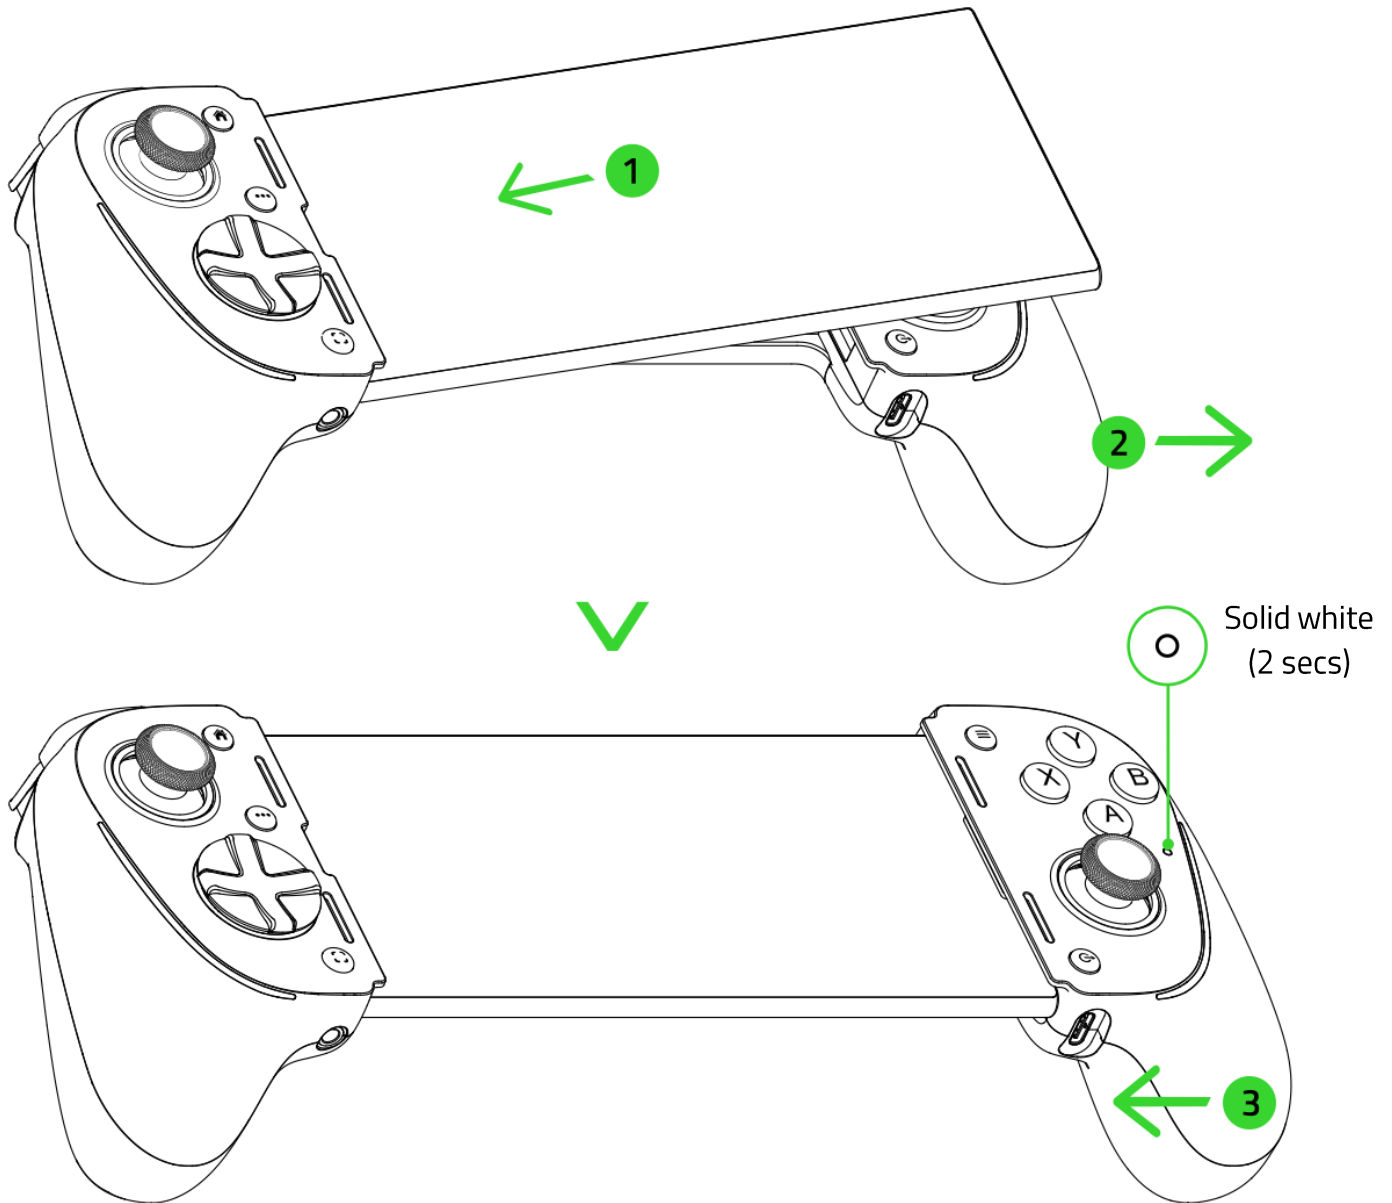

i The controller can support maximum device dimensions of 12.32 mm (thickness, including camera) x 208.9 mm (Length) for phones and tablets.

B. With your PC

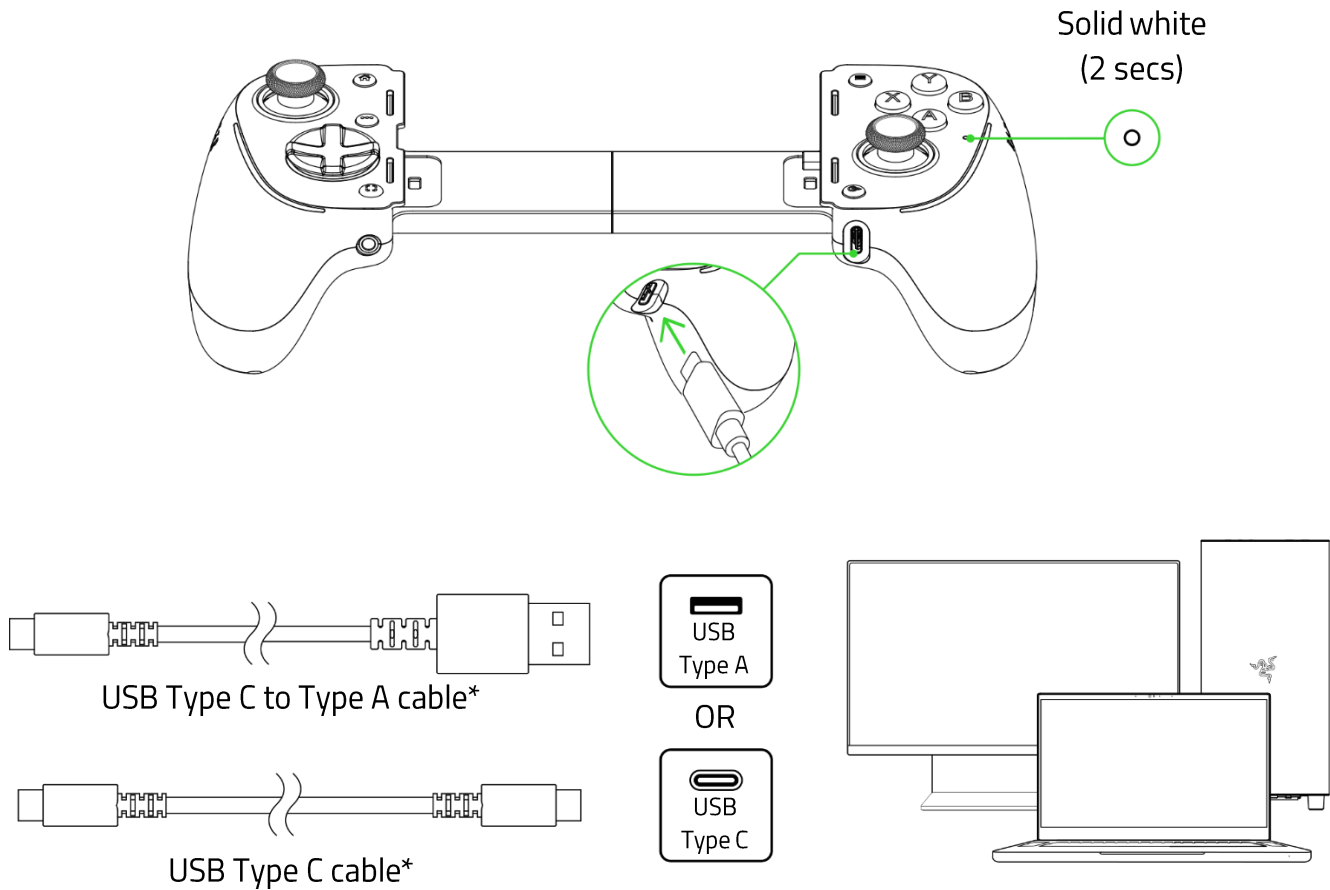


**Not included, sold separately.*

i Detach your mobile device when using the controller on a PC. The controller will use XInput on Windows.

INSTALL THE RAZER NEXUS GAME LAUNCHER (FOR MOBILE DEVICES)


Launch compatible games, remap controller buttons, enable or disable haptic feedback, configure additional lighting effects, take screenshots, record or share gameplay, and much more.

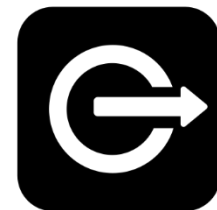


Razer Nexus Game
Launcher

6. USING THE CONTROLLER

DETACHING YOUR PHONE

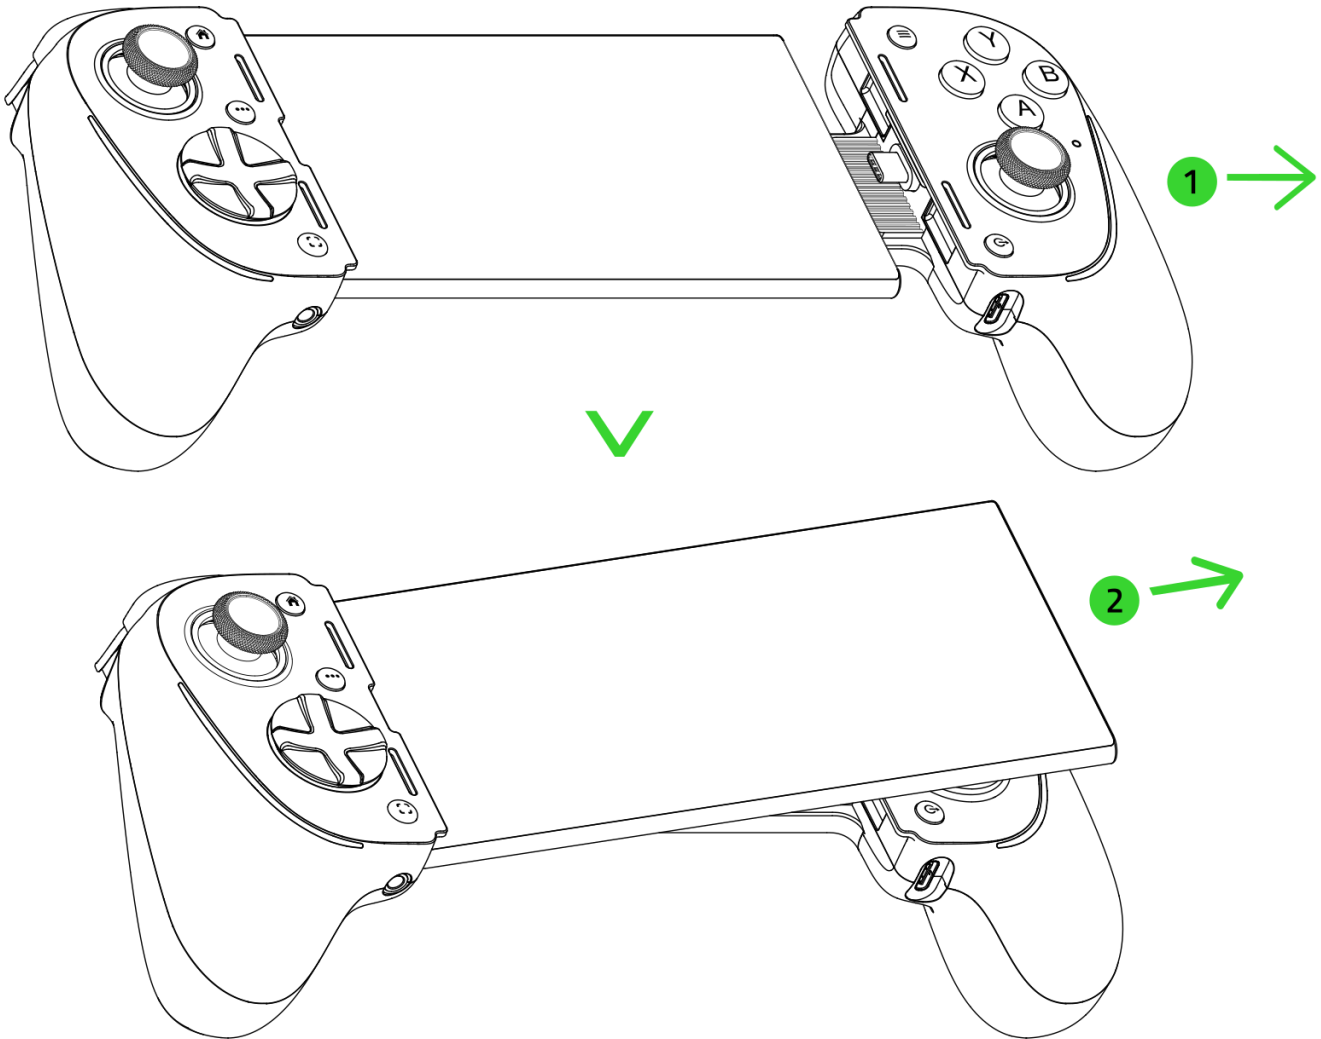


PASSTHROUGH AUDIO

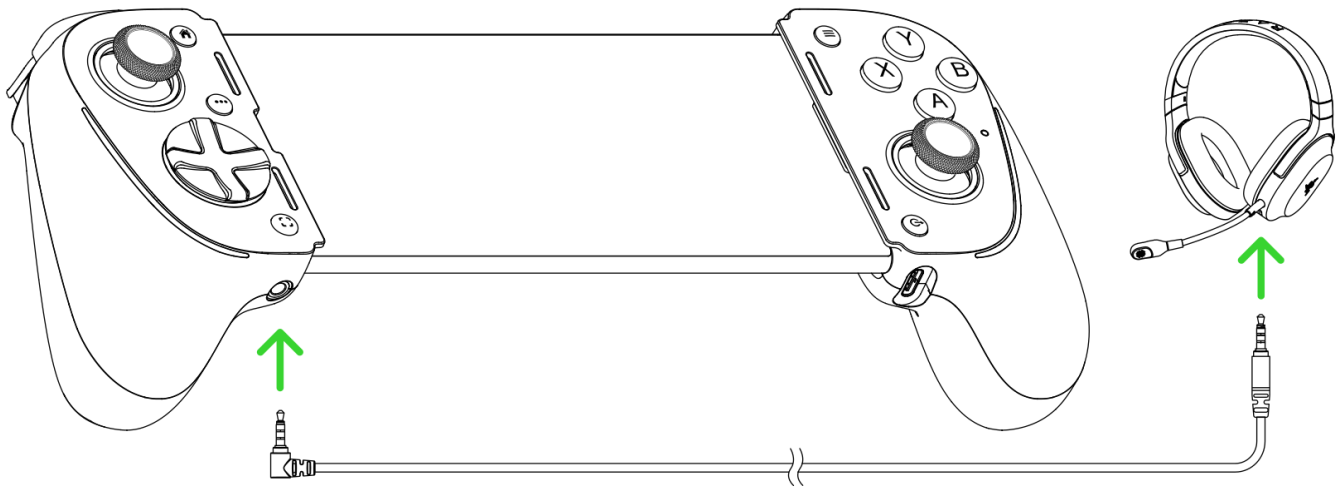

i Razer headset sold separately. This feature works with both mobile device and PC connections.


PASSTHROUGH CHARGING

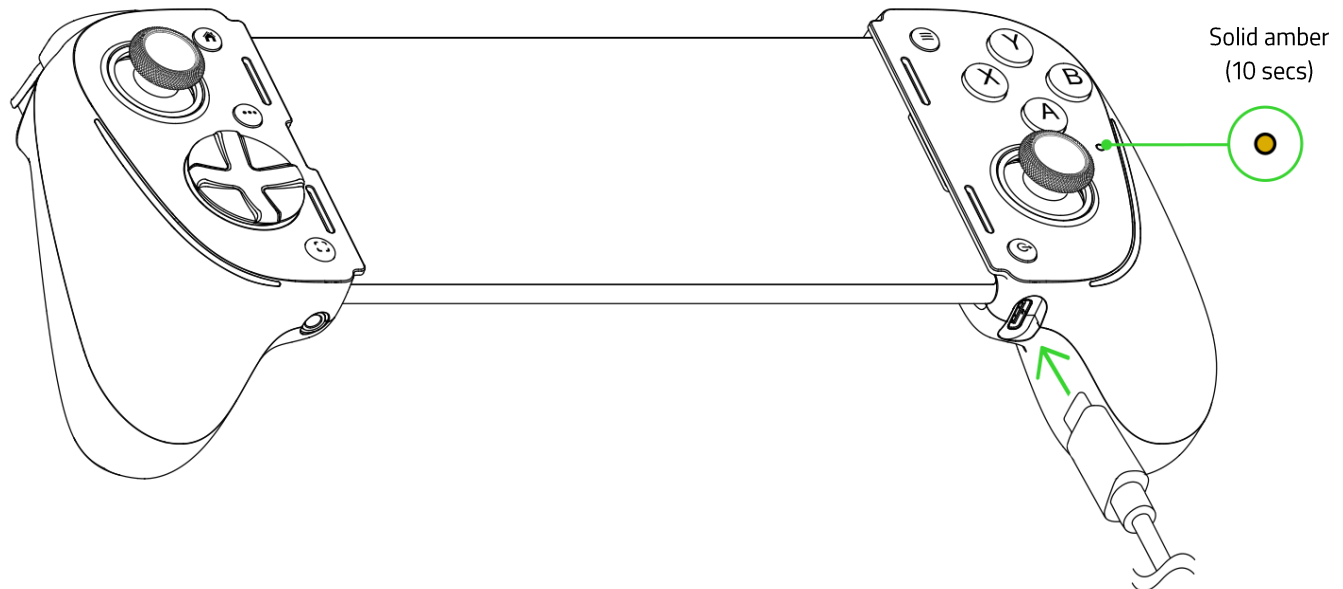

i When using the passthrough charging feature, the status indicator will briefly display a solid amber status. Make sure to only use a USB-IF-certified charging cable. USB Type C audio and other accessories are not supported.


USING THE RUBBER CUSHIONS

Depending on which mobile device you're using, swap the attached rubber cushions with any of the extra pairs included in the package to ensure your device fits snugly into the controller.

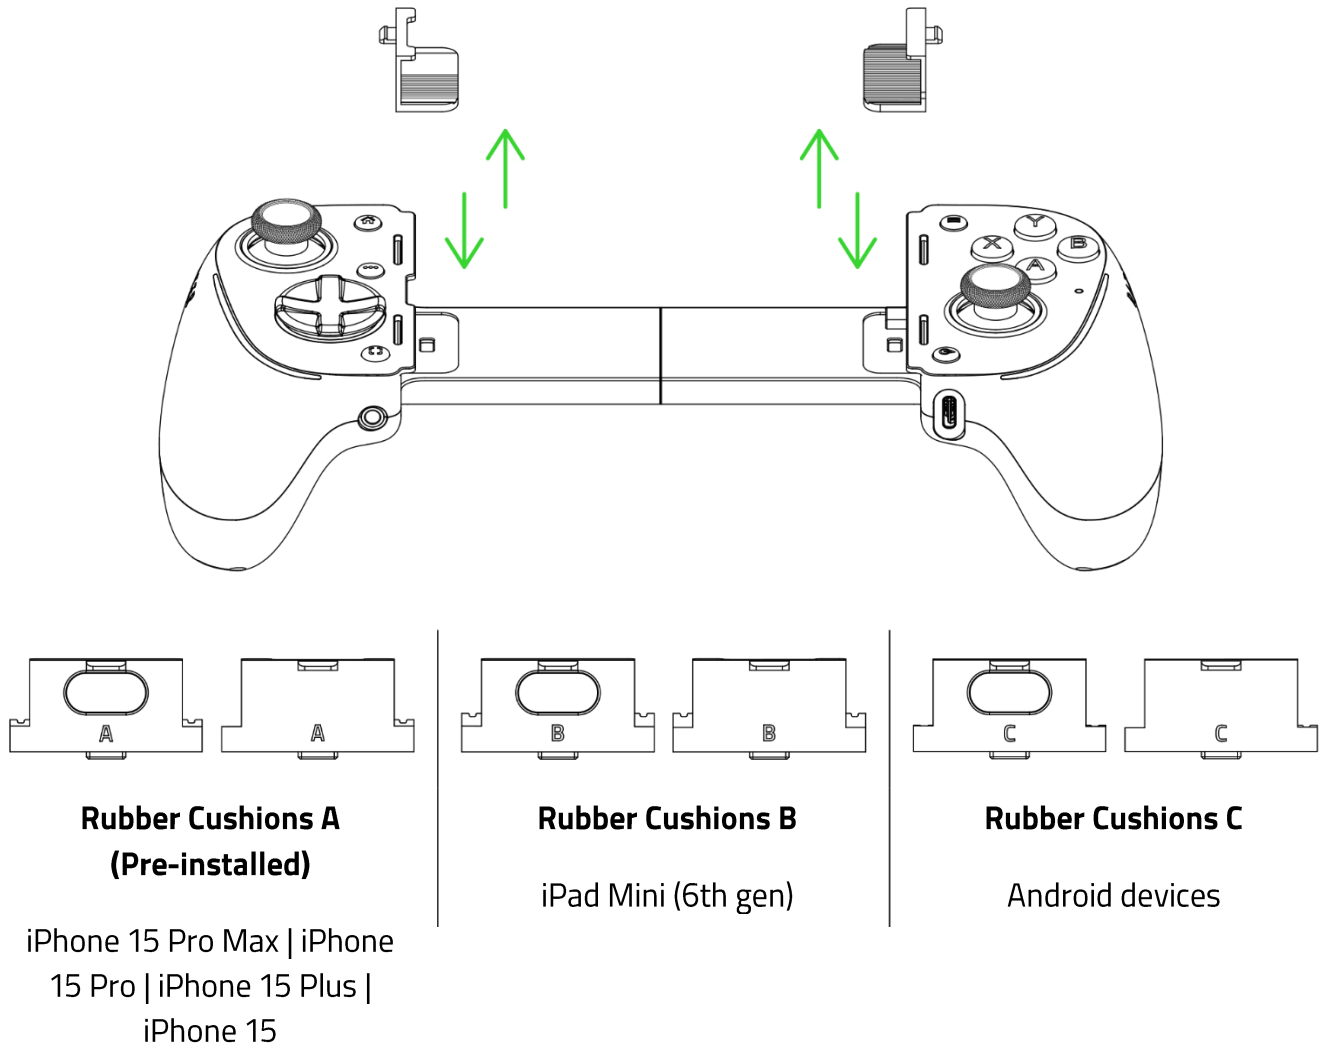

By default, rubber cushions A are pre-installed with the controller. For a case-fitted phone, you can also try removing the rubber cushions to see if it's compatible with the controller.



ADJUSTING THE HAPTICS INTENSITY

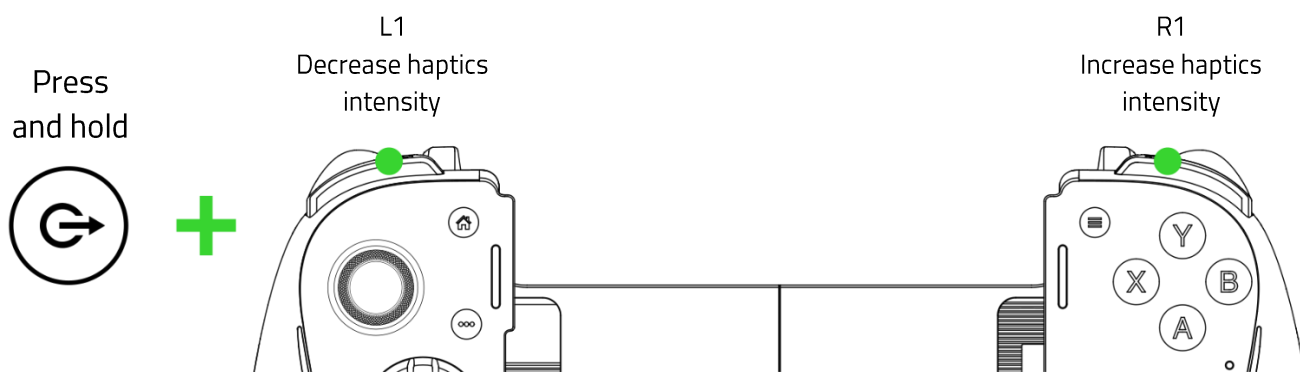

i *Haptics compatibility may vary per game and device.*

SWITCHING BETWEEN CONTROLLER MODES (FOR ANDROID DEVICES ONLY)

Switch between controller modes to immediately have your controller up and running with your games.

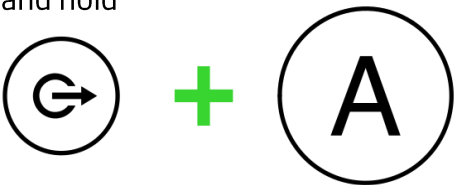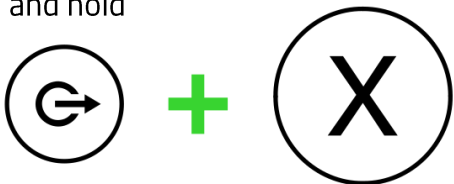HID mode (default for Android devices)	Press and hold  Suggested for most Android games.
XInput mode	Press and hold  Enables native controller vibration for cloud gaming services and emulators.

i *The Razer Nexus Game Launcher app can automatically switch the controller between HID and XInput mode when launching vibration compatible games.*

CUSTOMIZING THE CONTROLLER LIGHTING

Customizing the lighting effect

To cycle through available lighting effects:

Press
and hold



STATIC > SPECTRUM CYCLING (DEFAULT) > WAVE


i Additional color options and lighting effects can be configured using the Razer Nexus Game Launcher app.

To switch between colors in Static effect:

In Static
effect



Press
and hold

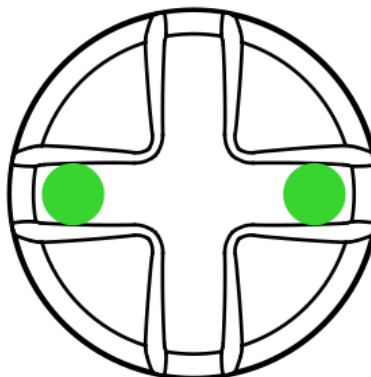

GREEN (DEFAULT) > CYAN > BLUE > PURPLE > RED > ORANGE > YELLOW > WHITE

To adjust the animation speed of Spectrum cycling or Wave effect:


In Spectrum
cycling or Wave
effect



Press
and hold



Adjusting the brightness level

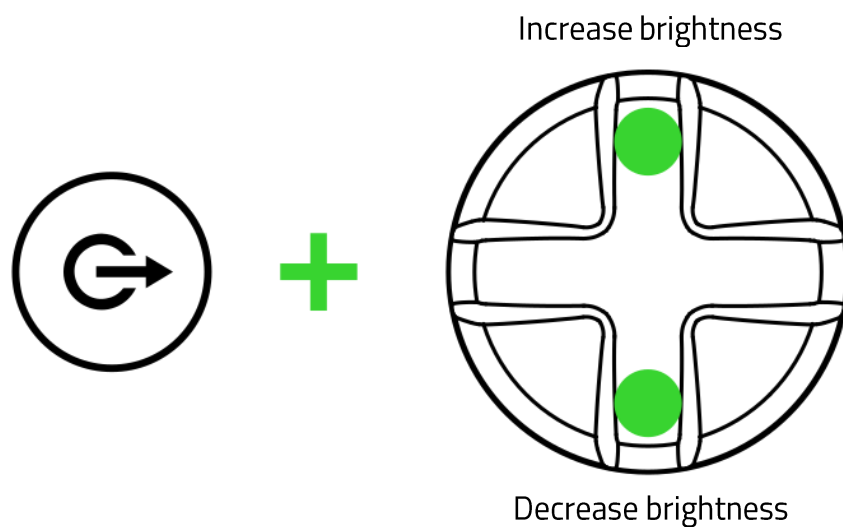

7. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

To achieve maximum safety while using your Razer Kishi Ultra, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, make sure to unplug the device (if applicable) and contact the Razer hotline or go to support.razer.com for support.

Don't take apart the device, and don't attempt to operate it under abnormal current loads. Doing so will void your warranty.

Keep the controller's accessories out of the reach of small children to avoid accidents and/or injuries.

Keep the device away from liquid, humidity, or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, detach the device to let its temperature stabilize to an optimal level.

MAINTENANCE AND USE

The Razer Kishi Ultra requires minimum maintenance to keep it in optimum condition. Once a month, we recommend you clean the device using a soft cloth or cotton swab to prevent dirt buildup.

8. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2024 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, "For Gamers. By Gamers.", and "Razer Chroma" logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks are the property of their respective owners.

Android, Google, Google Logo, Google Play, and the Google Play logo are registered trademarks of Google LLC.

Apple, Apple TV, Apple Watch, iPad, iPad Air, iPad Pro, iPhone, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.

Windows and the Windows logo are trademarks or registered trademarks of the Microsoft group of companies.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Kishi Ultra (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit razer.com/warranty.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without

invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.