

# **T60 User Manua**

True Wireless Earbuds V1.1 2024.12.27

it has a battery. If swallowed, seek medical help. Store out of their reach when not in use.

• The ear caps are made of soft silica gel, and the ear hooks are made of elastic TPE material. A very small number of users may have allergic reactions. If symptoms like itching or swelling of the skin on or around the ears appear, stop wearing them immediately and seek medical

• Pollen, dust and cosmetic residues are easy to attach to the earbuds, which may easily lead to allergic situations. Please clean the earbuds before and after use and avoid exposure to highly allergenic

skin around the ears before using them. If any discomfort occurs, stop using them immediately and consult a dermatologist.

in/on your ears, then turn the volume up gradually until you reach acomfortable, moderate listening level.

• Keep away from children and pets to prevent accidental ingestion as

• People with sensitive skin should test the earbuds on a small area of

• To avoid hearing damage, do not use your earbuds at a high volume. Turn the volume down on your product before placing the earbuds

 
• Long earbuds use may lead to ear fatigue, tinnitus and affect ear blood circulation. It's recommended to take a 5-10 minute break per hour of wearing to relax your ears and enjoy healthy listening.

Cy Tel: (781) 785-8160 Mon.-Fri.


Customer Service









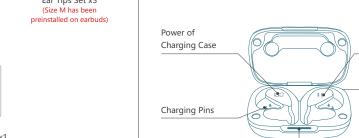

Overview

Earbuds Case: Made of plastic, free of heavy metals such as lead.

small fraction of individuals with allergies to Silica gel might experience

mercury and cadmium. It is environmentally friendly and durable. Ear tips Part: Crafted from silica gel, this part is designed to softly conform to the ear canal. While it is generally well-tolerated, a very

a mild allergic response. Ear Hook Part: Made of TPE elastic material, which is wear-resistant and stable. It is normally harmless, but people with extremely sensitive skin may feel slightly uncomfortable.

should consult an ENT doctor before use.

It suits daily office, study, entertainment, sports lovers and travelers. But some need caution or doctor's advice:

People with Sensitive Skin: Allergy-prone should do a local test. If uncomfortable, stop and consult a dermatologist.

Patients with Ear Diseases: Those with ear diseases like otitis media

Differences in Ear Canal Structure: Different ear canal structures may affect the wearing comfort and sound insulation. If there is any discomfort,

Differences in Skin Sensitivity: Allergic people may have symptoms such as skin itching. Stop using it and wash it with water, then seek medical treatment and inform the doctor about the usage situation. Differences in Hearing: Follow the "60 - 60" principle to protect your

Put the earbuds into the case, then charge both earbuds and charging case via supplied Type-C charging cable for at least 10mins (or after not






## 2. The earbuds are installed with a pair of size M ear tips by default. You

 stop using it and check the wearing method or consult a doctor.

hearing. If there is any discomfort, stop using it immediately and consult


1. Before the first use, please tear off the isolating film on the earbuds. until you find the most comfortable and secure position.



## can select other suitable sizes for a secure fit.

case for 3 seconds to enter Bluetooth pairing mode. 1. Choose the Ear Tips that fit your ears best. 2. Insert the earbuds into the inner canal of your ears and turn gently

 help if needed.







\* When successfully connected, you will hear the prompt "connected" and the LED indicators will turn off. continuously, the other bud will blink white slowly.

### Force Control: Don't insert earbuds forcefully to protect ear canal. If the earbuds are not connected to any devices over 5 minutes, they will power off automatically. Turn on the earbuds manually by pressing Adjust ear hooks gently to avoid over-pressing ear skin. the MFB button for 2 seconds to hear the prompt "power on".

• Adaptation for Sports: Ensure ear hook positions are right and stable before exercise to prevent shaking/friction harm like abrasions. 2. Select "T60" on your device's Bluetooth list to connect. • Stop if Uncomfy: If there's any discomfort like ear canal pain, skin

1. Open the charging case, and pick up the earbuds from the charging

itch or foreign body feeling, stop using earbuds, check, and seek medical



• The LED indicators on the buds will flash white-red in sequence

# Switch from one device to another

Each time you power on your earbuds, they will automatically connect to your last successfully connected device if available within the Bluetooth range. If you wanna switch between devices, please first turn off the Bluetooth of the last device.



1. Go to the Bluetooth settings on the other device. For example, on your phone, go to Settings → Bluetooth. 2. Tap or click your earphones on the list of discovered devices.



\* If you don't see your buds in the list, you might need to reset the buds.

## djusting volume for low sound on earbuds

If you feel that the sound of your earbuds are too low, please follow the problems or function issues. steps below to adjust the volume: 1 Long Press the "R" earbud to maximize the volume of the earbuds

2 Increase the volume of your Android devices.

\* This is only applicable to situations where the volume of the earbuds and the Android devices are not synchronized.

until you hear a "du" sound.

• When Bluetooth connected, you can use either one of the earbuds only by placing the other one into the charging case. • When powered on and connected, if either one of the earbuds is out

of battery and powered off, you can keep using the other one. • When you are on a call, place either one of the earbuds into the

charging case, and the microphone in the other earbud will be activated.




Reset

You might need to reset the earbuds if you experience any connectivity 1 Take the earbuds out for 5mins to consume some battery of both

buds. (Can't be reset if the earbuds are fully charged) Place the earbuds in the charging case and earbuds blink red.

3 Press and hold the button on the buds for 8 seconds until the LED indicators flash red-white 3 times. This confirms that the reset was successful and your earbuds can be connected normally.

When resetting the earbuds, make sure the earbuds are properly connected with charging points in the case, or it may cause resetting

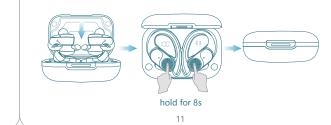

Specifications are subject to change without notice.

	Wiodel IVo 100	Troduct Harrie. Wireless Sport Earbads		
	Input: 5V == 1A	Charging Cord Type: Type-C		
	FCC ID: 2A33A-T60	Impedance: $32\Omega$		
	IC: 32589-T60	Battery Capacity: 3.7V 600mAh, 2.22Wh		
	HVIN: T60	Transmission Range: 33feet (Without Obstacles		

Model No : T60 Product Name: Wireless Sport Farbuds

## Clean your earbuds

waterproof. The charging case is not waterproof, so be careful not to get moisture in any openings.

• Remove the earbuds from the charging case. Disconnect the charging cable from both the case and your computer

# 4 Use a soft, dry, lint-free cloth to clean all other areas of the buds and

Input: 5V == 1A	Charging Cord Type: Type-C		
FCC ID: 2A33A-T60	Impedance: 32Ω		
IC: 32589-T60	Battery Capacity: 3.7V 600mAh, 2.22Wh		
HVIN: T60	Transmission Range: 33feet (Without Obstacles)		

# Your earbuds are sweat and water-resistant, but not sweatproof or

or power adapter. 3 To clean the charging contacts on buds, use a cotton swab slightly

dampened with warm water. To clean the charging pins on the case, use a lint-free cloth slightly dampened with warm water. If necessary, you can slightly dampen the cotton swab or cloth with 70 percent



## • Clean earbuds weekly at least. Use in sweaty, dusty or allergen-rich environments requires more frequent cleaning.

## • After contact with pollen, dust or cosmetics, wipe the earbuds surface with a clean damp cloth before use to reduce allergen residue. If you know you're allergic, clean the earbuds promptly after use.

## Care for your earbuds

Clean and dry your earbuds and your skin after workouts or heavy sweating. Keep your earbuds and charging case clean and dry.

\*Press and hold for 2s (R/L) in power-off state \*Pick up buds from the charging case Non-music playing, press and hold for 5s (R/L) \*Not connected to any devices over 5mins

//Pause	Press Once (R/L)		Р
kt Track	Press Twice (R)		Ν
vious Track	Press Twice (L)		Р
ume+	Long Press (R)		V
ume -	Long Press (L)		V

# Activate Siri or other voice assistant software

For Call	
nswer/End a call	Press Once (R/L)
eject a call	Press and hold for 2 seconds (R/L)

# U Power On/Off Power off

Music Mode			I Music IV
ıy/Pause	Press Once (R/L)		Play/Pause
ext Track	Press Twice (R)		Next Track
evious Track	Press Twice (L)		Previous Track
lume+	Long Press (R)		Volume+
lume -	Long Press (L)		Volume -



• Fully dry off the earbuds and the USB port before charging.



# Type-C USB charging

	Music Mode	
	Play/Pause	Press Once (R/L)
	Next Track	Press Twice (R/L)
	Previous Track	Unsupported
	Volume+	Long Press (R/L)
	Volume -	Unsupported

# a USB-C charging cable.

1. Place the earbuds in the charging case and close it. 2. Connect the charging case to the power supply by using

Music Mode		
Play/Pause	Press Once (R/L)	
Next Track	Press Twice (R/L)	
Previous Track	Unsupported	
Volume+	Long Press (R/L)	

Use a certified USB-C charging cable and charger to prevent any damage.

Power Status

## During charging, the digital display flashes and shows the real-time power until 100.

▶ The right display panel indicates the charging status per bud. There are separated power consumption indicators by 4 grids in total, which will be flashing when charging.

## ▶ The LED indicator on the charging case indicates the charging status. Wireless charging

Easily charge the case without cables, just put your charging case on the wireless charging pad. If the charging case is not being charged, please

1. Fully charge and reset your earbuds as stated above and re-pair

# environment to see if it works well.

obstructions. To fix this issue, please try the following:

1. Remove the protective film covering the connectors on the earbuds.

2. Reboot the Bluetooth device you're using (such as a phone or

# 3. Check the earbuds with another Bluetooth device in a different

1. Cannot pair or reconnect with my device. 2. One side does not pair with the other side of my device. 3. No music plays after connecting with my device. 4. Only one earbud has sound.

## Q: What should I do if the earbuds disconnect or the sound is choppy? have enough battery).

A: Please note that this doesn't necessarily mean there is an issue with 4. Turn on the Bluetooth of your device and search for T60 and the earbuds, but may have something to do with the connected device and environment. Bluetooth signals may be influenced by obstructions, such as walls, pillars, home appliances, Wi-Fi, and more. To ensure a stable connection, we recommend avoiding such

Q: What should I do if any of the following problems occur? 2. Check the earbuds by listening to a downloaded song/video.

Q: What should I do if any of the following problems occur? A: 1. Confirm the charging case has power left (open the charging

## computer). Forget all the pairing records of your earbuds on your device and turn off Bluetooth. 3. Reset the earbuds as per the steps above(make sure your earbuds

pair. If there is a pop-up window to confirm pairing for "T60," please select "Pair." If you accidentally select "Cancel," you need to refresh (turn off and turn on) the Bluetooth of your device and pair the earbuds again.

> 1) The earbuds don't recharge in the charging case. 2) The earbuds stay connected to the device even after being placed in the charging case with the lid closed. 3) The earbuds don't turn on when taken out of the charging case.

case to check if there is white light flashing). 2. Clean the charging pins with a dry cloth and an alcohol-based the equipment. disinfectant. This is to ensure all charging contact pins on the earbuds and charging case is completely clean and dry from sweat and water. Then put the earbuds correctly into the case. The light and display flash when the earbuds are placed in the case. (1) This device may not cause harmful interference, and 3. Please use the certified charging cable and wall charger. (2) This device must accept any interference received, including

4. Please check whether the ear tips are installed properly.

3. A battery subjected to extremely low air pressure that may result in an

## limits for a Class B digital device, pursuant to part 15 of the FCC Rules. Using the wrong battery can cause fire and other hazards (for example

1. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of abattery, that can result in an explosion. 2. Do not leaving a battery in an extremely high temperature surrounding

liquid or gas.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate

interference that may cause undesired operation.

This equipment complies with ECC radiation exposure limits set forth for This device complies with part 15 of the FCC Rules. Operation is subject an uncontrolled environment. This transmitter must not be co-located or to the following two conditions: operating in conjunction with any other antenna or transmitter.

These limits are designed to provide reasonable protection against in the case of some lithium battery types) harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. environment that can result in an explosion or the leakage of flammable If this equipment does cause harmful interference to radio or television

Reorient or relocate the receiving antenna.

of the following measures:

Note: This equipment has been tested and found to comply with the

reception, which can be determined by turning the equipment off and on,

the user is encouraged to try to correct the interference by one or more

# explosion or the leakage of flammable liquid or gas.

— Increase the separation between the equipment and receiver. — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. — Consult the dealer or an experienced radio/TV technician for help.

## This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

## (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables

aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique

subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. The device is compliance with RF exposure guidelines, users can obtain

Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'acquérir les informations correspondantes.

Canadian information on RF exposure and compliance.

Le présent appareil est conforme

RECYCLING

This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize

The symbol indicates DC voltage

electronic equipment (WEEE).

2. Hearing Damage Risk

new electrical or electronic equipment. This product can be used across EU member states.

its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a

NOTE: 🗐 1. High Sound Pressure

3. Do not listen at high volume levels for long periods.

## DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

This product bears the selective sorting symbol for Waste electrical and

The device is low power device, it can meet the requirement of the RF

CE A RoHS