

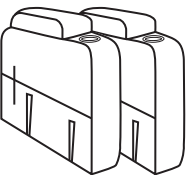


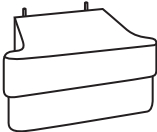





Power Recliner Chair Owner's Manual


Mcombo.com
Amazon.com/mcombo


6160-7752

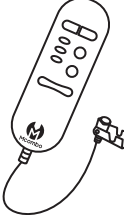A	B	C	D	E	F
					
Chair Base	Backrest	Right and Left Armrest	Power Cord	Recliner Control	Remote Control

Make sure that the armrest /the back support connector is fully aligned with the chair base connector when inserting it, and then press down firmly until you hear a "click" sound to complete.

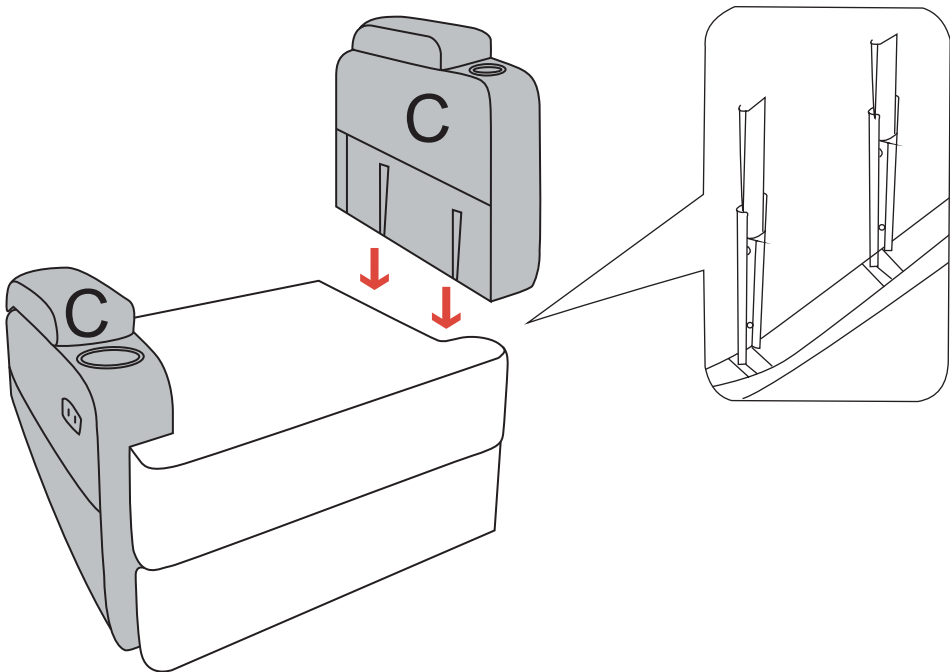STEP1

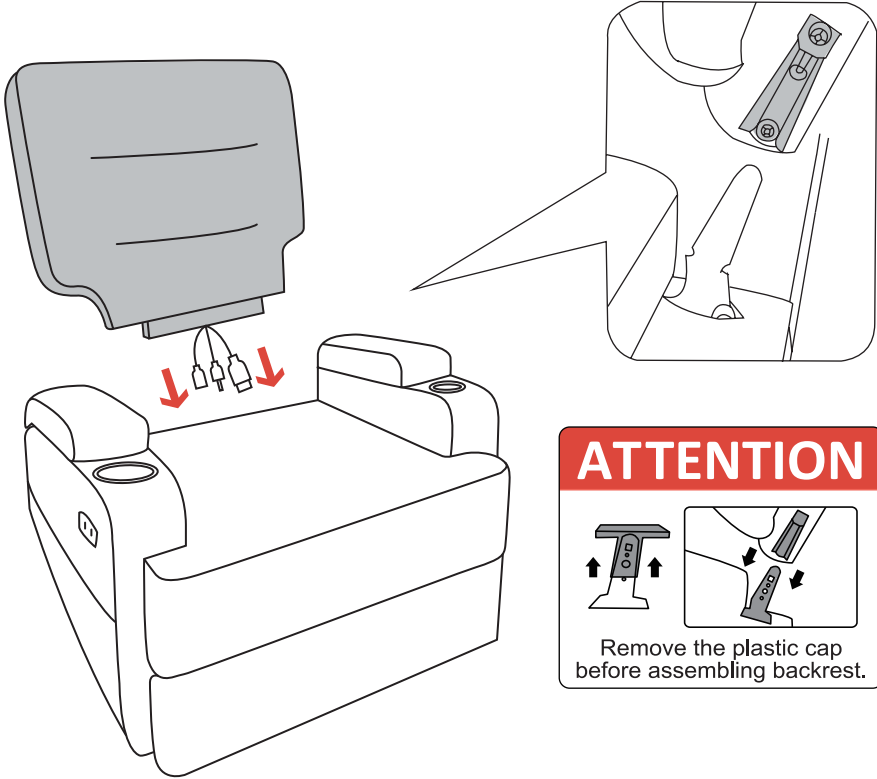
STEP2

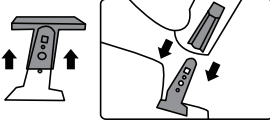
ATTENTION


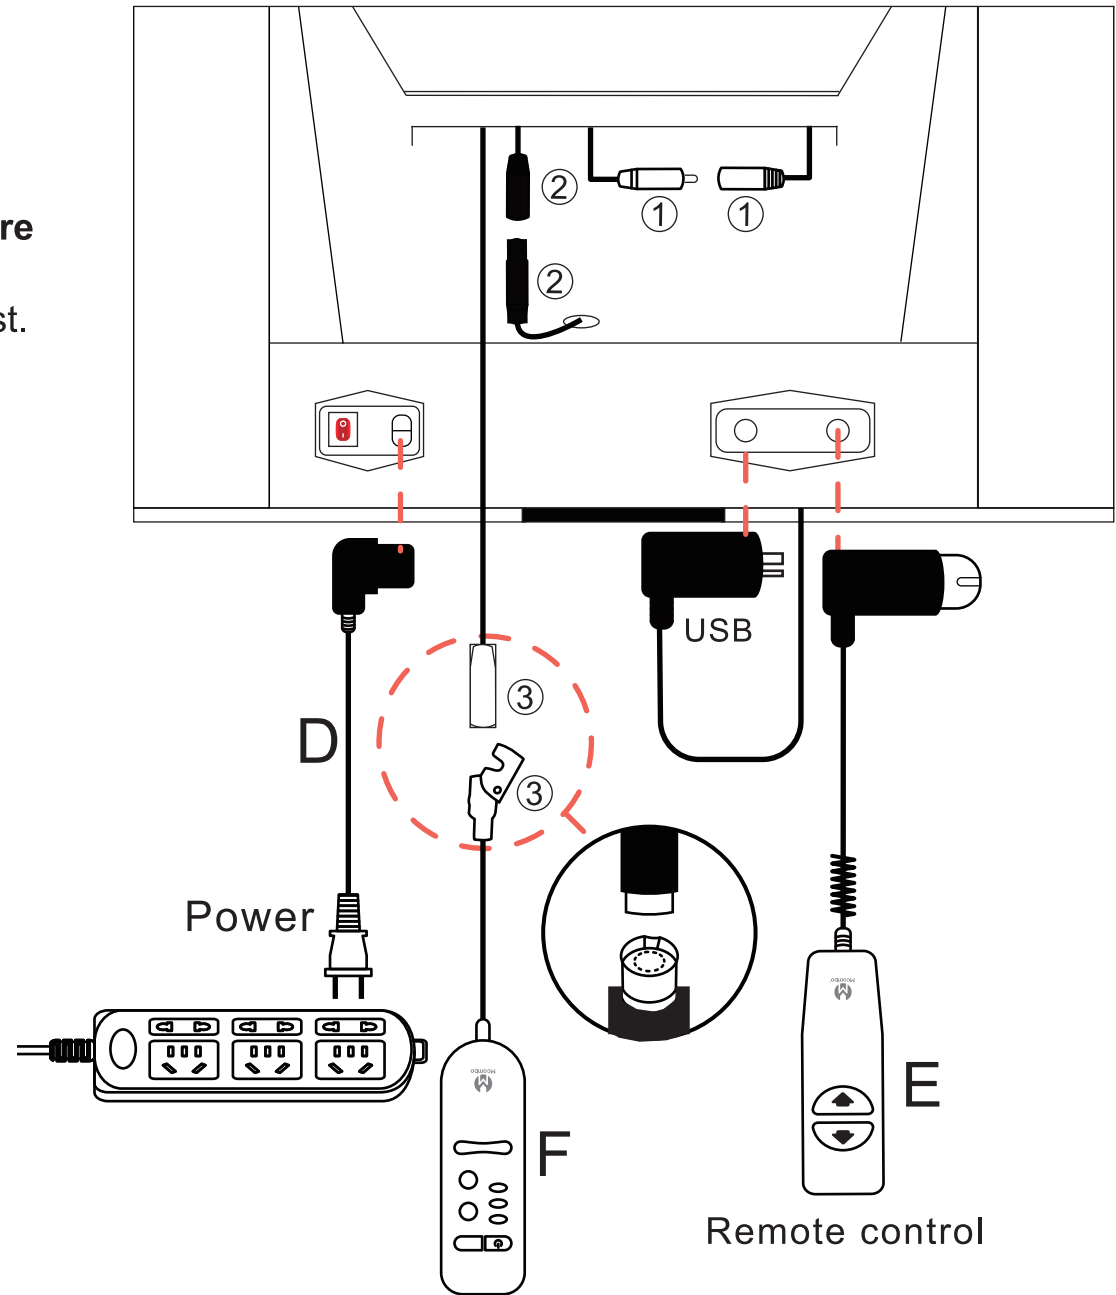
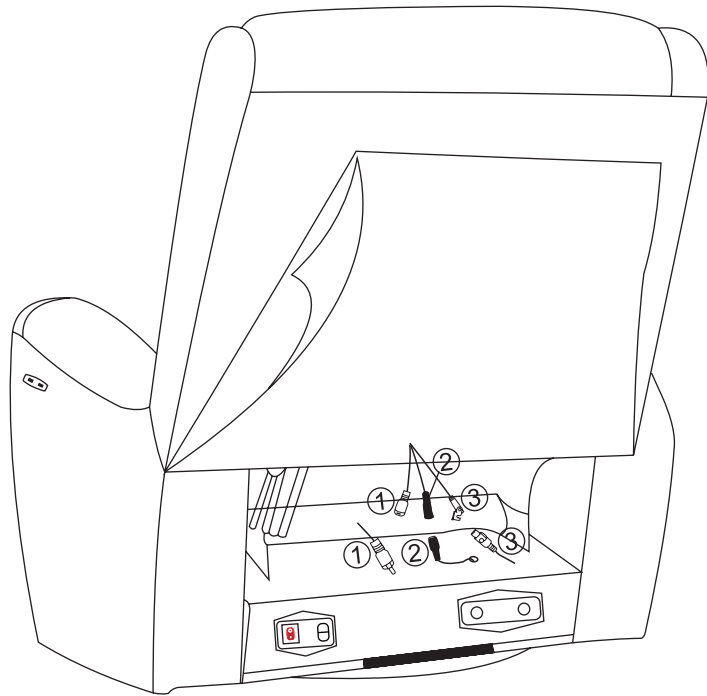
Remove the plastic cap before assembling backrest.

STEP3


No. ① wires from the backrest and chair base with same color connect together.

No. ② wire from the back connects to the wire at the bottom of the sofa.


The USB socket in the bottom of the sofa armrest.




How to recline?

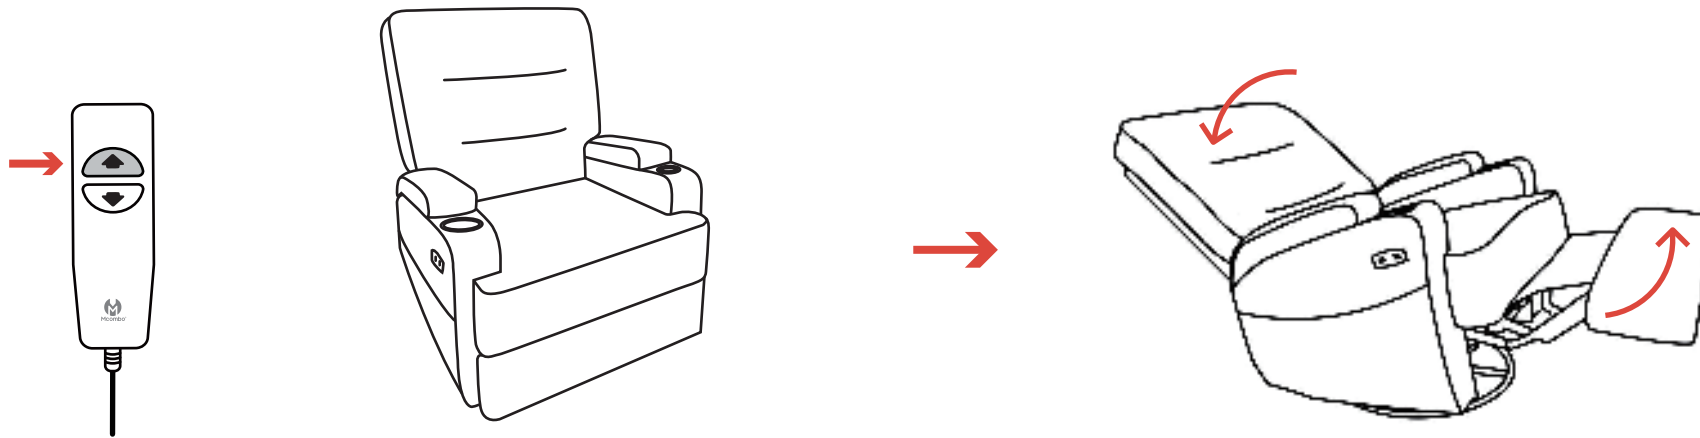

How to get footrest latch down?

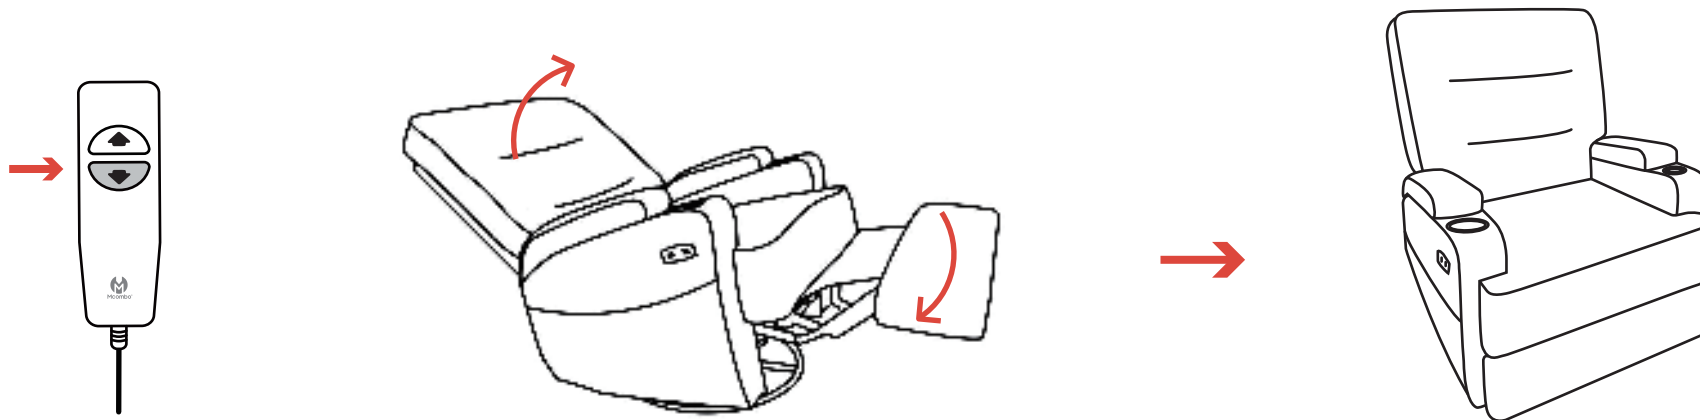

How to use the massage remote?

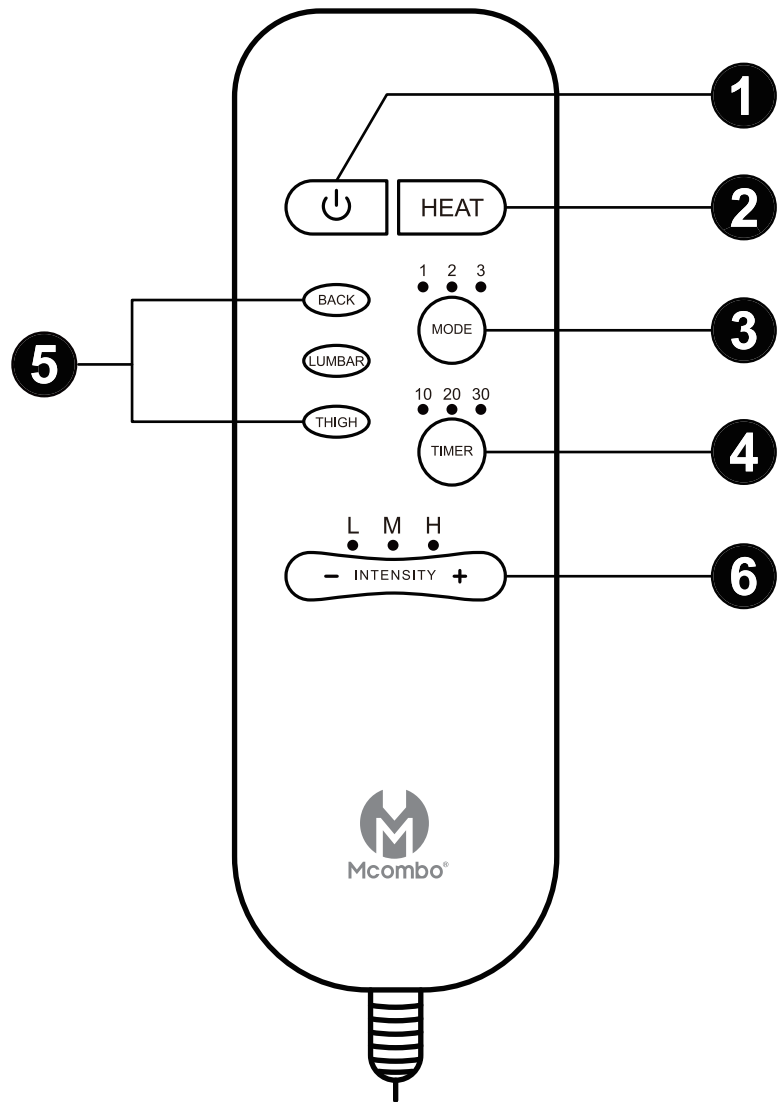

1. POWER: Turn on/off remote control.

2. HEAT: Turn on/off the heating function for the backrest.
(Heating function works with vibration separately.)

3. MODE: Set different massage modes.

4. TIMER: The timer can be set in fixed time 10/20/30 minutes.

5. POINTS: Control massage points (back, lumber, thigh) individually.

6. INTENSITY: Select the strength of the massage function (low, medium, high).

TROUBLESHOOTING

The following troubleshooting FAQs should summarize what you need to know about your recliner chair. If at any time you do not feel comfortable performing the troubleshooting steps listed in this manual, please contact Mcombo Customer Support for service.

Questions	Questions Answers
What if the reclining function of my recliner chair does not operate at all?	<ul style="list-style-type: none"> • Make sure all the connections of the chair are secured. • Check if the RED light on the swith and the GREEN light on the power adapter on the bottom of the base are on. • Check all the electrical cords are not crimped or pinched. • Make sure the GREEN light of the recline remote goes on.
What if the massage and heat do not work?	<ul style="list-style-type: none"> • Check all the electrical cords are not crimped or pinched. • Make sure the GREEN light on the power adapter on the bottom of the base is on. • Check if the GREEN light on the USB charge ports goes on. • Make sure the lights of the massage remote go on.
What if the USB charge ports do not work?	<ul style="list-style-type: none"> • Make sure the massage and heat are both effective. • Make sure the USB cable coming out of the right armrest is properly connected; • Check if the GREEN light on the USB charge ports goes on.
What if the armrest falls apart from seat?	<ul style="list-style-type: none"> • Ensure the two connections on each armrest are all inserted onto the seat tightly. • Check the brackets of armrest and base to ensure there is no defects.
What if my recliner chair makes a clicking noise?	<ul style="list-style-type: none"> • Check to make sure the chair frame, motor and wiring are intact. • Make sure the weight capacity of 300 lbs has not been exceeded.
What if my recliner chair tilted to one side?	<ul style="list-style-type: none"> • Check the brackets of backrest are installed into seat tightly. • Make sure the frame at the bottom of recliner chair is in a good condition without any distortion. • Use recliner chair on the flat carpet, not smooth floor.

IMPORTANT: If the recliner still does not operate properly, please contact the Mcombo Customer Support for help and never attempt to make any repairs or adjustments yourself.

PRODUCT CARE

Dust regularly with a soft, dry cloth to prevent soil build-up. Keep away from heat to avoid glazing, melting or scorching. Use a professional cleaning service to clean the fabric.

WARRANTY

Electronic Parts	1 Year
Swivel/Gliding/Reclining Mechanism	1 Year
Metal/ Wood Chair Frame	1 Year

All of product come with a 30-day return/replace policy. During this time, we will cover the shipping cost of return and replacement for quality issue, through provide pre-paid return labels or pick up service for customer's convenience.

Note: Please disassemble the swivel glider before you return it otherwise there will be a huge cost as oversized.

WARNING

- Proper assembly of this item requires 2 people.
- This product is not intended for institutional or commercial use.
- Read all instructions before assembling this product.
- FALL HAZARD – To prevent death or serious injury, always keep child within arm's reach.
- Avoid placing this item in direct sunlight to prevent fading.
- Check this product for damaged hardware, loose joints, missing parts or sharp edges before and after assembly and frequently during use.

Mcombo®



Mcombo.com



Amazon.com/mcombo

Newacme LLC, 2808 Vail Ave, Commerce, CA, 90040
sales@mcombo.com
1-323-597-1109