


## 产品部件

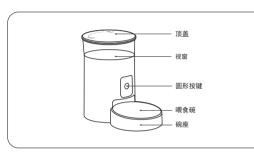











显示屏幕.

奇 領止

△ 卡粮

使用电池

Ū USB供电

△ 用餐数

指示灯功能说明

△ 未用电池/缺电

MEAL SIZE 8 用餐量

Smart智能互联版及Cute版

●指示灯模页。WIFI连接生阶



 最多可設置10条曜食计划 已设置完成的喂食计划。单击进 方滑某条**喂食计划。可删除该**条 · 特许国金、现在另北的一次

• **手动哪會**-设置手动出粮1-12份 单位转换-已喂食重量可显示为 

• **宠物粮余量**-提示"不足"时请立 • 电池电量-"0%"即为电池电量 "由源供由"即为使用TYPF-C由源 • 故障日志-点击查看故障次数

•红色指示灯常亮-卡粮提示 ●黄色指示灯闪烁-余量不足提示 ●白色指示灯闪烁-WIFI待链接 ■食日末-占击者看護会器折期 ◆白色指示灯常亭-WIFI连接成功 喂食记录及7日喂食统计折线图

注:WIFI连接失败之后,长按圆形按键5秒以上 传唱食器重新进入配网状态。

绿色指示灯常亮-机器正常运行

红色指示灯闪烁-卡粮提示

• 喂食键-单击1次出餐1份,连击2次出餐2次,

a 长按5c以上"解络键" 哪會異常出"唷"市后松

,此时按下"设置键"。进入时间设置(哪食器默认

显示24小时制),显示屏"时钟数字"闪烁,点按

c.再次按下"设置键",进入餐数设置,显示屏

"MFAI "闪烁、占按"+"、"-"显示屏"食物符号"

随之增多或减少,以此设置每日出X餐(餐/

日),最高可设置每日4餐(下述设置以每日4

d.随后按下"设置键",进入第一餐出粮时间设置,

显示屏"时钟数字"、"食物符号"同时闪烁、点按 "一"设置第一餐出粮时钟数字;紧接按

"沿置键" 显示屏"分钟数字"、"合物符号"同时

闪烁,点按"+"、"一"设置第一餐出粮分钟数

显于原"合物效品" "数字条行"同时闪烁 占位

f.e步骤操作完成后、哪食器发出"嘀"声即代表设

"一"设置第一餐出粮份数。同理操作设置

e.之后按下"设置键",进入第一餐出粮份数设置。

"一"键设置当前时钟,同理操作设置"分钟

以此举推、连击X次即出赖X份

数字"。即可设置完成当前时间。

字 第一條出籍时间沿置容ዜ

剩全3餐出舱时间及每餐出舱份数

• 定时喂食设置

开,进入设置模式。

餐为例进行操作)

(+)(-) 增減键

⊚ 设置键

(名) 解物键

黄色指示灯闪烁-电池电量低

物品,无存放则无需更换。

1. 哪食器仅支持有密码设置的2.4GHz-WFI,请知悉。

2. 建议使用5-12mm直径宠粮,形状不限。请勿放置冻干、

受謝, 亦质等问题 季及时处理, 6. 请定期清洗喂食碗,以免滋生细菌。如需清洗,请将喂 食碗擦干后,再放入碗座。

注意事项

湿粮及其它类型食物。

议放置角落或靠墙外。

置时间或哪食计划。 10. 三个月内幼宠不建议使用此设备。

12. 喂食器须使用标准的电源插座,并与其它电器分开使用。

13. 确保使用电压与喂食器注明相关电源参数相符合。

iF使用。 15. 避免哪食器遭受猛列接击

\* 请用户仔细阅读警告及注意事项内容,如不遵守,后果

7.使用干抹布清理喂食器储粮桶及机身内部出粮口、拨

4 由洲包含污染物质。请注意交干正规由洲回收占处理。

常见问题

3. 请正确放置本设备;为防止宠物扑倒、碰翻本设备,建 4. 请定期更换防潮料盒中的干燥剂及其它具有防潮功能的

3. 弃置本品时,请注意分类回收,或交于官方指定回收中心。

5 请定期检查并确保储舱桶外干干燥家封状态。如遇宠粮

7. 请勿将宠粮以外的所有物质放入储粮桶,以免造成设备

使用异常、引发食物变质等。讲而危害宠物健康。 g 产品由源线应尽量隐蔽效置, 以免穷物撕砂、抓挠使其

> 9. 喂食器长时间断电,再次接通电源后,可能需要重新设 版及Cute版红色指示灯常亮并且App提示卡粮:建议清

11 川斎洁勿弟弥信田

14.避免用力拉扯电源线,如电源线或插头损坏,请立即停

准放置即可。

清洁回收

1. 不可将喂食器浸在水中或者其它液体内。 2. 開食器不可用水清洗、以免损坏元件、建议用干抹布或 对宠物无害的中性洗涤剂。如雲清洗储粮桶、请擦干后 片等处食物残渣。

A: 检查申源线是否连接正确: 申源活配器是否完好: 申源 抓应显不涌中,建设使用标准EV/ 1A中语活配器连控附 送TYPE-C电源线重新连接或使用4节5号电池进行

Q: 智能互联版及Cute版喂食器WIFI网络连接不成功怎么

A· 可能外于5GHz-WIFI数据传输模式下:哪食器仅支持有 家码设置的2.4GHz-WFI数据连接、建议重新连接WFI

Q: 哪食器提示卡納怎么回事? A· 定时版红色指示灯闪烁并每30分钟镜鸣2亩、智能互联

理出粮口、机身内部卡粮。

Q: App提示缺粮怎么回事? A: 请及时补粮。

Q: 哪食器不出赖怎么回事? A: 1.储粮桶没有食物: 请立即添加。

2.储粮桶内部拨片松动;请重新安装调试拨片。

3.储粮桶未安装对位;将储粮桶底部转轴与下部卡扣对 4.食物颗粒较大;建议更换5-12mm宠粮;食物太轻或易

粉碎、请勿使用冻干。 5.食物受潮结块;建议重新更换干燥宠粮

6.出粮份数太多造成出粮口堵塞;建议重新设置并减少 出納份数或等待宠物将外部食物吃完之后, 卡赖可自行

recycling of the classification should be submitted to the

note that it is disposed of at a regular battery recycling

Questions & Answers

official designated recycling center.

Jiangsu Paikewei Pet Products Technology Co., Ltd. MADE IN P.R.C.

### Parts List



 Main Framex1 Food Barrelx1 Feeding bowlx1





TYPE-C power cordx1 6 User's Manualx1


Bowl Holderx1




# Product parts

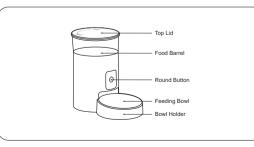

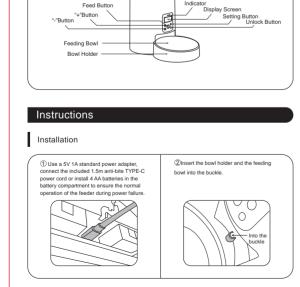

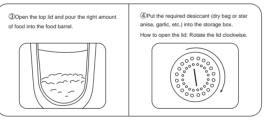




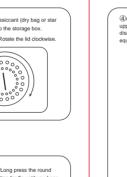



## (5)Click "Next", select 2.4Ghz-WIFI, and

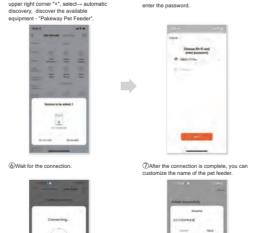


-----



### App control operation

②点击头像可进入喂食

器操作设置界面

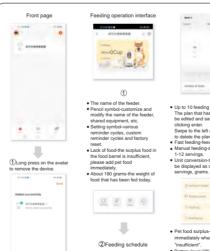

・暖食份数-1-16份

工作日(周一-周五

周末(周六-周日)



be displayed as cups, ounces

. Numbers on the left-hours. Numbers on the right-minutes.

Working days (Monday-Friday)

Weekend (Saturday-Sunday)

. Battery level-"0%" means the batte of failures and reasons.

· Pet food surplus-please add it

· Failure log-click to view the number Feeding log-click to view the recent feeding record of the feeder and the

· Red indicator light is always on-food is stuck Yellow indicator light flashes-insufficient food White indicator flashes- pending network status The white indicator light is always on-distribution success status. line chart of the 7-day feeding The indicator light is off-Network connection failed machine is operating normally

∂ Lock

△ Jam

No Battery

USB Power

MEAL SIZE Meal Size

Meal

### Description of button functions

### Smart version and Cute version twice feed twice, and so on. Timed feeding setting. Double-click down round button - feed once Long press the round button for 5s - pending a Long press the "Unlock Button" above 5s until you hear a been, then the feeder enters the setting m

+/-" Button

c.Press the "Settings button" again to enter the meal setting, the "MEAL" flashes, click the "+", "-" display "Food Symbol" increases or decreases, so as to set the daily number of meals (meals/days), up to a maximum of 4 meals per day (the following setting

maximum of 4 meals per day (the following settings take 4 meals per day as an example).

d.Then press the "Setting Button" to enter the first meal setting, the "Hour Number", "Food Symbol" flashing at the same time, click 4"-" to set the hour number of first meal, press the "Setting Button" immediately, the "Minute Number", "Food Symbol" flashing at ti same time, click "+" "-" to set the minute number of e. After pressing the "Setting Button" to set the numb

Press the "Settings Button" at this time, enter the

e.Atter pressing the "Setting Button" to set the numbor of meals for the first meal, the "Food Symbol", "Digital Symbol" flashes at the same time, click "+". "to set the number of meals for the first meal. The same operation sets the feeding time of the remaining 3 meals and the number of meals per f. You're done with the setup when you hear a beep.

Indicator function description

 Red indicator light flashes-food is stuck . Yellow indicator light flashes-battery is low

# Cautions

1 The feeder only supports 2 4GHz-WIFI with a password setting, please be aware.

It is recommended to use 5-12mm pet food, with any shape. Do not place freeze-dried, wet food and other

types of food. 3. Please place the device correctly; in order to prevent pets from falling or knocking over the device, it is recommended to place it in a corner or against a wall 4. Please regularly replace the desiccant in the storage box and other items with moisture-proof function. If it is

(the indicator light does not light, the operation does Please clean the feeding bowl regularly to avoi breeding of bacteria. If you need to clean it, please dry

Ensure that the voltage used is consistent with the power parameters indicated by the machine.

plug is damaged, please stop using it immediately.

Please read the warning carefully and follow the cautions, otherwise you will be responsible for the

Cleaning and recycling

1. Do not immerse the machine in water or other inquos. 2. Do not wash the feeder with water to avoid damage to the components. It is recommended to use a dry rag or a neutral detergent that is harmless to pets. If you need to clean the food barrel, please wipe it dry before

5. Avoid heavy impact on the machine

(the indicator light does not light, the operation does not respond, etc.). What's the matter? 4: Check whether the power cord is connected correctly, whether the power adapter is intact, whether the power socket is powered on; it is recommended to use a standard 5V 1A power adapter to connect the attached TYPE-C power cord to reconnect or use 4 AA batteries for convey exists. for power supply.

Q: Why is the WIFI connection unsuccessful? Do not put all the materials other than pet food into the food barrel, so as to avoid abnormal use of the tood barret, so as to avoid abnormal use of the equipment, food deterioration, etc., which may endanger the health of the pet. 8. The product power cord should be placed as concealed as possible to prevent pets from biting, scratching and A: It may be in 5GHz-WIEI data transmission mode: the feeder only supports 2.4GHz-WIFI data connection with password setting, it is recommended to reconne WIFI to 2.4GHz.

damaging it.

9. The feeder is powered off for a long time, and it may be A: The red indicator light of the timed version flashes and necessary to reset the time or feeding plan after the 2 short beeps every 30 minutes, the red indicator light of the Smart version and the Cute version is always o

power is turned on again.

10. This equipment is not recommended for young pets within three months.

1. Children do not use alone.

2. Must be equipped with a standard power socket and used separately from other electrical appliances. Q: Why does the App prompt that there is a shortage of

A: Please replenish food in time. 2: Why does the feeder fail to deliver food 14. Do not pull the power cord forcibly, if the power cord or

: 1. There is no food in the food barrel, please add it

 The paddles inside the food barrel are loose please. The paddles inside the food barrel are loose, please re-install and adjust the paddles.
 The food barrel is not installed in place, just align the bottom shaft with the lower buckle and place it.
 The food particles are large, it is recommended to replace the 5-12mm pet food, the food is too light or

easy to crush, please do not use freeze-drying. ommended to replace the dry pet food.

6. Too many food servings cause the food outlet to b blocked; it is recommended to reset and reduce the food servings or wait for the pet to finish the external food, the stuck food will fall by itself.

7. Use a dry rag to clean up food residues in the food barrel and internal food outlets, paddles, etc.

# AKEWA

为爱波计 Design for pet.

### 派可为乖乖吃饭喂食器使用说明书 Pakeway Automatic Pet Feeder User's Manual

售后客服CS

关注派可为企业号, 获取更多机器使用信息

 
江苏派可为宠物用品科技有限公司

www.pakeway.com

中国制造

Pay attention to Pakeway's enterprise number and

get more machine usage information



品 名:派可为乖乖吃饭喂食器 型 号: PKY-21BF02S 产品尺寸: 约325×193×291mn

材 质: 工程塑料、金属、软胶等 额定电压: 5V 1A 适用对象: 宏物 执行标准: Q/PKW 011 2021 产品等级: 合格品

Applicable Object: For Pet Executive Standard: Q/PKW 011 2021 Product Grade: Qualified Product

Model: PKY-21BF02S

Rated voltage: 5V1A

Size: About 325×193×291mm

Name: Pakeway Automatic Pet Feeder

Material: Engineering plastics, Metal,

Soft rubber, etc.

### 感谢您购买本产品。在使用派可为乖乖吃饭喂食器前,请先仔细阅读并妥善保管本使用说明书! 因产品技术不断更新升级,本册说明仅供参考,相关信息如有变更,恕不另行通知,敬请谅解!

Thank you for purchasing this product, before using the Pakeway Automatic Pet Feeder User's Manual please read this manual carefully and keep it properly for future use! the relevant information if there is a change, please understand that we will not notify you again! This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.