

Temperature & Humidity Sensor

Zigbee

- User Manual -





* Please read this manual carefully before use and keep it for future reference.

• Please read the manual carefully and use the product correctly

Thank you for purchasing and using this product. Before using the product, please read the manual carefully and use the product correctly, in order to avoid damage to the equipment, such as all consequences caused by abnormal operation. The company will not take any responsibility.

★ The pictures in this manual are used to guide the user's operation and are for reference only. Please refer to the actual product for details.

• Product description

Main body


Status Indicator

Reset Button

1. Installation Instructions

Install the product on the wall with double-sided tape or place it in the space you want to measure.

The installation position is for your reference only (as sticker to affix the product)

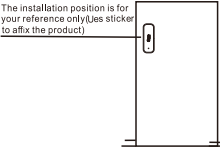

Precautions:

Do not install the product outdoors, on an unstable base, or anywhere unprotected from the rain. The installation place of the door sensor should be smooth, flat, dry and clean.



2. Network Configuration

1. Power on the product



Open the battery cover

Install the battery to start the product, paying attention to the positive and negative polarity of the battery.

2. Press the RESET button for 5s and release, the LED will flash for network configuration.



Press the RESET button for 5s then release

Quick connection mode:
Press and hold the button for 5 seconds, the indicator light will flash slowly, and follow the prompts to add from the gateway app. When unable to connect to the network, please use compatibility mode.
Compatibility mode:
Press and hold the button for 10 seconds, the indicator light will flash quickly, and follow the prompts to add from the gateway app.

Tips:

*The Zigbee version product must be connected to the Zigbee gateway to function properly and upload data to the server/APP

3. Product Parameters

Product Name	Temperature & Humidity Sensor
Wireless Protocol	Zigbee
Working Voltage	DC3V
Battery Type	LR03-1.5V(AAA)*2
Standby Current	≤20uA
Operating Temperature	-10°C ~ 55°C
Operating Humidity	0% ~ 99% RH

4. Function Description

After setting parameters on the APP, the device needs to be triggered once to synchronize the parameters.
For example, Press the button once

Temperature & Humidity Sensor

Zigbee

- User Manual -





* Please read this manual carefully before use and keep it for future reference.