

Oversized Kids Recliner

A Kids Place

Assembly Instructions



◇IMPORTANT◇

Take some time to read the contents of this instruction before using your Mcombo Kids Recliner. Keep this manual for future reference.

Hello!

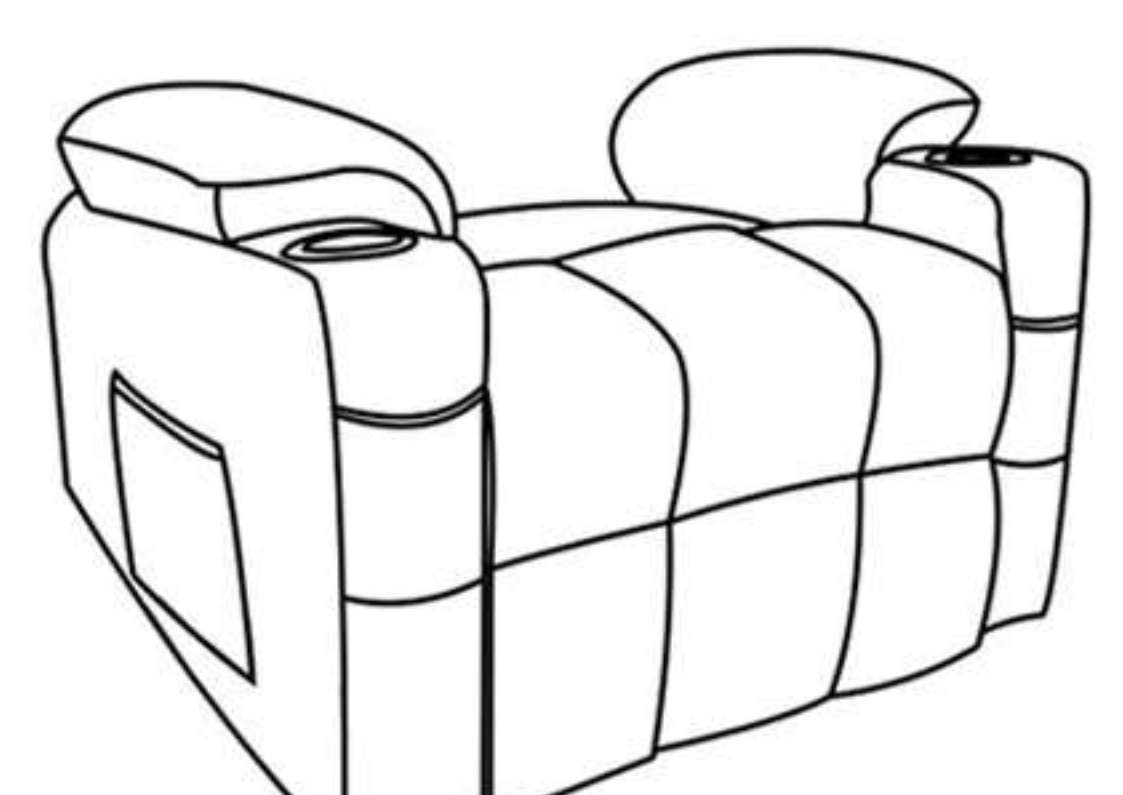
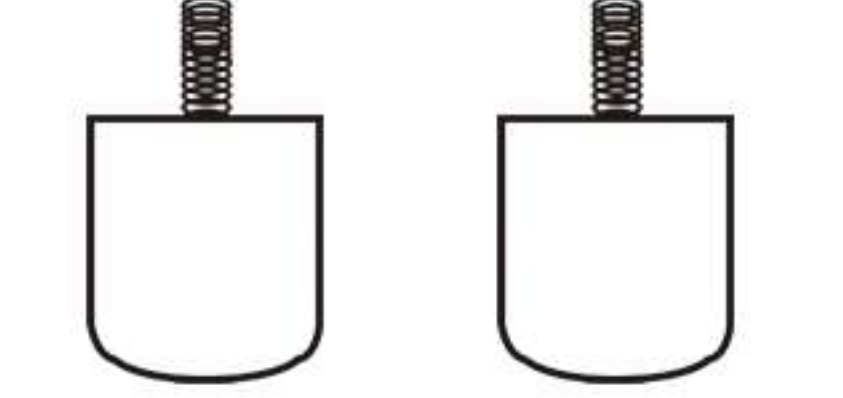
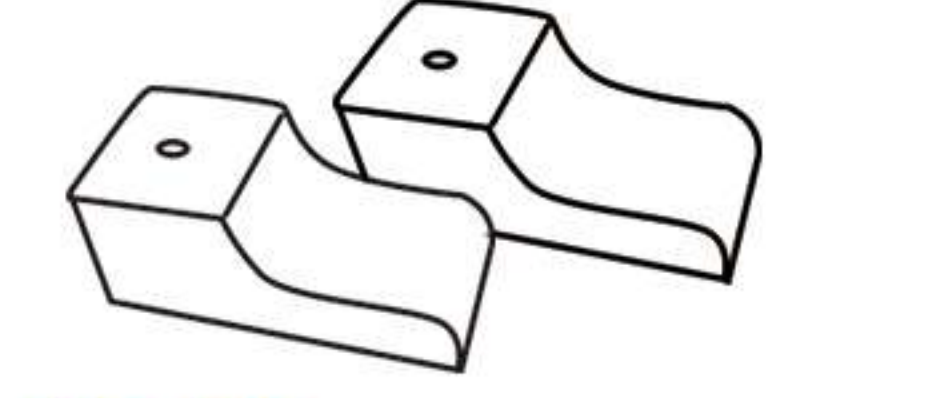
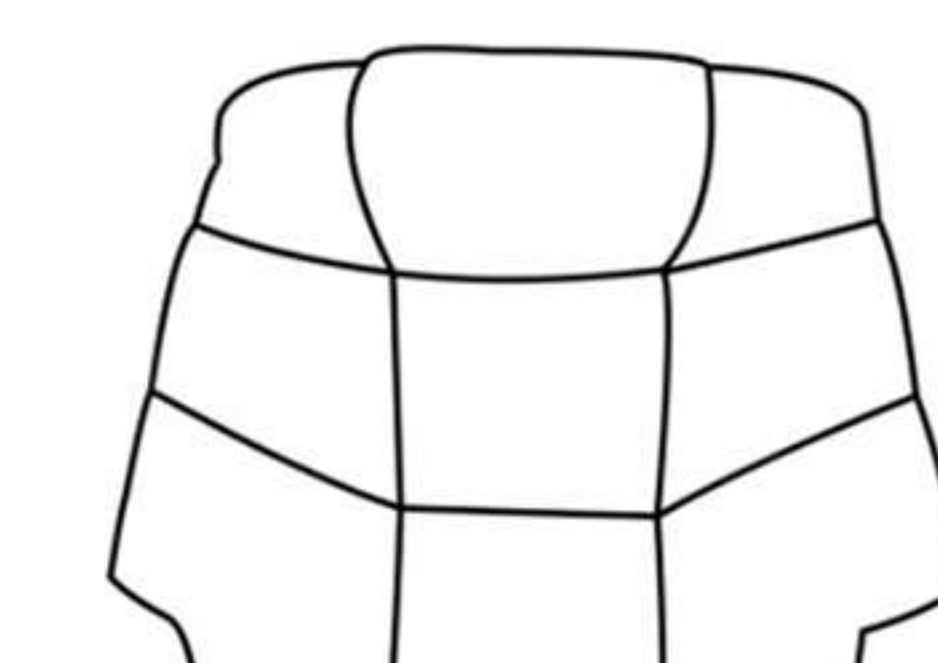
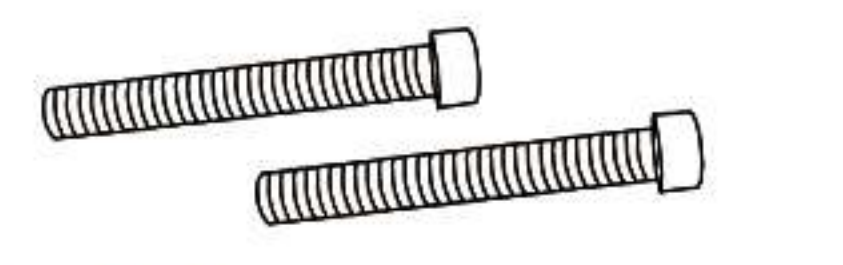
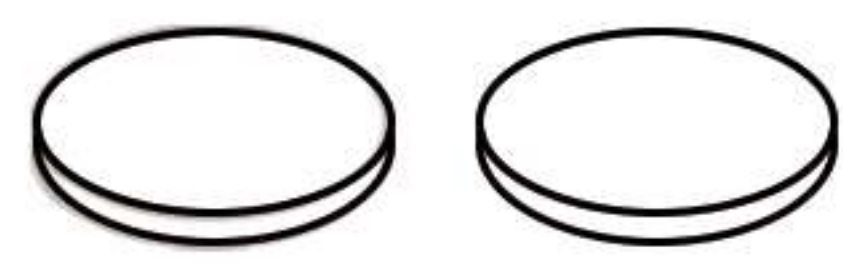
Thank you for choosing the Mcombo Oversized Kids Recliner! This chair is a perfect way to give kids a place of their own where independence develop.

► Now Let's do some preparation!

Don't worry, assembling your new chair is simple, and we're here to help. Here are a few tips before you begin: -----


- Read through all the instructions first.
- Please do not throw away the box until you are satisfied with the product.
- Clear a flat, covered space (carpeted is best) to lay out all the materials so everything is close at hand.
- DO NOT use the chair if any parts are missing, damaged or broken. Contact Mcombo Family for replacement parts and instructional literature if needed.
- The instructions include lots of helpful pictures—we show you, step-by-step, exactly how to align pieces and parts for speedy and accurate assembly.

Parts – Sort Your Parts

 Part A : Chair Base	 Part C : Round Feet (2 Pieces)	 Part F : Anti-roll Feet (2 Pieces)
 Part B : Backrest	 Part D : Plastic Washers (2 Pieces)	 Part G : Screws (2 Pieces)
	 Part E : Felt Pads (2 Pieces)	 Part H : L-Shaped Wrench Part I : Steel Washer


- ⚠ **TIPS :** ① Some packages of hardware may have extra pieces.
② Normally the parts box is placed under the seat frame.

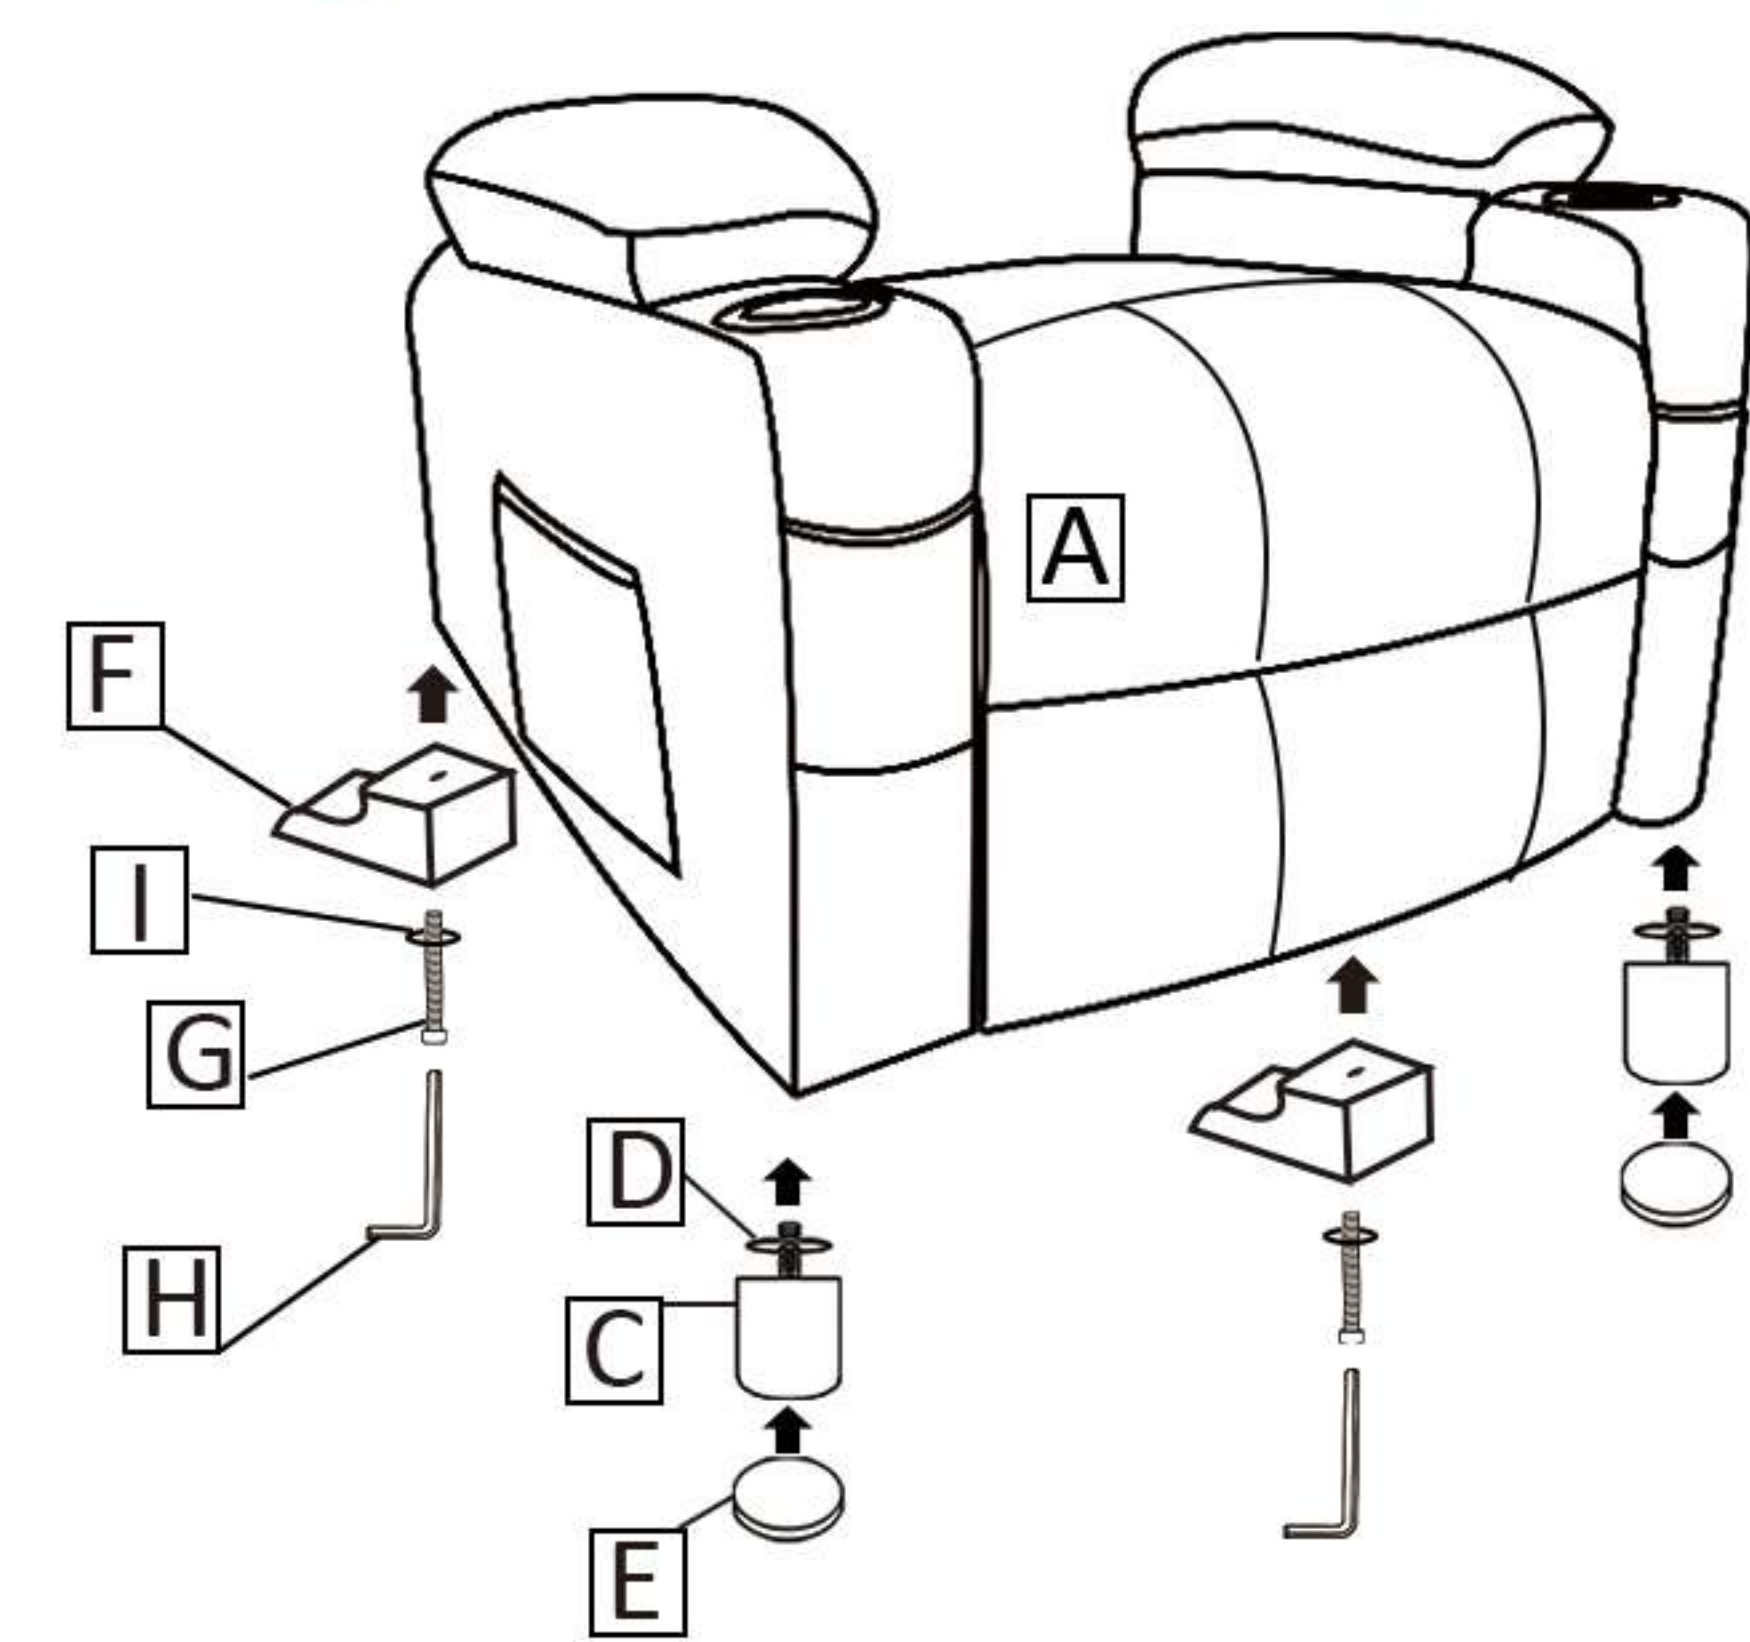► **Now It's time to put it together!**




/ **Step 1: Assemble four feet**

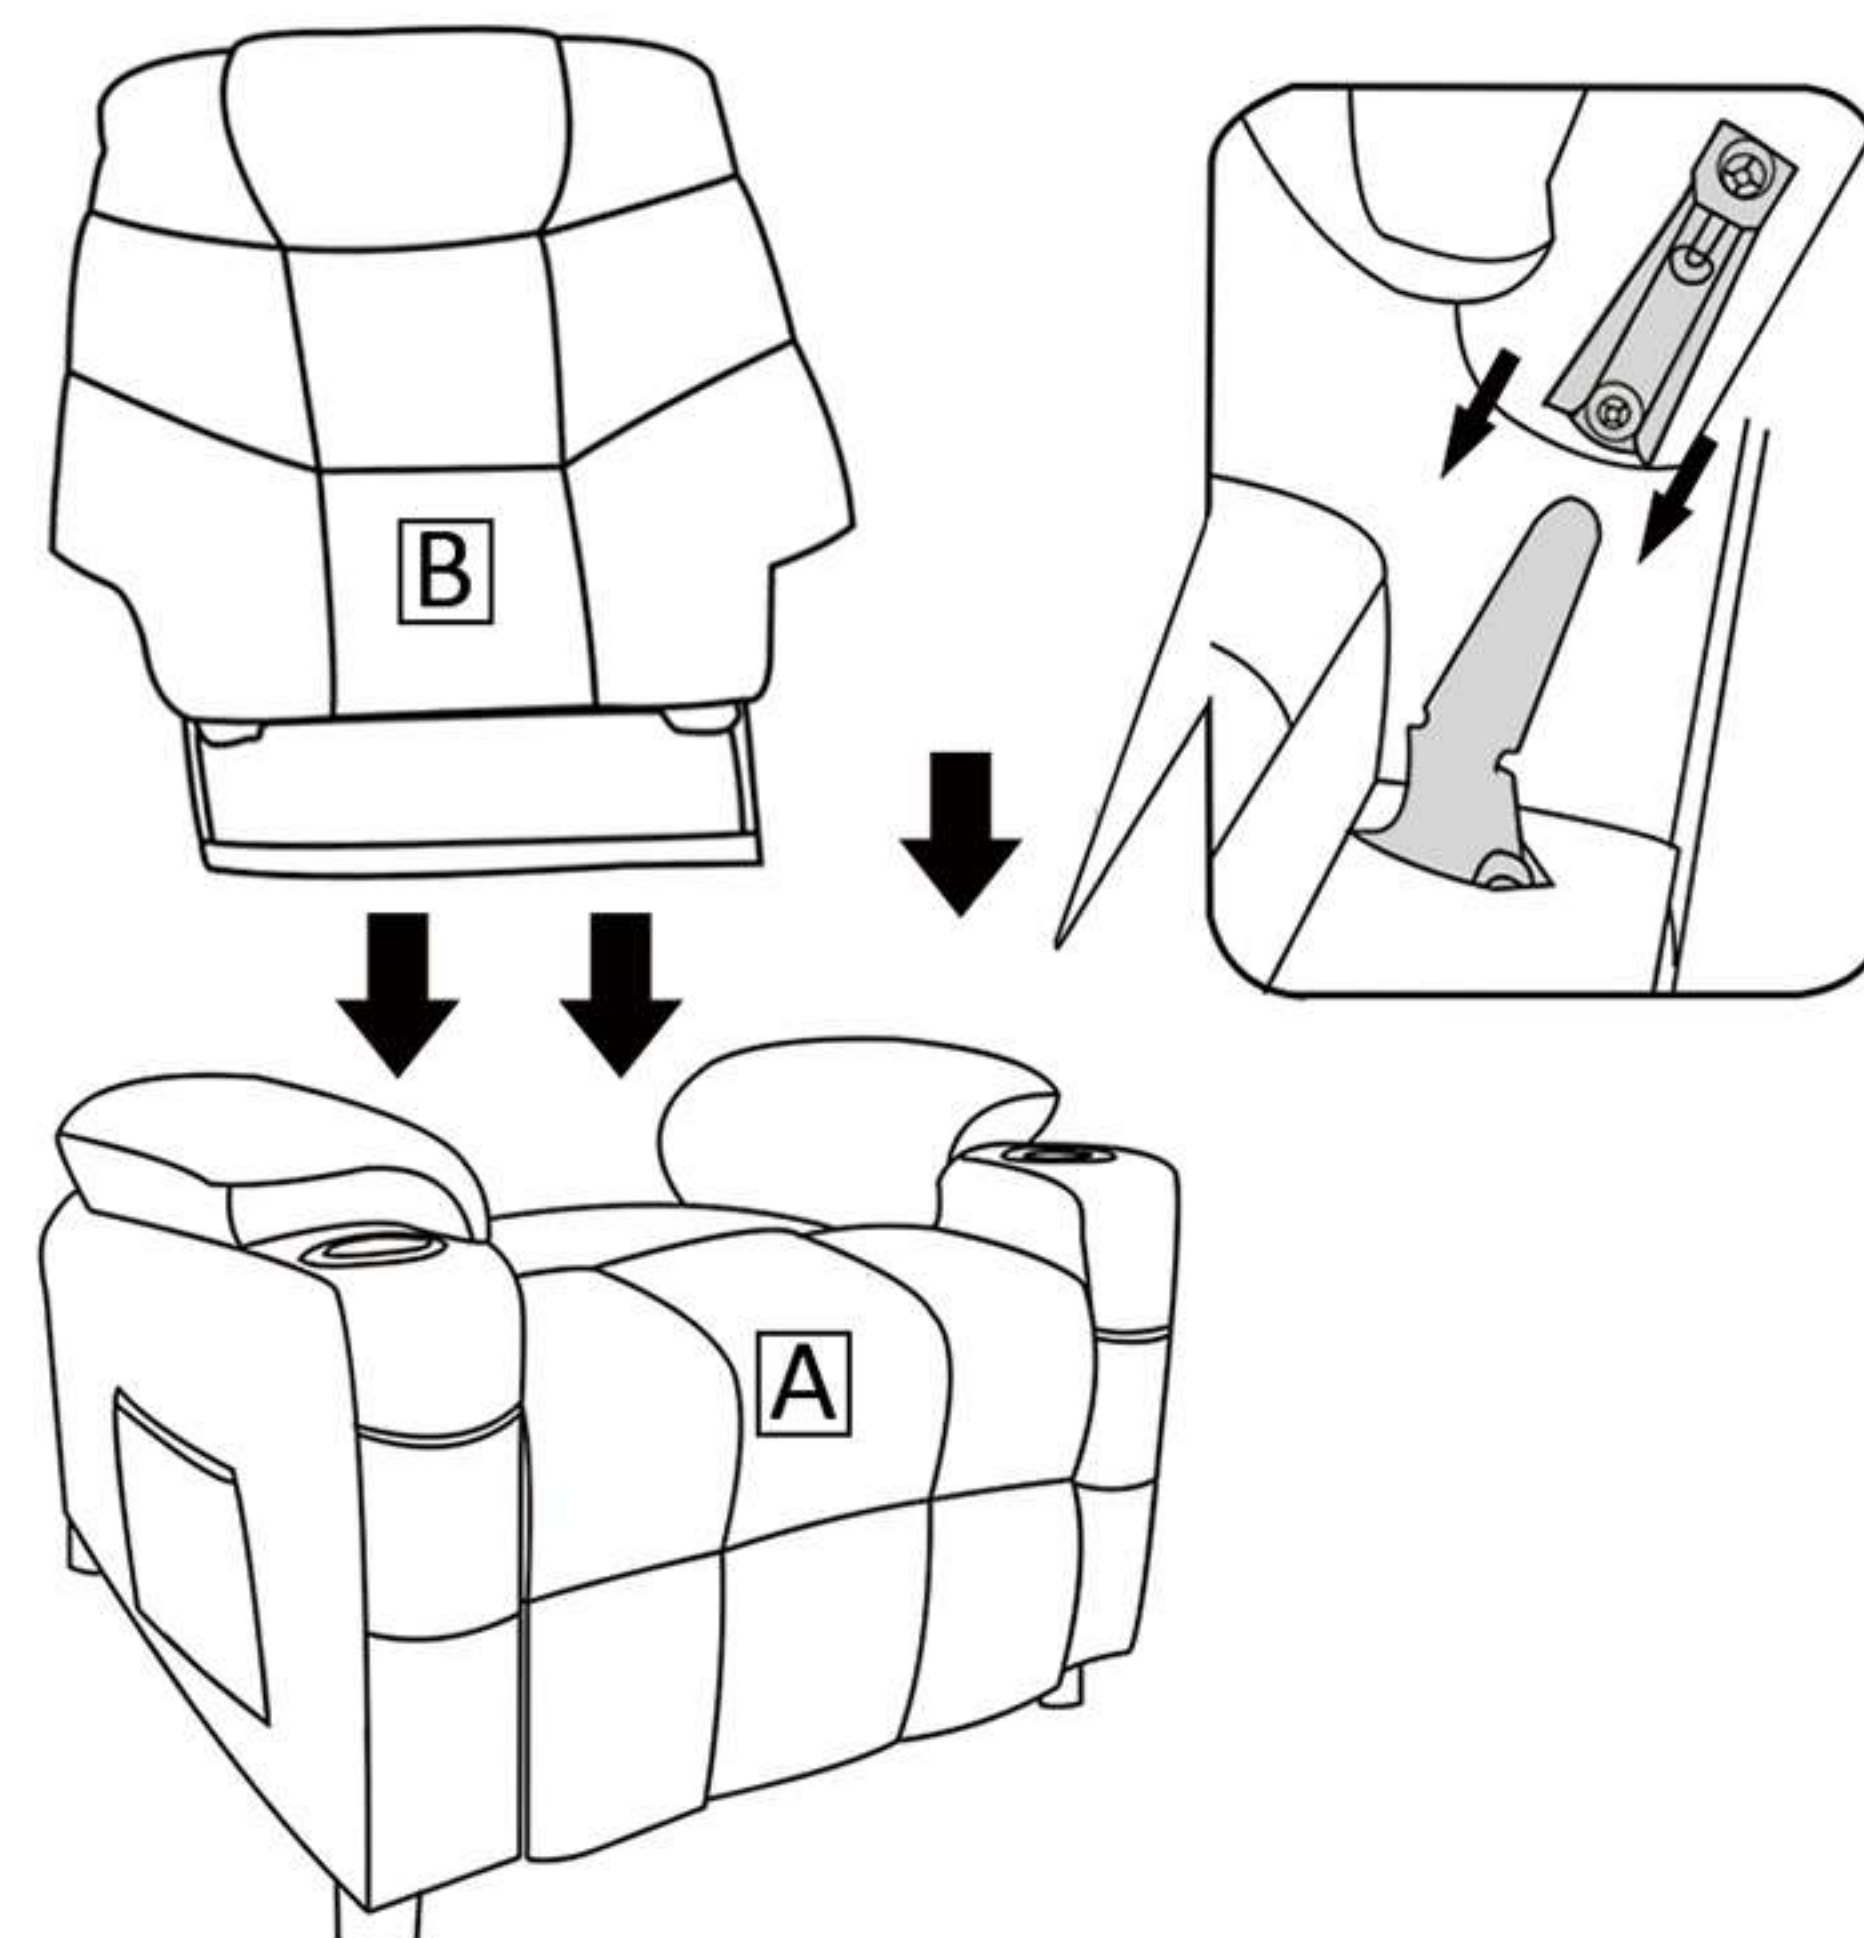1. Turn the chair bottom (A) faced to you.
2. Screw the foot (C) with a plastic washer (D) into the hole in the front of the seat, then attach the felt pads (E) to the foot.
3. Screw the anti-backward feet (F) into the hole in the back of the seat with L- shaped wrench (H).



/ **Step 2: Assemble backrest**

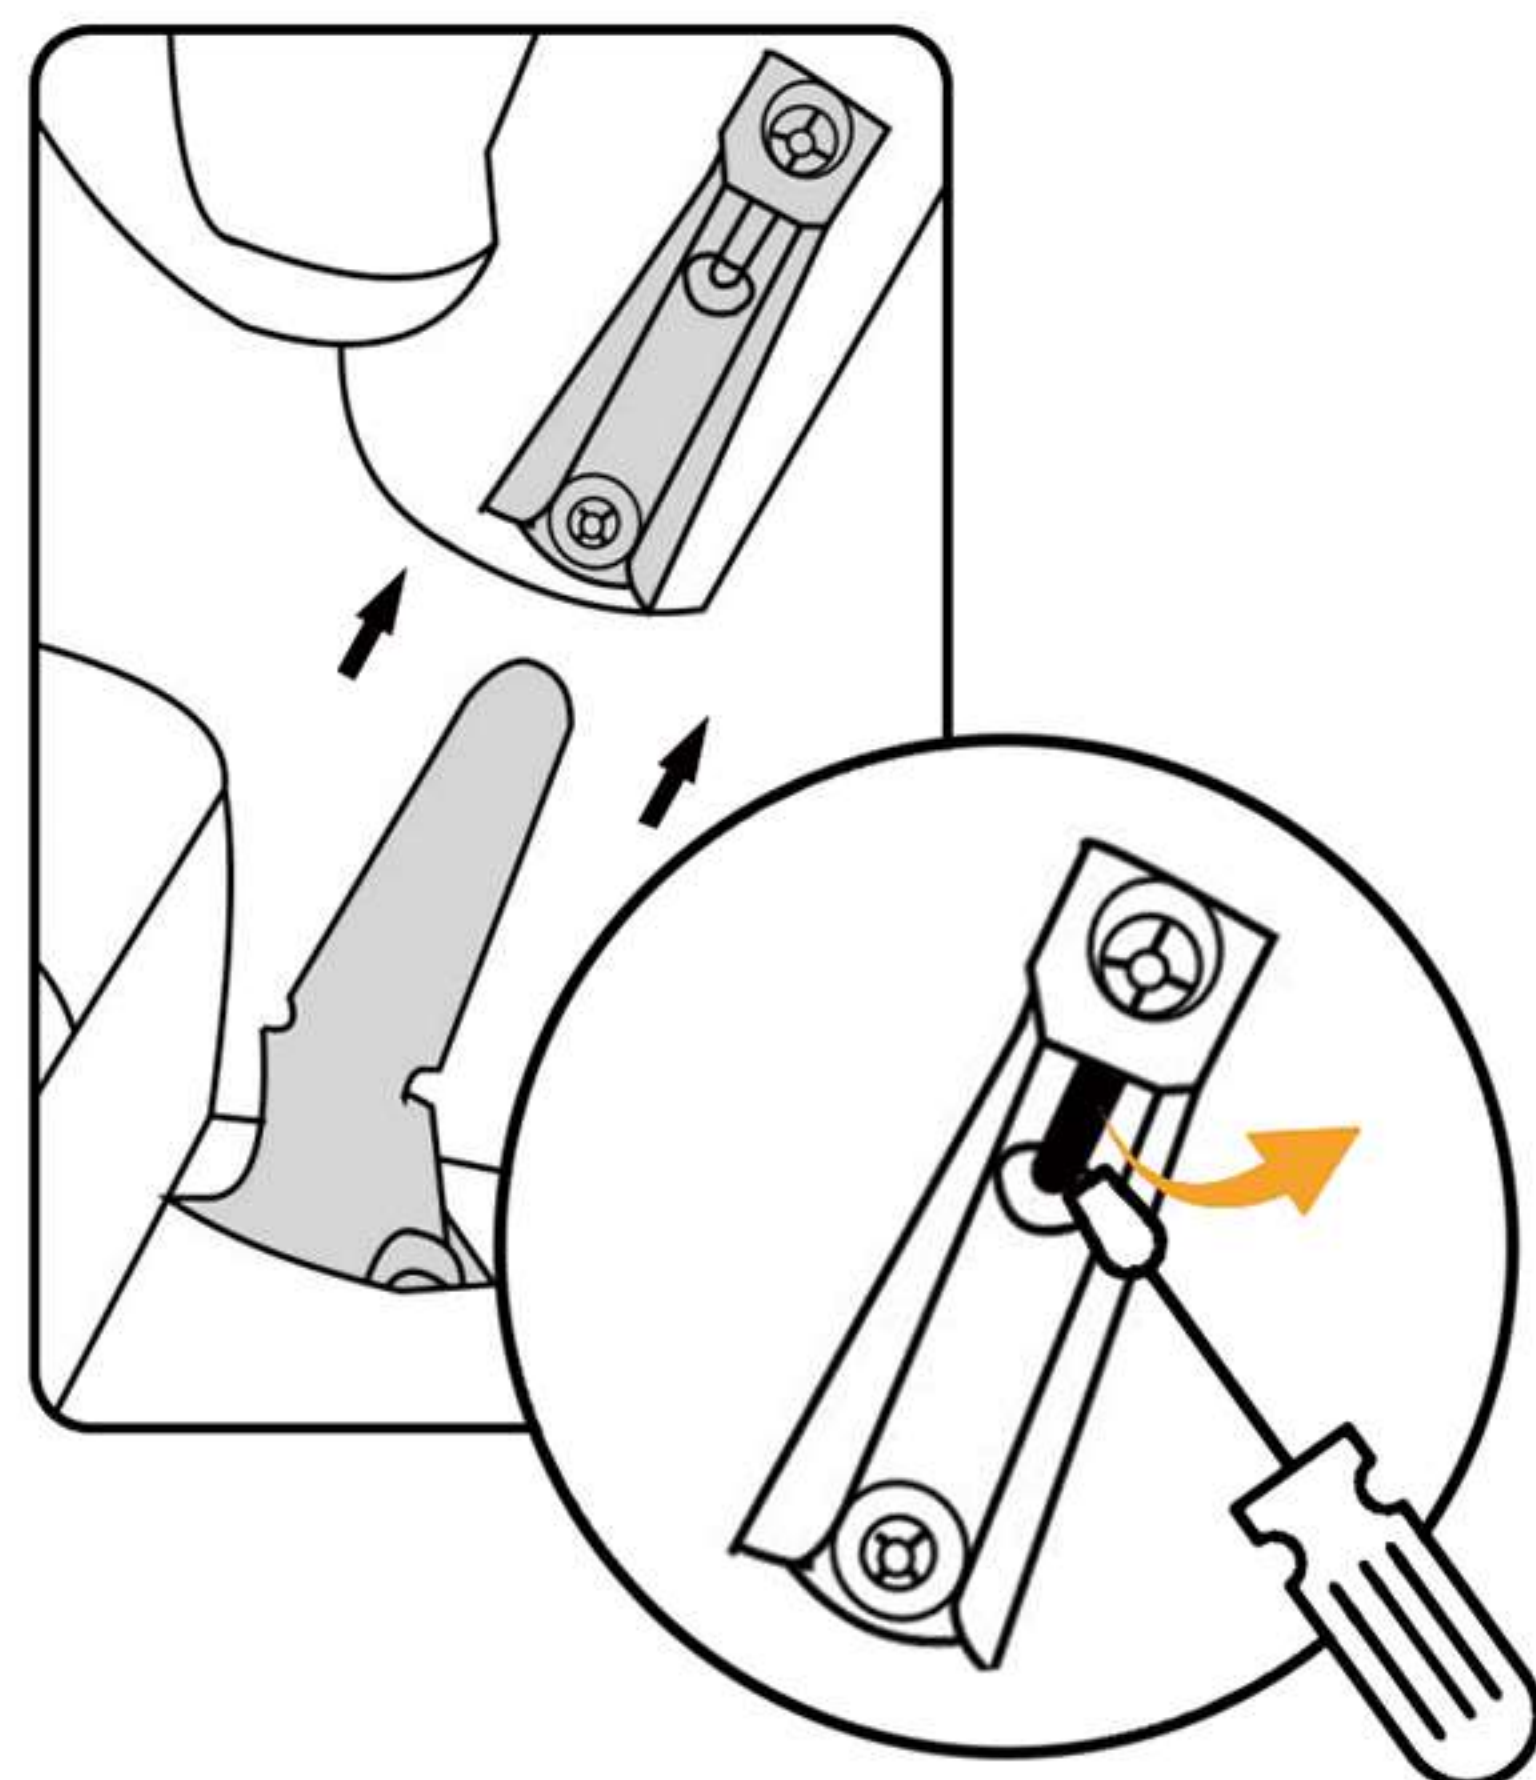1. Align the sleeves of the backrest (B) at the clips of the seat.
2. Push firmly the sleeves onto the clips of the seat and locking clip position.
3. Attach the chair-back to the velcro on the bottom of the chair base (A).



How to remove the backrest?

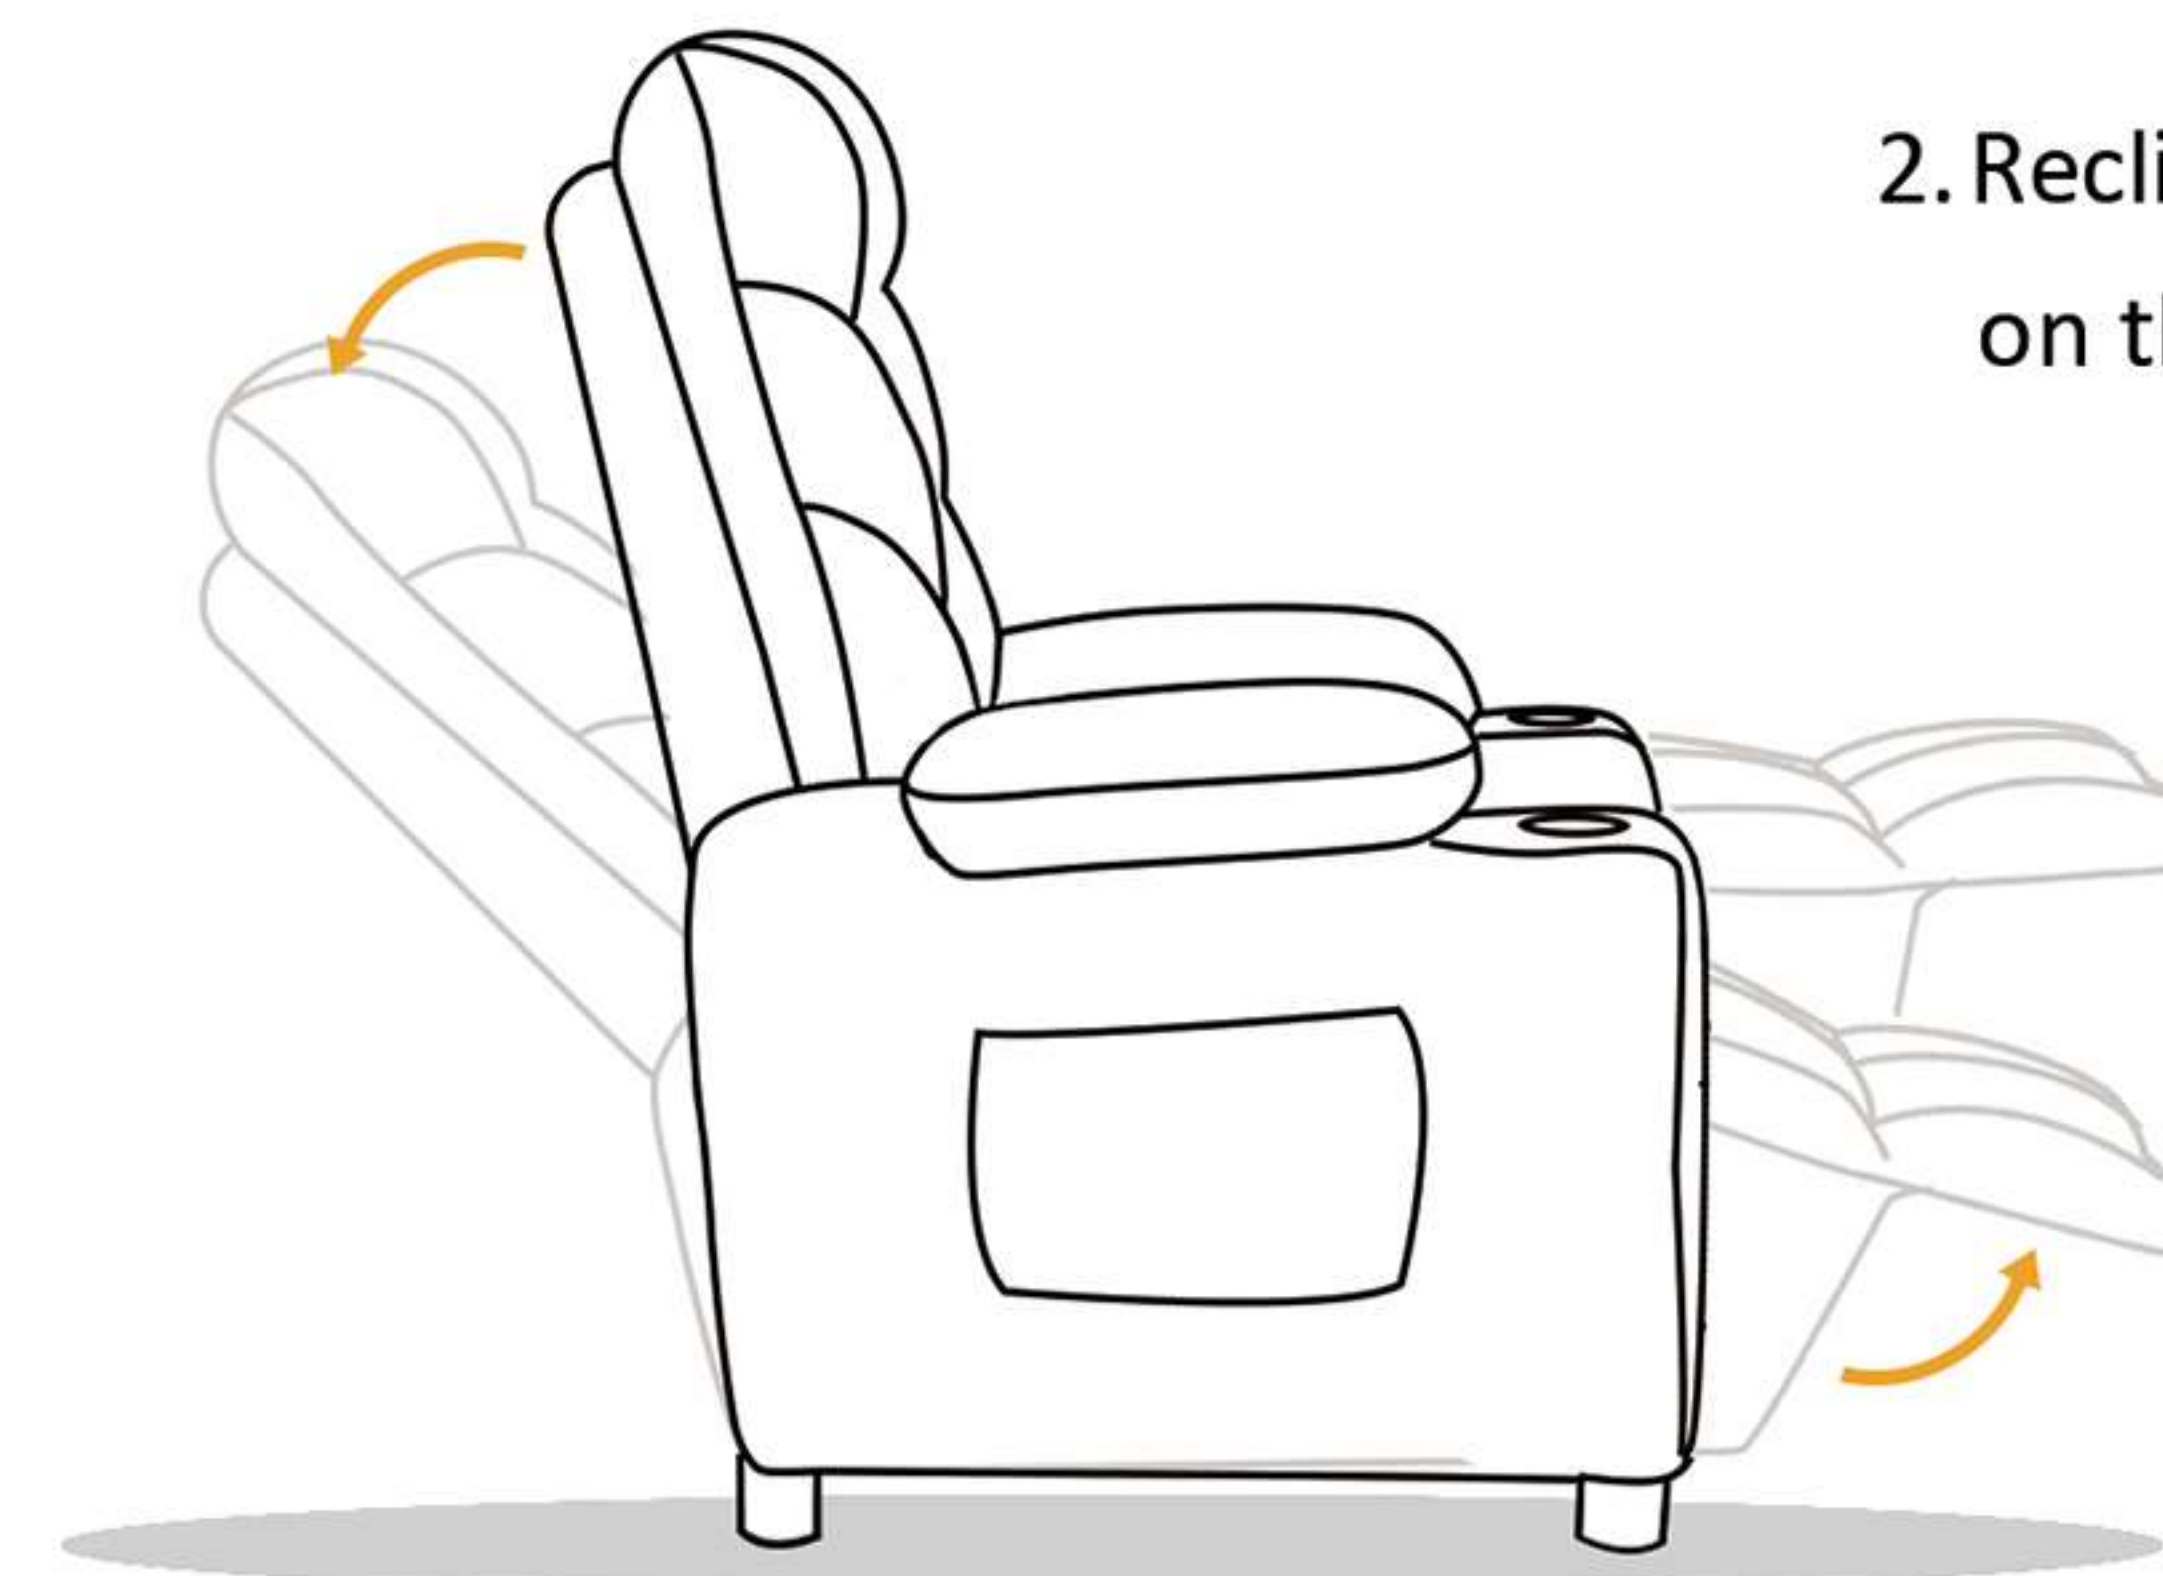
1. Open the flap on the backrest, use a screwdriver (Don't use your fingers pressing flap).
2. Outward on the metal ear on the preattached metal bracket on one side of the chair base.
3. Once the mechanism is unlocked you safely remove the backrest by pulling in a straight upward direction.

► **You did it!**

Now the real fun begins—it is time to sit back and relax in these kid-sized, classically styled, sturdy wooden chairs!

/ **To get into the recline position:**

1. Sit into the seat.
2. Recline it by leaning back and pushing on the armrest while seated.



/ **To move the chair back into the upright position:**

1. Tilt your body weight slightly forward and upwards.
2. The seatback will come up to an upright position.
3. Use your feet to push the footrest down.
4. The Chair will lock when it is in the fully upright position.





A Kids Place

It's not just a relaxing place for kids after a long day at school or after extensive outdoor activities but also an exclusive space that kids take their first real steps toward independence.

A special furniture for a child can make them feel important and appreciated, especially when they have own recliner chair in living room.

Growing up's a funny thing, we believe this recliner will be a good friend accompanied your kids.



Need Help?



Upholstery Material **1 Year**

Metal/ Wood Chair Frame **1 Year**

Limitations Applicable to All Warranties

All warranties begin on the date of delivery.

All warranties are to the original purchaser from EXACME/MCOMBO® ONLY.

All warranties do not cover any loss or damage resulting from the followings.

- Contamination
- Abuse, misuse, accident, or negligence
- Commercial use, or use other than normal
- Improper operation, maintenance, or storage

Return/Replacement Policy

All of recliners come with a 30-day return/replace policy. During this time, we will cover the shipping cost of return and replacement for defective and damaged chair, through providing pre-paid return label or pick-up service for customer's convenience.

Note: Please disassemble the chair before you return it otherwise there will be a huge cost as oversized and it could even exceed your order amount.

Please do not purchase return label for a damaged/defective chair by yourself.

EXACME/MCOMBO® do not responsible for the returns that customer bought by mistake or changed their mind and other non-quality issues.

Note: The customer is responsible for freight costs unless the chair is defective. Chair returned due to being refused delivery by the customer or deemed undeliverable by freight carrier are subject to fees for a 20% restocking fee.

Mcombo Customer Support



Phone: 1-323-597-1109



E-mail: sales@mcombo.com

⚠ WARNING

- To prevent suffocation, keep plastic bags and small parts away from children.
- The chair must be placed on a hard, flat, and level surface.
- Ensure the chair continue to function properly and safely by regularly checking all the sleeves are inserted into seat tightly.
- Do not allow the kids to stand or sit on the footrest and backrest and the arms of the recliner.
- Keep hands and feet clear of the footrest mechanism and any gaps.
- Avoid exposing upholstered chair to burning cigarettes or cigars, open flames, and high temperatures.
- Weight Capacity: 120 lbs (54.5 kg)

Operation Precautions

-  1. **Do not** put hot items directly on furniture surface. -----X
-  2. **Do not** clean furniture with harsh cleansers or polish, stains may be removed with mild soap solution and damp cloth. -----X
-  3. **Do not** place your chair in direct sunlight, as sunlight causes fading. -----X
-  4. **Do not** place furniture near heating or cooling vents. -----X
-  5. **Do not** write on furniture without a padder barrier to protect the surface. ---X
-  6. **Do not** place furniture outside. For indoor use only.-----X
-  7. **Not for** commercial use. For residential use only.-----X
-  8. Children **should not** climb or jump on the furniture. -----X
-  9. **Stay away** the backrest from wall at least 12 inches before.-----!

Mcombo