



814100492

Recipe Book not included

Please read this manual carefully before operating your unit and retain for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

**1. READ ALL INSTRUCTIONS**

2. Turn heater off when not in use.
3. Do not use on or near water.
4. Stand away from the heating area when operating during the brewing process.
5. Do not touch bare metal on the heating element.
6. Turn off the power to the electrical outlet and unplug the power cord from the electrical outlet or plug it into another outlet.
7. Clean surfaces on a regular basis to remove any residue or debris that may accumulate.
8. Keep fingers and other body parts away from the brewing area. All parts of the brewer become hot during the brewing process.
9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the product to the service center authorized by Keurig for examination, repair, or adjustment.
10. The use of accessories attachments not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
11. Do not use outdoors.
12. Do not cover the top edge of tank or bottom counter or back surfaces.
13. Do not place or store a hot glass or electric heating unit in a heated oven.
14. Always unplug the power cord before cleaning, disassembling, or assembling the brewer.
15. Do not use the brewer in a damp or wet environment.
16. Do not use the brewer for anything other than intended use.
17. Use brewer in upright position only. A low pressure of up to 150 mmHg can occur during brewing in an inverted position due to虹吸 effect.
18. Do not immerse brewer in water.
19. Only use K-Cup pods as directed. If the pod does not fit, do not force it into the brewer.

SAVE THESE INSTRUCTIONSFor detailed brewer cleaning and maintenance instructions, videos, and the full Use & Care Guide visit [Support.Keurig.com](#).

1. **WARNING:** To reduce the risk of fire or electric shock, do not use extension cords or multiple outlets.
2. **DANGER:** To reduce the risk of fire or electric shock, do not use an adapter or any outlet with a ground connection. This brewer is supplied with a three-pronged polarized plug. If the plug does not fit into your electrical outlet, call a qualified electrician to replace the obsolete outlet.
3. **WARNING:** Use K-Cup pods only. Do not remove the protective foil covering or bypass the self-cleaning process.
4. **WARNING:** There is a sharp metal wire inside the K-Cup pod holder that connects to the power cord. Do not touch the wire during brewing.
5. **WARNING:** There is a sharp metal wire inside the K-Cup pod holder that connects to the power cord. Do not touch the wire during brewing.
6. **CAUTION:** There are sharp metal wires inside the K-Cup pod holder that connect to the power cord. Do not touch the wire during brewing.

6. POWER CORD INSTRUCTIONS:

- a. A short power-supply cord is provided to reduce the risk of tangling or becoming wrapped around the brewer or power cord.
- b. Longer electrical power-supply cords or extension cords are available and may be used if care is exercised in their selection and use.
- c. If a longer detachable power-supply cord or extension cord is used:

 - i. The maximum rating of the extension power-supply cord or extension cord should be at least as great as the electrical rating of the brewer.
 - ii. If the outlet is of the ground type, the extension cord should be a three-wire ground type.
 - iii. The longer cord should be arranged so that it will not impinge on the brewer or trip over it when it is being pulled on by children or misplaced items.

- d. **CAUTION:** HOT COFFEE/TEA/HOT COFFEE PODS—immediately after brewing a hot coffee/tea or hot coffee/tea, turn the water lever to a cold setting, used to wash the residuals of coffee or tea from the brewer. 50 ml of water is the recommended amount for this.

FCC Compliance Notice: Model number: FCC ID: 2ABD8/IC: 20946. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This device complies with FCC regulations of Part 15 of the FCC Rules. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to contact the manufacturer for instructions on how to correct the interference or see Annex A of the FCC Rules.

The user is cautioned that any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to contact the manufacturer for instructions on how to correct the interference or see Annex A of the FCC Rules.

**Get connected with the Keurig® app.**

You will need this to set up and control your brewer.

1**SCAN**

The QR code on the back of the brewer: Use the camera on your iPhone to scan the QR code to download the app or digital sticker on download the Keurig® app in the App Store.



See the QR code on the back of the brewer to download the Keurig® app.

**Connect Your Brewer****2****PLUG IT IN**Remove packing tape from brewer and plug into a grounded outlet. Press any button to **POWER** the brewer on.**3****GET CONNECTED**

To connect to your Wi-Fi, select **"CONNECT"** and follow the steps.

4**SET UP**

See the QR code on the back of the brewer.

See the QR code on the back of the brewer to download the Keurig® app.

See the QR code on the back of the brewer to download the Keurig® app.

Before You Brew



Rinse & Fill

Wash the water reservoir with warm water. Do not use hot water or soap. Dry thoroughly. If the water reservoir is not completely dry, it may cause damage to your brewer.

HOT TIP:

Cleansing Brew

It's recommended to perform a cleansing brew after each use. This will remove any residue left over from the previous brew. To do this, simply insert the water reservoir into the brewer. Turn the dial to the "RECOMMENDED BREW" position and press the "Brew" button. This will brew approximately 10 oz of water.

Brew Your First Cup



Place Mug & Insert Pod

Place a mug under the brewer. Insert the K-Cup pod. Press the "Brew" button and wait for the brewing cycle to complete. Do not remove the full lid on the K-Cup pod.

NOTE: Do not touch the brewing area or the brewing carafe while brewing.

Brew & Enjoy!

After brewing, turn off the brewer. Wait until the brewing carafe has cooled down before removing the mug. Do not remove the full lid on the K-Cup pod.

NOTE: Do not touch the brewing area or the brewing carafe while brewing.

* The image shown here is for illustrative purposes only and may be subject to change.

NOTE: In order to ensure the highest possible standard for refurbished items, all units are thoroughly inspected as part of the process.

For this item, water may be used during the refurbishing process and so; you may notice some condensation in the water reservoir. It is recommended to rinse the water reservoir with fresh water prior to its first use.

Get To Know Your Brewer



Tips

For the best coffee experience, we recommend cleaning and rinsing the brewer after each use. This will help remove any residue left over from the previous brew.

For the best coffee experience, we recommend cleaning and rinsing the brewer after each use. This will help remove any residue left over from the previous brew.

HIGH ALTITUDE MODE: If you live at a higher altitude, you may need to adjust the brewing time. For example, if you live at 5,000 feet above sea level, you may need to increase the brewing time by 10 seconds.

KEURIG WATER FILTER INSTALLATION:

STEP 1: Turn the water filter clockwise until it is fully seated. Do not over-tighten. **STEP 2:** Turn the water filter clockwise until it is fully seated. Do not over-tighten. **STEP 3:** Turn the water filter clockwise until it is fully seated. Do not over-tighten.

STEP 4: Turn the water filter clockwise until it is fully seated. Do not over-tighten. **STEP 5:** Turn the water filter clockwise until it is fully seated. Do not over-tighten.

Caring for your Brewer

Keurig brewer maintenance tips following are for keeping the brewer in optimal condition.

Frequency	Product	Benefit
After each use	Water Reservoir	Avoids scale and mineral deposits from water.
Every 2 Months	Keurig Water Filter	Keeps water clean and reduces the risk of scale and mineral deposits.
Every 3 Months or when the Lint Trap reaches maximum capacity	Water Filter Adapter	Prevent clogging by easily attach the water filter adapter to the brewer for brewing with filtered water.

814100492



PRINTED IN MEXICO / Elbrd: A.M. / SC: 06-13-2025_2P
MODEL: K29KSPSBK / OBPN:D0000005861 REV A