
 



## Sending a Message

1 **To Send a Message** - select **Send Message** from the message main menu, then press the Function button . The top of your display screen now reads **Send To:**

 

2 Enter phone number or e-mail address you are sending the message to.

 



- To send a message to two or more cell phone users, press the down arrow key on your menu/cursor key.

 
When you are finished entering the phone number or e-mail address, select **OK** on the display screen by clicking on the double bar key .

3 The top of your display screen now reads **Enter Text:**. Use the letters on the keypad to type your message.

-  - This represents the space key and can be found in the lower right hand corner of the phone.
- T9®** - When you are entering text you need to hit the single bar key  once to enter T9® mode. The CDM-9100 uses T9® text input for easier message composition. T9® allows you to compose a message using a built-in dictionary. You only need to press each key once and T9® will predict what word you are using. For example, to type the word "hello" you would hit numbers [4][3][5][5][6], once each, on your key pad.





4 After the message is completed, hit the double bar key  to click on **OK**. The top of your display now reads **Send Message**.



Using your menu/cursor key you have the option to:


- Edit Send To** - Edit the number you are sending the message to or correct the address.
- Edit Text** - Edit the text message you are about to send or correct your message.
- Priority** - Mark your message as "Urgent".
- Call Back #** - Change your call back number temporarily for the current message.
- Delivery Ack** - Change acknowledgment mode temporarily for the current message.
- Enhanced Ack** - When your message is received, the phone displays "Delivered."
- Save to Outbox** - Save your message as a draft and exit the messaging feature.

Select an option by pressing the Function key . After you are finished exercising your options or if you choose not to select any options, use the double bar key  to select **Send**.



5 The sending mail icon appears with animation. You will also get confirmation after your mail has been sent.




## Receiving a Message

 
1 **To Check Received Messages** - Press the envelope key . From the list displayed, select **Inbox**. If you have new messages in your mailbox, the \* symbol will appear and flash to the right of the Inbox. If it does not appear, it means that you have no inbox messages.







2 Assuming you do have a message, use your menu/cursor key to highlight **Inbox** (press the down arrow key  and then select Inbox by pressing the Function key .


- A short cut to the Inbox:** Press and hold the envelope key  for about 3 seconds.

3 The Inbox lists the received messages with the sender name, if you have it programmed in your phone book. If not, it just lists the sender's number.





4 If there is more than one message, use your menu/cursor to scroll the list of sender names or numbers. The icon symbols on the left hand side of the display determine what kind of message you have stored.


-  New text that you have not viewed yet.
-  Old text that you have already viewed.
-  Urgent new text.
-  Urgent old text.

5 The top of your display now reads **Inbox** and shows the icon symbol for new text along with the sender number or name. Press the Function key  to move to the next step.

6 The top of your display now reads **\*New Text\*** and underneath you can see the date and time the message was sent. The bottom of the display now looks like this: **Option OK**. Notice that the bottom arrow is darker than the top arrow, meaning you can use the down arrow key on the menu/cursor to scroll down where you can see who the message is from. If you hit the down arrow key again, you can access the message.

**Options** After reading the message, if you press the single bar key  you will have access to four options: **Reply**, **Forward**, **Erase**, **Save Address**.

**Reply** If you highlight **reply** and press the Function button on the menu/cursor key , you can reply back to the person who sent you the message. It would be the same format as sending a message.

**Forward** If you highlight **forward** and press the Function button on the menu/cursor key , you can forward the message to anyone who is a capable receiver. It would be the same format as sending a message.

by Audiovox

 


## Receiving a Message (con't)

- Erase** If you highlight erase and press the Function button on the menu/cursor key , you can erase the message by highlighting YES and then pressing the Function button or the double bar key . A confirmation message switch appears confirming the text message has been erased.
- Save Address** With this option, you can save the sender's address, Call back number or both in your phonebook.

## Starting Internet Browser

- 1 Press the key under Web on standby to enter "Web Menu".

 


- 2 Scroll to "Internet", and press the function button .
- 3 The Web Browser will start. The cached information may be displayed.
- 4 To access the Internet, press and hold [CLR] while the digital mode indicator is on. Your phone will display your service provider's home page with a flashing .
- 5 Scroll the page by using the up and down arrows on the menu/cursor key
- 6 Press or to select the menu option in the bottom line of the display
- 7 To return to the previous page, press or [CLR].
- 8 To terminate the network access, press [END]. The indicator will go out. You can still browse the cached information.
- 9 Press [END] again to close the web browser.



## Browser Menu

Press key while the browser is active to see the browser's local menu. This menu is always displayed in English.



**RELOAD** - To reload the current page.

**HOME** - To get back to the Home page. Press and hold [CLR] will do the same.

**BOOKMARKS** - To view your bookmark list.

**MARK SITE** - To store the current page in your book mark list.

**ABOUT OPENWAVE** - To view the browser version.

**ADVANCED** - Selecting the advanced item in the browser menu displays the advanced menu items.

**Show URL** - To display the URL (Uniform Resource Locator) of the current page.

**Homepage** - To change your home page.

**Set WAP Proxy** - To select a network server.

**Restart Browser** - To clear the cache memory in your browser.

**Encryption** - To use for security.

**Note:** Altering of the settings on the "Homepage" and "Set WAP Proxy" may disable the web access.

Mobile Web by VZW with MSN is a consumer wireless Internet access offering that gives customers access to rich communication applications, content from over 30 different providers and access to personalized information.

### Key Features Include:

- MSN Messenger
- MSN Hotmail
- MSN Calendar

**Mobile Messenger:** Two-way messaging CDMA phone required to send and receive from handset.

**Mobile Web:** Airtime charges apply to usage and will deplete minutes allowance. Phone will end data call and session after a minimum of 30 seconds of inactivity.

Airtime charges may apply while navigating through this tutorial on your wireless phone.