

COFFEE MAKER

INSTRUCTION MANUAL



Model No.: CM1439-UL
Item No.: CM3739-BLACK

Thank you for purchasing this product! If you have any question about the product such as missing parts, damaged products, product assembling and operation, please contact us via customer service phone:
213-4467172 or 661-4358826.


IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
4. Do not touch hot surfaces. Use handles or knobs.
5. To protect against fire, electric shock and injury to persons do not immerse cord, plug, in water or other liquid.
6. Remove plug from wall outlet before cleaning and when not in use. Allow appliance cool down completely before taking off, attaching components or before cleaning.
7. The use of accessory is not recommended by the appliance manufacturer. It may result in fire, electric shock and/or person injury.
8. The container is designed for use with this appliance. It can not be used on a range top.
9. Do not clean container with cleansers, steel wool pads, or other abrasive materials.
10. Do not hang power cord over the edge of table or counter, or touch hot surface.
11. Do not place the coffee maker on hot surface or beside fire in order to avoid to be damaged.
12. To disconnect, remove plug from wall outlet. Always hold the plug. But never pull the cord.
13. Do not use appliance for other than intended use and place it in a dry environment.
14. Close supervision is necessary when your appliance is being used near children.
15. Be careful not to get burned by the steam.
16. To disconnect, turn any control to "O", then remove plug from wall outlet.
17. Do not let the coffee maker operate without water.
18. Never use the appliance if the Travel mug shows any signs of cracks. . Use carefully as the Travel mug is very fragile.
19. Do not set a hot container on a wet or cold surface.
20. Do not use a cracked container or a container having a loose or weakened handle.
21. Scalding may occur if the cover is removed during the brewing cycles.

22. Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
24. Children should be supervised to ensure that they do not play with the appliance.
25. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
26. Do not use outdoors.
27. Save these instructions.

KNOW YOUR COFFEE MAKER

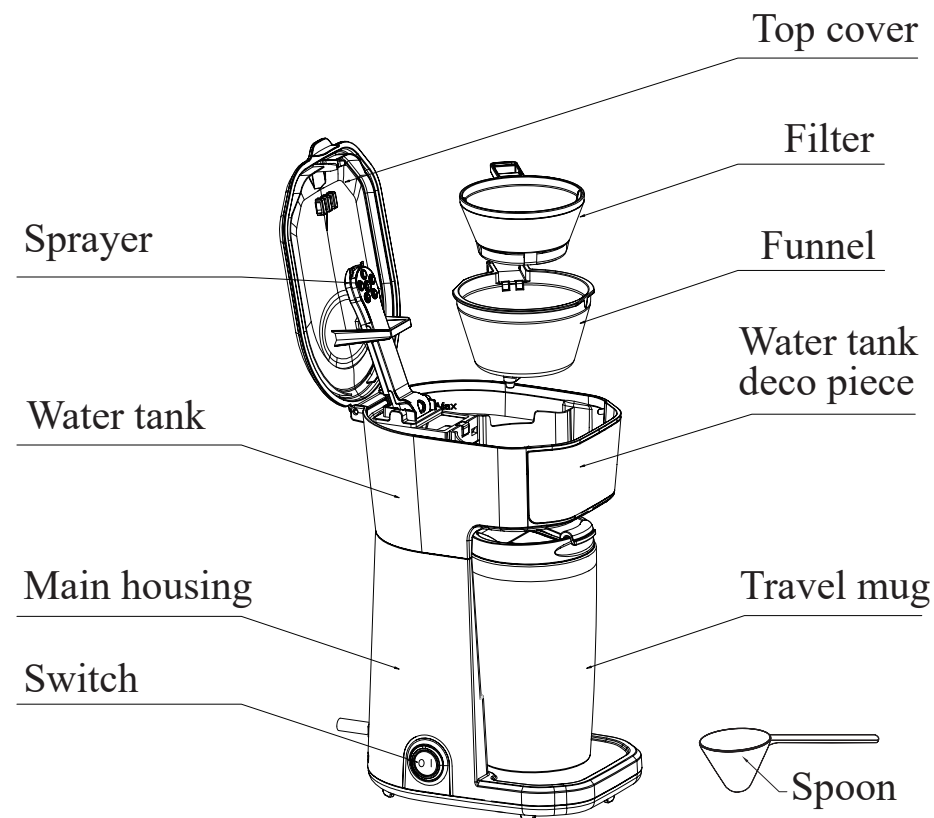

BEFORE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add clean water up to maximum level to brew several times without coffee powder according to the steps below, and then discard the water. Wash the detachable parts thoroughly with warm water.

USING YOUR COFFEE MAKER

1. Open the water tank lid and fill the water tank with cold drinking water. The water level should not exceed MAX level as indicated on water gauge.
 2. Swing the sprayer out, put the funnel into Water tank, then place the filter in the funnel, and make sure it is assembled correctly.
 3. Add coffee powder into filter. Usually a cup of coffee needs a level spoon of coffee powder, but you may adjust according to personal taste. Close the top cover.
 4. Put the Travel mug in the right place.
 5. Plug the power cord into the outlet.
 6. Pressing the switch down, the indicator will be illuminated. The appliance will begin working.
 7. Upon completion of brewing coffee, that is one minute later after the coffee stops dripping out, you can remove the Travel mug, pour and serve.
- Note: The brewed coffee you get will be slightly less than the water you have added as some water is absorbed by coffee powder. DO NOT touch cover, and so on when operating as they are very hot.***
8. Always turn the coffee maker off and disconnect the power supply after use.

CLEANING AND MAINTENANCE

1. Clean all detachable parts after each use in warm, sudsy water.
2. Wipe the product's exterior surface with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.
4. Use a damp cloth to gently wipe the base tray. Never use abrasive cleaner to clean it.
5. Replace all parts and keep for next use.

REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, periodically you should clean away the mineral deposits left by the water according to the water quality in your area and the use frequency. We recommend de-scaling your coffee maker as follows, using a solution of white vinegar and cold water. A solution of two tablespoons (1.05oz) white vinegar in one Travel mug of cold water works best.

1. Fill the tank with the vinegar solution to the maximum level as indicated on water gauge.
2. Insert the Travel mug in the right place.
3. Make sure paper filter (without coffee powder) and funnel are assembled in place.
4. Switch on the appliance and allow it to “brew” de-scaling solution.
5. After “brew” one-cup solution, switch off the appliance.
6. Leave the solution stay for 15 minutes and repeat step 3-5.
7. Switch on the appliance and run off the solution until the water tank is completely empty.
8. Repeat above steps with potable water at least 3 times.

HINTS FOR GREAT-TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “CLEANING AND MAINTENANCE” section.
Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee’ flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulation:
hand in the non-working electrical equipments
to an appropriate waste disposal center.

Thank you for purchasing this product! If you have any question about the product, such as missing parts, damaged products, product assembling, and operation, please contact us via customer service number: **213-4467172 or 661-4358826.**

IMPORTANT

Please call our customer service department for any consulting:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE IS REQUIRED FOR WARRANTY SERVICE.

AVIS

Veuillez appeler le service à la clientèle pour toutes questions au:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

213-4467172

661-4358826

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Address: ROWAN ELECTRIC APPLIANCE LLC

750S. Valley View Avenue, San Bernardino, CA 92408

Phone: 213-4467172 or 661-4358826

8:30am-5:30pm P.S.T. Monday to Friday