### WARRANTY

This product has a 1 year warranty against defects in manufacturing under regular consumer use. For instructions about how to obtain warranty service for your product, please contact Customer Service: info@primebrandsgroup.com.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. This product is compatible with all wireless audio devices, Bluetooth\* and non-Bluetooth\*.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

This device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

▲ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.



©2025 Prime Brands Group. All rights reserved. All trade names are registered trademarks of the respective manufactures listed. Made in China.







## ▶/II OPERATION

## Audio Controls

Play / Pause Music: Touch the left or right earbud Multi-Function Button (4) once Next Track: Touch the left earbud Multi-Function Button (4) three times Previous Track: Touch the right earbud Multi-Function Button (4) three times Increase Volume: Touch the left earbud Multi-Function Button (4) twice Decrease Volume: Touch the right earbud Multi-Function Button (4) twice

## Call Controls

Answer a Call: Touch the left or right earbud Multi-Function Button (4) once Hang Up: Touch the left or right earbud Multi-Function Button (4) once Reject a Call: Touch and hold the left or right earbud Multi-Function Button (4) for 2 seconds

## Voice Assistant

Activate Voice Assistant: Touch and hold either earbud Multi-Function Button (4) for 2 seconds

## POWER ON / PAIRING

## Power On/Off

The earbuds will automatically turn on when removed from the charging case. The earbuds will automatically turn off when placed back into the charging case.

## Pairing

Turn on Bluetooth® on your device. Open the charging case and remove the earbuds. They will automatically turn on and begin searching for a Bluetooth® connection. In your device's Bluetooth® settings, select "SHRP-TWS06". When paired successfully, you will hear a voice prompt confirming the connection. Note: Keep the earbuds and device within 30 feet for successful pairing. Once paired, the earbuds will automatically reconnect to your device when powered on.

# (A) CHARGING

## Charging the Earbud Case

Connect the charging case to a wall adapter using the included USB-C cable. The LED display will show the battery status of the case, from 0% to 100%,

## Charging the Earbuds

Place the earbuds in the charging case. They will begin charging automatically. The red LED indicator will light up while charging and turn off once fully charged. When the earbud battery is running low, you will hear a warning sound, If not recharged, the earbuds will power off automatically,

**Troubleshooting Tip:** If charging does not begin, check that the earbuds are seated properly in the case and that the charging contacts are clean.

