

Instructions on Recommended Gain for Camera Setup

* This document provides a detailed overview of the compatibility of various camera brands and models with Saramonic Ultra, along with the recommended gain settings, aiming to offer comprehensive configuration guidance to users.

Camera Compatibility and Recommended Gain Table

Camera Brand	Camera Model	Recommended Camera Gain
Sony	A6400	1 dB
	A6600	
	A7C	
	A7M3	
	A7M4	
	A7R3	
	A7R4	
	A7R5	
	A7S2	
	A7S3	
	FX30	
	FX3	
	ZV-E10	
Canon	EOS 5D Mark IV	At the fourth grid
	EOS 6D MK II	
	EOS 90D	
	EOS M50 II	
	EOS R	
	EOS R5	
	EOS R6	
	EOS R7	
Nikon	Z5	3 dB
	Z50	
	Z6	
	Z6 II	
	Z7	
	Z7 II	
	D850	2 dB
	D810	
	D750	
	D780	

Camera Brand	Camera Model	Recommended Camera Gain
Panasonic	G9 GH5 GH5S GH6 S5 S5 II G85	-12 dB
Fujifilm	X-H2S X-S10 X-T3 X-T4	-28.5 dB


- The recommended gain applies only when the Saramonic Ultra receiver (RX) is connected to the camera via 3.5 mm TRS audio cable.
- The Saramonic app features a large number of presets based on popular cameras. These presets automatically set the gain levels of your Saramonic Ultra to best match the audio levels and settings of the camera you're using it with. Before setting the camera gain, it is recommended to select your camera brand and model in the Saramonic app first.

Operation Guide


1. Please scan the QR code below with your phone to install the Saramonic app.



2. Mount the correct adapter on the receiver according to your device's port, and then connect the receiver to your smartphone. Launch the Saramonic app, tap the  icon in the upper left corner, then tap "Saramonic Device Management" to enter the receiver (RX) control page.

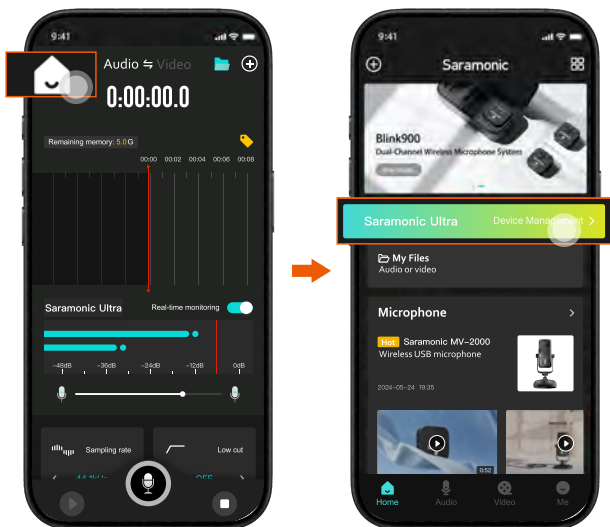

3. Tap "Brand" and "Model" under "Camera Presets". Swipe up or down on the screen to select the camera brand and model you are using.

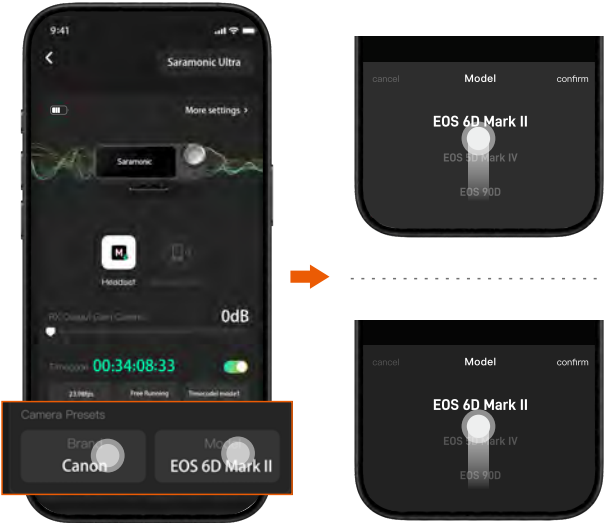

4. With your camera preset loaded onto your Saramonic Ultra, you can check the preset by pressing the gain modes on your receiver. Your camera information is displayed on the screen.



 
Camera Gain Configuration Interface




Sony




Canon

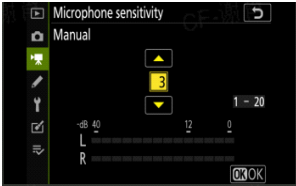

Nikon

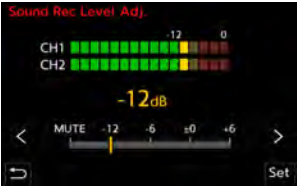 

Panasonic

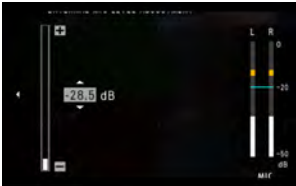 

Fujifilm

相机预设增益说明

* 本文档详细介绍了各种相机品牌和型号与Saramonic Ultra的兼容性，以及相应的推荐增益配置，旨在为用户提供全面的配置指导。

相机兼容性与推荐增益配置表

相机品牌	相机机型	推荐相机增益
Sony	A6400	1 dB
	A6600	
	A7C	
	A7M3	
	A7M4	
	A7R3	
	A7R4	
	A7R5	
	A7S2	
	A7S3	
	FX30	
	FX3	
	ZV-E10	
Canon	EOS 5D Mark IV	第四个小格处
	EOS 6D MK II	
	EOS 90D	
	EOS M50 II	
	EOS R	
	EOS R5	
	EOS R6	
	EOS R7	
Nikon	Z5	3 dB
	Z50	
	Z6	
	Z6 II	
	Z7	
	Z7 II	
	D850	2 dB
	D810	
	D750	
	D780	

相机品牌	相机机型	推荐相机增益
Panasonic	G9 GH5 GH5S GH6 S5 S5 II G85	-12 dB
Fujifilm	X-H2S X-S10 X-T3 X-T4	-28.5 dB


- 推荐增益仅适用于Saramonic Ultra 接收器（RX）通过3.5 mm线连接至相机的场景。
- Saramonic应用程序提供了大量热门相机的预设，这些预设可以自动调整Saramonic Ultra的增益级别，以确保与您使用的相机音频完美匹配。在设置相机增益之前，建议先在Saramonic应用程序中选择您的相机品牌和型号。

操作指南


1. 请用手机扫描下方二维码，下载并安装Saramonic应用程序。



2. 使用标配的Lightning / USB-C转接头将接收器连接至手机。启动Saramonic应用程序，点击屏幕左上角🏠，然后点击“Saramonic Ultra 设备管理”即可进入接收器（RX）控制页面。

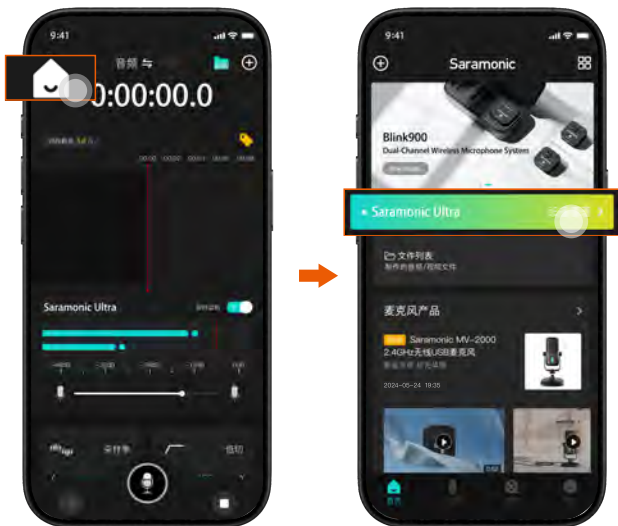

3. 点击“相机预设”下方的“品牌”和“型号”，屏幕滑动选择您正在使用的相机品牌和型号。

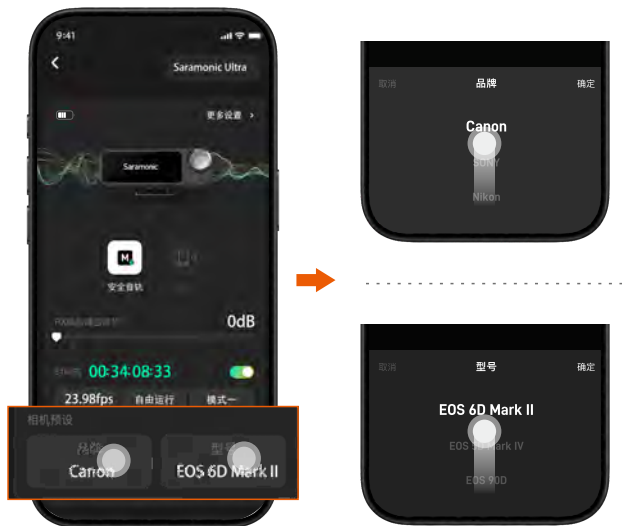


4. Saramonic应用程序成功选择后，可在接收器触摸屏输出模式中的相机预设选项中，查看您所选定的相机品牌和型号。




相机增益配置界面



Sony

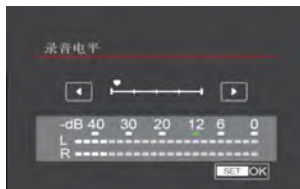

Canon

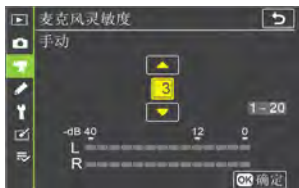 

Nikon



Panasonic



Fujifilm