



 
720P



Input illustration

File type	Format	Suffix	Decode
Audio	Mp3	mp3	
	M4A	mp4	
Pic	JPEG	.jpg	
	BMP	.bmp	
	PNG	.png	
Video	MPEG1	.DAT\,MPG\,MPEG	\
	MPEG2	.MPG	\
	MPEG4	.AVI\,MP4	DIVX,XVID
	RM\,RMVB	.RM\,RMVB	RV8, RV9, RV10
	H264	.MKV\,MOV	H.264
	MJPEG	.AVI	\
	DivX	.DIVX\,AVI	MPEG,DIVX,H264
	FLV	.FLV	H264

Projection distance and size



1 Power on/off

-
- ① Buttons Control
- ② Remote Control

3 Focus

3 Projector settings

Images

▲

- Image modes
- Color temperature
- Scaling pattern
- Noise reduction

▼

Equipment connection



1 Multimedia (USB) Input




2 AV or HDMI Input




Input source switch

1. Enter the "Home" interface, select the "Source" icon through the remote control or the keyboard button, and press "OK" to enter "Source menu".

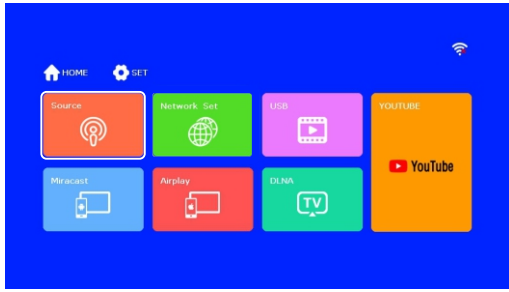


2. In the pop-up "Source" menu, select the type of signal source channel (video, HDMI, multimedia) that you want to play.

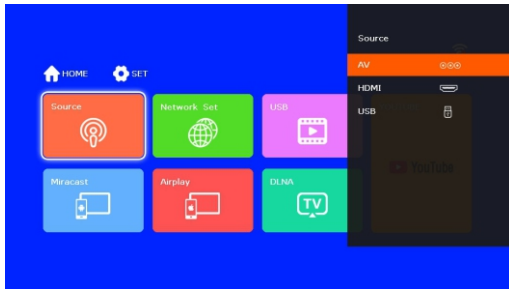

12

Network Set

1. Enter the "Home" interface, select the "Network Set" icon through the remote control or the keyboard button, and press "OK" to enter "WLAN Set menu".

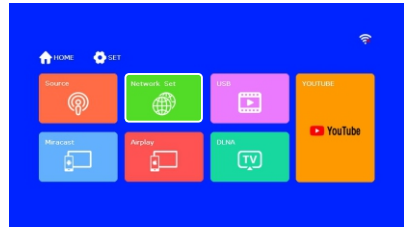

2. In the pop-up "WLAN Set" menu, select the network you want to connect to.



3. Enter the WIFI password to connect to the network.



13

Multimedia function

1. Insert the USB device containing the video/picture/music/e-book file into the projector USB port (a recognized USB device icon will appear on the home page). Enter the interface of "Home", select the "USB" menu through the remote control or the keyboard button, press "OK" to enter the "USB menu".




2. In the pop-up "USB" menu, select the type of multimedia file (video/picture/music/ebook) to be played through the remote control or the button on the keyboard button, press "OK" to enter the file menu in the USB device and select the multimedia file to be played.




14

Miracast

1. Enter the "Home" interface, select the "Miracast" icon through the remote control or the keyboard button, and press "OK" to enter "Miracast menu".

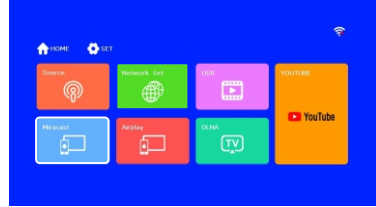


2. Open the Android device, go to "Device connectivity" under the setting, click "Wireless Projection", and search the network name of the projection device "KeTing-1627" (as below pic shows), then select the projector name to realize wireless connection function.

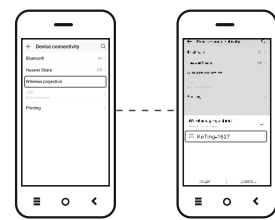


15

Airplay

1. Enter the "Home" interface, select the "Airplay" icon through the remote control or the keyboard button, and press "OK" to enter "Airplay menu".

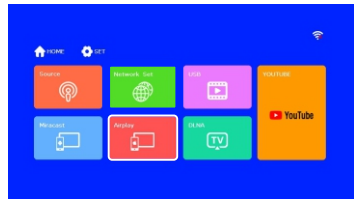


2. Airplay
Method 1: Connect your phone and projector to the same WIFI. Open the "Screen mirroring" function of iOS device, at this time, the iOS device will pop up the name of projection device, click the name to realize the wireless co-screen of iOS device and projection device.

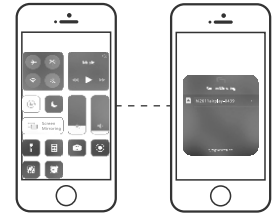

16

Airplay


- Method 2: Open the iOS device, go to "WLAN" of setting to search for the name of the projector device to be connected, then open the "mirror" function of the iOS device. Then it will pop up the name of the projector device. Then select the projector name to put password to be connected successfully (As below pic shows) to realize the wireless connection function.

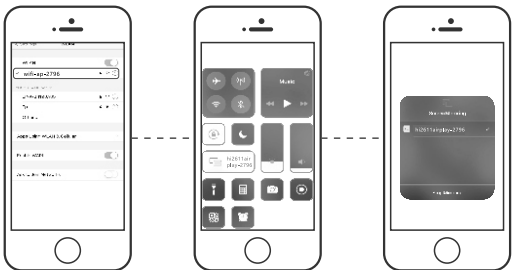


17

DLNA

1. Enter the "Home" interface, select the "DLNA" icon through the remote control or the keyboard button, and press "OK" to enter "DLNA menu".

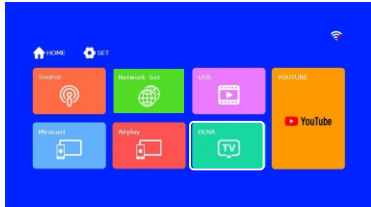


2. DLNA
Step 1: Connect your phone and projector to the same WIFI connection.
Step 2: Find "DLNA" in the APP content that needs the same screen.
Step 3: Click "DLNA" to select "Hi2611DLNA-1627" to complete the same screen.

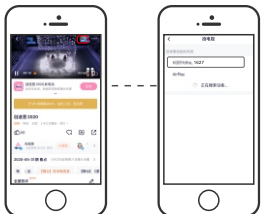

18

Projection Set

1. Enter the "Set" interface, select the "Projection Set" icon through the remote control or the keyboard button, and press "OK" to enter "Projection Set menu".

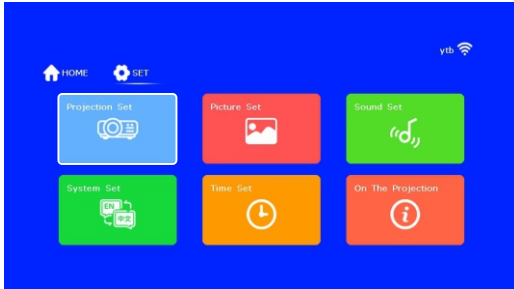


2. In the pop-up menu of "Projection Set", you can choose forward/back/normal/ceiling projection.




19

Projection Set

1. Enter the "Set" interface, select the "Picture Set" icon through the remote control or the keyboard button, and press "OK" to enter "Picture Set menu".

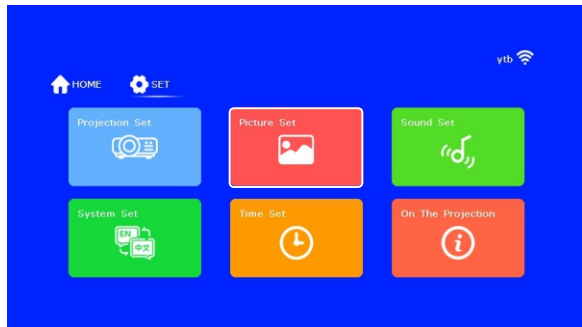


2. In the pop-up menu of "Picture Set", you can set "image" related options.

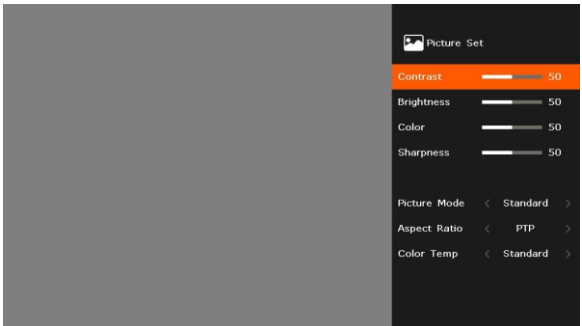


20

Sound Set

1. Enter the "Set" interface, select the "Sound Set" icon through the remote control or the keyboard button, and press "OK" to enter "Sound Set menu".

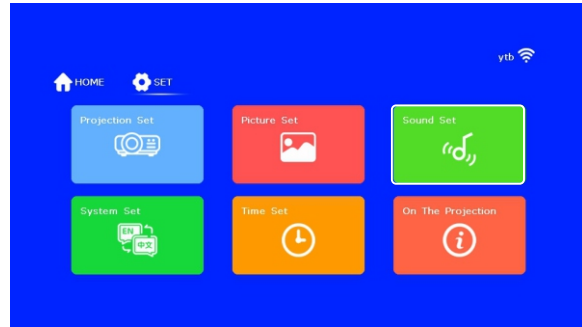


2. In the pop-up menu of "Sound Set", you can set "Sound" related options.

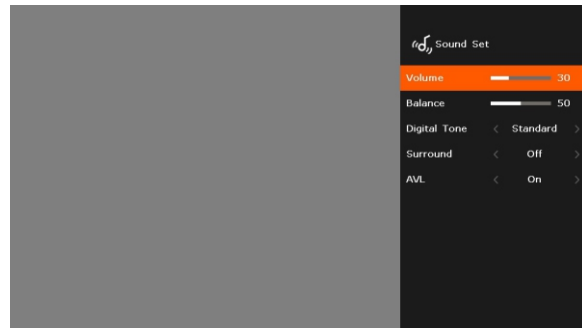

21

System Set

1. Enter the "Set" interface, select the "System Set" icon through the remote control or the keyboard button, and press "OK" to enter "System Set menu".

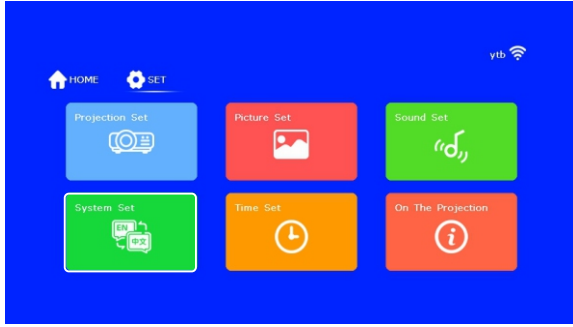


2. In the pop-up menu of "System Set", you can set "System" related options.




22

Time Set

1. Enter the "Set" interface, select the "Time Set" icon through the remote control or the keyboard button, and press "OK" to enter "Time Set menu".

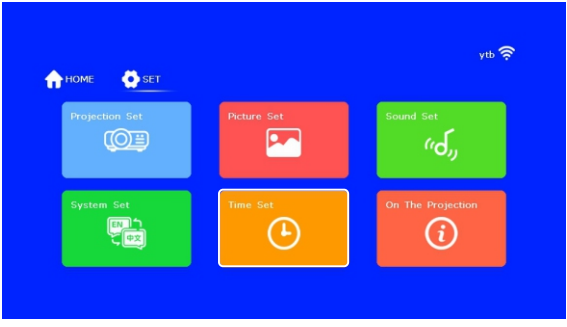

2. In the pop-up menu of "Time Set", you can set "Time" related options.

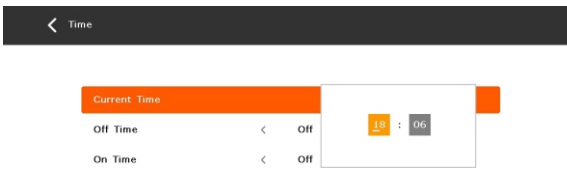

23