

# **RADIOHACK SPEAKER BOX** **User Manual**

## **Manualsum, simplified manuals**

### Table of Contents

- [RADIOHACK SPEAKER BOX User Manual](#)
  - [SPECIFICATIONS](#)
  - [4001941 CONTROL PANEL](#)
  - [4001945 CONTROL PANEL](#)
  - [PLAYER CONTROLS](#)
    - [MODE](#)
    - [PLAY/PAUSE:](#)
    - [CYCLE PLAY MODE:](#)
    - [NEXT/VOLUME +:](#)
    - [PREVIOUS/VOLUME-:](#)
    - [CONNECTION BLUETOOTH](#)
  - [REMOTE CONTROL](#)
  - [CAUTION](#)

# **RADIOHACK SPEAKER BOX User Manual**

RADIOHACK SPEAKER BOX User Manual

FCC id: [2BDUR-4001941](#)



12" & 15" 2-WAY P.A. SPEAKER

models: 4001941 / 4001945



 
#### PACKING CONTENTS

- 1x speaker
- 1x remote control
- 1x user's guide
- 1x power cable
- 1x wired microphone
- 1x speaker tripod (4001941 tripod pack separately by extra cart [Manualsum](#))


# SPECIFICATIONS

|                           |                             |                             |
|---------------------------|-----------------------------|-----------------------------|
| <b>Model</b>              | 4001941                     | 4001945                     |
| <b>TYPE</b>               | Active speaker with battery | Active speaker with battery |
| <b>AC INPUT</b>           | AC100-240V,50/60Hz          | AC100-240V,50/60Hz          |
| <b>WOOFER</b>             | 12"                         | 15"                         |
| <b>VOICE COIL</b>         | 1.5" (38mm)                 | 1.5" (38mm)                 |
| <b>MAGNET</b>             | 300z                        | 300z                        |
| <b>SENSIVITY</b>          | 93dB (+/-3dB)               | 95dB (+/-3dB)               |
| <b>FREQUENCY RESPONSE</b> | 50Hz-20KHz                  | 50Hz-20KHz                  |
| <b>TWEETER</b>            | 25mm                        | 25mm                        |
| <b>POWER</b>              | 100W                        | 100W                        |
| <b>FUNCTION</b>           | USB, FM, Bluetooth          | USB, FM, Bluetooth          |
| <b>REMOTE CONTROL</b>     | Yes                         | Yes                         |
| <b>BATTERY CAPACITY</b>   | 12V, 5AH                    | 12V, 5AH                    |

## 4001941 CONTROL PANEL

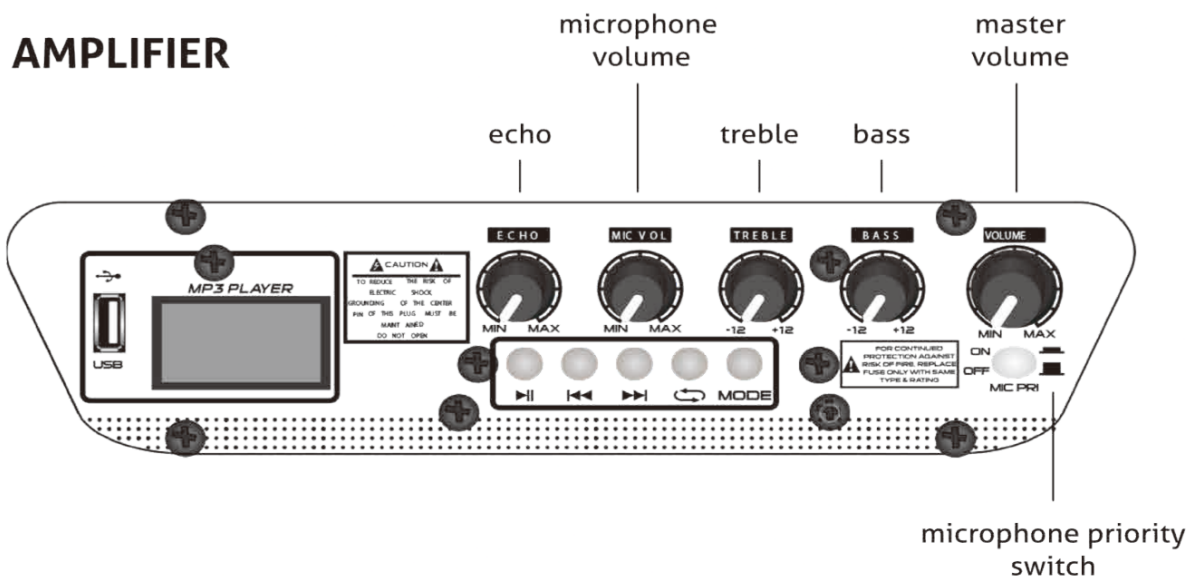


# BACK PANEL

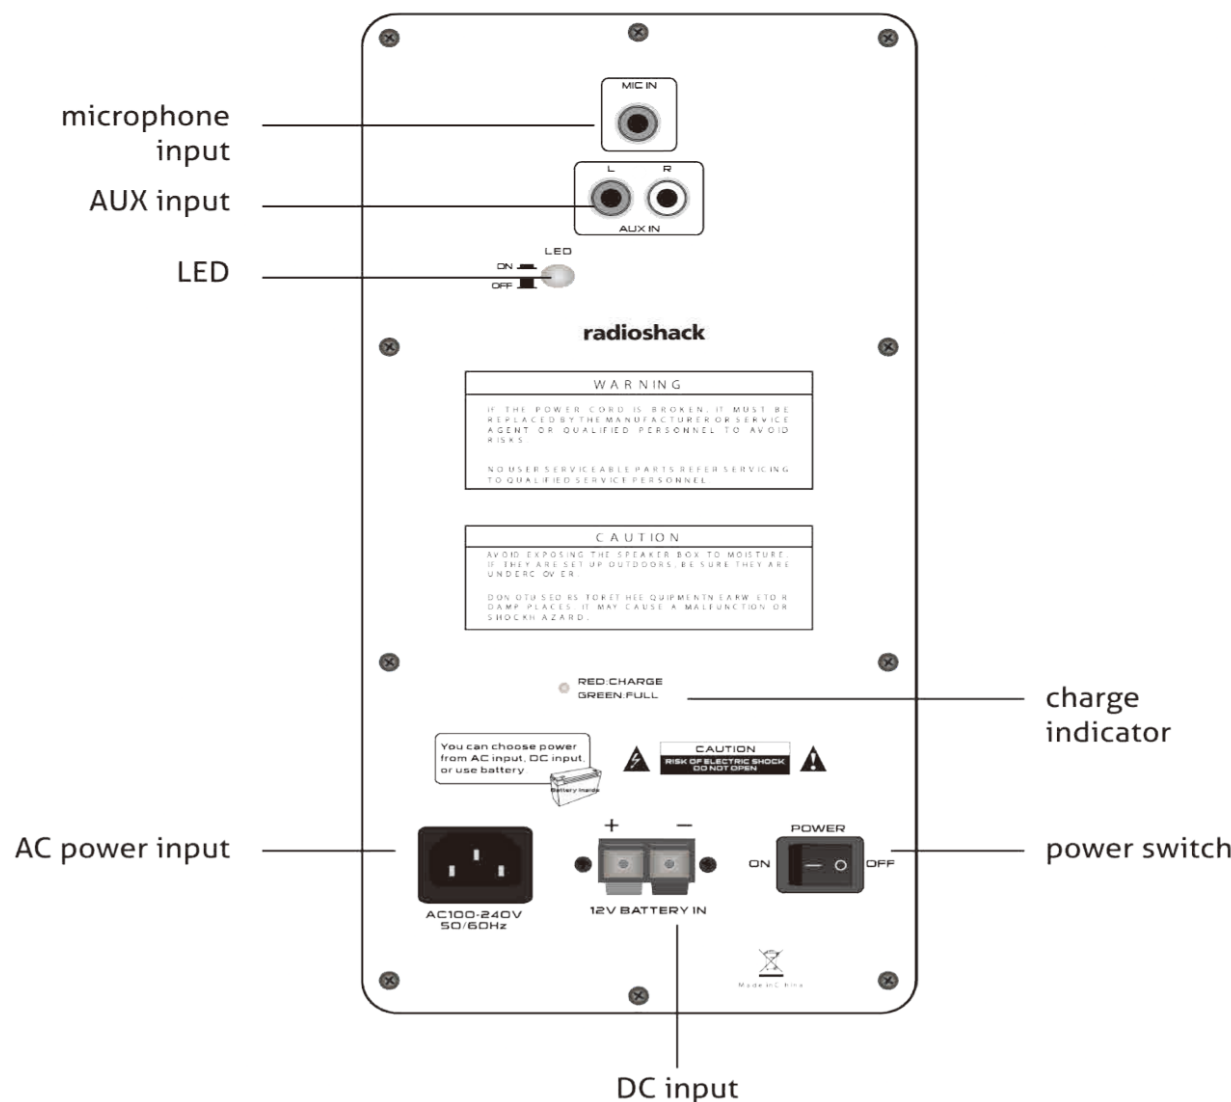 


# 4001945 CONTROL PANEL
 
## AMPLIFIER

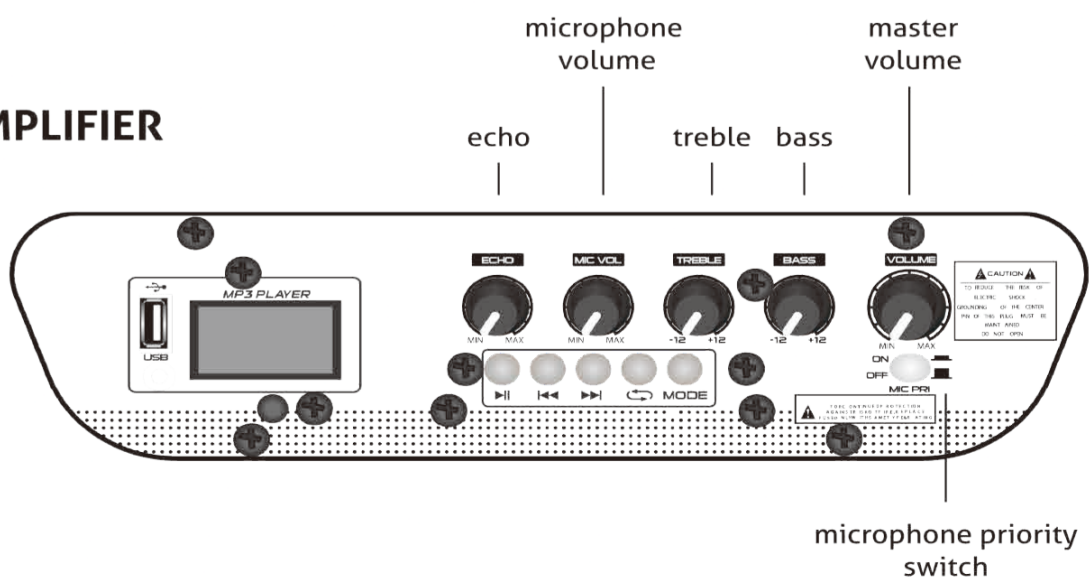


## BACK PANEL

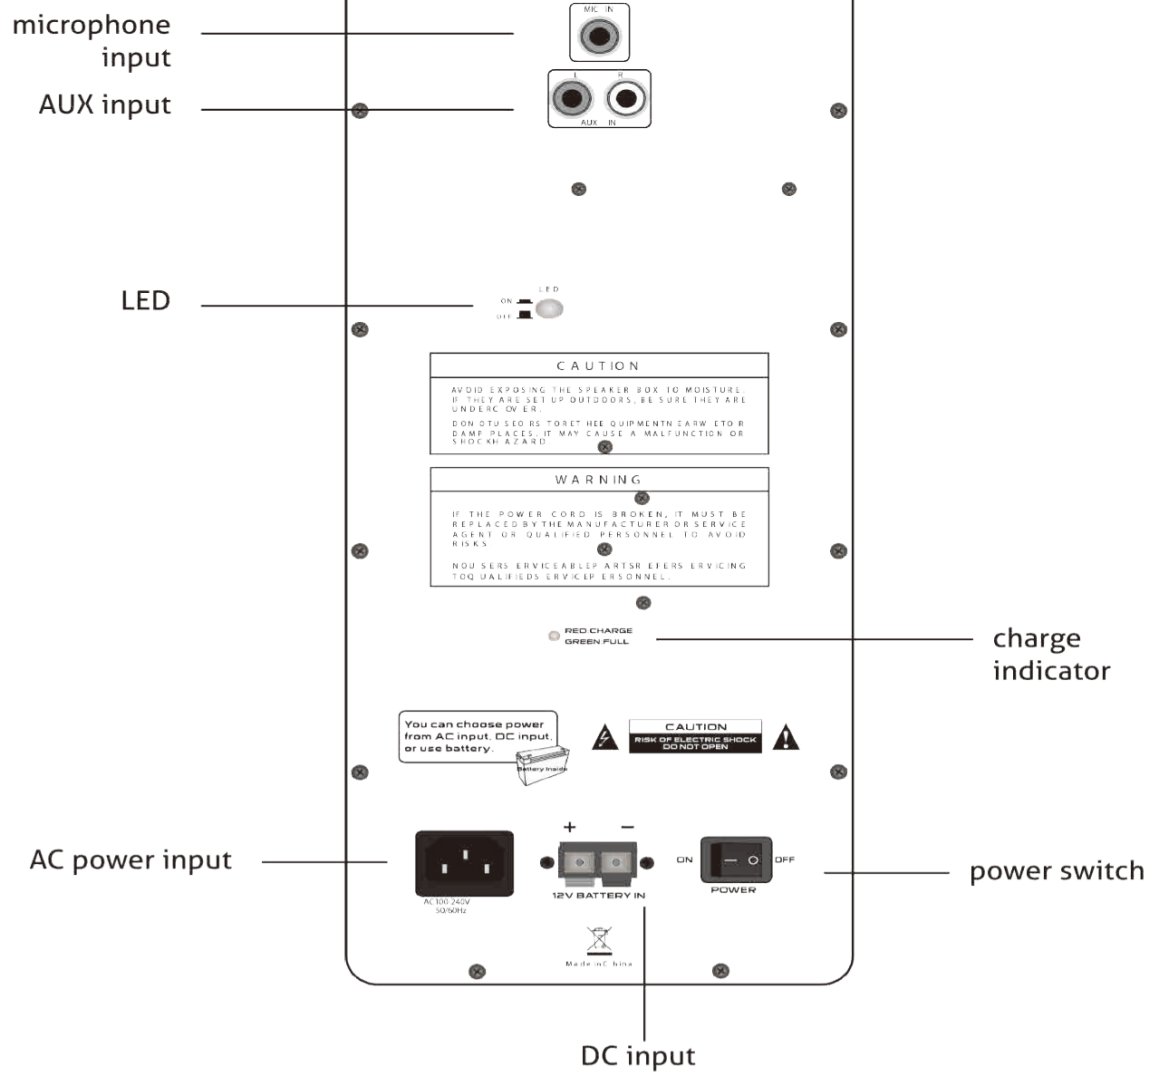 

# PLAYER CONTROLS
 
## PLAYER CONTROLS

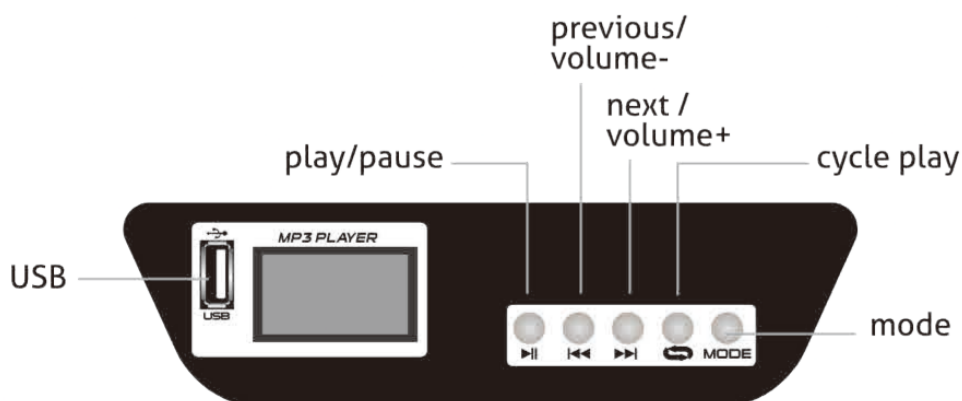

### MODE

Select an operating mode, the options are: Bluetooth, AUX, USB and FM

### PLAY/PAUSE:

- Press to play a song or pause while playing a song
- When you choose FM mode, when pressing this button it will automatically search the FM stations

### CYCLE PLAY MODE:

press once to select a player mode, the options are:

- One: select this to play current song indefinitely
- All: with this option you can repeat all music

### NEXT/VOLUME +:

- Press once to jump next song / press and hold to raise the volume level.
- In FM mode, press it to go to the next stations.

### PREVIOUS/VOLUME-:

 
- Press once to jump previous song / press and hold to diminish the volume level.
- In FM mode, press it jump to the previous stations.

## CONNECTION BLUETOOTH

1. To pair the speaker with a Bluetooth phone or audio device, press "MODE" repeatedly on the MP3 player until select this mode.
2. Put your phone or device to be used in Bluetooth device discovery mode.
3. When your phone or device shows the "RS 4001941 / RS 4001945 " device, confirm the link.

## REMOTE CONTROL

1. Press to play a song or pause while playing a song.  
Program radio FM stations
2. In play mode press to set one equalizer mode
3. Vol+/Vol-
4. Previous: Press once to jump previous song, press and hold to rewind
5. Next: Press once to jump next song, press and hold to fast-forward
6. Keys: Use this key to select the number of a desired track
7. Pick song: allows you to select the song you want to listen to. Ex: if you want to hear the song No. 11

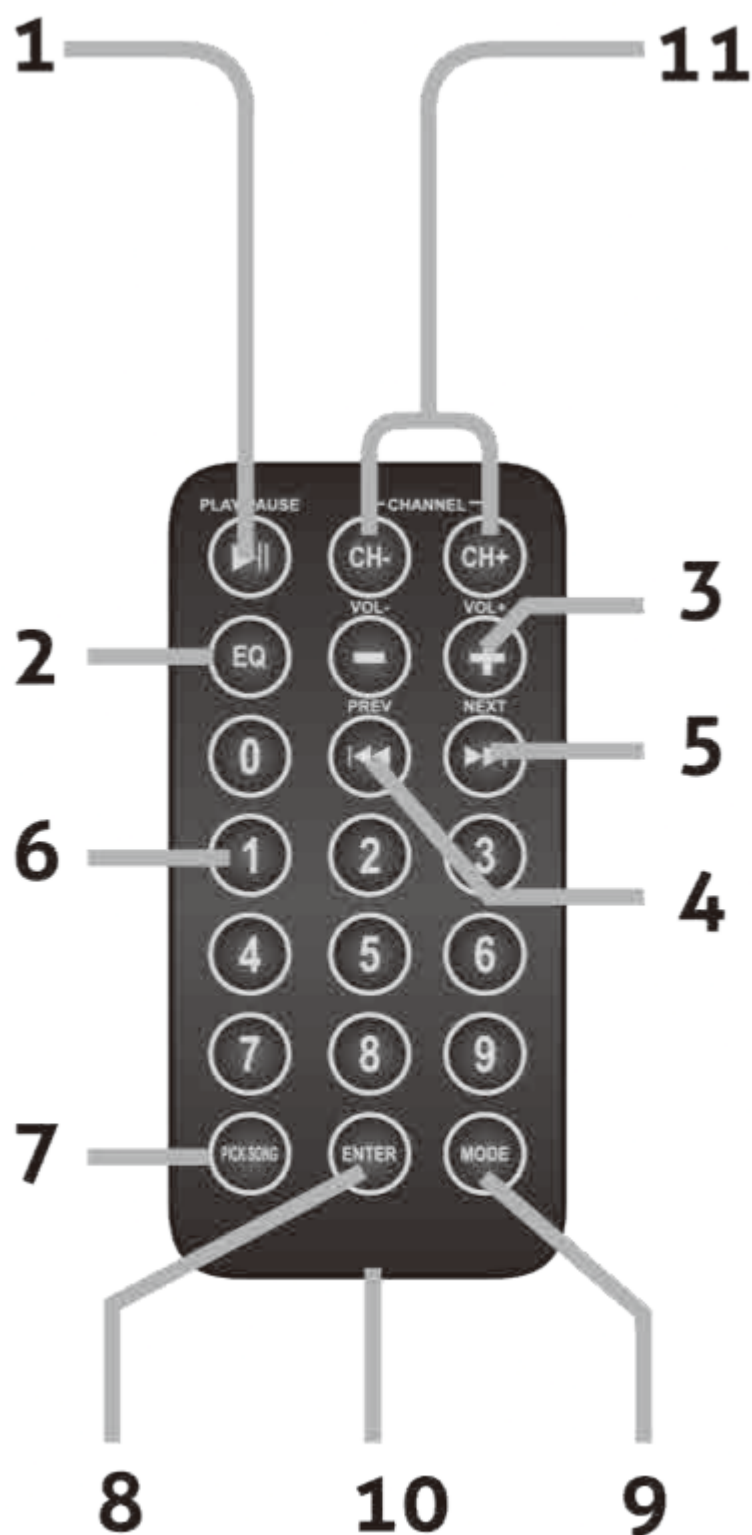

- first press  
the number  
11 then  
press this  
button
8. Enter:  
choose  
repeat mode
  9. Model: select  
an operating  
modality, the  
options are  
SD/USB/FM  
radio/AUX
  10. Battery  
compartment  
(CR2025),  
not included
  11. Select a FM  
frequency

## CAUTION

- Avoid exposing the speaker box to moisture. If they are set up outdoors, be sure they are under cover.

[Manualsum](#)

- Do not use or store the equipment near wet or damp places. It may cause a malfunction or shock hazard.
- If the power cord is broken, it must be replaced by the manufacturer or service agent or qualified personnel to avoid risks
- To reduce the risk of fire or electric shock do not expose this equipment to rain or moisture.
- Clean only with a soft, dry cloth