

DAIKIN Service Instructions

DRG GAS ELECTRIC/DRC COOLING/DRH HEAT PUMP COMMERCIAL PACKAGE UNITS WITH R-410A REFRIGERANT 3-6 TONS & ACCESSORIES

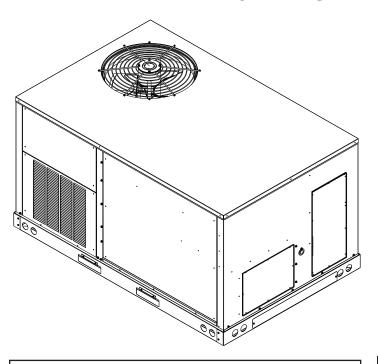

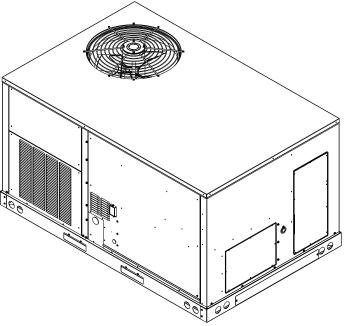

PROP 65 WARNING FOR CALIFORNIA CONSUMERS

/ WARNING

Cancer and Reproductive Harm - www.P65Warnings.ca.gov

0140M00517





A v

WARNING

ONLY PERSONNEL THAT HAVE BEEN TRAINED TO INSTALL, ADJUST, SERVICE OR REPAIR (HEREINAFTER, "SERVICE") THE **EQUIPMENT SPECIFIED IN THIS MANUAL SHOULD SERVICE THE EQUIPMENT. THE MANUFACTURER WILL NOT BE RESPONSIBLE** FOR ANY INJURY OR PROPERTY DAMAGE ARISING FROM IMPROPER SERVICE OR SERVICE PROCEDURES. IF YOU SERVICE THIS UNIT, YOU ASSUME RESPONSIBILITY FOR ANY INJURY OR PROPERTY DAMAGE WHICH MAY RESULT. IN ADDITION, IN JURISDICTIONS THAT REQUIRE ONE OR MORE LICENSES TO SERVICE THE EQUIPMENT SPECIFIED IN THIS MANUAL. ONLY LICENSED PERSONNEL SHOULD SERVICE THE EQUIPMENT. IMPROPER INSTALLATION, ADJUSTMENT, SERVICING OR REPAIR OF THE EQUIPMENT SPECIFIED IN THIS MANUAL, OR ATTEMPTING TO INSTALL, ADJUST, SERVICE OR REPAIR THE **EQUIPMENT SPECIFIED IN THIS MANUAL WITHOUT PROPER** TRAINING MAY RESULT IN PRODUCT DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

This manual is to be used by qualified, professionally trained HVAC technicians only. Daikin does not assume any responsibility for property damage or personal injury due to improper service procedures or services performed by an unqualified person.

IMPORTANT INFORMATION

TABLE OF CONTENTS

MPORTANT INFORMATION	2
PRODUCT IDENTIFICATION	4
Accessories	6
System Operation	20
SERVICING TABLE OF CONTENTS	43
Servicing	44
UNIT WIRING DIAGRAM	77
Accessories Wiring Diagram	86
HEATER KITS	99
HEATER KITS WIRING DIAGRAM	100
SCHEDULED MAINTENANCE	112

IMPORTANT NOTICES

RECOGNIZE SAFETY SYMBOLS, WORDS AND LABELS

Pride and workmanship go into every product to provide our customers with quality products. It is possible, however, that during its lifetime a product may require service. Products should be serviced only by a qualified service technician who is familiar with the safety procedures required in the repair and who is equipped with the proper tools, parts, testing instruments and the appropriate service manual. **REVIEW ALL SERVICE INFORMATION IN THE APPROPRIATE SERVICE MANUAL BEFORE BEGINNING REPAIRS.**



WARNING

TO PREVENT THE RISK OF PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH, DO NOT STORE COMBUSTIBLE MATERIALS OR USE GASOLINE OR OTHER FLAMMABLE LIQUIDS OR VAPORS IN THE VICINITY OF THIS APPLIANCE.



WARNING

HIGH VOLTAGE
DISCONNECT ALL POWER BEFORE SERVICING
OR INSTALLING THIS UNIT. MULTIPLE POWER
SOURCES MAY BE PRESENT. FAILURE TO DO SO
MAY CAUSE PROPERTY DAMAGE, PERSONAL

INJURY OR DEATH.





WARNING

THIS UNIT SHOULD NOT BE CONNECTED TO, OR USED IN CONJUNCTION WITH, ANY DEVICES THAT ARE NOT DESIGN CERTIFIED FOR USE WITH THIS UNIT OR HAVE NOT BEEN TESTED AND APPROVED BY THE MANUFACTURER. SERIOUS PROPERTY DAMAGE OR PERSONAL INJURY, REDUCED UNIT PERFORMANCE AND/OR HAZARDOUS CONDITOINS MAY RESULT FROM THE USE OF DEVICES THAT HAVE NOT BEEN APPROVED OR CERTIFIED BY THE MANUFACTURER.

To locate an authorized servicer, please consult your telephone book or the dealer from whom you purchased this product. For further assistance, please contact:

CONSUMER INFORMATION LINE - DAIKIN BRAND PRODUCTS

TOLL FREE 1-855-770-5678 (U.S. only)
email us at: customerservice@daikinac.com
fax us at: (713) 856-1821
(Not a technical assistance line for dealers.)

Outside the U.S., call 1-713-861-2500 (Not a technical assistance line for dealers.)
Your telephone company will bill you for the call.

IMPORTANT INFORMATION

SAFE REFRIGERANT HANDLING

While these items will not cover every concievable situation, they should serve as a usefull guide.



WARNING

REFRIGERANTS ARE HEAVIER THAN AIR. THEY CAN "PUSH OUT" THE OXYGEN IN YOUR LUNGS OR IN ANY ENCLOSED SPACE. TO AVOID POSSIBLE DIFFICULTY IN BREATHING OR DEATH:

- NEVER PURGE REFRIGERANT INTO AN ENCLOSED ROOM OR SPACE. BY LAW, ALL REFRIGERANT MUST BE RECLAIMED.
- If AN INDOOR LEAK IS SUSPECTED, THOROUGHLY VENTILATE THE AREA BEFORE BEGINNING WORK.
- LIQUID REFRIGERANT CAN BE VERY COLD. TO AVOID POSSIBLE FROSTBITE OR BLINDNESS, AVOID CONTACT WITH REFRIGERANT AND WEAR GLOVES AND GOGGLES. IF LIQUID REFRIGERANT DOES CONTACT YOUR SKIN OR EYES, SEEK MEDICAL HELP IMMEDIATELY.
- ALWAYS FOLLOW EPA REGULATIONS. NEVER BURN REFRIGERANT, AS POSIONOUS GAS WILL BE PRODUCED.



WARNING

TO AVOID POSSIBLE INJURY, EXPLOSION OR DEATH, PRACTICE SAFE HANDLING OF REFRIGERANTS.



WARNING

THE COMPRESSOR POE OIL FOR R-410A UNITS IS EXTREMELY SUSCEPTIBLE TO MOISTURE ABSORPTION AND COULD CAUSE COMPRESSOR FAILURE. DO NOT LEAVE SYSTEM OPEN TO ATMOSPHERE ANY LONGER THAN NECESSARY FOR INSTALLATION.



WARNING

TO AVOID POSSIBLE EXPLOSION:

- NEVER APPLY FLAME OR STEAM TO A REFRIGERANT CYLINDER. IF YOU MUST HEAT A CYLINDER FOR FASTER CHARGING, PARTIALLY IMMERSE IT IN WARM WATER.
- NEVER FILL A CYLINDER MORE THAN 80% FULL OF LIQUID REFRIGERANT.
- NEVER ADD ANYTHING OTHER THAN R-22 TO AN R-22 CYLINDER OR R-410A TO AN R-410A CYLINDER. THE SERVICE EQUIPMENT USED MUST BE LISTED OR CERTIFIED FOR THE TYPE OF REFRIGERANT USED.
- STORE CYLINDERS IN A COOL, DRY PLACE. NEVER USE A CYLINDER AS A PLATFORM OR A ROLLER.



WARNING

TO AVOID POSSIBLE EXPLOSION, USE ONLY RETURNABLE (NOT DISPOSABLE) SERVICE CYLINDERS WHEN REMOVING REFRIGERANT FROM A SYSTEM.

- ENSURE THE CYLINDER IS FREE OF DAMAGE WHICH COULD LEAD TO A LEAK OR EXPLOSION.
- ENSURE THE HYDROSTATIC TEST DATE DOES NOT EXCEED 5 YEARS.
- ENSURE THE PRESSURE RATING MEETS OR EXCEEDS 400 LBS.

WHEN IN DOUBT, DO NOT USE CYLINDER.



WARNING

SYSTEM CONTAMINANTS, IMPROPER SERVICE PROCEDURE AND/OR PHYSICAL ABUSE AFFECTING HERMETIC COMPRESSOR ELECTRICAL TERMINALS MAY CAUSE DANGEROUS SYSTEM VENTING.

The successful development of hermetically sealed refrigeration compressors has completely sealed the compressor's moving parts and electric motor inside a common housing, minimizing refrigerant leaks and the hazards sometimes associated with moving belts, pulleys or couplings.

Fundamental to the design of hermetic compressors is a method whereby electrical current is transmitted to the compressor motor through terminal conductors which pass through the compressor housing wall. These terminals are sealed in a dielectric material which insulates them from the housing and maintains the pressure tight integrity of the hermetic compressor. The terminals and their dielectric embedment are strongly constructed, but are vulnerable to careless compressor installation or maintenance procedures and equally vulnerable to internal electrical short circuits caused by excessive system contaminants.

In either of these instances, an electrical short between the terminal and the compressor housing may result in the loss of integrity between the terminal and its dielectric embedment. This loss may cause the terminals to be expelled, thereby venting the vaporous and liquid contents of the compressor housing and system.

A venting compressor terminal normally presents no danger to anyone, providing the terminal protective cover is properly in place.

If, however, the terminal protective cover is not properly in place, a venting terminal may discharge a combination of

- A. hot lubricating oil and refrigerant
- B. flammable mixture (if system is contaminated with air)


in a stream of spray which may be dangerous to anyone in the vicinity. Death or serious bodily injury could occur.

Under no circumstances is a hermetic compressor to be electrically energized and/or operated without having the terminal protective cover properly in place.

See Service Section S-17 for proper servicing.

PRODUCT IDENTIFICATION

The model number is used for positive identification of component parts used in manufacturing. Please use this number when requesting service or parts information.

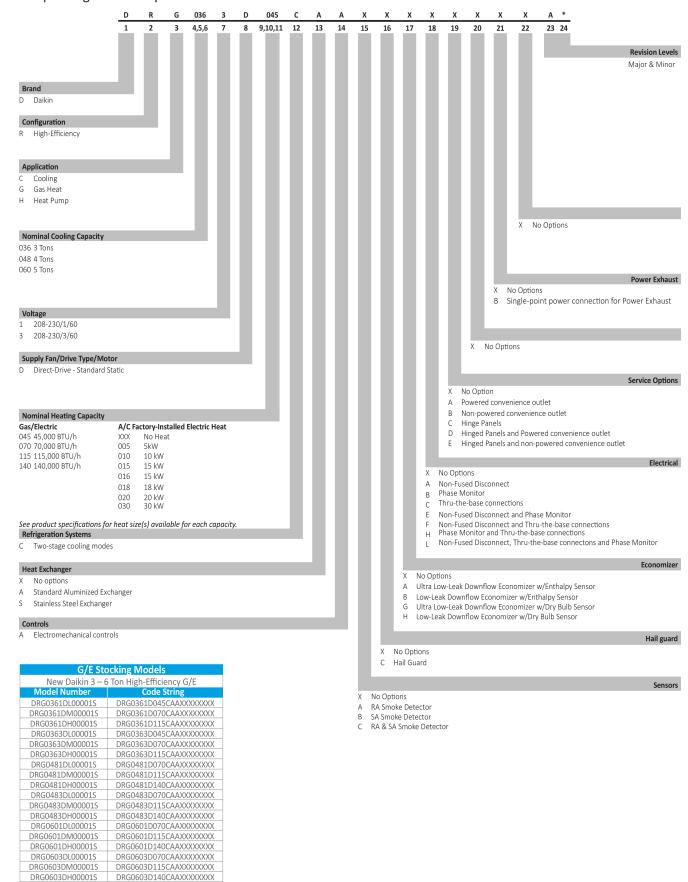

PRODUCT IDENTIFICATION

- Stainless-Steel Heat Exchanger (Gas only units): A tubular heat exchanger made of 409-type stainless steel is installed in the unit.
- Economizers (Downflow): Based on air conditions, can provide outisde air to cool the space.
- Electric Heat Kits (heat pump and cooling units only): Available in all voltage options.
- Non-powered Concenience Outlet: A 120V, 15A, GFCI outlet makes it easier for technicians to service the unit once an electrician runs power to the outlet.
- Powered Concenience Outlet: A 120V, 15A, GFCI outlet powered with a transformer built into the unit. When a factory-installed powered convenience outlet is installed in the equipment, the unit MCA (Min. Circuit Ampacity) will increase by 7.5A for 208/230V units, increase by 3.75A for 460V units, and by 3A for 575V units. The MOP (Max. Overcurrent Protection) device must be sized accordingly.
- Disconnect Switch (non-fused; 3-phase units only:)
 A disconnect switch is installed in the unit and factory wiring will be complete from the switch to the unit. Please note that for air conditioning and heat pump models, the appropriate electric heat kit must be ordered to be factory-installed along with the disconnect switch (non-fused) when it is ordered. Please note that for models with a powered convenience outlet option and a disconnect switch (non-fused) option, the power to the powered concenience outlet will be shut off when the disconnect switch (non-fused) is in the off position.
- Return Air and/or Supply Air Smoke Detectors: Return air and/or supply air smoke detectors are installed in the unit.

- Hinged Access Panels: Allows access to unit's major components. Combined with latches for easy access to control box, compressor, filters and blower motor. Available on all units.
- Two-speed indoor fan blower models are available on 6, 71/2, 81/2, 10, 121/2, 15, 20 & 25 ton units. Section 6.4.3.10.b of ASHRAE Standard 910.1-2010 and Section 6.5.3.2.1.a of ASHRAE Standard 90.1-2013 require a minimum of two fan speeds. Section 140.4(m)1 of California Energy Commission Title 24 2013 cibtaubs a similar provision. When the units with the two-speed infoor fan blowers operate on a call for the first stage of cooling, the fan operates at low speed, which is 66% of full speed. When the units operate on a call for the second stage of cooling, the fan operates at full speed. In heating operation, the fan operates at low speed.
- Return Air and/or Supply Air Smoke Detectors: Return air and/or supply air smoke detectors are installed in the unit.
- Hinged Access Panels: Allows access to unit's major components. Combined with latches for easy access to contol box, compressor, filters and blower motor. Available on all models.
- Phase Monitor: Phase monitor (3 phase only), available for 3-25 ton DB and DR series models. Phase monitor shall provide protection for motors and compressors against problems caise by phase loss, phase reversal and phase unbalance. Phase monitor is equipped with an LED that provides an ON or FAULT indicator.

Daikin Master Item #	Vendor P/N Ref	Description	Fits Model	Field	Factory	Operating
Daikiii iviastei iteiii #	Vendor F/N Rei	Description	Size	Installed	Installed	Weight, lb
Electric Heat Kits	1		- 			
EHXD-1S05FI EHXD-1S10FI	6000-147-205 6000-147-210	Electric Heat Kit Factory Installed, 5 KW - 240V - 1PH Electric Heat Kit Factory Installed, 10 KW - 240V - 1PH	3-5 ton 3-5 ton		√ √	
EHXD-1S15FI	6000-147-215	Electric Heat Kit Factory Installed, 10 KW - 240V - 1PH	4-5 ton		۷	
EHXD-1S16FI	6000-151-216	Electric Heat Kit Factory Installed, 15 KW - 240V - 1PH	3 ton		٧	
EHXD-1S22FI	6000-147-222	Electric Heat Kit Factory Installed, 20 KW - 240V - 1PH	4-5 ton		٧	
EHXD-3S05FI	6000-147-305	Electric Heat Kit Factory Installed, 5 KW - 240V - 3PH	3-6 ton		٧	
EHXD-3S10FI EHXD-3S15FI	6000-147-310 6000-147-315	Electric Heat Kit Factory Installed, 10 KW - 240V - 3PH Electric Heat Kit Factory Installed, 15 KW - 240V - 3PH	3-6 ton 3-6 ton		√ √	
EHXD-3S16FI	6000-147-313	Electric Heat Kit Factory Installed, 15 KW - 240V - 3PH	3 ton		٧	
EHXD-3S20FI	6000-147-320	Electric Heat Kit Factory Installed, 20 KW - 240V - 3PH	5-6 ton		٧	
EHXD-3S21FI	6000-151-320	Electric Heat Kit Factory Installed, 20 KW - 240V - 3PH	4&6 ton		٧	
EHXD-3S22FI	6000-151-322	Electric Heat Kit Factory Installed, 20 KW - 240V - 3PH	4-5 ton		٧	
EHXD-3S30FI EHXD-3S31FI	6000-147-330 6000-151-331	Electric Heat Kit Factory Installed, 30 KW - 240V - 3PH Electric Heat Kit Factory Installed, 30 KW - 240V - 3PH	6 ton 6 ton		√ √	
EHXD-4S05FI	6000-131-331	Electric Heat Kit Factory Installed, 50 KW - 2400 - 3PH	3-6 ton		٧	
EHXD-4S10FI	6000-147-410	Electric Heat Kit Factory Installed, 10 KW - 480V - 3PH	3-6 ton		٧	
EHXD-4S15FI	6000-147-415	Electric Heat Kit Factory Installed, 15 KW - 480V - 3PH	3-6 ton		٧	
EHXD-4S16FI	6000-151-416	Electric Heat Kit Factory Installed, 15 KW - 480V - 3PH	3 ton		٧	
EHXD-4S20FI	6000-147-420	Electric Heat Kit Factory Installed, 20 KW - 480V - 3PH	5-6 ton		٧	
EHXD-4S21FI EHXD-4S22FI	6000-151-420 6000-151-422	Electric Heat Kit Factory Installed, 20 KW - 480V - 3PH Electric Heat Kit Factory Installed, 20 KW - 480V - 3PH	4&6 ton 4-5 ton		√ √	
EHXD-4S30FI	6000-131-422	Electric Heat Kit Factory Installed, 30 KW - 460V - 3PH	6 ton		٧	
EHXD-4S31FI	6000-151-431	Electric Heat Kit Factory Installed, 30 KW - 480V - 3PH	6 ton		٧	
EHXD-7S05FI	6000-147-605	Electric Heat Kit Factory Installed, 5 KW - 600V - 3PH	3-6 ton		٧	
EHXD-7S10FI	6000-147-610	Electric Heat Kit Factory Installed, 10 KW - 600V - 3PH	3-6 ton		٧	
EHXD-7S15FI EHXD-7S16FI	6000-147-615 6000-151-616	Electric Heat Kit Factory Installed, 15 KW - 600V - 3PH Electric Heat Kit Factory Installed, 15 KW - 600V - 3PH	3-6 ton 3 ton		√ √	
EHXD-7S20FI	6000-131-616	Electric Heat Kit Factory Installed, 20 KW - 600V - 3PH	5-6 ton		۷	
EHXD-7S21FI	6000-151-620	Electric Heat Kit Factory Installed, 20 KW - 600V - 3PH	4&6 ton		٧	
EHXD-7S22FI	6000-151-622	Electric Heat Kit Factory Installed, 20 KW - 600V - 3PH	4-5 ton		٧	
EHXD-7S30FI	6000-147-630	Electric Heat Kit Factory Installed, 30 KW - 600V - 3PH	6 ton		٧	
EHXD-7S31FI	6000-151-631	Electric Heat Kit Factory Installed, 30 KW - 600V - 3PH	6 ton		٧	
EHSD-1S05FI EHSD-1S10FI	6000-148-205 6000-148-210	Electric Heat Kit Factory Installed, 5 KW - 240V - 1PH W/SCR Electric Heat Kit Factory Installed, 10 KW - 240V - 1PH W/SCR	3-5 ton 3-5 ton		√ √	
EHSD-1S15FI	6000-148-215	Electric Heat Kit Factory Installed, 15 KW - 240V - 1PH W/SCR	4-5 ton		٧	
EHSD-1S16FI	6000-152-216	Electric Heat Kit Factory Installed, 15 KW - 240V - 1PH W/SCR	3 ton		٧	
EHSD-1S22FI	6000-148-222	Electric Heat Kit Factory Installed, 20 KW - 240V -1PH W/SCR	4-5 ton		٧	
EHSD-3S05FI	6000-148-305	Electric Heat Kit Factory Installed, 5 KW - 240V - 3PH W/SCR	3-6 ton		٧	
EHSD-3S10FI EHSD-3S15FI	6000-148-310 6000-148-315	Electric Heat Kit Factory Installed, 10 KW - 240V - 3PH W/SCR Electric Heat Kit Factory Installed, 15 KW - 240V - 3PH W/SCR	3-6 ton 3-6 ton		√ √	
EHSD-3S16FI	6000-148-313	Electric Heat Kit Factory Installed, 15 KW - 240V - 3PH W/SCR	3 ton		٧	
EHSD-3S20FI	6000-148-320	Electric Heat Kit Factory Installed, 20 KW - 240V - 3PH W/SCR	5-6 ton		٧	
EHSD-3S21FI	6000-152-320	Electric Heat Kit Factory Installed, 20 KW - 240V - 3PH W/SCR	4&6 ton		٧	
EHSD-3S22FI	6000-152-322	Electric Heat Kit Factory Installed, 20 KW - 240V - 3PH W/SCR	4-5 ton		٧	
EHSD-3S30FI EHSD-3S31FI	6000-148-330 6000-152-331	Electric Heat Kit Factory Installed, 30 KW - 240V - 3PH W/SCR	6 ton 6 ton		√ √	
EHSD-4S05FI	6000-132-331	Electric Heat Kit Factory Installed, 30 KW - 240V - 3PH W/SCR Electric Heat Kit Factory Installed, 5 KW - 480V - 3PH W/SCR	3-6 ton		V √	
EHSD-4S10FI	6000-148-410	Electric Heat Kit Factory Installed, 10 KW - 480V - 3PH W/SCR	3-6 ton		٧	
EHSD-4S15FI	6000-148-415	Electric Heat Kit Factory Installed, 15 KW - 480V - 3PH W/SCR	3-6 ton		٧	
EHSD-4S16FI	6000-152-416	Electric Heat Kit Factory Installed, 15 KW - 480V - 3PH W/SCR	3 ton		٧	
EHSD-4S20FI EHSD-4S21FI	6000-148-420 6000-152-420	Electric Heat Kit Factory Installed, 20 KW - 480V - 3PH W/SCR Electric Heat Kit Factory Installed, 20 KW - 480V - 3PH W/SCR	5-6 ton 4&6 ton		√ √	
EHSD-4S22FI	6000-152-420	Electric Heat Kit Factory Installed, 20 KW - 480V - 3PH W/SCR	4-5 ton		۷ /	
EHSD-4S30FI	6000-148-430	Electric Heat Kit Factory Installed, 30 KW - 480V - 3PH W/SCR	6 ton		٧	
EHSD-4S31FI	6000-152-431	Electric Heat Kit Factory Installed, 30 KW - 480V - 3PH W/SCR	6 ton		٧	
EHSD-7S05FI	6000-148-605	Electric Heat Kit Factory Installed, 5 KW - 600V - 3PH W/SCR	3-6 ton		٧	
EHSD-7S10FI	6000-148-610	Electric Heat Kit Factory Installed, 10 KW - 600V - 3PH W/SCR	3-6 ton		٧	
EHSD-7S15FI EHSD-7S16FI	6000-148-615 6000-152-616	Electric Heat Kit Factory Installed, 15 KW - 600V - 3PH W/SCR Electric Heat Kit Factory Installed, 15 KW - 600V - 3PH W/SCR	3-6 ton 3 ton		√ √	
EHSD-7S20FI	6000-132-010	Electric Heat Kit Factory Installed, 20 KW - 600V - 3PH W/SCR	5-6 ton		٧	
EHSD-7S21FI	6000-152-620	Electric Heat Kit Factory Installed, 20 KW - 600V - 3PH W/SCR	4&6 ton		٧	
EHSD-7S22FI	6000-152-622	Electric Heat Kit Factory Installed, 20 KW - 600V - 3PH W/SCR	4-5 ton		٧	•
EHSD-7S30FI	6000-148-630	Electric Heat Kit Factory Installed, 30 KW - 600V - 3PH W/SCR	6 ton		٧	
EHSD-7S31FI EHXD-1S05	6000-152-631 6000-147-205	Electric Heat Kit Factory Installed, 30 KW - 600V - 3PH W/SCR Electric Heat Kit, 5 KW - 240V - 1PH	6 ton 3-5 ton	٧	٧	
EHXD-1S05	6000-147-205	Electric Heat Kit, 10 KW - 240V - 1PH	3-5 ton	V √		
EHXD-1S15	6000-147-215	Electric Heat Kit, 15 KW - 240V - 1PH	4-5 ton	٧		
EHXD-1S16	6000-151-216	Electric Heat Kit, 15 KW - 240V - 1PH	3 ton	٧		
EHXD-1S22	6000-147-222	Electric Heat Kit, 20 KW - 240V - 1PH	4-5 ton	٧		
EHXD-3S05 EHXD-3S10	6000-147-305 6000-147-310	Electric Heat Kit, 5 KW - 240V - 3PH Electric Heat Kit, 10 KW - 240V - 3PH	3-6 ton	√ √		
EHXD-3S10 EHXD-3S15	6000-147-315	Electric Heat Kit, 10 KW - 240V - 3PH Electric Heat Kit, 15 KW - 240V - 3PH	3-6 ton 3-6 ton	٧		
	525	,	- 0.011			

Daikin Master Item #	Vendor P/N Ref	Description	Fits Model Size	Field Installed	Factory Installed	Operating Weight, lb
Electric Heat Kits						
EHXD-3S16	6000-151-316	Electric Heat Kit, 15 KW - 240V - 3PH	3 ton	٧		
EHXD-3S20	6000-147-320	Electric Heat Kit, 20 KW - 240V - 3PH	5-6 ton	٧		
EHXD-3S21	6000-151-320	Electric Heat Kit, 20 KW - 240V - 3PH	4&6 ton	٧		-
EHXD-3S22 EHXD-3S30	6000-151-322 6000-147-330	Electric Heat Kit, 20 KW - 240V - 3PH Electric Heat Kit, 30 KW - 240V - 3PH	4-5 ton	√ √		
EHXD-3S31	6000-147-330	Electric Heat Kit, 30 KW - 240V - 3PH	6 ton 6 ton	V √		
EHXD-4S05	6000-131-331	Electric Heat Kit, 5 KW - 480V - 3PH	3-6 ton	V √		
EHXD-4S10	6000-147-410	Electric Heat Kit, 10 KW - 480V - 3PH	3-6 ton	٧		
EHXD-4S15	6000-147-415	Electric Heat Kit, 15 KW - 480V - 3PH	3-6 ton	٧		
EHXD-4S16	6000-151-416	Electric Heat Kit, 15 KW - 480V - 3PH	3 ton	٧		
EHXD-4S20	6000-147-420	Electric Heat Kit, 20 KW - 480V - 3PH	5-6 ton	٧		
EHXD-4S21	6000-151-420	Electric Heat Kit, 20 KW - 480V - 3PH	4&6 ton	٧		
EHXD-4S22	6000-151-422	Electric Heat Kit, 20 KW - 480V - 3PH	4-5 ton	٧		-
EHXD-4S30 EHXD-4S31	6000-147-430 6000-151-431	Electric Heat Kit, 30 KW - 480V - 3PH Electric Heat Kit, 30 KW - 480V - 3PH	6 ton 6 ton	√ √		
EHXD-7S05	6000-131-431	Electric Heat Kit, 5 KW - 400V - 3PH	3-6 ton	V √		-
EHXD-7505	6000-147-610	Electric Heat Kit, 10 KW - 600V - 3PH	3-6 ton	٧		
EHXD-7S15	6000-147-615	Electric Heat Kit, 15 KW - 600V - 3PH	3-6 ton	٧		
EHXD-7S16	6000-151-616	Electric Heat Kit, 15 KW - 600V - 3PH	3 ton	٧		
EHXD-7S20	6000-147-620	Electric Heat Kit, 20 KW - 600V - 3PH	5-6 ton	٧		
EHXD-7S21	6000-151-620	Electric Heat Kit, 20 KW - 600V - 3PH	4&6 ton	٧		
EHXD-7S22	6000-151-622	Electric Heat Kit, 20 KW - 600V - 3PH	4-5 ton	٧		
EHXD-7S30	6000-147-630	Electric Heat Kit, 30 KW - 600V - 3PH	6 ton	٧		ļ
EHXD-7S31	6000-151-631	Electric Heat Kit, 30 KW - 600V - 3PH	6 ton	٧		<u> </u>
EHSD-1S05	6000-148-205	Electric Heat Kit, 5 KW - 240V - 1PH W/SCR	3-5 ton	√ √		
EHSD-1S10 EHSD-1S15	6000-148-210 6000-148-215	Electric Heat Kit, 10 KW - 240V - 1PH W/SCR Electric Heat Kit, 15 KW - 240V - 1PH W/SCR	3-5 ton 4-5 ton	V √		
EHSD-1S16	6000-148-215	Electric Heat Kit, 15 KW - 240V - 1PH W/SCR	3 ton	٧		
EHSD-1S22	6000-148-222	Electric Heat Kit, 20 KW - 240V -1PH W/SCR	4-5 ton	٧		
EHSD-3S05	6000-148-305	Electric Heat Kit, 5 KW - 240V - 3PH W/SCR	3-6 ton	٧		
EHSD-3S10	6000-148-310	Electric Heat Kit, 10 KW - 240V - 3PH W/SCR	3-6 ton	٧		
EHSD-3S15	6000-148-315	Electric Heat Kit, 15 KW - 240V - 3PH W/SCR	3-6 ton	٧		
EHSD-3S16	6000-152-316	Electric Heat Kit, 15 KW - 240V - 3PH W/SCR	3 ton	٧		
EHSD-3S20	6000-148-320	Electric Heat Kit, 20 KW - 240V - 3PH W/SCR	5-6 ton	٧		
EHSD-3S21	6000-152-320	Electric Heat Kit, 20 KW - 240V - 3PH W/SCR	4&6 ton	٧		-
EHSD-3S22	6000-152-322	Electric Heat Kit, 20 KW - 240V - 3PH W/SCR	4-5 ton	٧		
EHSD-3S30 EHSD-3S31	6000-148-330 6000-152-331	Electric Heat Kit, 30 KW - 240V - 3PH W/SCR Electric Heat Kit, 30 KW - 240V - 3PH W/SCR	6 ton 6 ton	√ √		
EHSD-4S05	6000-132-331	Electric Heat Kit, 5 KW - 480V - 3PH W/SCR	3-6 ton	٧ ٧		
EHSD-4S10	6000-148-410	Electric Heat Kit, 10 KW - 480V - 3PH W/SCR	3-6 ton	٧		
EHSD-4S15	6000-148-415	Electric Heat Kit, 15 KW - 480V - 3PH W/SCR	3-6 ton	٧		
EHSD-4S16	6000-152-416	Electric Heat Kit, 15 KW - 480V - 3PH W/SCR	3 ton	٧		
EHSD-4S20	6000-148-420	Electric Heat Kit, 20 KW - 480V - 3PH W/SCR	5-6 ton	٧		
EHSD-4S21	6000-152-420	Electric Heat Kit, 20 KW - 480V - 3PH W/SCR	4&6 ton	٧		
EHSD-4S22	6000-152-422	Electric Heat Kit, 20 KW - 480V - 3PH W/SCR	4-5 ton	٧		
EHSD-4S30	6000-148-430	Electric Heat Kit, 30 KW - 480V - 3PH W/SCR	6 ton	٧		-
EHSD-4S31	6000-152-431	Electric Heat Kit, 30 KW - 480V - 3PH W/SCR	6 ton	٧		-
EHSD-7S05 EHSD-7S10	6000-148-605 6000-148-610	Electric Heat Kit, 5 KW - 600V - 3PH W/SCR Electric Heat Kit, 10 KW - 600V - 3PH W/SCR	3-6 ton 3-6 ton	√ √		
EHSD-7510	6000-148-615	Electric Heat Kit, 15 KW - 600V - 3PH W/SCR	3-6 ton	V √		
EHSD-7516	6000-152-616	Electric Heat Kit, 15 KW - 600V - 3PH W/SCR	3 ton	٧		
EHSD-7S20	6000-148-620	Electric Heat Kit, 20 KW - 600V - 3PH W/SCR	5-6 ton	٧		
EHSD-7S21	6000-152-620	Electric Heat Kit, 20 KW - 600V - 3PH W/SCR	4&6 ton	٧		
EHSD-7S22	6000-152-622	Electric Heat Kit, 20 KW - 600V - 3PH W/SCR	4-5 ton	٧		
EHSD-7S30	6000-148-630	Electric Heat Kit, 30 KW - 600V - 3PH W/SCR	6 ton	٧		
EHSD-7S31	6000-152-631	Electric Heat Kit, 30 KW - 600V - 3PH W/SCR	6 ton	٧		
Duct Smoke Detectors SDRKTP1FIS3	IN/A	Duct Smake Detectors - Return	2 6 +		٧	11
SDSKTP1FIS3 SDSKTP1FIS3	N/A N/A	Duct Smoke Detectors - Return Duct Smoke Detectors - Supply	3-6 ton 3-6 ton		V √	11 11
SDCKTP1FIS3	N/A	Duct Smoke Detectors - Supply Duct Smoke Detectors - Supply and Return	3-6 ton		V √	11
Non-Fused Disconnect Sv			3 3 1011			
DSC060A54YH01FI	N/A	60 Amp Disconnect	3-6 ton		٧	5
DSC100A54YH01FI	N/A	100 Amp Disconnect	3-6 ton		٧	5
DSC150A54YH01FI	N/A	150 Amp Disconnect	3-6 ton		٧	5
Convenience Outlets						
CONVOUTP36722	N/A	Convenience Outlets - Powered, 208/230 V	3-6 ton	ļ	٧	42
CONVOUTP36724	N/A	Convenience Outlets - Powered, 460 V	3-6 ton		٧	42
CONVOUTP36727	N/A	Convenience Outlets - Powered, 575 V	3-6 ton		٧	42
CONVTOUTNP036072 Hinged Access Panels	N/A	Convenience Outlets - Non-Powered	3-6 ton		٧	2
HGDRSM01FI	N/A	Hinged Access Panels, 39" cabinet	3 ton		٧	
HGDRSM02FI	N/A	Hinged Access Panels, 43" cabinet	4-5 ton		V √	
HGDRSM03FI	N/A	Hinged Access Panels, 53" cabinet	6 ton		٧	

Daikin Master Item#	Vendor P/N Ref	Description	Fits Model Size	Field Installed	Factory Installed	Operating Weight, lb
Economizers						
0270L01163	ECH-DKNS1CA-W2DH	Horizontal Economizer UL LEAK JADE CONTROL DRY BULB, 39" cabinet	3 ton	٧		88
0270L01759	ECH-DKNS1CA-W2EH	Horizontal Economizer UL LEAK JADE ENTHALPY SENSOR, 39" cabinet	3 ton	٧		88
0270L01598 0270L01757	ECH-DKNS2CA-W2DH ECH-DKNS2CA-W2EH	Horizontal Economizer UL LEAK JADE CONTROL DRY BULB, 43" cabinet Horizontal Economizer UL LEAK JADE ENTHALPY SENSOR, 43" cabinet	4-5 ton 4-5 ton	√ √		88 88
0270L01737 0270L01600	ECH-DKNS3CA-W2EH	Horizontal Economizer UL LEAK JADE CONTROL DRY BULB, 53" cabinet	6 ton	V √		88
0270L01000	ECH-DKNS3CA-W2EH	Horizontal Economizer UL LEAK JADE ENTHALPY SENSOR, 53" cabinet	6 ton	٧		88
0270L01749	N/A	Vertical Economizer std Jade, FACTORY ENTHALPY SENSOR	3-6 ton	-	٧	65
0270L01751	N/A	Vertical Economizer ULL Jade, FACTORY ENTHALPY SENSOR	3-6 ton		٧	65
0270L01118	N/A	Vertical Economizer STD LEAK JADE CONTROL, factory dry bulb	3-6 ton		٧	65
0270L01120	N/A	Vertical Economizer UL LEAK JADE CONTROL, factiry dry bulb	3-6 ton		٧	65
0270L01753	ECD-DKN12SA-W2EH	Vertical Economizer std Jade, ENTHALPY SENSOR	3-6 ton	٧		65
0270L01755	ECD-DKN12CA-W2EH	Vertical Economizer ULL Jade, ENTHALPY SENSOR	3-6 ton	٧		65
0270L01156	ECD-DKN12SA-W2DH	Vertical Economizer STD LEAK JADE CONTROL, dry bulb	3-6 ton	٧		65
0270L01158	ECD-DKN12CA-W2DH	Vertical Economizer UL LEAK JADE CONTROL, dry bulb	3-6 ton	٧		65
Curbs and Restraint Clips						Ī
0221L00014	CRBK-DKN12SA-1411	Roof Curb 14" Tall, Knocked Down	3-6 ton	٧		80
0221L00015	CRBK-DKN12SA-2411	Roof Curb 24" Tall, Knocked Down	3-6 ton	٧		109
0270L01261	MH-DKN12SA-SRT	Hold Down Bracket Kit for Competitor's Roofcurb [Restraint Clips Carrier Curb (Curb Bracket Kit)]	3-6 ton	٧		8
0270L01250	MH-DKN12SA-OEM	Hold Down Bracket Kit for Daikin Roofcurb [Restraint Clips Daikin Curbs (Curb Bracket Kit)]	3-6 ton	٧		8
0221L00019	CRBK-DKN12FA-14	Roof Curb 14" Tall Seismic with Hold Down Brackets, Knocked Down	3-6 ton	٧		102
0221L00020	CRBW-DKN126A-14	Roof Curb 14" Tall Wind-Rated Hurricane with Hold Down Brackets, Welded	3-6 ton	٧		140
Concentrics 0270L01602	1017-100A-DKN	Concentric Diffusor 24 v 49 with 16" dia collars	3-6 ton	V		32
0270L01602 0270L01603	1017-100A-DKN 1017-200A-DKN	Concentric Diffuser 24 x 48 with 16" dia collars Concentric Diffuser 24 x 48 with 18" dia collars	3-6 ton	V V		35
0270L01603	0817-DKN12-16	Concentric Diritiser 24x 46 with 16 dia contais Concentric Duct Adaptor Kit for 16" Dia. Duct	3-6 ton	V √		28
0270L01333	0817-DKN12-10	Concentric Duct Adaptor Kit for 18" Dia. Duct	3-6 ton	٧ ٧		28
Dampers	0017-DKW12-10	Concentine Duct Adaptor Nit for 10 Dia. Duct	3-0 (011			20
0270L01165	OA2-DKN12CA-W00S	2 Position Motorized Damper	3-6 ton	٧		40
0270L01166	OAM-DKN12-W000	Manual Outdoor Air Damper	3-6 ton	٧		24
Metal Frame Filter Kits						
MFFKT002FI	N/A	Metal Frame Filter Kit - 14x20x2 (qty 4)	3-4 ton	٧		
MFFKT003FI	N/A	Metal Frame Filter Kit - 14x20x2 (qty 2) 20x20x2 (qty 2)	5 ton	٧		
MFFKT004FI	N/A	Metal Frame Filter Kit - 20x20x2 (qty 4)	6 ton	٧		
Hail Guard Kits						
HAILGD036HE	N/A	Condenser Coil Hail Guards, 39" cabinet	3 ton	٧		
HAILGD036HEFI	N/A	Condenser Coil Hail Guards, 39" cabinet	3 ton		٧	
HAILGD048060HE	N/A	Condenser Coil Hail Guards, 43" cabinet	4-5 ton	٧		
HAILGD48060HEFI	N/A	Condenser Coil Hail Guards, 43" cabinet	4-5 ton		٧	
HAILGD072HE	N/A	Condenser Coil Hail Guards, 53" cabinet	6 ton	٧		
HAILGD072HEFI	N/A	Condenser Coil Hail Guards, 53" cabinet	6 ton		٧	
Crankcase Heater Kits	I	I	1			
HECH36230	N/A	Crankcase heater Kit 208/230 V	3 ton	٧	٧	1
HECH4860230	N/A	Crankcase heater Kit 208/230 V	4-6 ton	٧	٧	1
HECH36460	N/A	Crankcase heater Kit 460 V	3 ton	√ √	√ √	1
HECH4860460 HECH36575	N/A N/A	Crankcase heater Kit 460 V Crankcase heater Kit 575 V	4-6 ton 3 ton	V √	V V	1
HECH4860575	N/A	Crankcase heater Kit 575 V	4-6 ton	٧	V V	1
High Efficiency Filters	1.47.4	John Michael Michael	- 5 (011	V	V	
0160L00268	172-112-371	High Efficiency MERV 8 Air Filter Kit - 14x20x2 (qty 4 on 3-4 ton, qty 2 on 5 ton)	3-5 ton	٧		4
0160L00270	172-112-371	High Efficiency MERV 8 Air Filter Kit - 20x20x2 (qty 4 on 5 ton, qty 4 on 6 ton)	5-6 ton	٧		4
0160L00276	91013.021420	High Efficiency MERV 13 Air Filter Kit - 14x20x2 (qty 4 on 3-4 ton, qty 4 on 5 ton)	3-5 ton	٧		4
0160L00201	91013.022020	High Efficiency MERV 13 Air Filter Kit - 20x20x2 (qty 2 on 5 ton, qty 4 on 6 ton)	5-6 ton	٧		4
Misc Accessories	•	100 - 100 / 100 / 100 /			_	
TTBCKHE01	N/A	Through the Base Gas/Electrical	3-6 ton	٧		1
TTBCKHE01FI	N/A	Through the Base Gas/Electrical	3-6 ton		٧	1
3PMKP1	N/A	Phase Monitor Kit	3-6 ton	٧		2
3PMKP1FI	N/A	Phase Monitor Kit	3-6 ton		٧	2
0270L01232	BBI-DKN12SA	Burglar bars Inserts	3-6 ton	٧		18
0270L02209	N/A	Single Point Power Connection, 1 phase power exhaust	3-6 ton	٧		
0270L02208	N/A	Single Point Power Connection, 3 phase power exhaust	3-6 ton	٧		
DPOFSK01	N/A	Overflow Switch Kit	3-6 ton	٧		
Power Exhausts						1
0270L01167	PPD-DKN12CA-W000-1VB	Power Exhaust Prop Vertical Economizer, 1 phase, 230 V	3-6 ton	٧		57
0270L01170	PPH-DKN12CA-W000-1VB	Power Exhaust Prop Horizontal Economizer, 1 phase, 230 V	3-6 ton	٧		47
0270L01171	PPH-DKN12CA-W000-4VB	Power Exhaust Prop Vertical Economizer, 3 phase, 460 V	3-6 ton	٧		57
0270L01168	PPD-DKN12CA-W000-4VB	Power Exhaust Prop Horizontal Economizer, 3 phase, 460 V	3-6 ton	٧		47

Daikin Master Item #	Vendor P/N Ref	Description	Fits Model Size	Field Installed	Factory Installed	Operating Weight, lb
Stainless Steel Heat Exch	hangers (Gas Only)					
0257L00122	N/A	45,000 BTU, 2 burners	3 ton		٧	included in operating weight
0257L00123	N/A	70,000 BTU, 3 burners	3 ton		٧	included in operating weight
0257L00126	N/A	115,000 BTU, 6 burners	3 ton		٧	included in operating weight
0257L00162	N/A	70,000 BTU, 3 burners	4 ton		٧	included in operating weight
0257L00124	N/A	115,000 BTU, 5 burners	4 ton		٧	included in operating weight
0257L00127	N/A	140,000 BTU, 6 burners	4 ton		٧	included in operating weight
0257L00123	N/A	70,000 BTU, 3 burners	5 ton		٧	included in operating weight
0257L00164	N/A	115,000 BTU, 5 burners	5 ton		٧	included in operating weight
0257L00128	N/A	140,000 BTU, 6 burners	5 ton		٧	included in operating weight
0257L00123	N/A	70,000 BTU, 3 burners	6 ton		٧	included in operating weight
0257L00125	N/A	125,000 BTU, 5 burners	6 ton		٧	included in operating weight
0257L00264	N/A	150,000 BTU, 6 burners	6 ton		٧	included in operating weight
0257L00170	N/A	45,000 BTU, 2 burners, High Static	3 ton		٧	included in operating weight
0257L00172	N/A	70,000 BTU, 3 burners, High Static	3 ton		٧	included in operating weight
0257L00174	N/A	115,000 BTU, 6 burners, High Static	3 ton		٧	included in operating weight
0257L00162	N/A	70,000 BTU, 3 burners, High Static	4 ton		٧	included in operating weight
0257L00176	N/A	115,000 BTU, 5 burners, High Static	4 ton		٧	included in operating weight
0257L00198	N/A	140,000 BTU, 6 burners, High Static	4 ton		٧	included in operating weight
0257L00178	N/A	70,000 BTU, 3 burners, High Static	5 ton		٧	included in operating weight
0257L00164	N/A	115,000 BTU, 5 burners, High Static	5 ton		٧	included in operating weight
0257L00262	N/A	140,000 BTU, 6 burners, High Static	5 ton		٧	included in operating weight
0257L00123	N/A	70,000 BTU, 3 burners, High Static	6 ton		٧	included in operating weight
0257L00125	N/A	125,000 BTU, 5 burners, High Static	6 ton		٧	included in operating weight
0257L00266	N/A	150,000 BTU, 6 burners, High Static	6 ton		٧	included in operating weight
Duct Smoke Detectors	I	T				1
SDRKTP1FIS3	N/A	Duct Smoke Detectors - Return	3-6 ton		٧	11
SDSKTP1FIS3	N/A	Duct Smoke Detectors - Supply	3-6 ton		٧	11
SDCKTP1FIS3	N/A	Duct Smoke Detectors - Supply and Return	3-6 ton		٧	11
Non-Fused Disconnect S		T				_
DSC060A54YH01FI	N/A	60 Amp Disconnect	3-6 ton		٧	5
DSC100A54YH01FI	N/A	100 Amp Disconnect	3-6 ton		٧	5
DSC150A54YH01FI	N/A	150 Amp Disconnect	3-6 ton		٧	5
CONVOUTP36722	INI/A	Convenience Outlets Revered 209/2201/	2 C ton		٧	42
CONVOUTP36724	N/A N/A	Convenience Outlets - Powered, 208/230 V Convenience Outlets - Powered, 460 V	3-6 ton 3-6 ton		V V	42
CONVOUTP36727	N/A	Convenience Outlets - Powered, 400 V Convenience Outlets - Powered, 575 V	3-6 ton		V V	42
CONVOOTF30727 CONVTOUTNP036072	N/A	Convenience Outlets - Powered Convenience Outlets - Non-Powered	3-6 ton		V V	2
Hinged Access Panels	IN/A	Convenience Outlets - Non-Fowered	3-0 (011		V	Z
HGDRSMG01FI	N/A	Hinged Access Panels, 39" cabinet	3 ton		٧	
HGDRSMG02FI	N/A	Hinged Access Panels, 43" cabinet	4-5 ton		V	
HGDRSMG03FI	N/A	Hinged Access Panels, 53" cabinet	6 ton		V	
Economizers	IN/A	Imiged Access railers, 55 Cabinet	0 (011		v	
0270L01163	ECH-DKNS1CA-W2DH	Horizontal Economizer UL LEAK JADE CONTROL DRY BULB, 39" cabinet	3 ton	V		88
0270L01103	ECH-DKNS1CA-W2EH	Horizontal Economizer Of LEAK JADE CONTROL BKT BOLD, 39 Cabinet	3 ton	٧		88
0270L01799 0270L01598	ECH-DKNS2CA-W2DH	Horizontal Economizer OL LEAK JADE CONTROL DRY BULB, 43" cabinet	4-5 ton	٧ ٧		88
0270L01757	ECH-DKNS2CA-W2EH	Horizontal Economizer OL LEAK JADE ENTHALPY SENSOR, 43" cabinet	4-5 ton	V		88
0270L01600	ECH-DKNS3CA-W2DH	Horizontal Economizer UL LEAK JADE CONTROL DRY BULB, 53" cabinet	6 ton	٧		88
0270L01758	ECH-DKNS3CA-W2EH	Horizontal Economizer UL LEAK JADE ENTHALPY SENSOR, 53" cabinet	6 ton	٧		88
0270L01749	N/A	Vertical Economizer std Jade, FACTORY ENTHALPY SENSOR	3-6 ton	·	٧	65
0270L01751	N/A	Vertical Economizer ULL Jade, FACTORY ENTHALPY SENSOR	3-6 ton		٧	65
0270L01118	N/A	Vertical Economizer STD LEAK JADE CONTROL, factory dry bulb	3-6 ton		٧	65
0270L01120	N/A	Vertical Economizer UL LEAK JADE CONTROL, factiry dry bulb	3-6 ton		٧	65
0270L01753	ECD-DKN12SA-W2EH	Vertical Economizer std Jade, ENTHALPY SENSOR	3-6 ton	٧	·	65
0270L01755	ECD-DKN12CA-W2EH	Vertical Economizer ULL Jade, ENTHALPY SENSOR	3-6 ton	٧		65
0270L01156	ECD-DKN12SA-W2DH	Vertical Economizer STD LEAK JADE CONTROL, dry bulb	3-6 ton	٧		65
0270L01158	ECD-DKN12CA-W2DH	Vertical Economizer UL LEAK JADE CONTROL, dry bulb	3-6 ton	٧		65
		1				
Curbs and Restraint Cline			2.61	٧		80
Curbs and Restraint Clips 0221L00014		Roof Curb 14" Tall. Knocked Down	3-6 ton			
0221L00014	CRBK-DKN12SA-1411	Roof Curb 14" Tall, Knocked Down Roof Curb 24" Tall. Knocked Down	3-6 ton 3-6 ton			
0221L00014 0221L00015	CRBK-DKN12SA-1411 CRBK-DKN12SA-2411	Roof Curb 24" Tall, Knocked Down	3-6 ton	٧		109
0221L00014 0221L00015 0270L01261	CRBK-DKN12SA-1411 CRBK-DKN12SA-2411 MH-DKN12SA-SRT	Roof Curb 24" Tall, Knocked Down Hold Down Bracket Kit for Competitor's Roofcurb [Restraint Clips Carrier Curb (Curb Bracket Kit)]	3-6 ton 3-6 ton	√ √		109 8
0221L00014 0221L00015	CRBK-DKN12SA-1411 CRBK-DKN12SA-2411	Roof Curb 24" Tall, Knocked Down	3-6 ton	٧		109


Daikin Master Item #	Vendor P/N Ref	Description	Fits Model Size	Field Installed	Factory Installed	Operating Weight, lb
Concentrics			•			
0270L01602	1017-100A-DKN	Concentric Diffuser 24 x 48 with 16" dia collars	3-6 ton	٧		32
0270L01603	1017-200A-DKN	Concentric Diffuser 24 x 48 with 18" dia collars	3-6 ton	٧		35
0270L01335	0817-DKN12-16	Concentric Duct Adaptor Kit for 16" Dia. Duct	3-6 ton	٧		28
0270L01338	0817-DKN12-18	Concentric Duct Adaptor Kit for 18" Dia. Duct	3-6 ton	٧		28
Dampers			·			
0270L01165	OA2-DKN12CA-W00S	2 Position Motorized Damper	3-6 ton	٧		40
0270L01166	OAM-DKN12-W000	Manual Outdoor Air Damper	3-6 ton	٧		24
Flue Extensions (Gas onl	ly)					
HEFLUE036	N/A	Flue Extension, 39" cabinet	3 ton	٧		6
HEFLUE048060	N/A	Flue Extension, 43" cabinet	4-5 ton	٧		6
HEFLUE072	N/A	Flue Extension, 53" cabinet	6 ton	٧		6
Hail Guard Kits						
HAILGD036HE	N/A	Condenser Coil Hail Guards, 39" cabinet	3 ton	٧		
HAILGD036HEFI	N/A	Condenser Coil Hail Guards, 39" cabinet	3 ton		٧	
HAILGD048060HE	N/A	Condenser Coil Hail Guards, 43" cabinet	4-5 ton	٧		
HAILGD48060HEFI	N/A	Condenser Coil Hail Guards, 43" cabinet	4-5 ton		٧	
HAILGD072HE	N/A	Condenser Coil Hail Guards, 53" cabinet	6 ton	٧		
HAILGD072HEFI	N/A	Condenser Coil Hail Guards, 53" cabinet	6 ton		٧	
Crankcase Heater Kits	1.4		1 2.2		<u> </u>	
HECH36230	N/A	Crankcase heater Kit 208/230 V	3 ton	V	٧	1
HECH4860230	N/A	Crankcase heater Kit 208/230 V	4-6 ton	٧	٧	1
HECH36460	N/A	Crankcase heater Kit 460 V	3 ton	٧	٧	1
HECH4860460	N/A	Crankcase heater Kit 460 V	4-6 ton	V	√	1
HECH36575	N/A	Crankcase heater Kit 575 V	3 ton	V	٧	1
HECH4860575	N/A	Crankcase heater Kit 575 V	4-6 ton	V	v V	1
Metal Frame Filter Kits	IN/A	erankease neater kit 575 v	4 0 toll		<u> </u>	<u>.</u>
MFFKT002FI	N/A	Metal Frame Filter Kit - 14x20x2 (qty 4)	3-4 ton	٧		
MFFKT003FI	N/A	Metal Frame Filter Kit - 14x20x2 (qty 2) 20x20x2 (qty 2)	5 ton	٧		
MFFKT004FI	N/A	Metal Frame Filter Kit - 20x20x2 (qty 4)	6 ton	V		
High Efficiency Filters	INA	inetal Hame Fitter Rtt - 20x20x2 (qty 4)	0 ton			
0160L00268	172-112-371	High Efficiency MERV 8 Air Filter Kit - 14x20x2 (qty 4 on 3-4 ton, qty 2 on 5 ton)	3-5 ton	٧		4
0160L00208	172-112-371	High Efficiency MERV 8 Air Filter Kit - 20x20x2 (qty 4 on 5 on, qty 4 on 6 ton)	5-6 ton	٧		4
0160L00270	91013.021420	High Efficiency MERV 13 Air Filter Kit - 20x20x2 (qty 2 on 3-4 ton, qty 2 on 5 ton)	3-5 ton	٧		4
0160L00204	91013.022020	High Efficiency MERV 13 Air Filter Kit - 20x20x2 (qty 4 on 5 ton, qty 4 on 6 ton)	5-6 ton	٧		4
Misc Accessories	91013.022020	ingli Efficiency MERV 13 All Filter Rit - 20x20x2 (qty 2 011 3 toll, qty 4 011 0 toll)	3-0 (011	v		
LPHE-036072	N/A	Propane Conversion Kit (Gas only)	3-6 ton	٧		1
HAKT036150	N/A	High Altitude Kit (Gas only)	3-6 ton	٧		1
TTBCKHE01	N/A	Through the Base Gas/Electrical	3-6 ton	V		1
TTBCKHE01FI	N/A	Through the Base Gas/Electrical	3-6 ton	v	٧	1
3PMKP1	N/A	Phase Monitor Kit	3-6 ton	٧	V	2
3PMKP1FI	N/A	Phase Monitor Kit Phase Monitor Kit	3-6 ton	٧	٧	2
0270L01232	BBI-DKN12SA		3-6 ton	٧	V	18
0270L01232 0270L02209	N/A	Burglar bars Inserts		V		18
	· · · · · · · · · · · · · · · · · · ·	Single Point Power Connection, 1 phase power exhaust	3-6 ton	V		
0270L02208	N/A	Single Point Power Connection, 3 phase power exhaust	3-6 ton	V		
DPOFSK01	N/A	Overflow Switch Kit	3-6 ton	ı v		
Power Exhausts	DDD DVN143CA M/00C 41/2	Device Fishers Deve Vertical Francisco Aubres 2201/	1 2 54	.,	ı	F7
0270L01167	PPD-DKN12CA-W000-1VB	Power Exhaust Prop Vertical Economizer, 1 phase, 230 V	3-6 ton	٧		57
0270L01170	PPH-DKN12CA-W000-1VB	Power Exhaust Prop Horizontal Economizer, 1 phase, 230 V	3-6 ton	٧		47
0270L01171	PPH-DKN12CA-W000-4VB	Power Exhaust Prop Vertical Economizer, 3 phase, 460 V	3-6 ton	٧		57
0270L01168	PPD-DKN12CA-W000-4VB	Power Exhaust Prop Horizontal Economizer, 3 phase, 460 V	3-6 ton	٧		47

Daikin Master Item#	Vendor P/N Ref	Description	Fits Model Size	Field Installed	Factory Installed	Operating Weight, lb
Electric Heat Kits			ı	ı		
EHXD-1S05FI	6000-147-205	Electric Heat Kit Factory Installed, 5 KW - 240V - 1PH	3-5 ton		٧	
EHXD-1S10FI EHXD-1S15FI	6000-147-210 6000-147-215	Electric Heat Kit Factory Installed, 10 KW - 240V - 1PH Electric Heat Kit Factory Installed, 15 KW - 240V - 1PH	3-5 ton 4-5 ton		√ √	
EHXD-1S16FI	6000-147-215	Electric Heat Kit Factory Installed, 15 KW - 240V - 1PH	3 ton		٧	
EHXD-1S22FI	6000-147-222	Electric Heat Kit Factory Installed, 20 KW - 240V - 1PH	4-5 ton		٧	
EHXD-3S05FI	6000-147-305	Electric Heat Kit Factory Installed, 5 KW - 240V - 3PH	3-6 ton		٧	
EHXD-3S10FI	6000-147-310	Electric Heat Kit Factory Installed, 10 KW - 240V - 3PH	3-6 ton		٧	
EHXD-3S15FI	6000-147-315	Electric Heat Kit Factory Installed, 15 KW - 240V - 3PH	3-6 ton		٧	
EHXD-3S16FI	6000-151-316	Electric Heat Kit Factory Installed, 15 KW - 240V - 3PH	3 ton		٧ ٧	
EHXD-3S20FI EHXD-3S21FI	6000-147-320 6000-151-320	Electric Heat Kit Factory Installed, 20 KW - 240V - 3PH Electric Heat Kit Factory Installed, 20 KW - 240V - 3PH	5-6 ton 4&6 ton		V	
EHXD-3S22FI	6000-151-322	Electric Heat Kit Factory Installed, 20 KW - 240V - 3PH	4-5 ton		٧	
EHXD-3S30FI	6000-147-330	Electric Heat Kit Factory Installed, 30 KW - 240V - 3PH	6 ton		٧	
EHXD-3S31FI	6000-151-331	Electric Heat Kit Factory Installed, 30 KW - 240V - 3PH	6 ton		٧	
EHXD-4S05FI	6000-147-405	Electric Heat Kit Factory Installed, 5 KW - 480V - 3PH	3-6 ton		٧	
EHXD-4S10FI	6000-147-410	Electric Heat Kit Factory Installed, 10 KW - 480V - 3PH	3-6 ton		٧	
EHXD-4S15FI	6000-147-415	Electric Heat Kit Factory Installed, 15 KW - 480V - 3PH	3-6 ton		٧	
EHXD-4S16FI	6000-151-416	Electric Heat Kit Factory Installed, 15 KW - 480V - 3PH	3 ton		٧	
EHXD-4S20FI EHXD-4S21FI	6000-147-420	Electric Heat Kit Factory Installed, 20 KW - 480V - 3PH	5-6 ton	-	√ √	
EHXD-4S21FI EHXD-4S22FI	6000-151-420 6000-151-422	Electric Heat Kit Factory Installed, 20 KW - 480V - 3PH Electric Heat Kit Factory Installed, 20 KW - 480V - 3PH	4&6 ton 4-5 ton		٧	
EHXD-4S30FI	6000-131-422	Electric Heat Kit Factory Installed, 30 KW - 480V - 3PH	6 ton		٧	
EHXD-4S31FI	6000-151-431	Electric Heat Kit Factory Installed, 30 KW - 480V - 3PH	6 ton		٧	
EHXD-7S05FI	6000-147-605	Electric Heat Kit Factory Installed, 5 KW - 600V - 3PH	3-6 ton		٧	
EHXD-7S10FI	6000-147-610	Electric Heat Kit Factory Installed, 10 KW - 600V - 3PH	3-6 ton		٧	
EHXD-7S15FI	6000-147-615	Electric Heat Kit Factory Installed, 15 KW - 600V - 3PH	3-6 ton		٧	
EHXD-7S16FI	6000-151-616	Electric Heat Kit Factory Installed, 15 KW - 600V - 3PH	3 ton		٧	
EHXD-7S20FI	6000-147-620	Electric Heat Kit Factory Installed, 20 KW - 600V - 3PH	5-6 ton		٧	
EHXD-7S21FI	6000-151-620	Electric Heat Kit Factory Installed, 20 KW - 600V - 3PH	4&6 ton		√ √	
EHXD-7S22FI EHXD-7S30FI	6000-151-622 6000-147-630	Electric Heat Kit Factory Installed, 20 KW - 600V - 3PH Electric Heat Kit Factory Installed, 30 KW - 600V - 3PH	4-5 ton 6 ton		V √	
EHXD-7530FI	6000-147-631	Electric Heat Kit Factory Installed, 30 KW - 600V - 3PH	6 ton		٧	
EHSD-1S05FI	6000-148-205	Electric Heat Kit Factory Installed, 5 KW - 240V - 1PH W/SCR	3-5 ton		٧	
EHSD-1S10FI	6000-148-210	Electric Heat Kit Factory Installed, 10 KW - 240V - 1PH W/SCR	3-5 ton		٧	
EHSD-1S15FI	6000-148-215	Electric Heat Kit Factory Installed, 15 KW - 240V - 1PH W/SCR	4-5 ton		٧	
EHSD-1S16FI	6000-152-216	Electric Heat Kit Factory Installed, 15 KW - 240V - 1PH W/SCR	3 ton		٧	
EHSD-1S22FI	6000-148-222	Electric Heat Kit Factory Installed, 20 KW - 240V -1PH W/SCR	4-5 ton		√	
EHSD-3S05FI EHSD-3S10FI	6000-148-305 6000-148-310	Electric Heat Kit Factory Installed, 5 KW - 240V - 3PH W/SCR Electric Heat Kit Factory Installed, 10 KW - 240V - 3PH W/SCR	3-6 ton 3-6 ton		√ √	
EHSD-3S15FI	6000-148-315	Electric Heat Kit Factory Installed, 15 KW - 240V - 3PH W/SCR	3-6 ton		V √	
EHSD-3S16FI	6000-152-316	Electric Heat Kit Factory Installed, 15 KW - 240V - 3PH W/SCR	3 ton		٧	
EHSD-3S20FI	6000-148-320	Electric Heat Kit Factory Installed, 20 KW - 240V - 3PH W/SCR	5-6 ton		٧	
EHSD-3S21FI	6000-152-320	Electric Heat Kit Factory Installed, 20 KW - 240V - 3PH W/SCR	4&6 ton		٧	
EHSD-3S22FI	6000-152-322	Electric Heat Kit Factory Installed, 20 KW - 240V - 3PH W/SCR	4-5 ton		٧	
EHSD-3S30FI	6000-148-330	Electric Heat Kit Factory Installed, 30 KW - 240V - 3PH W/SCR	6 ton		٧	
EHSD-3S31FI	6000-152-331	Electric Heat Kit Factory Installed, 30 KW - 240V - 3PH W/SCR	6 ton		٧	
EHSD-4S05FI	6000-148-405	Electric Heat Kit Factory Installed, 5 KW - 480V - 3PH W/SCR	3-6 ton		٧	
EHSD-4S10FI EHSD-4S15FI	6000-148-410 6000-148-415	Electric Heat Kit Factory Installed, 10 KW - 480V - 3PH W/SCR Electric Heat Kit Factory Installed, 15 KW - 480V - 3PH W/SCR	3-6 ton 3-6 ton		√ √	
EHSD-4S16FI	6000-148-413	Electric Heat Kit Factory Installed, 15 KW - 480V - 3PH W/SCR	3 ton		٧	
EHSD-4S20FI	6000-148-420	Electric Heat Kit Factory Installed, 20 KW - 480V - 3PH W/SCR	5-6 ton		٧	
EHSD-4S21FI	6000-152-420	Electric Heat Kit Factory Installed, 20 KW - 480V - 3PH W/SCR	4&6 ton		٧	
EHSD-4S22FI	6000-152-422	Electric Heat Kit Factory Installed, 20 KW - 480V - 3PH W/SCR	4-5 ton		٧	
EHSD-4S30FI	6000-148-430	Electric Heat Kit Factory Installed, 30 KW - 480V - 3PH W/SCR	6 ton		٧	
EHSD-4S31FI	6000-152-431	Electric Heat Kit Factory Installed, 30 KW - 480V - 3PH W/SCR	6 ton		٧	
EHSD-7S05FI EHSD-7S10FI	6000-148-605 6000-148-610	Electric Heat Kit Factory Installed, 5 KW - 600V - 3PH W/SCR Electric Heat Kit Factory Installed, 10 KW - 600V - 3PH W/SCR	3-6 ton		√ √	
EHSD-7S10FI EHSD-7S15FI	6000-148-615	Electric Heat Kit Factory Installed, 10 KW - 600V - 3PH W/SCR Electric Heat Kit Factory Installed, 15 KW - 600V - 3PH W/SCR	3-6 ton 3-6 ton		٧	
EHSD-7S16FI	6000-148-615	Electric Heat Kit Factory Installed, 15 KW - 600V - 3PH W/SCR	3-6 ton		٧	
EHSD-7S20FI	6000-148-620	Electric Heat Kit Factory Installed, 20 KW - 600V - 3PH W/SCR	5-6 ton		٧	
EHSD-7S21FI	6000-152-620	Electric Heat Kit Factory Installed, 20 KW - 600V - 3PH W/SCR	4&6 ton		٧	
EHSD-7S22FI	6000-152-622	Electric Heat Kit Factory Installed, 20 KW - 600V - 3PH W/SCR	4-5 ton		٧	
EHSD-7S30FI	6000-148-630	Electric Heat Kit Factory Installed, 30 KW - 600V - 3PH W/SCR	6 ton		٧	
EHSD-7S31FI	6000-152-631	Electric Heat Kit Factory Installed, 30 KW - 600V - 3PH W/SCR	6 ton		٧	
EHXD-1S05	6000-147-205	Electric Heat Kit, 5 KW - 240V - 1PH	3-5 ton	٧		
EHXD-1S10	6000-147-210 6000-147-215	Electric Heat Kit, 10 KW - 240V - 1PH	3-5 ton	٧		
EHXD-1S15 EHXD-1S16	6000-147-215	Electric Heat Kit, 15 KW - 240V - 1PH Electric Heat Kit, 15 KW - 240V - 1PH	4-5 ton 3 ton	√ √		
EHXD-1516 EHXD-1522	6000-151-216	Electric Heat Kit, 20 KW - 240V - 1PH Electric Heat Kit, 20 KW - 240V - 1PH	4-5 ton	V √		
EHXD-3S05	6000-147-222	Electric Heat Kit, 5 KW - 240V - 3 PH	3-6 ton	٧		
EHXD-3S10	6000-147-310	Electric Heat Kit, 10 KW - 240V - 3PH	3-6 ton	٧		
EHXD-3S15	6000-147-315	Electric Heat Kit, 15 KW - 240V - 3PH	3-6 ton	٧		

Daikin Master Item #	Vendor P/N Ref	Description	Fits Model Size	Field Installed	Factory Installed	Operating Weight, lb
EHXD-3S16	6000-151-216	Electric Heat Kit, 15 KW - 240V - 3PH	3 ton	٧		
EHXD-3S20	6000-147-320	Electric Heat Kit, 20 KW - 240V - 3PH	5-6 ton	٧		
EHXD-3S21	6000-151-320	Electric Heat Kit, 20 KW - 240V - 3PH	4&6 ton	٧		
EHXD-3S22	6000-151-322	Electric Heat Kit, 20 KW - 240V - 3PH	4-5 ton	٧		
EHXD-3S30 EHXD-3S31	6000-147-330 6000-151-331	Electric Heat Kit, 30 KW - 240V - 3PH Electric Heat Kit, 30 KW - 240V - 3PH	6 ton 6 ton	٧ ٧		
EHXD-4S05	6000-131-331	Electric Heat Kit, 5 KW - 480V - 3PH	3-6 ton	٧		
EHXD-4S10	6000-147-410	Electric Heat Kit, 10 KW - 480V - 3PH	3-6 ton	٧		
EHXD-4S15	6000-147-415	Electric Heat Kit, 15 KW - 480V - 3PH	3-6 ton	٧		
EHXD-4S16	6000-151-416	Electric Heat Kit, 15 KW - 480V - 3PH	3 ton	٧		
EHXD-4S20	6000-147-420	Electric Heat Kit, 20 KW - 480V - 3PH	5-6 ton	٧		
EHXD-4S21	6000-151-420	Electric Heat Kit, 20 KW - 480V - 3PH	4&6 ton	٧		
EHXD-4S22	6000-151-422	Electric Heat Kit, 20 KW - 480V - 3PH	4-5 ton	٧		
EHXD-4S30	6000-147-430	Electric Heat Kit, 30 KW - 480V - 3PH	6 ton	٧.		
EHXD-4S31	6000-151-431	Electric Heat Kit, 30 KW - 480V - 3PH	6 ton	٧		
EHXD-7S05 EHXD-7S10	6000-147-605	Electric Heat Kit, 5 KW - 600V - 3PH	3-6 ton	√ √		
EHXD-7510 EHXD-7515	6000-147-610 6000-147-615	Electric Heat Kit, 10 KW - 600V - 3PH Electric Heat Kit, 15 KW - 600V - 3PH	3-6 ton 3-6 ton	٧		
EHXD-7515	6000-147-615	Electric Heat Kit, 15 KW - 600V - 3PH	3-0 ton	٧		
EHXD-7516	6000-131-616	Electric Heat Kit, 20 KW - 600V - 3PH	5-6 ton	٧		
EHXD-7S21	6000-151-620	Electric Heat Kit, 20 KW - 600V - 3PH	4&6 ton	٧		
EHXD-7S22	6000-151-622	Electric Heat Kit, 20 KW - 600V - 3PH	4-5 ton	٧		
EHXD-7S30	6000-147-630	Electric Heat Kit, 30 KW - 600V - 3PH	6 ton	٧		
EHXD-7S31	6000-151-631	Electric Heat Kit, 30 KW - 600V - 3PH	6 ton	٧		
EHSD-1S05	6000-148-205	Electric Heat Kit, 5 KW - 240V - 1PH W/SCR	3-5 ton	٧		
EHSD-1S10	6000-148-210	Electric Heat Kit, 10 KW - 240V - 1PH W/SCR	3-5 ton	٧		
EHSD-1S15	6000-148-215	Electric Heat Kit, 15 KW - 240V - 1PH W/SCR	4-5 ton	٧		
EHSD-1S16	6000-152-216	Electric Heat Kit, 15 KW - 240V - 1PH W/SCR	3 ton	٧		
EHSD-1S22	6000-148-222	Electric Heat Kit, 20 KW - 240V -1PH W/SCR	4-5 ton	٧		
EHSD-3S05	6000-148-305	Electric Heat Kit, 5 KW - 240V - 3PH W/SCR	3-6 ton	٧		
EHSD-3S10	6000-148-310	Electric Heat Kit, 10 KW - 240V - 3PH W/SCR	3-6 ton	٧		
EHSD-3S15	6000-148-315	Electric Heat Kit, 15 KW - 240V - 3PH W/SCR	3-6 ton	٧ ٧		
EHSD-3S16 EHSD-3S20	6000-152-316 6000-148-320	Electric Heat Kit, 15 KW - 240V - 3PH W/SCR Electric Heat Kit, 20 KW - 240V - 3PH W/SCR	3 ton 5-6 ton	٧		
EHSD-3S21	6000-148-320	Electric Heat Kit, 20 KW - 240V - 3PH W/SCR	4&6 ton	٧		
EHSD-3S22	6000-152-322	Electric Heat Kit, 20 KW - 240V - 3PH W/SCR	4-5 ton	V		
EHSD-3S30	6000-148-330	Electric Heat Kit, 30 KW - 240V - 3PH W/SCR	6 ton	٧		
EHSD-3S31	6000-152-331	Electric Heat Kit, 30 KW - 240V - 3PH W/SCR	6 ton	٧		
EHSD-4S05	6000-148-405	Electric Heat Kit, 5 KW - 480V - 3PH W/SCR	3-6 ton	٧		
EHSD-4S10	6000-148-410	Electric Heat Kit, 10 KW - 480V - 3PH W/SCR	3-6 ton	٧		
EHSD-4S15	6000-148-415	Electric Heat Kit, 15 KW - 480V - 3PH W/SCR	3-6 ton	٧		
EHSD-4S16	6000-152-416	Electric Heat Kit, 15 KW - 480V - 3PH W/SCR	3 ton	٧		
EHSD-4S20	6000-148-420	Electric Heat Kit, 20 KW - 480V - 3PH W/SCR	5-6 ton	٧		
EHSD-4S21	6000-152-420	Electric Heat Kit, 20 KW - 480V - 3PH W/SCR	4&6 ton	٧.		
EHSD-4S22	6000-152-422	Electric Heat Kit, 20 KW - 480V - 3PH W/SCR	4-5 ton	٧		
EHSD-4S30	6000-148-430	Electric Heat Kit, 30 KW - 480V - 3PH W/SCR	6 ton	√ √		
EHSD-4S31 EHSD-7S05	6000-152-431 6000-148-605	Electric Heat Kit, 30 KW - 480V - 3PH W/SCR Electric Heat Kit, 5 KW - 600V - 3PH W/SCR	6 ton 3-6 ton	V V		
EHSD-7510	6000-148-610	Electric Heat Kit, 10 KW - 600V - 3PH W/SCR	3-6 ton	٧		
EHSD-7S15	6000-148-615	Electric Heat Kit, 15 KW - 600V - 3PH W/SCR	3-6 ton	٧		
EHSD-7516	6000-146-015	Electric Heat Kit, 15 KW - 600V - 3PH W/SCR	3 ton	٧		
EHSD-7S20	6000-148-620	Electric Heat Kit, 20 KW - 600V - 3PH W/SCR	5-6 ton	٧		
EHSD-7S21	6000-152-620	Electric Heat Kit, 20 KW - 600V - 3PH W/SCR	4&6 ton	٧		
EHSD-7S22	6000-152-622	Electric Heat Kit, 20 KW - 600V - 3PH W/SCR	4-5 ton	٧		
EHSD-7S30	6000-148-630	Electric Heat Kit, 30 KW - 600V - 3PH W/SCR	6 ton	٧		
EHSD-7S31	6000-152-631	Electric Heat Kit, 30 KW - 600V - 3PH W/SCR	6 ton	٧		
Duct Smoke Detectors	T .			1		
SDRKTP1FIS3	N/A	Duct Smoke Detectors - Return	3-6 ton		٧	11
SDSKTP1FIS3	N/A N/A	Duct Smoke Detectors - Supply	3-6 ton		٧	11
SDCKTP1FIS3 Non-Fused Disconnect Sv	,	Duct Smoke Detectors - Supply and Return	3-6 ton		٧	11
DSC060A54YH01FI	N/A	60 Amp Disconnect	3-6 ton		٧	5
DSC100A54YH01FI	N/A	100 Amp Disconnect	3-6 ton		٧	5
DSC150A54YH01FI	N/A	150 Amp Disconnect	3-6 ton		٧	5
Convenience Outlets						
CONVOUTP36722	N/A	Convenience Outlets - Powered, 208/230 V	3-6 ton		٧	42
CONVOUTP36724	N/A	Convenience Outlets - Powered, 460 V	3-6 ton		٧	42
CONVOUTP36727	N/A	Convenience Outlets - Powered, 575 V	3-6 ton		٧	42
CONVTOUTNP036072	N/A	Convenience Outlets - Non-Powered	3-6 ton		٧	2
Hinged Access Panels	Ι.					
HGDRSM02FI	N/A	Hinged Access Panels, 39" &43" cabinet	3-5 ton		٧	
HGDRSM03FI	N/A	Hinged Access Panels, 53" cabinet	6 ton		٧	

Daikin Master Item #	Vendor P/N Ref	Description		Field Installed	Factory Installed	Operating Weight, lb
Economizers						
0270L01163	ECH-DKNS1CA-W2DH	Horizontal Economizer UL LEAK JADE CONTROL DRY BULB, 39" cabinet	3 ton	٧		88
0270L01759	ECH-DKNS1CA-W2EH	Horizontal Economizer UL LEAK JADE ENTHALPY SENSOR, 39" cabinet	3 ton	٧		88
0270L01598	ECH-DKNS2CA-W2DH	Horizontal Economizer UL LEAK JADE CONTROL DRY BULB, 43" cabinet	4-5 ton	٧		88
0270L01757	ECH-DKNS2CA-W2EH	Horizontal Economizer UL LEAK JADE ENTHALPY SENSOR, 43" cabinet	4-5 ton	٧		88
0270L01600	ECH-DKNS3CA-W2DH	Horizontal Economizer UL LEAK JADE CONTROL DRY BULB, 53" cabinet	6 ton	٧		88
0270L01758	ECH-DKNS3CA-W2EH	Horizontal Economizer UL LEAK JADE ENTHALPY SENSOR, 53" cabinet	6 ton	٧		88
0270L01749	N/A	Vertical Economizer std Jade, FACTORY ENTHALPY SENSOR	3-6 ton		٧	65
0270L01751	N/A	Vertical Economizer ULL Jade, FACTORY ENTHALPY SENSOR	3-6 ton		٧	65
0270L01118	N/A	Vertical Economizer STD LEAK JADE CONTROL, factory dry bulb	3-6 ton		٧	65
0270L01120	N/A	Vertical Economizer UL LEAK JADE CONTROL, factiry dry bulb	3-6 ton		٧	65
0270L01753	ECD-DKN12SA-W2EH	Vertical Economizer Std Jade, ENTHALPY SENSOR	3-6 ton	٧	•	65
0270L01755	ECD-DKN12CA-W2EH	Vertical Economizer Stat State, ENTHALPY SENSOR	3-6 ton	٧		65
0270L01755	ECD-DKN12SA-W2DH	Vertical Economizer SED LEAK JADE CONTROL, dry bulb	3-6 ton	٧		65
	ECD-DKN12SA-W2DH		3-6 ton	V √		65
0270L01158		Vertical Economizer UL LEAK JADE CONTROL, dry bulb	3-6 (01)	V		05
Curbs and Restraint Clips	1	D CO LANET II W. L. ID				
0221L00014	CRBK-DKN12SA-1411	Roof Curb 14" Tall, Knocked Down	3-6 ton	٧		80
0221L00015	CRBK-DKN12SA-2411	Roof Curb 24" Tall, Knocked Down	3-6 ton	٧		109
0270L01261	MH-DKN12SA-SRT	Hold Down Bracket Kit for Competitor's Roofcurb [Restraint Clips Carrier Curb (Curb Bracket Kit)]	3-6 ton	٧		8
0270L01250	MH-DKN12SA-OEM	Hold Down Bracket Kit for Daikin Roofcurb [Restraint Clips Daikin Curbs (Curb Bracket Kit)]	3-6 ton	٧		8
0221L00019	CRBK-DKN12FA-14	Roof Curb 14" Tall Seismic with Hold Down Brackets, Knocked Down	3-6 ton	٧		102
0221L00020	CRBW-DKN126A-14	Roof Curb 14" Tall Wind-Rated Hurricane with Hold Down Brackets, Welded	3-6 ton	٧		140
Concentrics						
0270L01602	1017-100A-DKN	Concentric Diffuser 24 x 48 with 16" dia collars	3-6 ton	٧		32
0270L01603	1017-200A-DKN	Concentric Diffuser 24 x 48 with 18" dia collars	3-6 ton	٧		35
0270L01335	0817-DKN12-16	Concentric Duct Adaptor Kit for 16" Dia. Duct	3-6 ton	٧		28
0270L01338	0817-DKN12-18	Concentric Duct Adaptor Kit for 18" Dia. Duct	3-6 ton	٧		28
Dampers	0017 511112 10	Consentition Described for Interior 20 Dian Described	3 0 10.1	· ·		
0270L01165	OA2-DKN12CA-W00S	2 Position Motorized Damper	3-6 ton	٧		40
0270L01166	OAM-DKN12-W000	Manual Outdoor Air Damper	3-6 ton	٧ ٧		24
Metal Frame Filter Kits	CAW DRIVIZ-WOOD	Manual Outdoor All Daniper	3-0 (011			24
MFFKT002FI	N/A	Motal Frama Filtor Kit 14v20v2 (atv. 4)	2.4+00	٧		
	N/A	Metal Frame Filter Kit - 14x20x2 (qty 4)	3-4 ton	V √		
MFFKT003FI	'	Metal Frame Filter Kit - 14x20x2 (qty 2) 20x20x2 (qty 2)	5 ton			
MFFKT004FI	N/A	Metal Frame Filter Kit - 20x20x2 (qty 4)	6 ton	٧		
Hail Guard Kits	T		1			
HAILGD048060HE	N/A	Condenser Coil Hail Guards, 43" cabinet	3-5 ton	٧		
HAILGD48060HEFI	N/A	Condenser Coil Hail Guards, 43" cabinet	3-5 ton		٧	
HAILGD072HE	N/A	Condenser Coil Hail Guards, 53" cabinet	6 ton	٧		
HAILGD072HEFI	N/A	Condenser Coil Hail Guards, 53" cabinet	6 ton		٧	
High Efficiency Filters						
0160L00268	172-112-371	High Efficiency MERV 8 Air Filter Kit - 14x20x2 (qty 4 on 3-4 ton, qty 2 on 5 ton)	3-5 ton	٧		4
0160L00270	172-112-700	High Efficiency MERV 8 Air Filter Kit - 20x20x2 (qty 2 on 5 ton, qty 4 on 6 ton)	5-6 ton	٧		4
0160L00204	91013.021420	High Efficiency MERV 13 Air Filter Kit - 14x20x2 (qty 4 on 3-4 ton, qty 2 on 5 ton)	3-5 ton	٧		4
0160L00201	91013.022020	High Efficiency MERV 13 Air Filter Kit - 20x20x2 (qty 2 on 5 ton, qty 4 on 6 ton)	5-6 ton	٧		4
Misc Accessories						
TTBCKHE01	N/A	Through the Base Gas/Electrical	3-6 ton	٧		1
TTBCKHE01FI	N/A	Through the Base Gas/Electrical	3-6 ton		٧	1
3PMKP1	N/A	Phase Monitor Kit	3-6 ton	٧		2
3PMKP1FI	N/A	Phase Monitor Kit	3-6 ton	<u> </u>	V	2
0270L01232	BBI-DKN12SA	Burglar bars Inserts	3-6 ton	٧	٧	18
	N/A	Single Point Power Connection, 1 phase power exhaust		V V		10
0270L02209	'	, , , ,	3-6 ton			
0270L02208	N/A	Single Point Power Connection, 3 phase power exhaust	3-6 ton	٧		
DPOFSK01	N/A	Overflow Switch Kit	3-6 ton	٧		
Power Exhausts	1					
0270L01167	PPD-DKN12CA-W000-1VB	Power Exhaust Prop Vertical Economizer, 1 phase, 230 V	3-6 ton	٧		57
0270L01170	PPH-DKN12CA-W000-1VB	Power Exhaust Prop Horizontal Economizer, 1 phase, 230 V	3-6 ton	٧		47
0270L01171	PPH-DKN12CA-W000-4VB	Power Exhaust Prop Vertical Economizer, 3 phase, 460 V	3-6 ton	٧		57
0270L01168	PPD-DKN12CA-W000-4VB	Power Exhaust Prop Horizontal Economizer, 3 phase, 460 V		٧		47


ROOF CURBS 14CURB3672

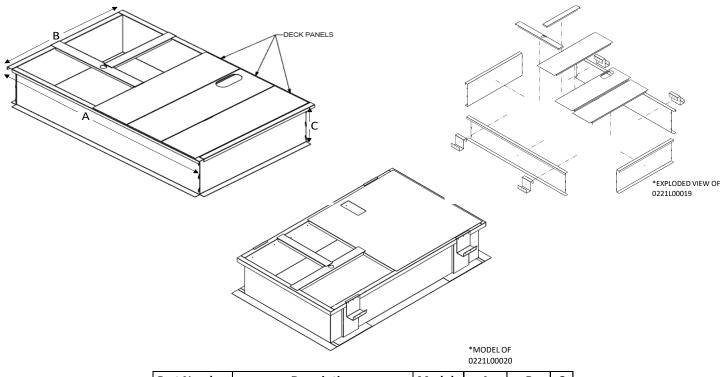

Part Number	er Description Models		Α	В	С
0221L00014	Small Roof Curb	3 - 5 Ton	70 3/4"	42 5/8"	14"
0221L00015	Small Roof Curb	3 - 5 Ton	70 3/4"	42 5/8"	24"
0221L00019	14" Seismic Curb with Clips	3 - 5 Ton	70 5/8"	42 1/2"	14"
0221L00020	14" Wind-Rated Curb with Clips	3 - 5 Ton	70 5/8"	42 1/2"	14"

MEASUREMENT IN INCHES.

DOWNFLOW SQUARE TO ROUND ADAPTERS DDNSQRD3616, DDNSQRD487218

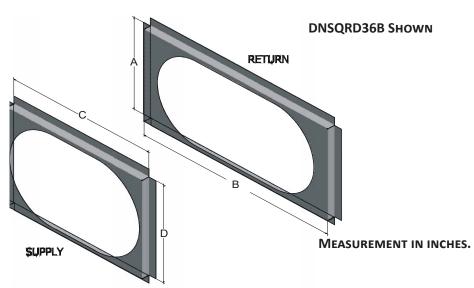



DOWNFLOW SQUARE TO ROUND ADAPTER									
MODEL	SIZE	Α	В	С	D				
DDNSQRD3616	16" ROUND	13.50	31.125	19.50	13.50				
DDNSQRD487218	18" ROUND	13.50	31.125	19.50	19.00				

MOTORIZED/MANUAL FRESH AIR DAMPERS

Air Dampers

Part Number	Description	Models
0270L01165	2 Position Motorized Damper	3 - 5 Ton
0270L01166	Manual Outdoor Air Damper	3 - 5 Ton

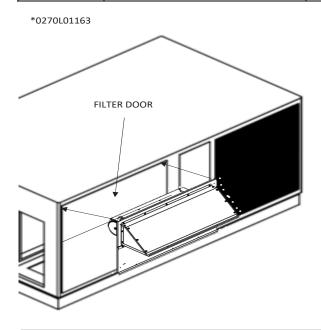


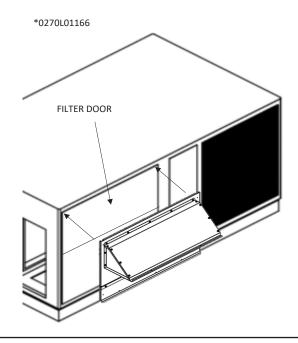

ECONOMIZERS

Horizontal Economizers


Part Number	Description	Models
0270L01163	Horizontal Economizer UL LEAK JADE CONTROL DRY BULB, 39" cabinet	3 - 5 Ton
0270L01759	Horizontal Economizer UL LEAK JADE ENTHALPY SENSOR, 39" cabinet	3 - 5 Ton

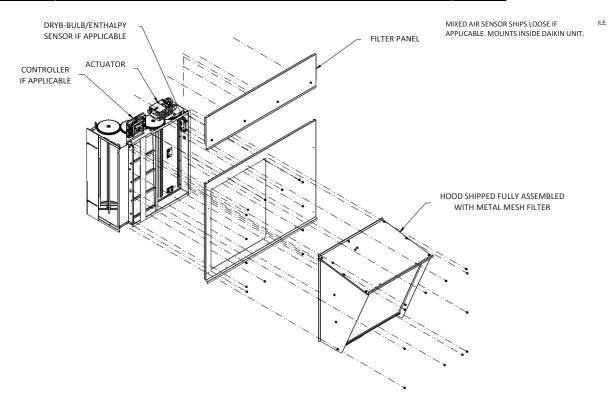


ECONOMIZERS

Downflow Economizers

Part Number	Description		
0270L01163	Horizontal Economizer Ultra Low-Leak JADE Dry-Bulb, 39" cabinet	3-5 ton	
0270L01759	Horizontal Economizer Ultra Low-Leak JADE Enthalpy Sensor, 39" cabinet	3-5 ton	
0270L01753	Vertical Economizer Standard Low-Leak JADE Ethalpy Sensor	3-6 ton	
0270L01755	Vertical Economizer Ultra Low-Leak JADE Ethalpy Sensor	3-6 ton	
0270L01156	Vertical Economizer Standard Low-Leak JADE Dry-Bulb	3-6 ton	
0270L01158	Vertical Economizer Ultra Low-Leak JADE Dry-Bulb	3-6 ton	

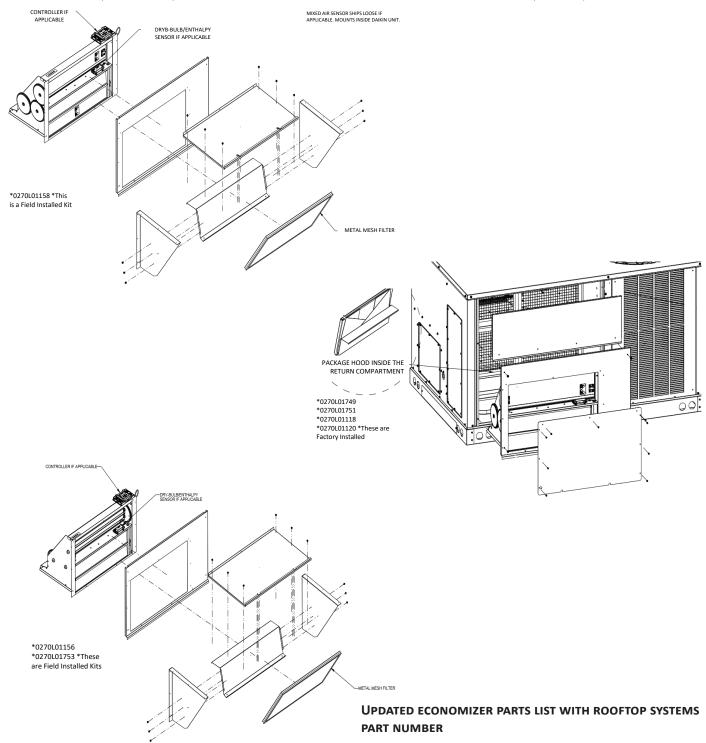


Power Exhaust				
Part Number	Description	Models		
0270L01167	POWER EXHAUST PROP VERTICL ECNMZR, 1 PHASE, 230 V	3 - 5 Ton		
0270L01170	POWER EXHAUST PROP HORIZNTL ECNMZR, 1 PHASE, 230 V	3 - 5 Ton		
0270L01168	POWER EXHAUST PROP VERTICL ECNMZR, 1 PHASE, 460 V	3 - 5 Ton		
0270L01171	POWER EXHAUST PROP HORIZNTL ECNMZR, 1 PHASE, 460 V	3 - 5 Ton		

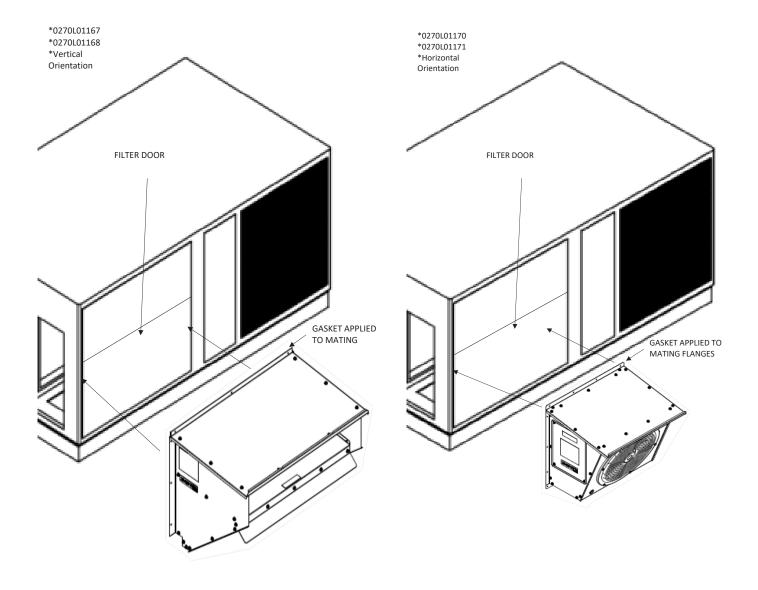

HAIL GUARD KIT

Hail Guard Kit


Part Number	Description	Models
HAILGD036HE	Condenser Coil Hail Guards, 39" cabinet	3 - 5 Ton
HAILGD036HEFI	Condenser Coil Hail Guards, 39" cabinet, Factory Installed	3 - 5 Ton

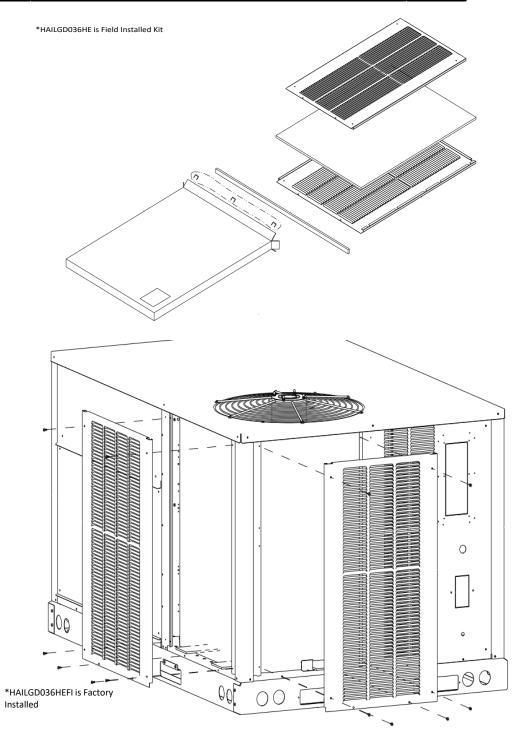

FLUE EXTENSION KIT

Flue Extension Kit

Part Number	Description	Models	Α
HEFLUE036	Flue Extension, 39" cabinet (Gas only)	3 - 5 Ton (Gas Only)	27 1/2"

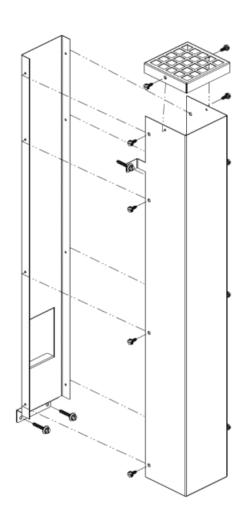

FOR YOUR SAFETY READ BEFORE OPERATING

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- A. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.
- B. BEFORE OPERATING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electric switch;
 do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- C. Use only your hand to push in or turn the gas control lever. Never use tools. If the lever will not push in or turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D. Do not use this appliance if any part has been underwater. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been underwater.

LIRE AVANT DE METTRE EN MARCHELIRE

AVERTISSEMENT: Quiconque ne respecte pas à la lettre les instructions dans le presént manuel risque de déclencher un incendie ou une explosion entraînant des dommages matériels, des lesions corporelles ou la perte de vies humaines.

- A.Cet appareil ne comporte pas de veilleuse. Il est muni d'un dispositif d'allumage qui allume automatiquement le brûleur. Ne pas tenter d'allumer le brûleur manuellement.
- B. AVANT DE LE FAIRE FONCTIONNER, renifler tout autour de l'appariel pour decéler une odeur de gaz. Renifler prés du plancher, car certains gaz sont plus lourds que l'air et peuvent s'accumuler au niveau du sol.

QUE FAIRE S'IL Y A UNE ODEUR DE GAZ

- Ne pas tenter d'allumer d'appareils.
- Ne toucher à aucun interrupteur; ne pas vous servir des téléphones dans le bâtiment.
- Appelez immédiatement votre fournisseur de gaz depuis un voisin. Suivez les instructions du fournisseur de gaz
- Si vous ne pouvez rejoindre le fournisseur de gaz, appelez le service des incendies.»
- C. Ne pousser ou tourner la manette d'admission du gaz qu'à la main. Ne jamais emploer d'outil à cette fin. Si la manette reste coincée, ne tenter pas de la réparer; appelez un technicien qualifié. Quiconque tente de forcer la manette ou de la réparer peut provoquer une explosion ou un incendie.»
- D. Ne pas se servir de cet appareil s'il a été plongé dans l'eau, même partiellement. Faire inspecter l'appareil par un technicien qualifié et remplacer toutr partie du systéme de contrôle et toute còmmande qui ont été plongées dans l'eau.»

OPERATING INSTRUCTIONS

- STOP. Read the safety infrmation above on this label.
- 2. Set the thermostat to lowest setting.
- 3. Turn off all electric power to the appliance.
- This appliance is equipped with an ignition device which automatically lights the burner.
 not try to light the burner by hand.
- Push the gas control lever to "OFF" Position. Do not force.
- 6. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. If you then smell gas;(STOP". Follow"B" in the safety. information above on this label if you don't smell gas, go to next step.

INLET

ARRIVEE

- 7. Push gas control lever to "ON".
- 8. Replace access panel.
- 9. Turn on all electric power to the appliance.
- 10. Set thermostat to desired setting.

11. If the appliance will not operate, follow the instructions "To Turn Off Gas To Appliance" and call your service technician or gas company.



MANUAL GAS LEVER SHOWN IN "ON" POS

MISE EN MARCHE

- ARRÊTEZ Lisez les instructions de sécurité dans la section supérieure de cette étiquette.
- 2. Régler le thermostat à la température la plus basse.
- 3. Couper l'alimentation électrique de l'appareil.
- Cet appareil menager etant dote d'un systeme d'allumage automatique, ne pas essayer à allumer le brûleur manuellement.
- Pousse le levier du contrÔle du gaz a "OFF/ ARRET" position.
- Attendre cinq (5) minutes pour laisser echapper tout le gaz. Renifler tout autour de l'appareil, y compris prés du plancher, pour déceler une odeur de gaz. Si c'est le cas,

ARRÊTEZ. Passer à l'etape B des instructions de securite sur la portion superieure de cette etiquette. S'il n'y a pas d'odeur de gaz, passer à l'etàpe suivante.

- Pousse le levier du contrôle du gaz à "ON/MARCHE" position.
- 8. Remettre en place le panneau d'accés.
- 9. Mettre l'appareil sous tension.
- 10. Régler le thermostat à la température désirée.
- 11. Si l'appareil ne se met pas en marche, suivre les instructions intitulées Comment couper l'admission de gaz de l'appareil et appeler un technicien qualifié ou le fournisseur de gaz.

TO TURN OFF GAS TO APPLIANCE


- 1. Set the thermostat to lowest setting.
- Turn off all electric power to the appliance if service is to be performed.
- Push the gas control lever to "OFF" Position. Do not force.
- 4. Replace control access panel.

POUR COUPER L'ADMISSION DE GAZ DE L'APPAREIL


- 1. Régler le thermostat à la température la plus bassé.
- 2. Couper l'alimentation électrique de l'appareil s'il faut procéder à des operations d'entretien.
- Pousse le levier du contrôle du gaz à "OFF/ ARRET" position.
 Ne pas forcer.
- 4. Remettre en place le panneau d'accés

0140F00000P REV D


TYPICAL PACKAGE COOLING OR PACKAGE GAS

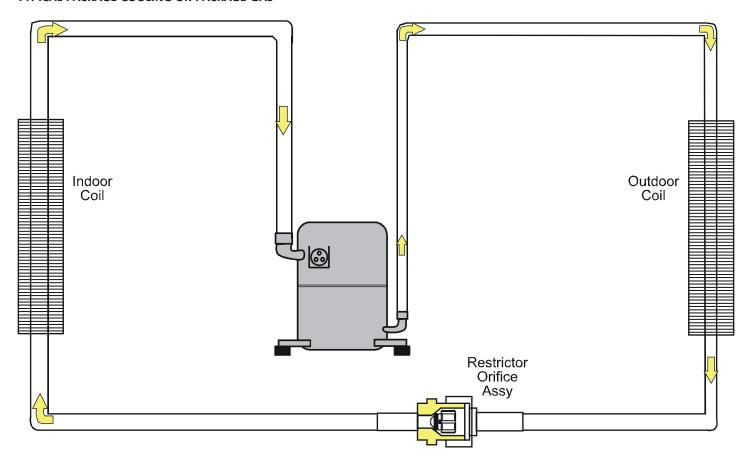

 Either a thermostatic expansion valve or restrictor orifice assembly may be used depending on model. Refer to the parts catalog for the model being serviced.




 RESTRICTOR ORIFICE ASSEMBLY IN COOLING OPERATION




In the cooling mode the orifice is pushed into its seat forcing refrigerant to flow through the metered hole in the center of the orifice.

TYPICAL HEAT PUMP SYSTEM IN COOLING

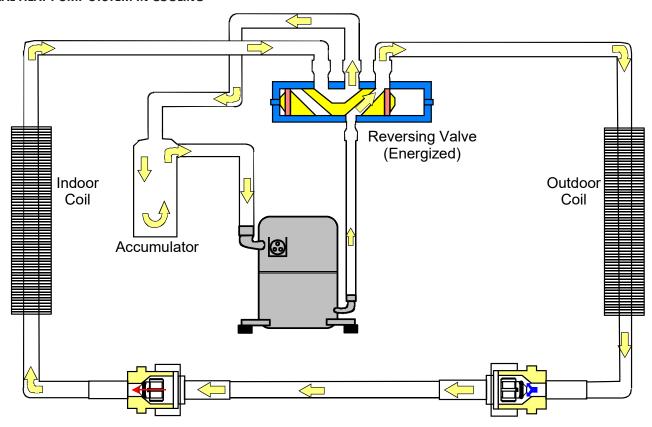

TYPICAL HEAT PUMP SYSTEM IN HEATING

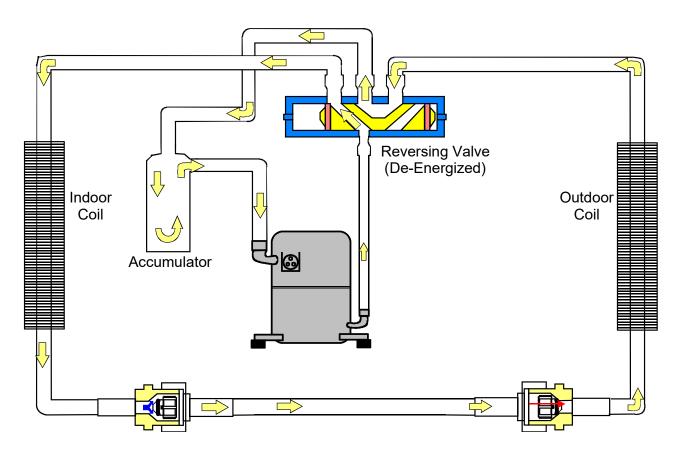

DIRECT SPARK IGNITION (DSI) SYSTEMS

DRG units are equipped with a direct spark ignition system. Ignition is provided by 22,000 volt electronic spark. A flame sensor then monitors for the presence of flame and closes the gas valve if flame is lost.

The system may be controlled by most good heating and cooling thermostats with an adjustable heat anticipator.


NOTE: Some night setback thermostats that do not have a common terminal use a power robbing circuit in the off cycle to maintain the batteries. This type of thermostat may interfere with the operation of the ignition control module and should not be used.



WARNING

HIGH VOLTAGE
DISCONNECT ALL POWER BEFORE SERVICING
OR INSTALLING THIS UNIT. MULTIPLE POWER
SOURCES MAY BE PRESENT. FAILURE TO DO SO
MAY CAUSE PROPERTY DAMAGE, PERSONAL
INJURY OR DEATH.



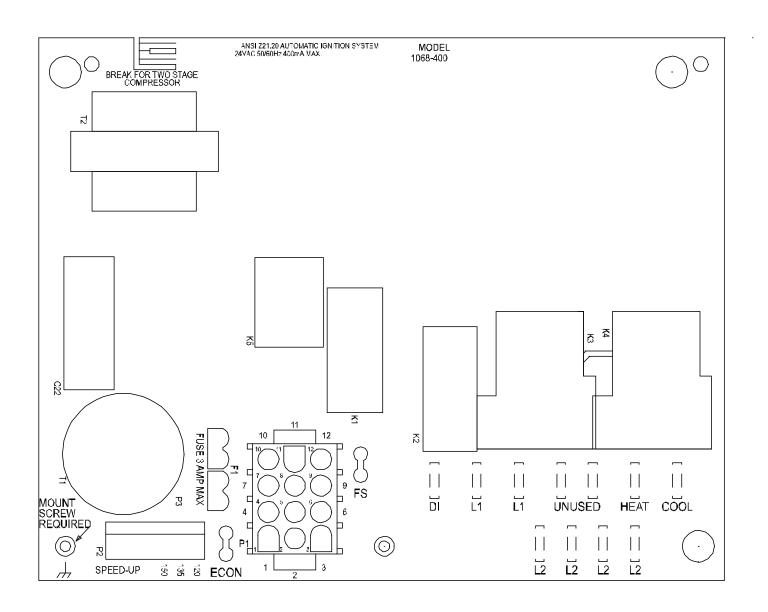

PRE-INSTALLATION CHECKS

Carefully read all instructions for the installation prior to installing unit. Ensure each step or procedure is understood and any special considerations are taken into account before starting installation. Assemble all tools, hardware and supplies needed to complete the installation. Some items may need to be purchased locally.



WARNING

TO PREVENT POSSIBLE EQUIPMENT DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH, THE FOLLOWING BULLET POINTS MUST BE OBSERVED WHEN INSTALLING THE UNIT.

IMPORTANT NOTE: Remove wood shipping rails prior to installation of the unit.

ALL INSTALLATIONS:

Important Note: Unit should be energized 24 hours prior to compressor start up to ensure crankcase heater has sufficiently warmed the compressors. Compressor damage may occur if this step is not followed.

NOTE: Appliance is shipped from factory for vertical duct application.

Proper installation of the unit ensures trouble-free operation. Improper installation can result in problems ranging from noisy operation to property or equipment damages, dangerous conditions that could result in injury or personal property damage and that are not covered by the warranty. Give this booklet to the user and explain it's provisions. The user should retain these instructions for future reference.

- For proper flame pattern within the heat exchanger and proper condensate drainage, the unit must be mounted level.
- The flue outlet must be at least 12 inches from any opening through which flue gases could enter a building, and at least three feet above any forced air inlet located within ten feet. The economizer/ manual fresh air intake/motorized fresh air intake and combustion air inlet mounted on the unit are not affected by this restriction.

- To avoid possible corrosion of the heat exchanger, do not locate the unit in an area where the outdoor air (i.e. combustion air for the unit) will be frequently contaminated by compounds containing chlorine or fluorine. Common sources of such compounds include swimming pool chemicals and chlorine bleaches, paint stripper, adhesives, paints, varnishes, sealers, waxes (which are not yet dried) and solvents used during construction and remodeling. Various commercial and industrial processes may also be sources of chlorine/ fluorine compounds.
- The unit shall not be connected to a chimney flue serving a separate appliance designed to burn solid fuel.
- To avoid possible illness or death of the building occupants, do NOT locate outside air intake device (economizer, manual fresh air intake, motorized fresh air intake) too close to an exhaust outlet, gas vent termination, or plumbing vent outlet. For specific distances required, consult local codes.
- Allow minimum clearances from the enclosure for fire protection, proper operation, and service access (see unit clearances). These clearances must be permanently maintained.
- The combustion air inlet and flue outlet on the unit must never be obstructed. If used, do not allow the economizer/manual fresh air damper/ motorized fresh air damper to become blocked by snow or debris. In some climates or locations, it may be necessary to elevate the unit to avoid these problems.
- When the unit is heating, the temperature of the return air entering the unit must be a minimum of 55° F.

GROUND LEVEL INSTALLATIONS ONLY:

- When the unit is installed on the ground adjacent to the building, a level concrete (or equal) base is recommended. Prepare a base that is 3" larger than the package unit footprint and a minimum of 3" thick.
- The base should also be located where no runoff of water from higher ground can collect in the unit.

ROOF TOP INSTALLATIONS ONLY:

- To avoid possible property damage or personal injury, the roof must have sufficient structural strength to carry the weight of the unit(s) and snow or water loads as required by local codes. Consult a structural engineer to determine the weight capabilities of the roof.
- The unit may be installed directly on wood floors or on Class A, Class B, or Class C roof covering material.
- To avoid possible personal injury, a safe, flat surface for service personnel should be provided.

- As indicated on the unit data plate, a minimum clearance of 36" to any combustible material is required on the furnace access side of the unit. All combustible materials must be kept out of this area.
- This 36" clearance must also be maintained to insure proper combustion air and flue gas flow. The combustion air intake and furnace flue discharge must not be blocked for any reason, including blockage by snow.
- Adequate clearances from the furnace flue discharge to any adjacent public walkways, adjacent buildings, building openings or openable windows must be maintained in accordance with the latest edition of the National Fuel Gas Code ANSI Z223.1/NFPA 54.
- Minimum horizontal clearance of 48" from the furnace flue discharge to any electric meters, gas meters, regulators and relief equipment is required.

UNIT PRECAUTIONS

- Do not stand or walk on the unit.
- Do not drill holes anywhere in panels or in the base frame of the unit except where indicated. Unit access panels provide structural support.
- Do not remove any access panels until unit has been installed on roof curb or field supplied structure.
- Do not roll unit across finished roof without prior approval of owner or architect.
- Do not skid or slide on any surface as this may damage unit base. The unit must be stored on a flat, level surface. Protect the condenser coil because it is easily damaged.

ROOF CURB INSTALLATIONS ONLY:

Curb installations must comply with local codes and should be done in accordance with the established guidelines of the National Roofing Contractors Association.

Proper unit installation requires that the roof curb be firmly and permanently attached to the roof structure. Check for adequate fastening method prior to setting the unit on the curb.

Full perimeter roof curbs are available from the factory and are shipped unassembled. Field assembly, squaring, leveling and mounting on the roof structure are the responsibility of the installing contractor. All required hardware necessary for the assembly of the sheet metal curb is included in the curb accessory.



WARNING

TO PREVENT POSSIBLE EQUIPMENT DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH, THE FOLLOWING BULLET POINTS MUST BE OBSERVED WHEN INSTALLING THE UNIT.

- Sufficient structural support must be determined prior to locating and mounting the curb and package unit.
- Ductwork must be constructed using industry guidelines. The duct work must be placed into the roof curb before mounting the package unit. Our full perimeter curbs include duct connection frames to be assembled with the curb. Cantilevered type curbs are not available from the factory.
- Curb insulation, cant strips, flashing and general roofing material are furnished by the contractor.
- The curbs must be supported on parallel sides by roof members.
- The roof members must not penetrate supply and return duct opening areas as damage to the unit might occur.


NOTE: The unit and curb accessories are designed to allow vertical duct installation <u>before</u> unit placement. Duct installation <u>after</u> unit placement is not recommended.



ALL CURBS LOOK SIMILAR. TO AVOID INCORRECT CURB POSITIONING, CHECK JOB PLANS CAREFULLY AND VERIFY MARKINGS ON CURB ASSEMBLY. INSTRUCTIONS MAY VARY IN CURB STYLES AND SUPERSEDES INFORMATION SHOWN.

See the manual shipped with the roof curb for assembly and installation instructions.

CLEARANCES

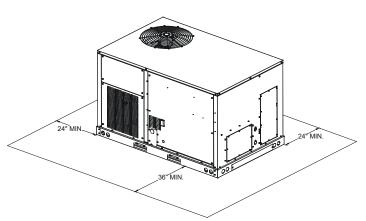

UNIT CLEARANCES


*In situations that have multiple units, a 36" minimum clearance is required between the condenser coils.

Adequate clearance around the unit should be kept for safety, service, maintenance, and proper unit operation. A clearance of 48" is recommended on all sides of the unit to facilitate possible parts replacement, to allow service access and to insure proper ventilation and condenser airflow. The top of the unit should be completely unobstructed. If units are to be located under an overhang, there should be a minimum of 48" clearance and provisions made to deflect the warm discharge air out from the overhang. The unit should be installed remote from all building exhausts to inhibit ingestion of exhaust air into the unit fresh air intake.

NOTE: If the 36" minimum clearance is used on the control panel side of a DRG unit, a flue extension kit needs be to installed to prevent flue gas recirculation. See table below for the kit selection.

Model size	Kit part number
3 ton	HEFLUE036
4 & 5 ton	HEFLUE048060
6 ton	HEFLUE072

FLUE EXTENSION KITS

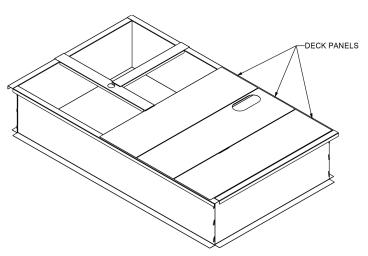

ROOF CURB INSTALLATION

ROOF CURB POST-INSTALLATION CHECKS

After installation, check the top of the curb, duct connection frame and duct flanges to make sure gasket has been applied properly. Gasket should be firmly applied to the top of the curb perimeter, duct flanges and any exposed duct connection frame. If gasket is loose, re-apply using strong weather resistant adhesive.

PROTRUSION

Inspect curb to ensure that none of the utility services (electric) routed through the curb protrude above the curb.



CAUTION

IF PROTRUSIONS EXIST, DO NOT ATTEMPT TO SET UNIT ON CURB.


ROOF TOP DUCT CONNECTIONS

Install all duct connections on the unit before placing the unit on rooftop.

HORIZONTAL DISCHARGE

Refer to IOD-7082 included in the literature pack for installing horizontal duct covers.

Flexible duct connectors between the unit and ducts are recommended. Insulate and weatherproof all external ductwork and joints as required and in accordance with local codes.

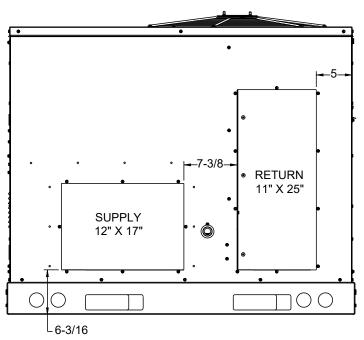

HORIZONTAL DISCHARGE DUCT CONNECTIONS

RIGGING DETAILS



WARNING

TO PREVENT PROPERTY DAMAGE, THE UNIT SHOULD REMAIN IN AN UPRIGHT POSITION DURING ALL RIGGING AND MOVING OPERATIONS. TO FACILITATE LIFTING AND MOVING WHEN A CRANE IS USED, PLACE THE UNIT IN AN ADEQUATE CABLE SLING.



CAUTION

IF UNITS ARE LIFTED TWO AT A TIME, THE FORK HOLES ON THE CONDENSER END OF THE UNIT MUST NOT BE USED. MINIMUM FORK LENGTH IS 42" TO PREVENT DAMAGE TO THE UNIT; HOWEVER, 48" IS RECOMMENDED.

Provisions for forks have been included in the unit base frame. No other fork locations are approved.



WARNING


TO PREVENT POSSIBLE EQUIPMENT DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH, THE FOLLOWING BULLET POINTS MUST BE OBSERVED WHEN INSTALLING THE UNIT.

- Unit must be lifted by the four lifting holes located at the base frame corners.
- Lifting cables should be attached to the unit with shackles.
- The distance between the crane hook and the top of the unit must not be less than 60".

• Two spreader bars must span over the unit to prevent damage to the cabinet by the lift cables. Spreader bars must be of sufficient length so that cables do not come in contact with the unit during transport. Remove wood struts mounted beneath unit base frame before setting unit on roof curb. These struts are intended to protect unit base frame from fork lift damage. Removal is accomplished by extracting the sheet metal retainers and pulling the struts through the base of the unit. Refer to rigging label on the unit.

Important: If using bottom discharge with roof curb, ductwork should be attached to the curb prior to installing the unit. Ductwork dimensions are shown in Roof Curb Installation Instructions.

Refer to the Roof Curb Installation Instructions for proper curb installation. Curbing must be installed in compliance with the National Roofing Contractors Association Manual.

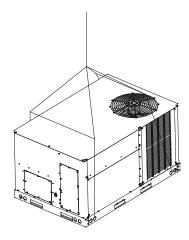

To assist in determining rigging requirements, unit weights and center of gravity are shown as follows:

WEIGHTS AND CENTER OF GRAVITY

CONDENSER COIL RETURN EVAPORATOR COIL SUPPLY COMPRESSOR B

CORNER AND CENTER OF GRAVITY LOCATIONS

Note: Unit should be lifted at a point above center of gravity.

Model	Shipping	Operating	Corner Weights (lb)				X (in)	V (:)
wodei	Weight (lb)	Weight (lb)	Α	В	С	D	X (IN)	Y (IN)
DRG036	630	572	104	141	186	141	36.5	27.7
DRG048	705	647	118	231	180	118	36.3	27.9
DRG060	713	655	148	189	135	183	35.8	27.5
DRG072	763	705	122	246	180	157	35.3	27.7

THE NUMBERS MAY SLIGHTLY VARY DEPENDING ON INSTALLED OPTIONS.



CAUTION

TO PREVENT SEVERE DAMAGE TO THE BOTTOM OF THE UNIT, DO NOT FORK LIFT UNIT AFTER WOOD STRUTS HAVE BEEN REMOVED.

Bring condenser end of unit into alignment with the curb first. Lower unit carefully onto roof mounting curb. When a rectangular cantilever curb is used, care should be taken to center the unit. Check for proper alignment and orientation of supply and return openings with duct.

RIGGING REMOVAL



CAUTION

TO PREVENT DAMAGE TO THE UNIT, DO NOT ALLOW CRANE HOOKS AND SPREADER BARS TO REST ON THE ROOF OF THE UNIT.

Remove spreader bars, lifting cables and other rigging equipment.

ELECTRICAL WIRING



WARNING

HIGH VOLTAGE!

DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.





WARNING

HIGH VOLTAGE!

TO AVOID PERSONAL INJURY OR DEATH DUE TO ELECTRICAL SHOCK, DO NOT TAMPER WITH FACTORY WIRING. THE INTERNAL POWER AND CONTROL WIRING OF THESE UNITS ARE FACTORY-INSTALLED AND HAVE BEEN THOROUGHLY TESTED PRIOR TO SHIPMENT. CONTACT YOUR LOCAL REPRESENTATIVE IF ASSISTANCE IS REQUIRED.





CAUTION

TO PREVENT DAMAGE TO THE WIRING, PROTECT WIRING FROM SHARP EDGES. FOLLOW NATIONAL ELECTRICAL CODE AND ALL LOCAL CODES AND ORDINANCES. DO NOT ROUTE WIRES THROUGH REMOVABLE ACCESS PANELS.



CAUTION

CONDUIT AND FITTINGS MUST BE WEATHER-TIGHT TO PREVENT WATER ENTRY INTO THE BUILDING.

For unit protection, use a fuse or HACR circuit breaker that is in excess of the circuit ampacity, but less than or equal to the maximum overcurrent protection device. DO NOT EXCEED THE MAXIMUM OVERCURRENT DEVICE SIZE SHOWN ON UNIT DATA PLATE.

All line voltage connections must be made through weatherproof fittings. All exterior power supply and ground wiring must be in approved weatherproof conduit.

The main power supply wiring to the unit and low voltage wiring to accessory controls must be done in accordance with these instructions, the latest edition of the National Electrical Code (ANSI/NFPA 70), and all local codes and ordinances.

The unit is factory wired for the voltage shown on the unit's data plate.

NOTE: If supply voltage is 208V, lead on primary of transformer(s) must be moved from the 230V to the 208V tap. Refer to wiring diagram on unit for details.

Main power wiring should be sized for the minimum circuit ampacity shown on the unit's dataplate. Size wires in accordance with the ampacity tables in <u>Article 310 of the National Electrical Code</u>. If long wires are required, it may be necessary to increase the wire size to prevent excessive voltage drop. Wires should be sized for a maximum of 3% voltage drop.



CAUTION

TO AVOID RISK OF PROPERTY DAMAGE, PERSONAL INJURY OR FIRE, USE ONLY COPPER CONDUCTORS.




CAUTION

TO PREVENT IMPROPER AND DANGEROUS OPERATION DUE TO WIRING ERRORS, LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING CONTROLS. VERIFY PROPER OPERATION AFTER SERVICING.

NOTE: A weather-tight disconnect switch, properly sized for the unit total load, must be field or factory installed. An external field supplied disconnect may be mounted on the exterior panel.

Ensure the data plate is not covered by the field-supplied disconnect switch.

- Some disconnect switches are not fused. Protect the power leads at the point of distribution in accordance with the unit data plate.
- The unit must be electrically grounded in accordance with local codes or, in the absence of local codes, with the latest edition of the National Electrical Code ANSI/ NFPA 70, and/or the Canadian Electrical Code, CSA C22.1, Part 1. A ground lug is provided for this purpose. Do not use the ground lug for connecting a neutral conductor.
- Connect power wiring to the electrical power block located within the main control box.

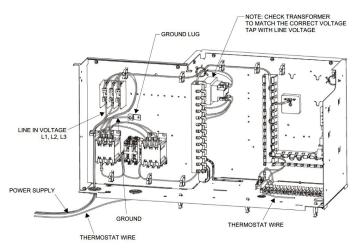

Gas Control box

note: depending on the options installed, the location of the components may vary in some models



WARNING

OPERATING THE UNIT WITH AN IMPROPER LINE VOLTAGE OR WITH EXCESSIVE PHASE UNBALANCE CAN CAUSE DAMAGE TO OR FAILURE OF THE UNIT. SUCH DAMAGE OR FAILURE IS NOT COVERED UNDER THE UNIT'S WARRANTY.

AREAS WITHOUT CONVENIENCE OUTLET


It is recommended that an independent 115V power source be brought to the vicinity of the roof top unit for portable lights and tools used by the service mechanic.


NOTE: Refer to local codes for requirements. These outlets can also be factory installed.

UNITS INSTALLED ON ROOF TOPS

Main power and low voltage wiring may enter the unit through the condenser end of unit or through the roof curb. Install conduit connectors at the desired entrance locations. External connectors must be weatherproof. All holes in the unit base must be sealed (including those around conduit nuts) to prevent water leakage into building. All required conduit and fittings are to be field supplied.

Supply voltage to roof top unit must not vary by more than 10% of the value indicated on the unit data plate. Phase voltage unbalance must not exceed 2%. Contact your local power company for correction of improper voltage or phase unbalance.

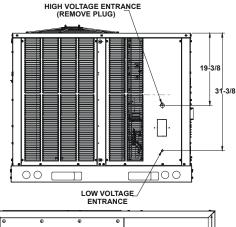

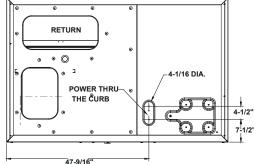

ELECTRICAL ENTRANCE AND THRU CURB (BOTTOM VIEW OF UNIT)

LOW VOLTAGE CONTROL WIRING

- 1. A 24V thermostat must be installed for unit operation.
- Locate thermostat or remote sensor in the conditioned space where it will sense average temperature. Do not locate the device where it may be directly exposed to supply air, sunlight or other sources of heat. Follow installation instructions packaged with the installed device.
- Use #18 AWG wire for 24V control wiring runs not exceeding 75 feet. Use #16 AWG wire for 24V control wiring runs not exceeding 125 feet. Use #14 AWG wire for 24V control wiring runs not exceeding 200 feet. Low voltage wiring may be National Electrical Code (NEC) Class 2 where permitted by local codes.
- 4. Route the low voltage control wires from sub-base terminals to the unit. Control wiring should enter through the condenser panel opening or through curb indicated in "Electrical Entrance" figure. Connect thermostat and any accessory wiring to low voltage terminal block TB1 in the main control box.
- 5. For two-stage heating operation, remove the factory installed jumper connecting W1 and W2 terminals on terminal block.

NOTE: Field-supplied conduit may need to be installed depending on unit/curb configuration. Use #18 AWG solid conductor wire whenever connecting thermostat wires to terminals on sub-base. DO NOT use larger than #18 AWG wire. A transition to #18 AWG wire may be required before entering thermostat sub-base.

NOTE: Refer to unit wiring diagrams for thermostat or remote sensor connections.

GAS SUPPLY PIPING



WARNING

TO PREVENT PERSONAL INJURY OR DEATH DUE TO IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE, REFER TO THIS MANUAL. FOR ADDITIONAL ASSISTANCE OR INFORMATION, CONSULT A QUALIFIED INSTALLER, SERVICER AGENCY OR THE GAS SUPPLIER.

IMPORTANT NOTE: This unit is factory set to operate on natural gas at the altitudes shown on the rating plate.



WARNING

TO AVOID PROPERTY DAMAGE, PERSONAL INJURY OR DEATH WHEN EITHER USING PROPANE GAS ALONE OR AT HIGHER ALTITUDES, OBTAIN AND INSTALL THE PROPER CONVERSION KIT(S). FAILURE TO DO SO CAN RESULT IN UNSATISFACTORY OPERATION AND/OR EQUIPMENT DAMAGE. HIGH ALTITUDE KITS ARE FOR U.S. INSTALLATIONS ONLY AND ARE NOT APPROVED FOR USE IN CANADA.

The rating plate is stamped with the model number, type of gas and gas input rating. Make sure the unit is equipped to operate on the type of gas available. Conversion to propane (LP) gas is permitted with the use of the factory authorized conversion kit (see the unit Technical Manual for the appropriate kit). For High Altitude derates, refer to the latest edition of the National Fuel Gas Code NFPA 54/ANSI Z223.1 or National Standard of Canada, Natural Gas and Propane Installation Code, CSA B149.1.

INLET GAS PRESSURE				
NATURAL	Min. 5.0" W.C., Max. 10.0" W.C.			
PROPANE	Min. 11.0" W.C., Max. 14.0" W.C.			

INLET GAS PRESSURE MUST NOT EXCEED MAXIMUM VALUE SHOWN IN TABLE ABOVE.

The minimum supply pressure should not vary from that shown in the table above because this could prevent the unit from having dependable ignition. In addition, gas input to the burners must not exceed the rated input shown on the rating plate. Overfiring of the unit could result in premature heat exchanger failure.

PIPING

IMPORTANT NOTE: To avoid possible unsatisfactory operation or equipment damage due to under firing of equipment, do not undersize the natural/propane gas piping from the meter/tank to the unit. When sizing a trunk line, include all appliances on that line that could be operated simultaneously.

The gas line installation must comply with local codes, or in the absence of local codes, with the latest edition of the National Fuel Gas Code NFPA 54 / ANSI Z223.1.

NATURAL GAS CONNECTION


Natural Gas Capacity of Pipe in Cubic Feet of Gas Per Hour (CFH)						
Length of	N	lominal Bl	ack Pipe S	ize (inche	s)	
Pipe in Feet	1/2	3/4	1	1 1/4	1 1/2	
10	132	278	520	1050	1600	
20	92	190	350	730	1100	
30	73	152	285	590	980	
40	63	130	245	500	760	
50	56	115	215	440	670	
60	50	105	195	400	610	
70	46	96	180	370	560	
80	43	90	170	350	530	
90	40	84	160	320	490	
100	38	79	150	305	460	

Pressure= .50 PSIG or less and Pressure Drop of 0.3" W.C. (Based on 0.60 Specific Gravity Gas)

Refer to the Proper Piping Practice drawing for the general layout at the unit. The following rules apply:

- Use black iron pipe and fittings for the supply piping.
 The use of a flex connector and/or copper piping is permitted as long as it is in agreement with local codes.
- Use pipe joint compound on male threads only. Pipe joint compound must be resistant to the action of the fuel used.
- 3. Use ground joint unions.
- 4. Install a drip leg to trap dirt and moisture before it can enter the gas valve. The drip leg must be a minimum of three inches long.

- 5. Use two pipe wrenches when making connection to the gas valve to keep it from turning.
- 6. Install a manual shut-off valve in a convenient location (within six feet of unit) between the meter and the unit.
- 7. Tighten all joints securely.
- 8. The unit must be connected to the building piping by one of the following methods:
 - Rigid metallic pipe and fittings
 - Semirigid metallic tubing and metallic fittings (Aluminum alloy tubing must not be used in exterior locations).
 - Listed gas appliance connectors used in accordance with the terms of their listing that are completely in the same room as the equipment. Always use a new listed connector.
 - In the prior two methods above the connector or tubing must be protected from physical and thermal damage. Aluminum alloy tubing and connectors must be coated to protect against external corrosion when in contact with masonry, plaster or insulation or are subject to repeated wettings by liquids (water - not rain water, detergents or sewage).

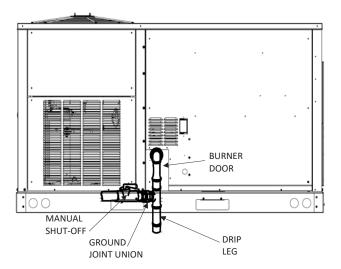

PROPER PIPING PRACTICE

NOTE: The unit gas supply entrance is factory sealed with plugs. Keep plugs in place until gas supply is ready to be installed. Once ready, replace the plugs with the supplied grommets and install gas supply line.

GAS PIPING CHECKS



CAUTION

TO PREVENT PROPERTY DAMAGE OR PERSONAL INJURY DUE TO FIRE, THE FOLLOWING INSTRUCTIONS MUST BE PREFORMED REGARDING GAS CONNECTIONS AND PRESSURE TESTING:

- THE UNIT AND ITS GAS CONNECTIONS MUST BE LEAK TESTED BEFORE PLACING IN OPERATION. BECAUSE OF THE DANGER OF EXPLOSION OR FIRE, NEVER USE A MATCH OR OPEN FLAME TO TEST FOR LEAKS. NEVER EXCEED SPECIFIED PRESSURES FOR TESTING. HIGHER PRESSURE MAY DAMAGE GAS VALVE AND CAUSE OVERFIRING WHICH MAY RESULT IN PREMATURE HEAT EXCHANGE FAILURE.
- THIS UNIT AND ITS SHUT-OFF VALVE MUST BE DISCONNECTED FROM THE GAS SUPPLY DURING ANY PRESSURE TESTING OF THAT SYSTEM AT TEST PRESSURES IN EXCESS OF ½ PSIG (3.48 KPA).
- THIS UNIT MUST BE ISOLATED FROM THE GAS SUPPLY SYSTEM BY CLOSING ITS MANUAL SHUT-OFF VALVE DURING ANY PRESSURE TESTING OF THE GAS SUPPLY PIPING SYSTEM AT TEST PRESSURES EQUAL TO OR LESS THAN ½ PSIG (3.48 KPA).



WARNING

TO AVOID PROPERTY DAMAGE OR PERSONAL INJURY, BE SURE THERE IS NO OPEN FLAME IN THE VICINITY DURING AIR BLEEDING.

There will be air in the gas supply line after testing for leaks on a new installation. Therefore, the air must be bled from the line by loosening the ground joint union until pure gas is expelled. Tighten union and wait for five minutes until all gas has been dissipated in the air. Be certain there is no open flame in the vicinity during air bleeding procedure. The unit is placed in operation by closing the main electrical disconnect switch for the unit.

PROPANE GAS INSTALLATIONS



WARNING

TO AVOID PROPERTY DAMAGE, PERSONAL INJURY OR DEATH DUE TO FIRE OR EXPLOSION CAUSED BY A PROPANE GAS LEAK, INSTALL A GAS DETECTING WARNING DEVICE. SINCE RUST CAN REDUCE THE LEVEL OF ODORANT IN PROPANE GAS, A GAS DETECTING WARNING DEVICE IS THE ONLY RELIABLE WAY TO DETECT A PROPANE GAS LEAK. CONTACT A LOCAL PROPANE GAS SUPPLIER ABOUT INSTALLING A GAS DETECTING WARNING DEVICE.

IMPORTANT NOTE: Propane gas conversion kits must be installed to convert units to propane gas. NOx screens must be removed before converting to LP. Remove burner assembly and pull NOx screens from each burner tube. When all the screens are out, reassemble the burner assembly without the screens.

All propane gas equipment must conform to the safety standards of NFPA 58 - Liquefied Petroleum Gas Code.

For satisfactory operation, propane gas pressure must be within 9.7 - 10.3 inches w.c. for high fire at the manifold with all gas appliances in operation. Maintaining proper gas pressure depends on three main factors:


- 1. Vaporization rate, which depends on (a) temperature of the liquid, and (b) wetted surface area of the container or containers.
- 2. Proper pressure regulation.
- Pressure drop in lines between regulators, and between second stage regulator and the appliance.
 Pipe size required will depend on length of pipe run and total load of all appliances.

TANKS AND PIPING

Complete information regarding tank sizing for vaporization, recommended regulator settings and pipe sizing is available from most regulator manufacturers and propane gas suppliers.

Since propane gas will quickly dissolve white lead or most standard commercial compounds, special pipe dope must be used. Shellac base compounds resistant to the actions of liquefied petroleum gases such as Gasolac*, Stalactic*, Clyde's* or John Crane* are satisfactory.

See the following figure for typical propane gas piping.

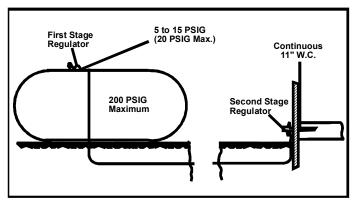

TYPICAL PROPANE GAS PIPING

ROOF TOP LOCATION AND INSTALLATION

The gas supply piping location and installation for roof top units must be in accordance with local codes or, in the absence of locals codes, with ordinances of the latest edition of the National Fuel Gas Code ANSI Z223.1/NFPA 54.

A manual gas shut off valve must be field installed external to the roof top unit. In addition, a drip leg must be installed near the inlet connection. A ground joint union connection is required between the external shut off valve and the unit connection to the gas valve to permit removal of the burner assembly for servicing.

- Route gas piping to unit so that it does not interfere with the removal of access panels. Support and align piping to prevent strains or misalignment of the manifold assembly.

NOTE: The gas connection size at the unit does NOT establish the size of the supply line.

- 3. These units are designed for either natural or propane (LP) gas and are specifically constructed at the factory for only one of these fuels. The fuels are NOT interchangeable. However, the furnace can be converted in the field from natural gas to LP gas with the appropriate factory kit (see unit Technical Manual for the appropriate kit). Only a qualified contractor, experienced with natural and propane gas systems, should attempt conversion. Kit instructions must be followed closely to assure safe and reliable unit operation.
- 4. With all units on a common line operating under full fire, natural gas main supply pressure should be adjusted to approximately 7.0" w.c., measured at the unit gas valve. If the gas pressure at the unit is greater than 10.0" w.c., the contractor must furnish and install an external type positive shut off service pressure regulator. The unit will not function satisfactorily if supply gas pressure is less than 5.0" w.c. or greater than 10.0" w.c..

NOTE: A minimum horizontal distance of 48" between the regulator and the furnace flue discharge is required.

5. With all units on a common line operating under full LP gas main supply pressure should be at least 11.0" w.c. and must be no greater than 13.0" w.c., measured at the unit gas valve. Unit will not function satisfactorily if supply gas pressure is less than 11.0" w.c. or greater than 13.0" w.c..

6. All pipe connections should be sealed with a pipe thread compound, which is resistant to the fuel used with the furnace. A soapy water solution should be used to check all joints for leaks. A tap is located on the entering side of the gas valve for test gauge connection to measure supply (main) gas pressure. Another tap is provided on the manifold side of the gas valve for checking manifold pressure.



WARNING

THIS UNIT AND ITS INDIVIDUAL SHUTOFF VALVE MUST BE DISCONNECTED FROM THE GAS SUPPLY SYSTEM DURING ANY PRESSURE TESTING OF THAT SYSTEM AT TEST PRESSURES IN EXCESS OF ½ PSIG (13.8" W.C.).



CAUTION

This unit must be ISOLATED from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing equal to or less than % PSIG.

7. There must be no obstruction to prevent the flow of combustion and ventilating air. A vent stack is not required and must never be used. The power venter will supply an adequate amount of combustion air as long as the air passageways are kept free of any obstructions and the recommended external unit clearances are maintained.

CIRCULATING AIR AND FILTERS

DUCTWORK

The supply duct from the unit through a wall may be installed without clearance. However, minimum unit clearances must be maintained (see "Clearances" section). The supply duct should be provided with an access panel large enough to inspect the air chamber downstream of the heat exchanger. A cover should be tightly attached to prevent air leaks.

 
Ductwork dimensions are shown in the roof curb installation manual.

If desired, supply and return duct connections to the unit may be made with flexible connections to reduce possible unit operating sound transmission.


CONDENSATE DRAIN CONNECTION

CONDENSATE DRAIN CONNECTION

A 3/4" female NPT drain connection is supplied on the end of the unit and bottom of the drain pan for condensate piping. An external trap must be installed for proper condensate drainage. Hand tighten drain fitting to the drain connection.



Drain Pan (Side View)

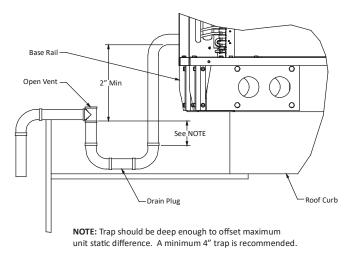

DRAIN CONNECTION

Install condensate drain trap as shown. Use 3/4" drain line and fittings or larger. Do not operate without trap.

HORIZONTAL DRAIN

Drainage of condensate directly onto the roof may be acceptable; refer to local code. It is recommended that a small drip pad of either stone, mortar, wood or metal be provided to prevent any possible damage to the roof.

VERTICAL DRAIN

To use the bottom drain connection, remove the drain plug from the bottom connection and install it in the horizontal connection.

CLEANING

Due to the fact that drain pans in any air conditioning unit will have some moisture in them, algae and fungus will grow due to airborne bacteria and spores. Periodic cleaning is necessary to prevent this build-up from plugging the drain.

STARTUP, ADJUSTMENTS, AND CHECKS



WARNING

HIGH VOLTAGE!

TO AVOID PERSONAL INJURY OR DEATH DUE TO ELECTRICAL SHOCK, BOND THE FRAME OF THIS UNIT TO THE BUILDING ELECTRICAL GROUND BY USE OF THE GROUNDING TERMINAL PROVIDED OR OTHER ACCEPTABLE MEANS. DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT.



PRE-STARTUP INSTRUCTIONS - GENERAL



CAUTION

TO PREVENT PROPERTY DAMAGE OR PERSONAL INJURY, DO NOT START THE UNIT UNTIL ALL NECESSARY PRE-CHECKS AND TESTS HAVE BEEN PERFORMED.

Prior to the beginning of Startup, Adjustments, and Checks procedures, the following steps should be completed in the building.



WARNING

MOVING MACHINERY HAZARD!

TO PREVENT POSSIBLE PERSONAL INJURY OR DEATH, DISCONNECT POWER TO THE UNIT AND PADLOCK IN THE "OFF" POSITION BEFORE SERVICING FANS.



CAUTION

TO PREVENT PROPERTY DAMAGE OR PERSONAL INJURY, DO NOT START THE UNIT UNTIL ALL NECESSARY PRE-CHECKS AND TESTS HAVE BEEN PERFORMED.

This unit is equipped with an electronic ignition device to automatically light the main burners. It also has a power vent blower to exhaust combustion products.

On new installations, or if a major component has been replaced, the operation of the unit must be checked.

Check unit operation as outlined in the following instructions. If any sparking, odors, or unusual sounds are encountered, shut off electrical power and recheck for wiring errors, or obstructions in or near the blower motors. **Duct covers must be removed before operating unit.**

The Startup, Adjustments, and Checks procedure provides a step-by-step sequence which, if followed, will assure the proper startup of the equipment in the minimum amount of time. Air balancing of duct system is not considered part of this procedure. However, it is an important phase of any air conditioning system startup and should be performed upon completion of the Startup, Adjustments, and Checks procedure. The Startup, Adjustments, and Checks procedure at outside ambients below 55°F should be limited to a readiness check of the refrigeration system with the required final check and calibration left to be completed when the outside ambient rises above 55°F.

TEMPORARY HEATING OR COOLING

If the unit is to be used for temporary heating or cooling, a "Startup, Adjustments, and Checks" must first be performed in accordance with this manual. Damage or repairs due to failure to comply with these requirments are not covered under the warranty. **After** the machines are used for temporary heating or cooling, inspect the coils, fans, and motors for unacceptable levels of construction dust and dirt and install new filters.

CONTRACTOR RESPONSIBILITY

The installing contractor must be certain that:

- All supply and return air ductwork is in place, properly sealed, and corresponds with installation instructions.
- All thermostats and sensors are mounted and wired in accordance with installation instructions.
- All electric power, all gas, hot water or steam line connections, and the condensate drain installation have been made to each unit on the job. These main supply lines must be functional and capable of operating all units simultaneously.
- Requirements are met for venting and combustion air.
- Air filters are in place.
- Input rate and temperature rise are adjusted per rating plate.

ROOF CURB INSTALLATION CHECK

Inspect the roof curb for correct installation. The unit and curb assembly should be level. Inspect the flashing of the roof mounting curb to the roof, especially at the corners, for good workmanship. Also check for leaks around gaskets. Note any deficiencies in a separate report and forward to the contractor.

OBSTRUCTIONS, FAN CLEARANCE AND WIRING

Remove any extraneous construction and shipping materials that may be found during this procedure. Rotate all fans manually to check for proper clearances and that they rotate freely. Check for bolts and screws that may have jarred loose during shipment to the job site. Retighten if necessary. Re-tighten all electrical connections.

FIELD DUCT CONNECTIONS

Verify that all duct connections are tight and that there is no air bypass between supply and return.

FILTER SECTION CHECK

Remove filter section access panels and check that filters are properly installed. Note airflow arrows on filter frames.

PRE-STARTUP PRECAUTIONS

It is important to your safety that the unit has been properly grounded during installation. Check ground lug connection in main control box for tightness prior to closing circuit breaker or disconnect switch. Verify that supply voltage on line side of disconnect agrees with voltage on unit identification plate and is within the utilization voltage range as indicated in Appendix B Electrical Data.

System Voltage - That nominal voltage value assigned to a circuit or system for the purpose of designating its voltage class.

Nameplate Voltage - That voltage assigned to a piece of equipment for the purpose of designating its voltage class and for the purpose of defining the minimum and maximum voltage at which the equipment will operate.

Utilization Voltage - The voltage of the line terminals of the equipment at which the equipment must give fully satisfactory performance. Once it is established that supply voltage will be maintained within the utilization range under all system conditions, check and calculate if an unbalanced condition exists between phases. Calculate percent voltage unbalance as follows.

THREE PHASE MODELS ONLY

3) PERCENT VOLTAGE = 100 x 2) MAXIMUM VOLTAGE DEVIATIONS FROM AVERAGE VOLTAGE

1) AVERAGE VOLTAGE

HOW TO USE THE FORMULA:

EXAMPLE: Line to neutral voltage of 220, 216, and 213

- 1) Average Voltage = 220 + 216 + 213 = 649 / 3 = 216
- 2) Maximum Voltage Deviations from Average Voltage = 220 216 = 4
- 3) Percent Voltage Unbalance = $100 \times \frac{4}{216} = \frac{400}{216} = 1.8\%$

Percent voltage unbalance MUST NOT exceed 2%.

AIR FLOW ADJUSTMENTS

When the final adjustments are complete, the current draw of the motor should be checked and compared to the full load current rating of the motor. The amperage must not exceed the service factor stamped on the motor nameplate. The total airflow must not be less than that required for operation of the furnace.

If an economizer is installed, check the unit operating balance with the economizer at full outside air and at minimum outside air.

NOTE: Never run high stage CFM below 300 CFM per ton evaporator freezing or poor unit performance is possible.

STANDARD STATIC DRIVE MOTOR

Adjust the CFM for the unit by changing the position of the low voltage leads on the terminal block TB1. Refer to Appendix A for blower performance at each speed tap. Refer to Appendix D for maximum and minimum allowed airflow for heating and cooling.

Fan speed for G (GR), is fixed at TB1-T1 and cannot be moved.

Low Cool Y1, Yellow (YL) is movable and set to TB1-T1

Low Heat W1, White (WH) is movable and set to TB1-T2

High Cool Y2, Purple (PU) is movable and set to TB1-T3

High Heat W2, Brown (BR) is movable and set to TB1-T3

These wires can be moved together or separately and placed on any unoccupied terminal.

NOTE: YL can be moved to taps T2-T3 as long as YL does not share the tap with PU. WH can be moved to tap T3 as long as WH does not share the tap with BR.

Purple wire Y2 (High Cool) and Brown wire W2 (High Heat) are connected to TB1-T3. These wires can be moved together or separately and placed on unoccupied terminal T4 or T5.

HIGH STATIC DRIVE MOTOR

These motors offer a higher flexibility in making airflow adjustments. Depending on the application the motor is set up to use motor speed taps T1 to T5 or T6 to T10. When heat is called speed taps T6 to T10 take the place of speed taps T1 to T5. Refer to Appendix A for blower performance at each speed tap. Refer to Appendix D for minimum and maximum airflow required for heating and cooling.

Fan speed for G (GR), is fixed at TB1-T1 and cannot be moved.

Low Cool Y1, Yellow (YL) is movable and set to TB1-T1

Low Heat W1, White (WH) is movable and set to TB1-T6

High Cool Y2, Purple (PU) is movable and set to TB1-T3

High Heat W2, Brown (BR) is movable and set to TB1-T8

These wires can be moved together or separately and placed on any unoccupied terminal.

Note: YL can be moved to taps T2 to T3 as long as YL does not share the tap with PU. WH can be moved to tap T7 as long as WH does not share the tap with BR. When Heat is called TB1-W1 will also call TB1-DH, activating the second set of taps T6 to T10. If cooling and heating is called at the same time heating will take priority and taps T6 to T10 will be chosen by default.

NOTE: If more than one lead is energized simultaneously, the motor will run at the higher numerical speed tap for both standard static and high static drive motors. For proper operation Y2 and W2 should have a higher speed setting than G, Y1 and W1 for both standard static and high static drive motors.

For gas heat units, the airflow must be adjusted so that the air temperature rise falls within the ranges given stated on Data Plate.

ELECTRICAL INPUT CHECK

Make preliminary check of evaporator fan ampere draw and verify that motor nameplate amps are not exceeded. A final check of amp draw should be made upon completion of air balancing of the duct system (see Appendix B).

GAS SYSTEM CHECK

PRE-OPERATION CHECKS

- 1. Close the manual gas valve external to the unit.
- 2. Turn off the electrical power supply to the unit.
- 3. Change heating setpoint to its lowest possible setting.
- 4. Remove the heat exchanger door on the side of the unit by removing screws.
- This unit is equipped with an ignition device which automatically lights the main burner. DO NOT try to light burner by any other method.
- 6. Move the gas control valve switch to the OFF position.
- 7. Wait five minutes to clear out any gas.
- 8. Smell for gas, including near the ground. This is important because some types of gas are heavier than air. If you have waited five minutes and you do smell gas, immediately follow the warning WHAT TO DO IF YOU SMELL GAS on page 2 of this manual. If having waited for five minutes and no gas smell is noted, move the gas control valve switch to the ON position.
- 9. Replace the heat exchanger door on the side of the unit
- 10. Open the manual gas valve external to the unit.
- 11. Turn on the electrical power supply to the unit.
- 12. Change heating setpoint to desired setting.

GAS SUPPLY PRESSURES & REGULATOR ADJUSTMENTS



WARNING

SHOULD OVERHEATING OCCUR OR THE GAS SUPPLY FAIL TO SHUT OFF, TURN OFF THE MANUAL GAS SHUTOFF VALVE EXTERNAL TO THE UNIT BEFORE TURNING OFF THE ELECTRICAL SUPPLY.



WARNING


TO AVOID PROPERTY DAMAGE, PERSONAL INJURY OR DEATH, DO NOT FIRE GAS UNIT WITH FLUE BOX COVER REMOVED.

NOTE: Except during brief periods when gas pressures are being measured by qualified service personnel, the furnace access panel must always be secured in place when the furnace is in operation. An inspection port in the access panel is provided to monitor the flame.

The first step in checking out the gas-fired furnace is to test the gas supply piping to the unit for tightness and purge the system of air using methods outlined in the latest edition of the National Fuel Gas Code ANSI Z223.1 / NFPA 54. Verify that the disconnect switch is in the "OFF" position. A soapy water solution should be used to check for gas leaks. Since the unit is subject to considerable jarring during shipment, it is extremely important that all gas connections and joints be tested for tightness. Gas piping downstream from the unit inlet should be checked for leaks during the subsequent sequence check.

The supply gas pressure should be adjusted to 7.0" w.c. on natural gas and 11" to 13.0" w.c. on LP gas with the gas burners operating. If there is more than one unit on a common gas line, the pressures should be checked with all units under full fire. A supply pressure tap is provided on the upstream side of the gas valve. A manifold pressure tap is provided on the manifold side of the gas valve. The normal manifold pressure for High fire is 3.5" w.c. on natural gas and 10.0" w.c. for propane gas. Low fire natural gas 2.0" w.c., 6.0" w.c. low fire propane gas. Minimum gas supply pressure is 5.0" w.c. for natural gas and 11.0" w.c. for propane gas.

Do not attempt adjustment of the built-in pressure regulator unless the supply pressure is at least 5.0" w.c. on natural gas or 11.0" w.c. on propane gas.

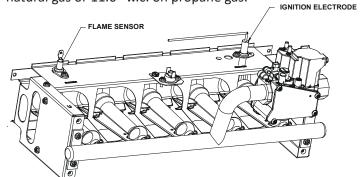

FLAME SENSOR AND IGNITION ELECTRODE LOCATION

Ton	High Fire Rate	Number of Burners	NG Orifice	LP Orifice
	45,000	2	43	55
3	70,000	3	43	55
	115,000	6	45	56
	70,000	3	43	55
4	115,000	5	43	55
	140,000	6	43	55
	70,000	3	43	55
5	115,000	5	43	55
	140,000	6	41	55
	70,000	3	43	55
6	125,000	5	41	54
	150,000	6	41	54

HEAT EXCHANGER AND BURNER ORIFICE SPECIFICATIONS

NOTE: Gas appliances located more than 2000 feet above sea level must be derated 4% per 1000 feet of total elevation and that variance in gas heating value and specific gravity require change in manifold pressure to obtain rating, it is mandatory that the input be adjusted at the installation site. All installations should be made as outlined in the latest edition of the National Fuel Gas Code ANSI Z223.1,section "Procedures To Be Followed To Place An Appliance in Operation". Refer also to the "User's Information Manual" supplied with the unit for additional information on the gas furnace.

GAS SUPPLY AND MANIFOLD CHECK

Gas supply pressure and manifold pressure with the burners operating must be as specified on the rating plate.

GAS INLET PRESSURE CHECK

Gas inlet pressure must be checked and adjusted in accordance to the type of fuel being consumed.

WITH POWER AND GAS OFF:

1. Connect a manometer to the inlet pressure tap of the gas valve.

Inlet gas pressure can also be measured by removing the cap from the dripleg and installing a predrilled cap with a hose fitting.

WITH POWER AND GAS ON:

2. Put unit into heating cycle and turn on all other gas consuming appliances.

INLET GAS PRESSURE									
NATURAL	Min. 5.0" W.C., Max. 10.0" W.C.								
PROPANE	Min. 11.0" W.C., Max. 13.0" W.C.								

NOTE: Inlet gas pressure must be within limits shown above.

If operating pressures differ from above, make necessary pressure regulator adjustments, check piping size, etc., and/or consult with local utility.

MANIFOLD PRESSURE CHECK AND ADJUSTMENT

The gas valve has a pressure tap to facilitate measurement of the manifold pressure. The manifold pressure must be measured with the burners operating.

- With disconnect switch open, remove field connected thermostat wire from terminal R, W1 and W2 on TB1. Place jumper wire between R, W1 and W2 to engage high stage heat.
- 2. See Figure in gas input check section for gas valve adjustment.

To adjust the pressure regulator, remove the adjustment screw cover on the gas valve. Turn the adustment screw out (counterclockwise) to decrease pressure, turn in (clockwise) to increase pressure. Only small variations in gas flow should be made by means of the pressure regulator adjustment. Any major changes in flow should be made by changing the size of the burner orifices. The measured input rate to the furnace must not exceed the rating specified on the unit rating plate.

For natural gas, the high stage manifold pressure must be between 3.2 and 3.8 inches water column (3.5 nominal). Low stage manifold pressure must be between 1.7 to 2.3 inches water column (2.0 nominal).

3. To set low fire rate, open disconnect switch and remove jumper from R to W2. To set low fire manifold pressure, repeat steps above. Refer to Figure in gas input check section for location of high and low stage pressure adjustment.

For propane gas, the manifold pressure must be between 9.7 and 10.3 inches water column (10.0 nominal). Low stage manifold must be between 5.7 and 6.3 inches water column (6.0 nominal).

GAS INPUT (NATURAL GAS ONLY) CHECK

It is the responsibility of the contractor to adjust the gas input to the unit.

To measure the gas input use a gas meter and proceed as follows:

- Turn off gas supply to all other appliances except the unit.
- With the unit operating, time the smallest dial on the meter for one complete revolution. If this is a 2 cubic foot dial, divide the seconds by 2; if it is a 1 cubic foot dial, use the seconds as is. This gives the seconds per cubic foot of gas being delivered to the unit.
- 3. INPUT=GAS HTG VALUE x 3600 / SEC. PER CUBIC FOOT


Example: Natural gas with a heating value of 1000 BTU per cubic foot and 34 seconds per cubic foot as determined by Step 2, then:

Input = $1000 \times 3600 / 34 = 106,000$ BTU per Hour.

NOTE: BTU content of the gas should be obtained from the gas supplier. This measured input must not be greater than shown on the unit rating plate.

Adjust input rate by varying the adjustment of the gas pressure regulator on the gas valve. All adjustments must be made with furnace operating at high fire and at normal operating temperature. A manometer should be connected to the gas valve to verify pressure is within the specified range (see following figures for manometer connections). Clockwise rotation of the pressure regulator screw increases pressure and gas flow rate. Turn screw counterclockwise to decrease pressure and gas flow rate. After adjustment the furnace temperature rise must be within the range specified on the unit data plate.

NOTE: Thermal efficiency of the furnace is a product efficiency rating determined under continuous operating conditions independent of any installed system.

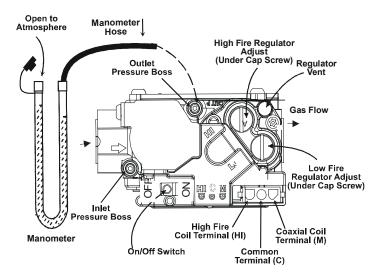

WHITE-RODGERS (2-STAGE) GAS CONTROL VALVE CONNECTED TO MANOMETER PRESSURE ADJUSTMENTS

To connect manometer to gas valve:

- 1. Back outlet pressure tap screw (inside inlet pressure boss) out one turn (counterclockwise, not more than one turn).
- 2. Attach a hose and manometer to the outlet pressure boss of the valve.

To remove manometer from gas valve:

- 1. Remove manometer hose from outlet pressure boss.
- 2. Turn outlet pressure tap screw in to seal pressure port (clockwise, 7 in-lb. minimum).
- 3. Turn on electrical power and gas supply to the system.
- 4. Turn on system power and energize valve.
- Using a leak detection solution or soap suds, check for leaks at pressure boss screw. Bubbles forming indicate a leak. SHUT OFF GAS AND FIX ALL LEAKS IMMEDIATELY.



CAUTION

TO PREVENT UNRELIABLE OPERATION OR EQUIPMENT DAMAGE, THE GAS MANIFOLD PRESSURE MUST BE AS SPECIFIED ON THE UNIT RATING PLATE. ONLY MINOR ADJUSTMENTS SHOULD BE MADE BY ADJUSTING THE GAS VALVE PRESSURE REGULATOR.

6. Relight all other appliances turned off in step 1 of gas input check. Be sure all pilot burners are operating.

MAIN BURNER FLAME CHECK

Flames should be stable, soft and blue (dust may cause orange tips but they must not be yellow) and extending directly outward from the burner without curling, floating or lifting off.

NOX SCREEN CHECK

Verify that the alignment of the NOx screens is at 6 o' clock. In jurisdictions that do not require low NOx emissions, NOx screens may be removed.

TEMPERATURE RISE CHECK

Check the temperature rise through the unit by placing thermometers in supply and return air registers as close to the unit as possible. Thermometers must not be able to sample temperature directly from the unit heat exchangers, or false readings could be obtained.

- All registers must be open; all duct dampers must be in their final (fully or partially open) position and the unit operated for 15 minutes before taking readings
- 2. The temperature rise must be within the range specified on the rating plate.

NOTE: Air temperature rise is the temperature difference between supply and return air.

With a properly designed system, the proper amount of temperature rise will normally be obtained when the unit is operated at rated input with the recommended blower speed.

If the correct amount of temperature rise is not obtained, it may be necessary to change the blower speed. A higher blower speed will lower the temperature rise. A slower blower speed will increase the temperature rise.

NOTE: Blower speed MUST be set to give the correct air temperature rise through the unit as marked on the rating plate.

NORMAL SEQUENCE OF OPERATION

HEATING

This unit has one (RS) Manual Reset Limit Control Switch. Check the limit to make sure it has not tripped. The limit may arrive at the job site tripped as a result of shipping shock.

If the venter motor comes on, but the unit does not attempt ignition, check if the ALS (Auxiliary High Limit Control Switch) requires resetting.

- With electricity and gas turned on, the system switch in the "HEAT" or "AUTO" position and the fan switch in the "AUTO" position, the thermostat will close the circuit between unit terminals R and W (R-W) when the temperature falls below the thermostat setting.
- 2. D1 on IIC energizes venter motor contactor.
- 3. Venter motor contactor energizes the venter motor.

- 4. Operation of the venter motor closes the pressure switch PS located in the burner compartment. Unless excessive temperatures or shipping shock have opened high limit control ALS, power is fed to the integrated ignition control, which then initiates a 15-second pre-purge time delay. During this period, the venter fan will clear the combustion chamber of any residual gas.
- 5. After the pre-purge period, the ignition control energizes the WI-C gas valve and simultaneously initiates a "three (3)-try" spark ignition sequence.
- When the burners are ignited, a minimum one (1)
 micro-amp DC current will flow through the flame
 between the sensor electrode and the grounded
 burner.
- 7. When the controller proves that the flame has been established, it will keep the gas valve energized and discontinue the ignition spark.
- 8. If the control is unable to ignite the burners after its initial attempt, it will initiate another purge and spark sequence. A third purge and spark sequence will be initiated if the second attempt is unsuccessful. If the third attempt is unsuccessful, the controller will close the gas valve and lock itself out. It may be reset by momentarily interrupting power. This may be accomplished by briefly lowering the room thermostat set-point below room temperature, or by shutting off the main power to the unit.
- Integrated ignition control will close its normally open contacts after a delay of approximately 30 seconds.
 This action energizes the blower motor contactor and starts the supply fan motor. Operation of the supply fan circulates air across the heat exchanger and delivers heated air to the conditioned space.
- 10. When the space temperature rises, the thermostat will open R-W. Opening R-W will cause the gas valve to close, and the furnace to shut down.
- 11. The furnace has three high temperature limit controls, which can shut down the burner. They do not shut down the venter motor.

UNIT SHUTDOWN

- 1. Set the room heating setpoint to lowest setting.
- 2. Turn off the electrical power supply to the unit.
- 3. Remove the heat exchanger door on the side of the unit by removing screws.
- 4. Move the gas control valve switch to the OFF position.
- 5. Close manual gas shut off valve external to the unit.
- 6. Replace the heat exchanger door on the unit.
- 7. If cooling and/or air circulation will be desired, turn ON gas control valve switch and the electrical power.

AUTOMATIC RESET HIGH LIMIT CONTROL (LS)

Located in the burner compartment on the heat exchanger, its sensing element projects through the blower section bulkhead and senses the temperature at the rear of the furnace. It will cycle the furnace off if the temperature exceeds 100°F plus maximum rise.

AUXILIARY HIGH LIMIT CONTROL (ALS)

Located in the blower compartment on the blower housing, it senses air temperature within the blower compartment and protects the filters from excessive temperature. It will shut down the furnace if it senses excessive temperatures.

Elevated temperatures at the control are normally caused by blower failure. The reason for the shut down should be determined and repaired prior to resetting.

MANUAL RESET FLAME ROLLOUT CONTROL (RS)

Located in the burner compartment at the top of the burner assembly, it senses high temperature that could occur if the heat exchanger tubes were plugged and the flame was rolling out instead of entering the tubes. It has a manual push-button reset that cannot be actuated until the limit control has cooled.

The reason for elevated temperatures at the control should be determined and repaired prior to resetting this manual reset control.



WARNING

TO AVOID PROPERTY DAMAGE, PERSONAL INJURY OR DEATH DUE TO FIRE OR EXPLOSION, A QUALIFIED SERVICER MUST INVESTIGATE THE REASON FOR THE ROLLOUT PROTECTION DEVICE TO OPEN BEFORE MANUALLY RESETTING THE ROLLOUT PROTECTION DEVICE.

REFRIGERATION SYSTEM CHECKS

This unit is equipped with thermal expansion valves.

Ensure the hold-down bolts on the compressor are secure and have not vibrated loose during shipment. Check that the vibration grommets have been installed and visually check all piping for damage and leaks and repair if necessary. The entire system has been factory charged and tested, making it unnecessary to field charge. Factory refrigerant charge is shown on the unit's nameplate.

To confirm charge levels or, if a leak occurs and charge needs to be added to the system, it is recommended to evacuate the system and recharge refrigerant to the unit's nameplate specifications. This unit has been rated in the cooling mode at the AHRI rated conditions of: indoor (80°F db/67°F wb) and outdoor (95°F db). While operating at this condition, the superheat should range from 9°F to 11°F for each refrigeration circuit measured at the suction service port located near the compressor.

START-UP PROCEDURE AND CHECKLIST

Begin with power turned off at all disconnects.

- 1. Turn thermostat system switch to "Cool," and fan switch to "Auto" and turn temperature setting as high as it will go.
- 2. Inspect all registers and set them to the normal open position.
- 3. Turn on the electrical supply at the disconnect.
- 4. Turn the fan switch to the "ON" position. The blower should operate after a 7 second delay.
- 5. Turn the fan switch to "Auto" position. The blower should stop after a 60 second delay.
- 6. Slowly lower the cooling temperature until the unit starts. The compressor, blower and fan should now be operating. Allow the unit to run 10 minutes, make sure cool air is being supplied by the unit.
- 7. Turn the temperature setting to the highest position, stopping the unit. The indoor blower will continue to run for 60 seconds.

Turn the thermostat system switch to "OFF" and disconnect all power when servicing the unit.

REFRIGERATION SEQUENCE CHECK

- 24VAC control voltage is provided by the control transformer to terminal XS. The control voltage is passed through any installed safety shutdown devices such as the smoke detector before providing 24VAC to terminals ES and R.
- 2. To simulate a mechanical call for cooling lower the room cooling setpoint to a value below the current room temperature. The cooling is energized when the room temperature is above the setpoint for cooling.
- 3. UNIT WITH ECONOMIZER OPTION: The compressor circuit is interlocked through the economizer module. If the outdoor air enthalpy (temperature and humidity) is not suitable for cooling, the economizer will permit the compressor to be energized.
- 4. The blower motor is operated to provide cool supply air to the space.

 Compressor contactor closes its contacts to provide power to the compressor motor. In addition, the condenser fan motor is energized through the compressor contactor.



WARNING

BURN HAZARD! DO NOT TOUCH! DISCHARGE LINE MAY BE HOT!

6. Check that the compressor is operating correctly. The scroll compressors in these units MUST operate in the proper rotation. To ensure the compressor is operating in the correct direction, check the compressor discharge line pressure or temperature after the compressor is started.

The discharge pressure and discharge line temperature should increase. If this does not occur and the compressor is producing an exceptional amount of noise, perform the following checks.

- If the compressor is operating backward, disconnect the unit power supply and lock it in the "OFF" position.
 Switch two leads of the power supply at the unit Single Point Power Block. Reconnect power and check for compressor and condenser fan motor operation.
- 7. With all safety devices closed, the system will continue cooling operation until the room temperature is satisfied.
- Increasing the room cooling setpoint to a value above the current room temperature will simulate a satisfied thermostat. The compressor and the supply fan will cycle off.
- 9. After a time delay of approximately 3 minutes, the compressor control circuits will be ready to respond to a subsequent call for cooling.

REFRIGERATION PERFORMANCE CHECK

Check that compressor RLA corresponds to values shown in Appendix B. RLA draw can be much lower than values listed at low load conditions and low ambient condensing temperatures. Values in Appendix B can slightly exceed at high load conditions and high ambient condensing temperatures.

FINAL SYSTEM CHECKS

- Check to see if all supply and return air grilles are adjusted and the air distribution system is balanced for the best compromise between heating and cooling.
- 2. Check for air leaks in the ductwork. See Sections on Air Flow Adjustments.
- Make sure the unit is free of "rattles", and the tubing in the unit is free from excessive vibration. Also make sure tubes or lines are not rubbing against each other or sheet metal surfaces or edges. If so, correct the trouble.
- Set the thermostat at the appropriate setting for cooling and heating or automatic changeover for normal use.
- 5. Be sure the Owner is instructed on the unit operation, filter, servicing, correct thermostat operation, etc.

SERVICING TABLE OF CONTENTS

SERVICING TABLE OF CONTENTS

S-1 CHECKING VOLTAGE	S-101 LEAK TESTING
S-2 CHECKING WIRING47	(NITROGEN OR NITROGEN-TRACED)58
S-3 CHECKING THERMOSTAT, WIRING, AND	S-102 EVACUATION58
ANTICIPATOR	S-103 CHARGING59
S-3A THERMOSTAT AND WIRING47	S-104 CHECKING COMPRESSOR EFFICIENCY60
S-3B COOLING ANTICIPATOR47	S-104 CHECKING COMPRESSOR EFFICIENCY60
S-3C HEATING ANTICIPATOR48	S-106 OVERFEEDING60
S-4 CHECKING TRANSFORMER AND CONTROL CIRCUIT. 48	S-108 SUPERHEAT60
S-7 CHECKING CONTACTOR AND/OR RELAYS48	S-109 CHECKING SUBCOOLING61
S-8 CHECKING CONTACTOR CONTACTS49	S-110 CHECKING EXPANSION VALVE OPERATION 61
S-9 CHECKING FAN RELAY CONTACTS49	S-111 FIXED ORIFICE RESTRICTION DEVICES64
S-11 CHECKING LOSS OF CHARGE PROTECTOR50	S-112 CHECKING RESTRICTED LIQUID LINE64
S-12 CHECKING HIGH PRESSURE CONTROL51	S-113 OVERCHARGE OF REFRIGERANT64
S-13 CHECKING LOW PRESSURE CONTROL51	S-114 NON-CONDENSABLES64
S-15 CHECKING CAPACITOR51	S-115 COMPRESSOR BURNOUT65
S-15A RESISTANCE CHECK52	S-200 CHECKING EXTERNAL STATIC PRESSURE65
S-15B CAPACITANCE CHECK	S-201 CHECKING TEMPERATURE RISE66
S-16 CHECKING MOTORS53	S-206 INDOOR FAN ROTATION CHECK66
S-16A CHECKING FAN AND BLOWER MOTOR WINDINGS	S-300 TESTING PRIMARY LIMIT CONTROL66
(PSC MOTORS)53	S-301 TESTING AUXILIARY LIMIT67
S-16D CHECKING EEM (ENERGY EFFICIENT MOTOR	S-302 CHECKING FLAME ROLLOUT SWITCH68
MOTORS53	S-303 TESTING INDUCER MOTOR69
S-17 CHECKING COMPRESSOR WINDINGS 54	S-304 TESTING GAS VALVE69
S-17A RESISTANCE TEST54	S-305 CHECKING MAIN BURNERS69
S-17B GROUND TEST55	S-306 CHECKING ORIFICES70
S-18 TESTING CRANKCASE HEATER (OPTIONAL ITEM) 55	S-307 CHECKING GAS PRESSURE70
S-18A CHECKING CRANKCASE HEATER THERMOSTAT 55	S-308 CHECKING FOR DELAYED IGNITION71
S-21 CHECKING REVERSING VALVE AND SOLENOID 56	S-309 CHECKING FOR FLASHBACK71
S-24 TESTING DEFROST CONTROL56	S-310 CHECKING PRESSURE CONTROL71
S-25 TESTING DEFROST THERMOSTAT56	S-311 HIGH ALTITUDE APPLICATION72
S-50 CHECKING HEATER LIMIT CONTROL(S) 57	S-313 TESTING IGNITION CONTROL MODULE73
S-52 CHECKING HEATER ELEMENTS57	S-314 CHECKING FLAME SENSOR75
S_100 REEDICEPATION REDAID DRACTICE 57	

COOLING ANALYSIS CHART

Complaint				No	Coo	ling	ı		l	Jnsa C	tisfa oolii		у	Op	yste erat essu	ing		
POSSIBLE CAUSE DOTS IN ANALYSIS GUIDE INDICATE "POSSIBLE CAUSE"	SYMPTOM	System will not start	Compressor will not start - fan runs	Comp. and Cond. Fan will not start	Evaporator fan will not start	Condenser fan will not start	Compressor runs - goes off on overload	Compressor cycles on overload	System runs continuously - little cooling	Foo cool and then too warm	Not cool enough on warm days	Certain areas too cool, others too warm	Compressor is noisy	ow suction pressure	High suction pressure	High head pressure	Test Method Remedy	See Service Procedure Ref.
Power Failure		•		Ŭ		Ŭ			0)		_			_	_	_	Test Voltage	S-1
Blown Fuse		•		•	•												Inspect Fuse Size & Type	S-1
Unbalanced Power, 3PH			•				•	•									Test Voltage	S-1
Loose Connection		•			•		•										Inspect Connection - Tighten	S-2, S-3
Shorted or Broken Wires	_	•	•	•	•	•	•										Test Circuits With Ohmmeter	S-2, S-3
Open Fan Overload	_				•	•											Test Continuity of Overload	S-17A
Faulty Thermostat		•		•	•					•							Test Continuity of Thermostat & Wiring	S-3
Faulty Transformer		•		•													Check Control Circuit with Voltmeter	S-4
Shorted or Open Capacitor			•		•	•	•	•									Test Capacitor	S-15
Internal Compressor Overload Open			•														Test Continuity of Overload	S-17A
Shorted or Grounded Compressor	-		•				•										Test Motor Windings	S-17B
Compressor Stuck			•				•	•									Use Test Cord	S-17D
Faulty Compressor Contactor			Ť	•			•	_									Test Continuity of Coil & Contacts	S-7, S-8
Faulty Fan Relay	-			_	•	Ť	Ť										Test Continuity of Coil And Contacts	S-7
Open Control Circuit					•												Test Control Circuit with Voltmeter	S-4
Low Voltage			•		_		•	•									Test Voltage	S-1
Faulty Evap. Fan Motor			-		•		•	•									Repair or Replace	S-16
Shorted or Grounded Fan Motor					•	•								•		•	Test Motor Windings	S-16
						Ť		•		•						•	Check Resistance of Anticipator	S-3B
Improper Cooling Anticipator								•	•	•				•			<u> </u>	
Shortage of Refrigerant																	Test For Leaks, Add Refrigerant	S-101,103
Restricted Liquid Line	_							•	•		_	_		•		•	Remove Restriction, Replace Restricted Part	S-112
Dirty Air Filter									•		•	•		•			Inspect Filter-Clean or Replace	
Dirty Indoor Coil									•		•	•		•			Inspect Coil - Clean Check Blower Speed and Rotation, Belt, Pulleys,	S-200,205,
Insufficient air across Indoor Coil									•		•	•		•			Duct Static, Filter	206, 207
Too much air across Indoor Coil															•		Reduce Blower Speed, Check Pulley Adjustment	S-205, 207
Overcharge of Refrigerant							•	•					•		•		Recover Part of Charge	S-113
Dirty Outdoor Coil							•	•	•		•						Inspect Coil - Clean	
Noncondensibles								•	•		•					•	Recover Charge, Evacuate, Recharge	S-114
Recirculation of Condensing Air								•	•		•					•	Remove Obstruction to Air Flow	
Infiltration of Outdoor Air									•		•	•					Check Windows, Doors, Vent Fans, Etc.	
Improperly Located Thermostat							•			•							Relocate Thermostat	
Air Flow Unbalanced										•		•					Readjust Air Volume Dampers	
System Undersized									•		•						Refigure Cooling Load	
Broken Internal Parts													•				Replace Compressor	S-115
Broken Valves									•				•		•		Test Compressor Efficiency	S-104
Inefficient Compressor									•						•		Test Compressor Efficiency	S-104
Expansion Device Restricted							•	•	•		•			•		•	Remove Restriction, Replace Expansion Device	111
Loose Hold-down Bolts													•				Tighten Bolts	
Flowrator Not Seating Properly									•						•		Check Flowrator & Seat or Replace Flowrator	S-111

GAS HEATING ANALYSIS CHART

Completed	T				1						IS CHART		
Complaint		NO	Heat			กเรสเ	tisfac	lor	у пеа	11			
POSSIBLE CAUSE DOTS IN ANALYSIS GUIDE INDICATE "POSSIBLE CAUSE"	System Will Not Start	Burner Won't Ignite	Burner Ignites-Locks Out	Burner Lights - Little or No Air Through Vents	Burner Shuts Off prior to T'Stat being Satasfied	Short Cycles	Long Cycles	Soot and /or Fumes	To Much Heat	Not Enough Heat	Test Method Remedy	See Service Procedure Reference	
Power Failure	•										Test Voltage	S-1	
Blown Fuse	•										Test Voltage	S-1	
Loose Connection	•										Check Wiring	S-2, S-3	
Shorted or Broken Wires	•										Check Wiring	S-2, S-3	
No Low Voltage	•										Check Transformer	S-4	
Faulty Thermostat	•					•	•		•		Check Thermostat	S-3	
Faulty Transformer	•										Check Transformer	S-4	
Poor or High Resistance Ground			•								Measure Ground Resistance	S-313	
Improper Heat Anticipator Setting						•	•		•	•	Adjust Heat Anticipator Setting	S-3	
Improper Thermostat Location						•	•		•	•	Relocate Thermostat		
Faulty Limit or Roll Out Switch		•			•						Test Control	S-300-302	
Faulty Flame Sensor			•								Test Flame Sensor	S-314	
Faulty Ignition Control	•	•	•	•							Test Control	S-313	
Gas Valve or Gas Supply Shut Off		•									Turn Valves to On Position	S-304	
Faulty Induced Draft Blower	•	•						•			Test Blower	S-303	
Dirty Flame Sensor, Low uA			•								Clean Flame Sensor	S-314	
Flame Sensor not in Flame, Low uA			•								Test/Adjust Position of Flame Sensor	S-314	
Faulty Gas Valve		•						•		•	Replace Gas Valve	S-304	
Open Auxillary Limit		•		•	•						Check Blower Speed, Rotation, Belt, Pulleys, Duct Static, Filter	S16A,16D,200, 201,205,206,207	
Improper Air Flow or Distribution				•	•					•	Check Blower Speed, Rotation, Belt, Pulleys, Duct Static, Filter	S16A,16D,200, 201,205,206,207	
Faulty Blower Motor, Belt, or Pulley				•							Check Blower Speed, Rotation, Belt, Pulleys, Duct Static, Filter	S16A,16D,200, 201,205,206,207	
Locking out on Main Limit			•		•					•	Check Limit, Gas Press., Temp. Rise, Blower Rotation, Belt, Pulleys, Duct Static, Filter	S-300, 307, 201	
Delayed Ignition								•			Test for Delayed Ignition	S-308	
Flashback								•			Test for Flashback	S-309	
Orifice Size	<u> </u>							•	•	•	Check Orifices	S-306	
Gas Pressure		•						•	•	•	Check Gas Pressure	S-307	
Cracked Heat Exchanger								•			Check Burner Flames	S-302	
Stuck Gas Valve		•						•	•		Replace Gas Valve	S-304	
Furnace Undersized										•	Replace with Proper Size Furnace		
Faulty Pressure Switch		•	•		•						Test Pressure Switch	S-310	
Blocked or Restricted Flue								•			Check Flue/Drawdown Pressure	S-310	
Open Roll Out Switch		•	•								Test Control	S-302	
Bouncing On Pressure Switch			•								Test Negative Pressure, Flue Blockage	S-310	

S-1 CHECKING VOLTAGE



WARNING

HIGH VOLTAGE

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death

 Remove doors, control panel cover, etc. from unit being tested.

With power ON:



Line Voltage now present.

- 2. Using a voltmeter, measure the voltage across terminals L1 and L2 of the contactor for single phase units, and L3, for 3 phase units.
- No reading indicates open wiring, open fuse(s) no power or etc. from unit to fused disconnect service. Repair as needed.
- 4. With ample voltage at line voltage connectors, energize the unit.
- Measure the voltage with the unit starting and operating, and determine the unit <u>Locked Rotor</u> <u>Voltage</u>.

Locked Rotor Voltage is the actual voltage available at the compressor during starting, locked rotor, or a stalled condition. Measured voltage should be above minimum listed in chart below.

To measure Locked Rotor Voltage attach a voltmeter to the run "R" and common "C" terminals of the compressor, or to the T_1 and T_2 terminals of the contactor. Start the unit and allow the compressor to run for several seconds, then shut down the unit. Immediately attempt to restart the unit while measuring the Locked Rotor Voltage.

6. Voltmeter should read within the voltage tabulation as shown. If the voltage falls below the minimum voltage, check the line wire size. Long runs of undersized wire can cause low voltage. If wire size is adequate, notify the local power company in regards to either low or high voltage.

Unit Supply Voltage								
Voltage	Min.	Max.						
208/230	198	253						
460	437	506						
575	546	604						

Three phase units require a balanced 3 phase power supply to operate. If the percentage of voltage imbalance exceeds 3% the unit must not be operated until the voltage condition is corrected.

% Voltage =

Max. Voltage Deviation

<u>From Average Voltage</u> X 100

Average Voltage

To find the percentage of imbalance, measure the incoming power supply.

L1 - L2 = 240V

L1 - L3 = 232V Avg. V = 710 = 236.7

L2 - L3 = 238V 3

Total 710V

To find Max. deviation: 240 - 236.7 = +3.3

232 - 236.7 = **-4.7**


238 - 236.7 = +1.3

Max deviation was 4.7V

% Voltage Imbalance = 4.7 = **1.99**%

236.7

If the percentage of imbalance had exceeded 3%, it must be determined if the imbalance is in the incoming power supply or the equipment. To do this rotate the legs of the incoming power and retest voltage as shown below.

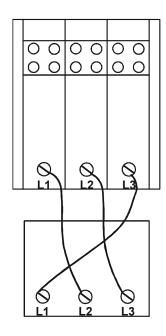

L1 - L2 = 240V L1 - L3 = 227V L2 - L3 = 238V

Rotate all 3 incoming legs as shown.

L1 - L2 = 227V L1 - L3 = 238V L2 - L3 = 240V

By the voltage readings we see that the imbalance rotated or traveled with the switching of the incoming legs. Therefore the imbalance lies within the incoming power supply.

If the imbalance had not changed then the problem would lie within the equipment. Check for current leakage, shorted motors, etc.

S-2 CHECKING WIRING



WARNING

HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.

- 1. Check wiring visually for signs of overheating, damaged insulation and loose connections.
- 2. Use an ohmmeter to check continuity of any suspected open wires.
- 3. If any wires must be replaced, replace with comparable gauge and insulation thickness.

S-3 CHECKING THERMOSTAT, WIRING, AND ANTICIPATOR

THERMOSTAT WIRE SIZING CHART							
LENGTH OF RUN	MIN. COPPER WIRE GAUGE (AWG)						
25 feet	18						
50 feet	16						
75 feet	14						
100 feet	14						
125 feet	12						
150 feet	12						

S-3A THERMOSTAT AND WIRING



With power ON, thermostat calling for cooling

- 1. Use a voltmeter to check for 24 volts at thermostat wires C and Y in the unit control panel.
- No voltage indicates trouble in the thermostat or wiring.
- 3. Check the continuity of the thermostat and wiring. Repair or replace as necessary.

INDOOR BLOWER MOTOR

With power ON:



- Set fan selector switch at thermostat to "ON" position.
- 2. With voltmeter, check for 24 volts at wires C and G.
- 3. No voltage indicates the trouble is in the thermostat or wiring.
- 4. Check the continuity of the thermostat and wiring. Repair or replace as necessary.

S-3B COOLING ANTICIPATOR

The cooling anticipator is a small heater (resistor) in the thermostat. During the "off" cycle, it heats the bimetal element helping the thermostat call for the next cooling cycle. This prevents the room temperature from rising too high before the system is restarted. A properly sized anticipator should maintain room temperature within 1 1/2 to 2 degree range.

The anticipator is supplied in the thermostat and is not to be replaced. If the anticipator should fail for any reason, the thermostat must be changed.


S-3C HEATING ANTICIPATOR

The heating anticipator is a wire-wound adjustable heater, which is energized during the "ON" cycle to help prevent overheating of the conditioned space.

The anticipator is a part of the thermostat and if it should fail for any reason, the thermostat must be replaced. See the following for recommended heater anticipator setting.


To determine the proper setting, use an ammeter to measure the current on the "W" wire going to the thermostat.

Use an amprobe as shown below. Wrap 10 turns of thermostat wire around the stationary jaw of the amprobe and divide the reading by 10.

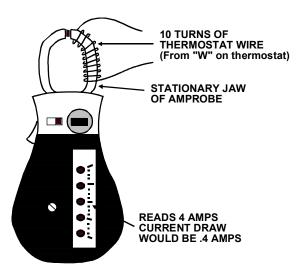

CHECKING HEAT ANTICIPATOR AMP DRAW

S-4 CHECKING TRANSFORMER AND CONTROL CIRCUIT

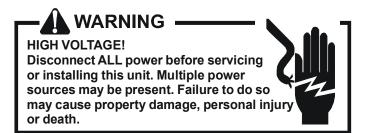

A step-down transformer (either 208-240, 460 or 575 volt primary to 24 volt secondary) is provided with each unit. This allows ample capacity for use with resistance heaters.



1. Remove control panel cover to gain access to transformer.

With power ON:



- 2. Using a voltmeter, check voltage across secondary voltage side of transformer (R to C).
- 3. No voltage indicates faulty transformer, bad wiring, or bad splices.
- 4. Check transformer primary voltage at incoming line voltage connections and/or splices.
- 5. If line voltage available at primary voltage side of transformer and wiring and splices good, transformer is inoperative. Replace.

S-7 CHECKING CONTACTOR AND/OR RELAYS



HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.

The compressor contactor and other relay holding coils are wired into the low or line voltage circuits. When the control circuit is energized, the coil pulls in the normally open contacts or opens the normally closed contacts. When the coil is de-energized, springs return the contacts to their normal position.

NOTE: Most single phase contactors break only one side of the line (L1), leaving 115 volts to ground present at most internal components.

- 1. Remove the leads from the holding coil.
- 2. Using an ohmmeter, test across the coil terminals.

If the coil does not test continuous, replace the relay or contactor.

S-8 CHECKING CONTACTOR CONTACTS

SINGLE PHASE




WARNING

HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.

- Disconnect the wire leads from the terminal (T) side of the contactor.
- 2. With power ON, energize the contactor.



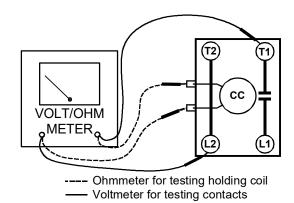

TESTING COMPRESSOR CONTACTOR (SINGLE PHASE)


- 3. Using a voltmeter, test across terminals.
 - A. L1 L2 No voltage. Check breaker or fuses on main power supply.
 - B. L2 T1 No voltage indicates CC1 contacts open.

If a no voltage reading is obtained - replace the contactor.

THREE PHASE

Using a voltmeter, test across terminals.

- A. L1-L2, L1-L3, and L2-L3 If voltage is present, proceed to B. If voltage is not present, check breaker or fuses on main power supply..
- B. T1-T2, T1-T3, and T2-T3 If voltage readings are not the same as in "A", replace contactor.

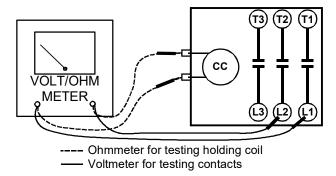

TESTING COMPRESSOR CONTACTOR (THREE PHASE)

S-9 CHECKING FAN RELAY CONTACTS

DSG:

The fan relays are incorporated into the control board. See section S-313 for checking control board for single phase gas models.

For 3 phase and belt drive models, the procedure for testing the fan relay contacts will be the same as checking the compressor contactor contacts (See section S-8).

DRC/DRH:

The <u>E</u>lectronic <u>B</u>lower <u>T</u>ime <u>D</u>elay <u>R</u>elay is used on PSC and belt driven models.



WARNING

HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.

CHECKING EBTDR HIGH VOLTAGE CONTACTS

- With power off, remove wires from terminals NC, COM, and NO.
- Using a VOM, check for resistance from NO to COM. Should read open. Next, check for resistance from NC to COM. Should read closed.
- 3. If not as above, replace EBTDR.

CHECKING EBTDR CONTACT OPERATION

With power on:



1. Set the thermostat to the fan "on" position.

- 2. Check for 24 volts at the C and G terminals of the EBTDR.
- 3. If no voltage present, check fan circuit from thermostat. If 24 volts present, proceed to step 4.
- 4. Using a VOM, check for line voltage from the purple wire at the transformer (terminal 3 on 240 volt units, terminal 2 on 208 volt units) to terminal NO on the EBTDR. Should read line voltage. If no voltage present, check line voltage wiring in unit. If line voltage present, proceed to step 5.
- Using a VOM, check for line voltage from the purple wire at the transformer (terminal 3 on 240 volt units, terminal 2 on 208 volt units) to the COM terminal on the EBTDR. Should read line voltage. If not as above, replace EBTDR.

PSC equipped, single phase model coolers and heat pumps have an isolation relay with a 240 volt holding coil in addition to the EBTDR.



Disconnect ALL power before servicing.

Turn power off.

TESTING RELAY HOLDING COIL

- 1. Remove the leads from the holding coil terminals 1 and 3.
- 2. Using an ohmmeter, test across the coil terminals 1 and 3. If the coil does not test continuous, replace the relay.

TESTING RELAY CONTACTS



Disconnect ALL power before servicing.

Turn power off.

- 1. Using a VOM, test resistance across relay terminals 2 and 4. Should read open.
- 2. Turn power on.



3. Apply 240 volts to coil terminals 1 and 3.

- 4. Using a VOM, check for 240 volts from terminals 3 and 1 of relay. Should read 240 volts. In no voltage, check wiring from heater kit to relay. If voltage present, proceed to step 5.
- Using a VOM, check for 240 volts from L1 at contactor to terminal 4 of relay. Should read 240 volts. Next check from L1 at contactor to terminal 2 of relay. Should read 240 volts.

If not as above, replace relay.

On the 5 ton units with the EEM motor, a standard fan relay is used.



- 1. Apply 24 volts to coil terminals 1 and 3.
- 2. Using a VOM, check for 24 volts from terminals 3 and 2 of relay. Should read 24 volts. If no voltage, check low voltage wiring from transformer to relay. If voltage present, proceed to step 5.
- 3. Using a VOM, check for 24 volts from terminals 3 and 4 of relay. Should read 24 volts.

If not as above, replace relay.

S-11 CHECKING LOSS OF CHARGE PROTECTOR

(HEAT PUMP MODELS)

The loss of charge protector senses the pressure in the liquid line and will open its contacts on a drop in pressure. The low pressure control will automatically reset itself with a rise in pressure.

The low pressure control is designed to cut-out (open) at approximately 22 PSIG. It will automatically cut-in (close) at approximately 50 PSIG.

Test for continuity using a VOM and if not as above, replace the control.

S-12 CHECKING HIGH PRESSURE CONTROL



 
HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.


The high pressure control senses the pressure in the discharge line. If abnormally high discharge pressures develop, the contacts of the control open, breaking the control circuit before the compressor motor overloads. This control is automatically reset.

- 1. Using an ohmmeter, check across terminals of high pressure control, with wire removed. If not continuous, the contacts are open.
- 2. Attach a gauge to the access fitting on the liquid line.

With power ON:



 - Start the system and place a piece of cardboard in front of the condenser coil, raising the condensing pressure.
- 4. Check pressure at which the high pressure control cuts-out.



If it cuts-out at 660 PSIG \pm 10 PSIG, it is operating normally (See causes for high head pressure in Service Problem Analysis Guide). If it cuts out below this pressure range, replace the control. The control should reset at 420 PSIG \pm 25 PSIG.

S-13 CHECKING LOW PRESSURE CONTROL

The low pressure control senses the pressure in the suction line and will open its contacts on a drop in pressure. The low pressure control will automatically reset itself with a rise in pressure.

The low pressure control is designed to cut-out (open) at approximately 22 PSIG \pm 7 PSIG. It will automatically cut-in (close) at approximately 50 PSIG \pm 7 PSIG.

Test for continuity using a VOM and if not as above, replace the control.

S-15 CHECKING CAPACITOR

CAPACITOR, RUN

A run capacitor is wired across the auxiliary and main windings of a single phase permanent split capacitor motor. The capacitors primary function is to reduce the line current while greatly improving the torque characteristics of a motor. This is accomplished by using the 90° phase relationship between the capacitor current and voltage in conjunction with the motor windings so that the motor will give two phase operation when connected to a single phase circuit. The capacitor also reduces the line current to the motor by improving the power factor.

CAPACITOR, START

SCROLL COMPRESSOR MODELS (SINGLE PHASE COMPRESSORS ONLY)

Hard start components are not required on Scroll compressor equipped units due to a non-replaceable check valve located in the discharge line of the compressor. However hard start kits are available and may improve low voltage starting characteristics.

This check valve closes off high side pressure to the compressor after shut down allowing equalization through the scroll flanks. Equalization requires only about one or two seconds during which time the compressor may turn backwards.

Your unit comes with a 180-second anti-short cycle to prevent the compressor from starting and running backwards.

MODELS EQUIPPED WITH A HARD START DEVICE

A start capacitor is wired in parallel with the run capacitor to increase the starting torque. The start capacitor is of the electrolytic type, rather than metallized polypropylene as used in the run capacitor.

A switching device must be wired in series with the capacitor to remove it from the electrical circuit after the compressor starts to run. Not removing the start capacitor will overheat the capacitor and burn out the compressor windings.

These capacitors have a 15,000 ohm, 2 watt resistor wired across its terminals. The object of the resistor is to discharge the capacitor under certain operating conditions, rather than having it discharge across the closing of the contacts within the switching device such as the Start Relay, and to reduce the chance of shock to the servicer. See the Servicing Section for specific information concerning capacitors.

RELAY, START

A potential or voltage type relay is used to take the start capacitor out of the circuit once the motor comes up to speed. This type of relay is position sensitive. The normally closed contacts are wired in series with the start capacitor and the relay holding coil is wired parallel with the start winding. As the motor starts and comes up to speed, the increase in voltage across the start winding will energize the start relay holding coil and open the contacts to the start capacitor.

Two quick ways to test a capacitor are a resistance and a capacitance check.

S-15A RESISTANCE CHECK




HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.

1. Discharge capacitor and remove wire leads.



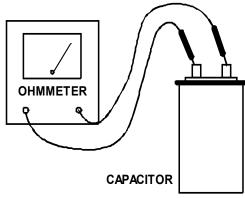


TESTING CAPACITOR RESISTANCE

- 2. Set an ohmmeter on its highest ohm scale and connect the leads to the capacitor -
 - A. Good Condition indicator swings to zero and slowly returns to infinity. (Start capacitor with bleed resistor will not return to infinity. It will still read the resistance of the resistor).
 - B. Shorted indicator swings to zero and stops there -replace.
 - C. Open no reading replace. (Start capacitor would read resistor resistance.)

S-15B CAPACITANCE CHECK

Using a hookup as shown below, take the amperage and voltage readings and use them in the formula:

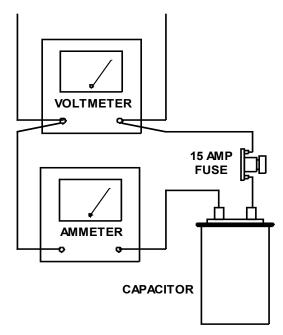

TESTING CAPACITANCE



Discharge capacitor through a 20 to 30 OHM resistor before handling.

Capacitance (MFD) = <u>2650 X Amperage</u> Voltage

S-16 CHECKING MOTORS

S-16A CHECKING FAN AND BLOWER MOTOR WINDINGS (PSC MOTORS)

Applies only to units with PSC Motors

The auto reset fan motor overload is designed to protect the motor against high temperature and high amperage conditions by breaking the common circuit within the motor, similar to the compressor internal overload. However, heat generated within the motor is faster to dissipate than the compressor, allow at least 45 minutes for the overload to reset, then retest.



WARNING

HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.

- 1. Remove the motor leads from its respective connection points and capacitor (if applicable).
- 2. Check the continuity between each of the motor leads.
- 3. Touch one probe of the ohmmeter to the motor frame (ground) and the other probe in turn to each lead.

If the windings do not test continuous or a reading is obtained from lead to ground, replace the motor.


S-16D CHECKING EEM (ENERGY EFFICIENT MOTOR MOTORS

Applies only to units with EEM Motors

The EEM Motor is a one piece, fully encapsulated, 3 phase brushless DC (single phase AC input) motor with ball bearing construction. Unlike the ECM 2.3/2.5 motors, the EEM features an integral control module.

- Using a voltmeter, check for 230 volts to the motor connections L and N. If 230 volts is present, proceed to step 2. If 230 volts is not present, check the line voltage circuit to the motor.
- 2. Using a voltmeter, check for 24 volts from terminal C to either terminal 1, 2, 3, 4, or 5, depending on which tap is being used, at the motor. If voltage present, proceed to step 3. If no voltage, check 24 volt circuit to motor
- 3. If voltage was present in steps 1 and 2, the motor has failed and will need to be replaced.

NOTE: When replacing motor, ensure the belly band is between the vents on the motor and the wiring has the proper drip loop to prevent condensate from entering the motor.

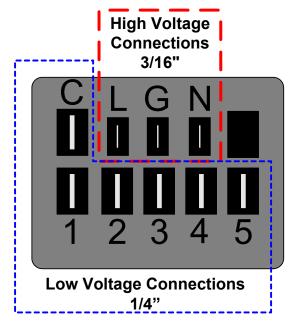

EEM MOTOR CONNECTIONS

S-17 CHECKING COMPRESSOR WINDINGS



WARNING

Hermetic compressor electrical terminal venting can be dangerous. When insulating material which supports a hermetic compressor or electrical terminal suddenly disintegrates due to physical abuse or as a result of an electrical short between the terminal and the compressor housing, the terminal may be expelled, venting the vapor and liquid contents of the compressor housing and system.

If the compressor terminal PROTECTIVE COVER and gasket (if required) are not properly in place and secured, there is a remote possibility if a terminal vents, that the vaporous and liquid discharge can be ignited, spouting flames several feet, causing potentially severe or fatal injury to anyone in its path.

This discharge can be ignited external to the compressor if the terminal cover is not properly in place and if the discharge impinges on a sufficient heat source.

Ignition of the discharge can also occur at the venting terminal or inside the compressor, if there is sufficient contaminant air present in the system and an electrical arc occurs as the terminal vents.

Ignition cannot occur at the venting terminal without the presence of contaminant air, and cannot occur externally from the venting terminal without the presence of an external ignition source.

Therefore, proper evacuation of a hermetic system is essential at the time of manufacture and during servicing.

To reduce the possibility of external ignition, all open flame, electrical power, and other heat sources should be extinguished or turned off prior to servicing a system.

S-17A RESISTANCE TEST

Each compressor is equipped with an internal overload.

The line break internal overload senses both motor amperage and winding temperature. High motor temperature or amperage heats the disc causing it to open, breaking the common circuit within the compressor on single phase units.

Heat generated within the compressor shell, usually due to recycling of the motor, high amperage or insufficient gas to cool the motor, is slow to dissipate. Allow at least three to four hours for it to cool and reset, then retest.



WARNING

HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.


1. Remove the leads from the compressor terminals.



WARNING -

See warnings S-17 before removing compressor terminal cover.

2. Using an ohmmeter, test continuity between terminals S-R, C-R, and C-S, on single phase units or terminals T1, T2 and T3, on 3 phase units.

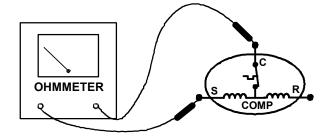

TESTING COMPRESSOR WINDINGS

If either winding does not test continuous, replace the compressor.

NOTE: If an open compressor is indicated, allow ample time for the internal overload to reset before replacing compressor.

S-17B GROUND TEST

If fuse, circuit breaker, ground fault protective device, etc., has tripped, this is a strong indication that an electrical problem exists and must be found and corrected. The circuit protective device rating must be checked, and its maximum rating should coincide with that marked on the equipment nameplate.


With the terminal protective cover in place, it is acceptable to replace the fuse or reset the circuit breaker <u>ONE TIME</u> <u>ONLY</u> to see if it was just a nuisance opening. If it opens again, <u>DO NOT</u> continue to reset.



Disconnect ALL power before servicing.

Disconnect all power to unit, making sure that all power legs are open.

- DO NOT remove protective terminal cover.
 Disconnect the three leads going to the compressor terminals at the nearest point to the compressor.
- Identify the leads and using a Megger, Hi-Potential Ground Tester, or other suitable instrument which puts out a voltage between 300 and 1500 volts, check for a ground separately between each of the three leads and ground (such as an unpainted tube on the compressor). Do not use a low voltage output instrument such as a volt-ohmmeter.

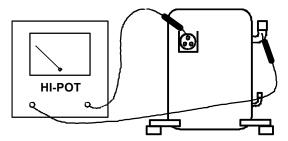

COMPRESSOR GROUND TEST

- 3. If a ground is indicated, then carefully remove the compressor terminal protective cover and inspect for loose leads or insulation breaks in the lead wires.
- 4. If no visual problems indicated, carefully remove the leads at the compressor terminals.

-A WARNING -

Damage can occur to the glass embedded terminals if the leads are not properly removed. This can result in terminal and hot oil discharging.

Carefully retest for ground, directly between compressor terminals and ground.

5. If ground is indicated, replace the compressor.

S-18 TESTING CRANKCASE HEATER (OPTIONAL ITEM)

NOTE: Not all compressors use crankcase heaters.

The crankcase heater must be energized a minimum of twenty-four (24) hours before the compressor is operated.

Crankcase heaters are used to prevent migration or accumulation of refrigerant in the compressor crankcase during the off cycles and prevents liquid slugging or oil pumping on start up. On some models, the crankcase heater is controlled by a crankcase heater thermostat that is wired in series with the crankcase heater.

A crankcase heater will not prevent compressor damage due to a floodback or over charge condition.



- 1. Disconnect the heater lead in wires.
- 2. Using an ohmmeter, check heater continuity should test continuous. If not, replace.

S-18A CHECKING CRANKCASE HEATER THERMOSTAT

NOTE: Not all models with crankcase heaters will have a crankcase heater thermostat.

- Install a thermocouple type temperature test lead on the discharge line adjacent to the crankcase heater thermostat.
- Check the temperature at which the control closes its contacts by lowering the temperature of the control. The crankcase heater thermostat should close at 67°F ± 5°F.

- Check the temperature at which the control opens its contacts by raising the temperature of the control. The crankcase heater thermostat should open at 85°F ± 5°F.
- 4. If not as above, replace control.

S-21 CHECKING REVERSING VALVE AND SOLENOID

Occasionally the reversing valve may stick in the heating or cooling position or in the mid-position.

When stuck in the mid-position, part of the discharge gas from the compressor is directed back to the suction side, resulting in excessively high suction pressure. An increase in the suction line temperature through the reversing valve can also be measured. Check operation of the valve by starting the system and switching the operation from COOLING to HEATING cycle.

If the valve fails to change its position, test the voltage (24V) at the valve coil terminals, while the system is on the COOLING cycle.

If no voltage is registered at the coil terminals, check the operation of the thermostat and the continuity of the connecting wiring from the "O" terminal of the thermostat to the unit.

If voltage is registered at the coil, tap the valve body lightly while switching the system from HEATING to COOLING, etc. If this fails to cause the valve to switch positions, remove the coil connector cap and test the continuity of the reversing valve solenoid coil. If the coil does not test continuous - replace it.

If the coil test continuous and 24 volts is present at the coil terminals, the valve is inoperative - replace it.

S-24 TESTING DEFROST CONTROL

To check the defrost control for proper sequencing, proceed as follows: With power ON; unit not running.

- 1. Jumper defrost thermostat by placing a jumper wire across the terminals "DFT" and "R" at defrost control board.
- Connect jumper across test pins on defrost control board.
- 3. Set thermostat to call for heating. System should go into defrost within 21 seconds.
- 4. Immediately remove jumper from test pins.
- Using VOM check for voltage across terminals "C & O". Meter should read 24 volts.

- Using VOM check for voltage across fan terminals DF1 and DF2 on the board. You should read line voltage (208-230 VAC) indicating the relay is open in the defrost mode.
- 7. Using VOM check for voltage across "W2 & C" terminals on the board. You should read 24 volts.
- 8. If not as above, replace control board.
- 9. Set thermostat to off position and disconnect power before removing any jumpers or wires.

NOTE: Remove jumper across defrost thermostat before returning system to service.

S-25 TESTING DEFROST THERMOSTAT

- 1. Install a thermocouple type temperature test lead on the tube adjacent to the defrost control. Insulate the lead point of contact.
- Check the temperature at which the control closes its contacts by lowering the temperature of the control.
 On 3 thru 5 ton units, it should close at 31°F ± 3°F.
- 3. Check the temperature at which the control opens its contacts by raising the temperature of the control. On 3 thru 5 ton units, it should open at 75°F ± 6°F.
- 4. If not as above, replace control.

TROUBLESHOOTING

THE FOLLOWING INFORMATION IS FOR USE BY QUALIFIED SERVICE AGENCY ONLY: OTHERS SHOULD NOT ATTEMPT TO SERVICE THIS EQUIPMENT.

COMMON CAUSES OF UNSATISFACTORY OPERATION OF HEAT PUMP ON THE HEATING CYCLE.

INADEQUATE AIR VOLUME THROUGH INDOOR COIL

When a heat pump is in the heating cycle, the indoor coil is functioning as a condenser. The return air filter must always be clean, and sufficient air volume must pass through the indoor coil to prevent excessive discharge pressure, and high pressure cut out.

OUTSIDE AIR INTO RETURN DUCT

Do not introduce cold outside air into the return duct of a heat pump installation. For units with 2-speed motors, do not allow air entering the indoor coil to drop below 65° F. Air below this temperature will cause low discharge pressure, thus low suction pressure, and excessive defrost cycling resulting in low heating output. It may also cause false defrosting.

UNDERCHARGE

An undercharged heat pump on the heating cycle will cause low discharge pressure resulting in low suction pressure and frost accumulation on the outdoor coil.

POOR "TERMINATING" SENSOR CONTACT

The unit's defrost terminating sensor must make good thermal contact with the outdoor coil tubing. Poor contact may not terminate the unit's defrost cycle quickly enough to prevent the unit from cutting out on high discharge pressure.

MALFUNCTIONING REVERSING VALVE - THIS MAY BE DUE TO:

- Solenoid not energized In order to determine if the solenoid is energized, touch the nut that holds the solenoid cover in place with a screwdriver. If the nut magnetically holds the screwdriver, the solenoid is energized and the unit is in the cooling cycle.
- 2. **No voltage at unit's solenoid** Check unit voltage. If no voltage, check wiring circuit.
- 3. Valve will not shift:
 - A. Undercharged check for leaks;
 - B. Valve Body Damaged Replace valve;
 - C. Unit Properly Charged If it is on the heating cycle, raise the discharge pressure by restricting airflow through the indoor coil. If the valve does not shift, tap it lightly on both ends with a screwdriver handle. DO NOT TAP THE VALVE BODY. If the unit is on the cooling cycle, raise the discharge pressure by restricting airflow through the outdoor coil. If the valve does not shift after the above attempts, cut the unit off and wait until the discharge and suction pressure equalize, and repeat above steps. If the valve does not shift, replace it.

S-50 CHECKING HEATER LIMIT CONTROL(S)

(OPTIONAL ELECTRIC HEATERS)

Each individual heater element is protected with an automatic rest limit control connected in series with each element to prevent overheating of components in case of low airflow. This limit control will open its circuit at approximately 150°F. to 160°F and close at approximately 110°F.



Disconnect ALL power before servicing.

- 1. Remove the wiring from the control terminals.
- 2. Using an ohmmeter test for continuity across the normally closed contacts. No reading indicates the control is open replace if necessary. Make sure the limits are cool before testing.

IF FOUND OPEN - REPLACE - DO NOT WIRE AROUND.

S-52 CHECKING HEATER ELEMENTS

Optional electric heaters may be added, in the quantities shown in the spec sheet for each model unit, to provide electric resistance heating. Under no condition shall more heaters than the quantity shown be installed.

-A

WARNING

HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.

- 1. Disassemble and remove the heating element(s).
- 2. Visually inspect the heater assembly for any breaks in the wire or broken insulators.
- 3. Using an ohmmeter, test the element for continuity no reading indicates the element is open. Replace as necessary.

S-100 REFRIGERATION REPAIR PRACTICE



DANGER

Always remove the refrigerant charge in a proper manner before applying heat to the system.

When repairing the refrigeration system:



WARNING -

Disconnect ALL power before servicing.

- 1. Never open a system that is under vacuum. Air and moisture will be drawn in.
- 2. Plug or cap all openings.
- 3. Remove all burrs and clean the brazing surfaces of the tubing with sand cloth or paper. Brazing materials do not flow well on oxidized or oily surfaces.
- 4. Clean all tubing by using a dry clean cloth.
- 5. Insure that the nitrogen is being vented to prevent back pressure which could result in leaks.

- 6. When brazing, sweep the tubing with dry nitrogen to prevent the formation of oxides on the inside surfaces.
- 7. Complete any repair by replacing the liquid line drier in the system, evacuate and charge.

BRAZING MATERIALS

Copper to Copper Joints - Sil-Fos used without flux (alloy of 15% silver, 80% copper, and 5% phosphorous). Recommended heat 1400°F.

Copper to Steel Joints - Silver Solder used without a flux (alloy of 30% silver, 38% copper, 32% zinc). Recommended heat - 1200°F.

S-101 LEAK TESTING (NITROGEN OR NITROGEN-TRACED)



WARNING

To avoid the risk of fire or explosion, never use oxygen, high pressure air or flammable gases for leak testing of a refrigeration system.



WARNING-

To avoid possible explosion, the line from the nitrogen cylinder must include a pressure regulator and a pressure relief valve. The pressure relief valve must be set to open at no more than 150 psig.

Pressure test the system using dry nitrogen and soapy water to locate leaks. If you wish to use a leak detector, charge the system to 10 psi using the appropriate refrigerant then use nitrogen to finish charging the system to working pressure, then apply the detector to suspect areas. If leaks are found, repair them. After repair, repeat the pressure test. If no leaks exist, proceed to system evacuation.

S-102 EVACUATION



REFRIGERANT UNDER PRESSURE! Failure to follow proper procedures may cause property damage, personal injury or death.

This is the most important part of the entire service procedure. The life and efficiency of the equipment is dependent upon the thoroughness exercised by the serviceman when evacuating air (non-condensables) and moisture from the system.

Air in a system causes high condensing temperature and pressure, resulting in increased power input and reduced performance.

Moisture chemically reacts with the refrigerant oil to form corrosive acids. These acids attack motor windings and parts, causing breakdown.

The equipment required to thoroughly evacuate the system is a high vacuum pump, capable of producing a vacuum equivalent to 25 microns absolute and a thermocouple vacuum gauge to give a true reading of the vacuum in the system


NOTE: Never use the system compressor as a vacuum pump or run when under a high vacuum. Motor damage could occur.



WARNING

Do not front seat the service valve(s) with the compressor open, with the suction line of the comprssor closed or severely restricted.

- 1. Connect the vacuum pump, vacuum tight manifold set with high vacuum hoses, thermocouple vacuum gauge and charging cylinder.
- 2. Start the vacuum pump and open the shut off valve to the high vacuum gauge manifold only. After the compound gauge (low side) has dropped to approximately 29 inches of vacuum, open the valve to the vacuum thermocouple gauge. See that the vacuum pump will blank-off to a maximum of 25 microns. A high vacuum pump can only produce a good vacuum if its oil is non-contaminated.

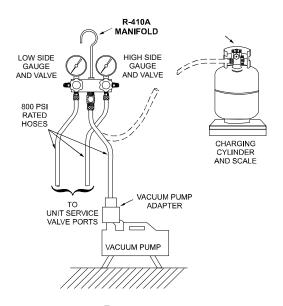

EVACUATION

- If the vacuum pump is working properly, close the valve to the vacuum thermocouple gauge and open the high and low side valves to the high vacuum manifold set. With the valve on the charging cylinder closed, open the manifold valve to the cylinder.
- 4. Evacuate the system to at least 29 inches gauge before opening valve to thermocouple vacuum gauge.
- Continue to evacuate to a maximum of 250 microns. Close valve to vacuum pump and watch rate of rise. If vacuum does not rise above 1500 microns in three to five minutes, system can be considered properly evacuated.
- 6. If thermocouple vacuum gauge continues to rise and levels off at about 5000 microns, moisture and non-condensables are still present. If gauge continues to rise a leak is present. Repair and re-evacuate.
- 7. Close valve to thermocouple vacuum gauge and vacuum pump. Shut off pump and prepare to charge.

S-103 CHARGING



REFRIGERANT UNDER PRESSURE!

- * Do not overcharge system with refrigerant.
- * Do not operate unit in a vacuum or at negative pressure.

Failure to follow proper procedures may cause property damage, personal injury or death.

-**⚠** C

CAUTION

Only use refrigerant certified to AHRI standards. Used refrigerant may cause compressor damage. The manufacturer is not responsible for damage or the need for repairs resulting from the use of unapproved refrigerant typesor used or recycled refrigerant. Most portable machines cannot clean used refrigerant to meet AHRI standards.

Charge the system with the exact amount of refrigerant.

Refer to the specification section or check the unit nameplates for the correct refrigerant charge.

An inaccurately charged system will cause future problems.

- 1. Using a quality set of charging scales, weigh the proper amount of refrigerant for the system. Allow liquid refrigerant only to enter the high side.
- 2. After the system will take all it will take, close the valve on the high side of the charging manifold.
- 3. Start the system and charge the balance of the refrigerant through the low side.

NOTE: R410A should be drawn out of the storage container or drum in liquid form due to its fractionation properties, but should be "Flashed" to its gas state before entering the system. There are commercially available restriction devices that fit into the system charging hose set to accomplish this. DO NOT charge liquid R410A into the compressor.

4. With the system still running, close the valve on the charging cylinder. At this time, you may still have some liquid refrigerant in the charging cylinder hose and will definitely have liquid in the liquid hose. Reseat the liquid line core. Slowly open the high side manifold valve and transfer the liquid refrigerant from the liquid line hose and charging cylinder hose into the suction service valve port. CAREFUL: Watch so that liquid refrigerant does not enter the compressor.

FINAL CHARGE ADJUSTMENT

The outdoor temperature must be 60°F or higher. Set the room thermostat to COOL, fan switch to AUTO, and set the temperature control well below room temperature.

After system has stabilized per startup instructions, compare the operating pressures to the numbers listed in the spec sheet manual. If pressures and amp draw are too low, add charge. If pressures and amp draw are too high, remove charge. Check subcooling and superheat as detailed in the following section.

NOTE: Check that the air flow is correct before adjusting charge.

- 5. With the system still running, remove hose and reinstall both valve caps.
- 6. Check system for leaks.

Due to their design, Scroll compressors are inherently more tolerant of liquid refrigerant.

NOTE: Even though the compressor section of a Scroll compressor is more tolerant of liquid refrigerant, continued floodback or flooded start conditions may wash oil from the bearing surfaces causing premature bearing failure.

S-104 CHECKING COMPRESSOR EFFICIENCY

The reason for compressor inefficiency is broken or damaged suction and/or discharge valves, or scroll flanks on Scroll compressors, reducing the ability of the compressor to pump refrigerant vapor.

The condition of the valves or scroll flanks is checked in the following manner.

- 1. Attach gauges to the high and low side of the system.
- 2. Start the system and run a Cooling Performance Test.

If the test shows-

- Below normal high side pressure.
- Above normal low side pressure.
- Low temperature difference across coil.
- Low amp draw at compressor.
- -and the charge is correct. The compressor is faulty replace the compressor.

S-104 CHECKING COMPRESSOR EFFICIENCY

The reason for compressor inefficiency is broken or damaged scroll flanks on Scroll compressors, reducing the ability of the compressor to pump refrigerant vapor.

During the "OFF" cycle, the high side pressure bleeds to the low side through the fixed orifice restriction device. Check equalization time as follows:

- 1. Attach a gauge manifold to the suction and liquid line dill valves.
- 2. Start the system and allow the pressures to stabilize.
- 3. Stop the system and check the time it takes for the high and low pressure gauge readings to equalize.

If it takes more than seven (7) minutes to equalize, the restrictor device is inoperative. Replace, install a liquid line drier, evacuate and recharge.

S-106 OVERFEEDING

Overfeeding by the expansion valve results in high suction pressure, cold suction line, and possible liquid slugging of the compressor.

If these symptoms are observed:

- 1. Check for an overcharged unit by referring to the cooling performance charts in the spec sheet manual.
- 2. Check the operation of the power element in the valve as explained in S-110 Checking Expansion Valve Operation.
- 3. Check for restricted or plugged equalizer tube.

S-108 SUPERHEAT

NOTE: Check proper air flow before proceeding.

CHECKING SUPERHEAT

Refrigerant gas is considered superheated when its temperature is higher than the saturation temperature corresponding to its pressure. The degree of superheat equals the degrees of temperature increase above the saturation temperature at existing pressure. See Temperature - Pressure Chart .



CAUTION

To prevent personal injury, carefully connect and disconnect manifold gauge hoses. Escaping liquid refrigerant can cause burns. Do not vent refrigerant to atmosphere. Recover during system repair or final unit disposal.

- 1. Run system at least 10 minutes to allow pressure to stabilize.
- 2. Temporarily install thermometer on suction (large) line near compressor with adequate contact and insulate for best possible reading.
- 3. Refer to the superheat table provided for proper system superheat. Add charge to lower superheat or recover charge to raise superheat.

Superheat Formula = Suct. Line Temp. - Sat. Suct. Temp.

Ambient Condenser Inlet Temp	Return Air Temp. (°F Drybulb)							
(°F Drybulb)	65	70	75	80	85			
100				10	10			
95		-	10	10	10			
90		1	12	15	18			
85		10	13	17	20			
80		10	15	21	26			
75	10	13	17	25	29			
70	10	17	20	28	32			
65	13	19	26	32	35			
60	17	25	30	33	37			

SYSTEM SUPERHEAT

EXAMPLE:

- A. Suction Pressure = 143
- B. Corresponding Temp. °F. = 50
- C. Thermometer on Suction Line = 59°F.

To obtain the degrees temperature of superheat, subtract 50.0 from 59.0°F.

The difference is 9° Superheat. The 9° Superheat would fall in the ± range of allowable superheat.

S-109 CHECKING SUBCOOLING

NOTE: Check proper air flow before proceeding.

Refrigerant liquid is considered subcooled when its temperature is lower than the saturation temperature corresponding to its pressure. The degree of subcooling equals the degrees of temperature decrease below the saturation temperature at the existing pressure.

- Attach an accurate thermometer or preferably a thermocouple type temperature tester to the liquid line close to the pressure switch.
- 2. Install a high side pressure gauge on the high side (liquid) service valve at the front of the unit.
- Record the gauge pressure and the temperature of the line.
- 4. Compare the hi-pressure reading to the "Required Liquid Line Temperature" chart on the preceding page. Find the hi-pressure value on the left column. Follow that line right to the column under the design subcooling value. Where the two intersect is the required liquid line temperature.

Alternately you can convert the liquid line pressure gauge reading to temperature by finding the gauge reading in Temperature - Pressure Chart and reading to the left, find the temperature in the °F. Column.

5. The difference between the thermometer reading and pressure to temperature conversion is the amount of subcooling.

Add charge to raise subcooling. Recover charge to lower subcooling.

Subcooling Formula = Sat. Liquid Temp. - Liquid Line Temp.

EXAMPLE:

- A. Liquid Line Pressure = 417
- B. Corresponding Temp. °F. = 120°
- C. Thermometer on Liquid line = 109°F.

To obtain the amount of subcooling, subtract 109°F from 120°F.

The difference is 11° subcooling. See the specification sheet manual for the design subcooling range for your unit.

See R410A Pressure vs. Temperature chart.

S-110 CHECKING EXPANSION VALVE OPERATION

- 1. Remove the remote bulb of the expansion valve from the suction line.
- Start the system and cool the bulb in a container of ice water, closing the valve. As you cool the bulb, the suction pressure should fall and the suction temperature will rise.
- 3. Next warm the bulb in your hand. As you warm the bulb, the suction pressure should rise and the suction temperature will fall.
- 4. If a temperature or pressure change is noticed, the expansion valve is operating. If no change is noticed, the valve is restricted, the power element is faulty, or the equalizer tube is plugged.
- 5. Capture the charge, replace the valve and drier, evacuate and recharge.

	Pressure vs. Temperature Chart										
	R-410A										
PSIG	°F	PSIG	°F	PSIG	°F	PSIG	°F	PSIG	°F	PSIG	°F
12	-37.7	114.0	37.8	216.0	74.3	318.0	100.2	420.0	120.7	522.0	137.6
14	-34.7	116.0	38.7	218.0	74.9	320.0	100.7	422.0	121.0	524.0	137.9
16	-32.0	118.0	39.5	220.0	75.5	322.0	101.1	424.0	121.4	526.0	138.3
18	-29.4	120.0	40.5	222.0	76.1	324.0	101.6	426.0	121.7	528.0	138.6
20	-36.9	122.0	41.3	224.0	76.7	326.0	102.0	428.0	122.1	530.0	138.9
22	-24.5	124.0	42.2	226.0	77.2	328.0		430.0	122.5	532.0	139.2
24	-22.2	126.0	43.0	228.0	77.8	330.0		432.0	122.8	534.0	139.5
26	-20.0	128.0	43.8	230.0	78.4	332.0		434.0	123.2	536.0	139.8
28	-17.9	130.0	44.7	232.0	78.9	334.0		436.0	123.5	538.0	140.1
30	-15.8	132.0	45.5	234.0	79.5	336.0		438.0	123.9	540.0	140.4
32	-13.8	134.0	46.3	236.0	80.0	338.0		440.0	124.2	544.0	141.0
34	-11.9	136.0	47.1	238.0	80.6	340.0		442.0	124.6	548.0	141.6
36	-10.1	138.0	47.9	240.0	81.1	342.0		444.0	124.9	552.0	142.1
38	-8.3	140.0	48.7	242.0	81.6	344.0		446.0	125.3	556.0	142.7
40	-6.5	142.0	49.5	244.0	82.2	346.0		448.0	125.6	560.0	143.3
42 44	-4.5 -3.2	144.0 146.0	50.3 51.1	246.0	82.7	348.0 350.0		450.0 452.0	126.0	564.0	143.9
46	-3.2 -1.6		51.1	248.0	83.3 83.8	350.0			126.3 126.6	568.0	144.5 145.0
48	0.0	148.0 150.0	52.5	250.0 252.0	84.3	354.0		454.0 456.0	120.0	572.0 576.0	145.6
50	1.5	150.0	53.3	254.0	84.8	356.0		458.0	127.3	580.0	146.2
52	3.0	154.0	54.0	256.0	85.4	358.0		460.0	127.7	584.0	146.7
54	4.5	156.0	54.8	258.0	85.9	360.0		462.0	128.0	588.0	147.3
56	5.9	158.0	55.5	260.0	86.4	362.0		464.0	128.3	592.0	147.9
58	7.3	160.0	56.2	262.0	86.9	364.0		466.0	128.7	596.0	148.4
60	8.6	162.0	57.0	264.0	87.4	366.0		468.0	129.0	600.0	149.0
62	10.0	164.0	57.7	266.0	87.9	368.0		470.0	129.3	604.0	149.5
64	11.3	166.0	58.4	268.0	88.4	370.0		472.0	129.7	608.0	150.1
66	12.6	168.0	59.0	270.0	88.9	372.0		474.0	130.0	612.0	150.6
68	13.8	170.0	59.8	272.0	89.4	374.0		476.0	130.3	616.0	151.2
70	15.1	172.0	60.5	274.0	89.9	376.0		478.0	130.7	620.0	151.7
72	16.3	174.0	61.1	276.0	90.4	378.0		480.0	131.0	624.0	152.3
74	17.5	176.0	61.8	278.0	90.9	380.0	113.1	482.0	131.3	628.0	152.8
76	18.7	178.0	62.5	280.0	91.4	382.0	113.5	484.0	131.6	632.0	153.4
78	19.8	180.0	63.1	282.0	91.9	384.0			132.0	636.0	153.9
80	21.0	182.0	63.8	284.0	92.4	386.0			132.3	640.0	154.5
82	22.1	184.0	64.5	286.0	92.8	388.0			132.6	644.0	155.0
84	23.2	186.0	65.1	288.0	93.3	390.0			132.9	648.0	155.5
86	24.3	188.0	65.8	290.0	93.8	392.0			133.3	652.0	156.1
88	25.4	190.0	66.4	292.0	94.3	394.0			133.6	656.0	156.6
90	26.4	192.0	67.0	294.0	94.8	396.0		498.0	133.9	660.0	157.1
92	27.4	194.0	67.7	296.0	95.2	398.0			134.0	664.0	157.7
94	28.5	196.0	68.3	298.0	95.7	400.0		502.0	134.5	668.0	158.2
96	29.5	198.0	68.9	300.0	96.2	402.0		504.0	134.8	672.0	158.7
98 100	30.5 31.2	200.0 202.0	69.5 70.1	302.0	96.6 97.1	404.0		506.0	135.2 135.5	676.0	159.2 159.8
100	32.2	202.0	70.1	304.0 306.0	97.1	408.0		508.0 510.0	135.8	680.0 684.0	160.3
102	33.2	204.0	71.4	308.0	98.0	410.0			136.1	688.0	160.8
104	34.1	208.0	72.0	310.0	98.4	412.0			136.4	692.0	161.3
108	35.1	210.0	72.6	312.0	98.9	414.0			136.7	696.0	161.8
110	35.5	212.0	73.2	314.0	99.3	416.0			137.0	030.0	101.0
112	36.9	214.0	73.8	316.0	99.7	418.0			137.3		
112	50.8	217.0	7 3.0	310.0	33.1	1 + 10.0	120.3	J20.0	101.0		

^{*}Based on ALLIED SIGNAL Data

REQUIRE	REQUIRED LIQUID LINE TEMPERATURE									
LIQUID PRESSURE	R	EQUIRED S	SUBCOOLI	NG TEMPE	RATURE (°	F)				
AT ACCESS FITTING (PSIG)	8	10	12	14	16	18				
189	58	56	54	52	50	48				
195	60	58	56	54	52	50				
202	62	60	58	56	54	52				
208	64	62	60	58	56	54				
215	66	64	62	60	58	56				
222	68	66	64	62	60	58				
229	70	68	66	64	62	60				
236	72	70	68	66	64	62				
243	74	72	70	68	66	64				
251	76	74	72	70	68	66				
259	78	76	74	72	70	68				
266	80	78	76	74	72	70				
274	82	80	78	76	74	72				
283	84	82	80	78	76	74				
291	86	84	82	80	78	76				
299	88	86	84	82	80	78				
308	90	88	86	84	82	80				
317	92	90	88	86	84	82				
326	94	92	90	88	86	84				
335	96	94	92	90	88	86				
345	98	96	94	92	90	88				
354	100	98	96	94	92	90				
364	102	100	98	96	94	92				
374	104	102	100	98	96	94				
384	106	104	102	100	98	96				
395	108	106	104	102	100	98				
406	110	108	106	104	102	100				
416	112	110	108	106	104	102				
427	114	112	110	108	106	104				
439	116	114	112	110	108	106				
450	118	116	114	112	110	108				
462	120	118	116	114	112	110				
474	122	120	118	116	114	112				
486	124	122	120	118	116	114				
499	126	124	122	120	118	116				
511	128	126	124	122	120	118				

S-111 FIXED ORIFICE RESTRICTION DEVICES

The fixed orifice restriction device (flowrator) used in conjunction with the indoor coil is a predetermined bore (I.D.).

It is designed to control the rate of liquid refrigerant flow into an evaporator coil.

The amount of refrigerant that flows through the fixed orifice restriction device is regulated by the pressure difference between the high and low sides of the system.

In the cooling cycle when the outdoor air temperature rises, the high side condensing pressure rises. At the same time, the cooling load on the indoor coil increases, causing the low side pressure to rise, but at a slower rate.

Since the high side pressure rises faster when the temperature increases, more refrigerant flows to the evaporator, increasing the cooling capacity of the system.

When the outdoor temperature falls, the reverse takes place. The condensing pressure falls, and the cooling loads on the indoor coil decreases, causing less refrigerant flow.

If a restriction should become evident, proceed as follows:

- 1. Recover refrigerant charge.
- 2. Remove the orifice assembly and clean or replace.
- 3. Replace liquid line drier, evacuate and recharge.

CHECKING EQUALIZATION TIME

During the "OFF" cycle, the high side pressure bleeds to the low side through the fixed orifice restriction device.

Check equalization time as follows:

- Attach a gauge manifold to the suction and liquid line dill valves
- 2. Start the system and allow the pressures to stabilize.
- 3. Stop the system and check the time it takes for the high and low pressure gauge readings to equalize.

If it takes more than seven (7) minutes to equalize, the restriction device is inoperative. Replace, install a liquid line drier, evacuate and recharge.

S-112 CHECKING RESTRICTED LIQUID LINE

When the system is operating, the liquid line is warm to the touch. If the liquid line is restricted, a definite temperature drop will be noticed at the point of restriction. In severe cases, frost will form at the restriction and extend down the line in the direction of the flow.

Discharge and suction pressures will be low, giving the appearance of an undercharged unit. However, the unit will have normal to high subcooling.

Locate the restriction, replace the restricted part, replace drier, evacuate and recharge.

S-113 OVERCHARGE OF REFRIGERANT

An overcharge of refrigerant is normally indicated by an excessively high head pressure.

An evaporator coil, using an expansion valve metering device, will basically modulate and control a flooded evaporator and prevent liquid refrigerant return to the compressor.

An evaporator coil, using a fixed orifice restrictor device (flowrator) metering device, could allow liquid refrigerant to return to the compressor under extreme overcharge conditions.

Also with a fixed orifice restrictor device (flowrator) metering device, extreme cases of insufficient indoor air can cause icing of the indoor coil and liquid refrigerant return to the compressor, but the head pressure would be lower.

There are other causes for high head pressure which may be found in the "Service Problem Analysis Guide." If other causes check out normal, an overcharge or a system containing non-condensables would be indicated.

If this system is observed:

- 1. Start the system.
- 2. Remove and capture small quantities of refrigerant as from the suction line access fitting until the head pressure is reduced to normal.
- Observe the system while running a cooling performance test. If a shortage of refrigerant is indicated, then the system contains noncondensables.

S-114 Non-Condensables

If non-condensables are suspected, shut down the system and allow the pressures to equalize. Wait at least 15 minutes. Compare the pressure to the temperature of the coldest coil since this is where most of the refrigerant will be. If the pressure indicates a higher temperature than that of the coil temperature, non-condensables are present.

Non-condensables are removed from the system by first removing the refrigerant charge, replacing and/or installing liquid line drier, evacuating and recharging.

S-115 COMPRESSOR BURNOUT

When a compressor burns out, high temperature develops causing the refrigerant, oil and motor insulation to decompose forming acids and sludge.

If a compressor is suspected of being burned-out, attach a refrigerant hose to the liquid line dill valve and properly remove and dispose of the refrigerant.



Violation of EPA regulations may result in fines or other penalties.

Now determine if a burn out has actually occurred. Confirm by analyzing an oil sample using a Sporlan Acid Test Kit, AK-3 or its equivalent.

Remove the compressor and obtain an oil sample from the suction stub. If the oil is not acidic, either a burnout has not occurred or the burnout is so mild that a complete clean-up is not necessary.

If acid level is unacceptable, the system must be cleaned by using the clean-up drier method.



Do not allow the sludge or oil to contact the skin. Severe burns may result.

NOTE: Daikin does NOT approve the flushing method using R-11 refrigerant.

SUCTION LINE DRIER CLEAN-UP METHOD

The POE oils used with R410A refrigerant is an excellent solvent. In the case of a burnout, the POE oils will remove any burnout residue left in the system. If not captured by the refrigerant filter, they will collect in the compressor or other system components, causing a failure of the replacement compressor and/or spread contaminants throughout the system, damaging additional components.

The suction line filter drier should be installed as close to the compressor suction fitting as possible. The filter must be accessible and be rechecked for a pressure drop after the system has operated for a time. It may be necessary to use new tubing and form as required.

NOTE: At least twelve (12) inches of the suction line immediately out of the compressor stub must be discarded due to burned residue and contaminates.

- 1. Remove the liquid line drier and expansion valve.
- 2. Purge all remaining components with dry nitrogen or carbon dioxide until clean.
- 3. Install new components **including** liquid line drier.
- 4. Braze all joints, leak test, evacuate, and recharge system.
- 5. Start up the unit and record the pressure drop across the drier.
- 6. Continue to run the system for a minimum of twelve (12) hours and recheck the pressure drop across the drier. Pressure drop should not exceed 6 PSIG.
- Continue to run the system for several days, repeatedly checking pressure drop across the suction line drier. If the pressure drop never exceeds the 6 PSIG, the drier has trapped the contaminants. Remove the suction line drier from the system.
- 8. If the pressure drop becomes greater, then it must be replaced and steps 5 through 9 repeated until it does not exceed 6 PSIG.


NOTICE: Regardless, the cause for burnout must be determined and corrected before the new compressor is started.

S-200 CHECKING EXTERNAL STATIC PRESSURE

The minimum and maximum allowable duct static pressure is found in the Spec Sheet Manual.

Too great of an external static pressure will result in insufficient air that can cause icing of the coil, whereas too much air can cause poor humidity control, and condensate to be pulled off the evaporator coil causing condensate leakage. Too much air can cause motor overloading and in many cases this constitutes a poorly designed system. To determine proper air movement, proceed as follows:

1. Using a draft gauge (inclined manometer) measure the static pressure of the return duct at the inlet of the unit, (Negative Pressure).

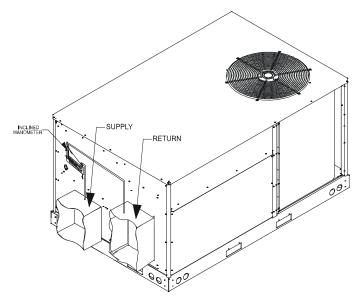

TOTAL EXTERNAL STATIC

- 2. Measure the static pressure of the supply duct, (Positive Pressure).
- 3. Add the two readings together.

NOTE: Both readings may be taken simultaneously and read directly on the manometer if so desired.

4. Consult proper table for quantity of air.

If the external static pressure exceeds the minimum or maximum allowable statics, check for closed dampers, dirty filters, undersized or poorly laid out ductwork.

S-201 CHECKING TEMPERATURE RISE


Temperature rise is related to the BTUH output of the unit and the amount of air (CFM) circulated over the heat exchanger.

All units are designed for a given range of temperature increase. This is the temperature of the air leaving the unit minus the temperature of the air entering the unit.

The more air (CFM) being delivered through a given unit the less the rise will be; so the less air (CFM) being delivered, the greater the rise. The temperature rise should be adjusted in accordance to a given unit specifications and its external static pressure.

- 1. Check BTUH input to unit do not exceed input rating stamped on rating plate.
- 2. Take entering and leaving air temperatures.
- Select the proper speed tap or dip switch setting for direct drive units.

- 4. For gas heat units, the airflow must be adjusted so that the air temperature rise falls within the ranges given stated on Data Plate by adjusting the variable pitch sheave on the motor (see Blower Performance section in appropriate Spec Sheet Manual for correct pulley adjustment).
- 5. Take motor amperage draw to determine that the motor is not overloaded during adjustments.

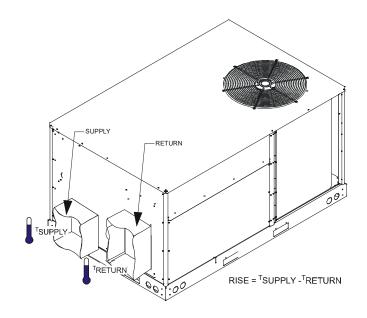

CHECKING TEMPERATURE RISE

S-206 INDOOR FAN ROTATION CHECK


EVAPORATOR FAN ROTATION CHECK (THREE PHASE MODELS ONLY)

Check that fan rotates counter-clockwise when viewed from the drive side of unit and in accordance with rotation arrow shown on blower housing. If it does not, reverse any two incoming power cables at Single Point Power Block. In this case, repeat bearing check.

Do not attempt to change load side wiring. Internal wiring assures all motors and compressors will rotate in correct direction once evaporator fan motor rotation check has been made.

S-300 TESTING PRIMARY LIMIT CONTROL

DRG units use a snap-disk type primary limit device. Sometimes referred to as "stat on a stick". The limit setting is fixed and must not be readjusted in the field.

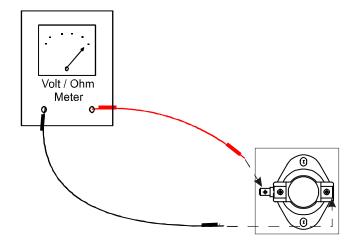

TESTING PRIMARY LIMIT CONTROL

Refer to the specification section to determine the proper limit cutout temperature for the model being serviced.

In all instances the limit control is wired in series with the ignition control.

If the temperature within the furnace should exceed this setting, the control will open, de-energizing the ignition control which in turn will open the electrical circuit to the gas valve.

The control will automatically reset when the temperature within the combustion chamber is sufficiently lowered.



WARNING

HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.


- 1. Remove electrical power to unit. Some units may have more than one source of power.
- 2. Remove the wires from the limit control terminals.
- 3. Using an ohmmeter, test for continuity across the two terminals.
- 4. If limit test open allow unit to cool and retest.
- 5. If still open, replace the control.

S-301 TESTING AUXILIARY LIMIT

The auxiliary limit control is a preset nonadjustable control mounted in the blower compartment area.

It is connected in series with the rollout switch wiring to the gas valve. If its temperature should be exceeded, it will open, interrupting the voltage to the gas valve causing it to open.

An additional limit (primary limit) control is required for safety control of high temperature within the furnace or ductwork.

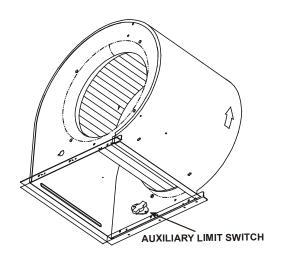




HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.

- 1. Remove the wires from the auxiliary limit control terminals.
- Using an ohmmeter, test for continuity across the two terminals. No reading indicates the control is open.
 Push the red reset button, test again - if still open, replace the control.
- 3. If limit tests open, allow unit to cool and retest.
- 4. If still open, replace the control.

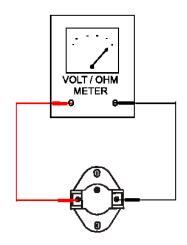


TESTING AUXILIARY LIMIT CONTROL

S-302 CHECKING FLAME ROLLOUT SWITCH

DRG units are equipped with a temperature-activated manual reset control. This control is mounted to the manifold assembly and is wired in series with the auxiliary limit and gas valve. The control is designed to open should a flame roll out occur. An over firing condition or flame impingement on the heat shield can also cause the control to open.

If the rollout control has opened, the circuit between the ignition control and gas valve will be interrupted and the ignition control module will go into lockout. The servicer should reset the ignition control by opening and closing the thermostat circuit. The servicer should look for the ignitor glowing which indicates there is power to the ignition control. The servicer should measure the voltage between each side of the rollout control and ground while the ignition control is try to power the gas valve.

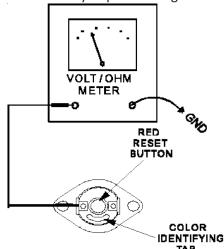

CHECKING FLAME ROLLOUT SWITCH

LIMIT SWITCH OPERATION (APPLIES TO PRIMARY, AUXILIARY, AND ROLL OUT LIMITS) DSI SYSTEMS.

If a limit switch opens, the indoor blower is energized on heat speed and the induced draft blower is energized. The LED on the control flashes "4" to indicate an open limit switch. The blower and inducer remain on while the limit switch is open. The gas valve is de-energized. Power to the thermostat "R" is removed while the limit switch is open.

When the limit switch re-closes, the induced draft motor runs through its post purge and the indoor blower goes through the heat off delay.

If a call for heat exists when the limit switch re-closes, the control goes through a pre-purge period and then makes an ignition attempt. The indoor blower remains on (for the delay off time) during the re-ignition attempt.

- 1. If no voltage is measured on either side of control it indicates ignition control or wiring to control problem.
- 2. If voltage is measured on one side of the control and not the other, it indicates the control is open.
- 3. If voltage is measured on both sides of the control the wiring to gas valve or valve is at fault.

SERVICING PROCEDURE WITH FURNACE NOT FIRING.

- 1. Confirm that the outer door was in place and all screws tightened. (No leaks under the door.)
- 2. Check to see if any damage was done to the furnace especially the wiring.
- Confirm that heat exchanger is not obstructed by feeling for discharge air from the flue hood when the combustion blower is running but the unit is not firing.

If the above steps do not suggest the reason the control has tripped the furnace should be fired.

- 1. Remove the heating compartment door.
- 2. Turn of the power or open the thermostat circuit.
- 3. Reset the rollout control.
- 4. Turn power on and put the unit into a call for heating.



Flame rollout could occur. Keep face and hands a safe distance from burner area.

- 5. Look under the heat shield as the unit is running. Flames should be drawn into firing tubes.
 - A. If only one burners flame is not drawn into the tube, that tube is restricted.
 - B. If, without the air circulation blower running, all flames are not drawn into the tubes either the collector box, combustion blower, or flue outlet is obstructed. If the combustion blower or flue outlet is obstructed, the pressure switch should have opened preventing the unit from firing, also inspect the unit pressure switch and wiring.
 - C. If the burner flame is not drawn into the tube only when the air circulation blower is running, then a cracked heat exchanger tube is present.

S-303 TESTING INDUCER MOTOR



WARNING

HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.

- 1. Disconnect the motor wire leads from its connection point at integrated ignition control module.
- 2. Using and ohmmeter, test for continuity between each of the motor leads.
- 3. Touch one probe of the ohmmeter to the motor frame (ground) and the other probe in turn to each lead.

If the windings do not test continuous or a reading is obtained to ground, replace the motor.

- 4. After completing check and/or replacement of induced draft blower motor.
- 5. Turn on electrical power and verify proper unit operation.

S-304 TESTING GAS VALVE

DIRECT SPARK IGNITION (DSI) SYSTEMS

TWO STAGE MODELS ONLY: A two-stage combination redundant operator type gas valve which provides all manual and automatic control functions required for gas fired heating equipment is used.


The valve provides control of main burner gas flow, pressure regulation, and 100 percent safety shut-off.

- WARNING

HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.

- 1. Ensure gas valve and main gas supply are on.
- 2. Using a voltmeter, check from C and M on gas valve for 24 volts to gas valve.
- 3. If 24 volts are present and no gas flows through the valve, replace valve.

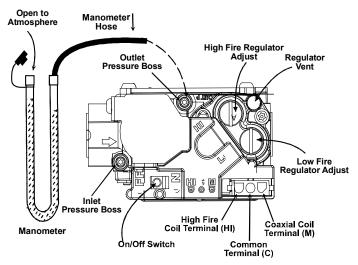


36G54

FOR USE WITH ALL 3-5 TON MODELS PRESSURE ADJUSTMENTS

S-305 CHECKING MAIN BURNERS

The main burners are used to provide complete combustion of various fuels in a limited space, and transfer this heat of the burning process to the heat exchanger.

Proper ignition, combustion, and extinction are primarily due to burner design, orifice sizing, gas pressure, primary and secondary air, vent and proper seating of burners.

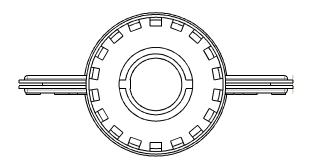

BECKETT BURNER




Disconnect gas and electrical power supply.

In checking main burners, look for signs of rust, oversized and undersized carry-over ports restricted with foreign material, etc.

S-306 CHECKING ORIFICES

A predetermined fixed gas orifice is used in all of these furnaces. That is an orifice which has a fixed bore and position.

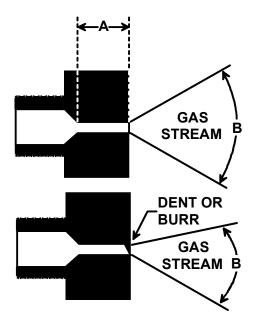

The length of Dimension "A" determines the angle of Gas Stream Defraction, "B".

A dent or burr will cause severe deflection of gas stream.

No resizing should be attempted until all factors are taken into consideration such as inlet manifold gas pressure, alignment, and positioning, specific gravity and BTU content of the gas being consumed.

The only time resizing is required is when a reduction in firing rate is required for an increase in altitude.

Orifices should be treated with care in order to prevent damage. They should be removed and installed with a boxend wrench in order to prevent distortion. In no instance should an orifice be peened over and redrilled. This will change the angle or deflection of the vacuum effect or entraining of primary air, which will make it difficult to adjust the flame properly. This same problem can occur if an orifice spud of a different length is substituted.

- WARNING

Disconnect gas and electrical power supply.

- 1. Check orifice visually for distortion and/or burrs.
- 2. Check orifice size with orifice sizing drills.
- If resizing is required, a new orifice of the same physical size and angle with proper drill size opening should be installed.


S-307 CHECKING GAS PRESSURE

Gas inlet and manifold pressures should be checked and adjusted in accordance to the type of fuel being consumed.




Disconnect gas and electrical power supply.

- 1. Connect a water manometer or adequate gauge to the inlet pressure fitting of the gas valve.
- 2. Remove the pressure tap fitting at the manifold if provided or check at the gas valve outlet fitting and connect another manometer or gauge.

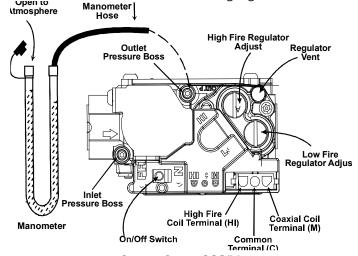

SINGLE STAGE 36G54

MEASURING INLET AND MANIFOLD GAS PRESSURE

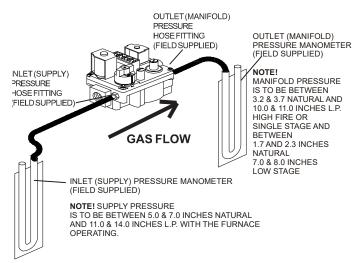

TWO-STAGE H VALVE
MEASURING INLET AND MANIFOLD GAS PRESSURE

With Power ON:



3. Put unit into heating cycle and turn on all other gas consuming appliances.

SINGLE STAGE MODELS FOR NATURAL GAS:

- A. Inlet pressure should be a nominal 7" w.c.
- B. Manifold pressure for 2 stage heat models on low stage should be 2.0" w.c. ± .3"w.c.
- C. Manifold pressure for single stage heat models and 2 stage heat models on high stage should be 3.5" ± .3"w.c.

FOR PROPANE GAS:

- A. Inlet pressure should be a nominal 11" w.c.
- B. Manifold pressure for 2 stage heating models on low stage should be 6" w.c.
- C. Manifold pressure for single stage heat models and 2 stage heat models on high stage should be 10" w.c.

MANIFOLD GAS PRESSURE 2 Stage Heat Models

	Gas	Range	Nominal		
Nistrasi	Low Stage	1.6 - 2.2" w.c.	2.0" w.c.		
Natural	High Stage	3.2 - 3.8" w.c.	3.5" w.c.		
Dronono	Low Stage	5.7 - 6.3" w.c.	6.0" w.c.		
Propane	High Stage	9.7 - 10.3" w.c.	10.0" w.c.		

If operating pressures differ from chart, make necessary pressure regulator adjustments, check piping size, etc., and/or consult with local utility.

S-308 CHECKING FOR DELAYED IGNITION

Delayed ignition is a delay in lighting a combustible mixture of gas and air which has accumulated in the combustion chamber.

When the mixture does ignite, it may explode and/or rollout causing burning in the burner venturi.

If delayed ignition should occur, the following should be checked:

- Improper gas pressure adjust to proper pressure. (See S-307)
- Improper burner positioning burners should be in locating slots, level front to rear and left to right.
- Carry over (lighter tube or cross lighter) obstructed clean.
- 4. Main burner orifice(s) deformed, or out of alignment to burner replace.

S-309 CHECKING FOR FLASHBACK

Flashback will also cause burning in the burner venturi, but is caused by the burning speed being greater than the gasair flow velocity coming from a burner port.

Flashback may occur at the moment of ignition, after a burner heats up or when the burner turns off. The latter is known as extinction pop.

Since the end results of flashback and delayed ignition can be the same (burning in the burner venturi) a definite attempt should be made to determine which has occurred. If flashback should occur, check for the following:

- Improper gas pressure adjust to proper pressure.
 See S-307.
- 2. Check burner for proper alignment and/or replace burner.
- 3. Improper orifice size check orifice for obstruction.

S-310 CHECKING PRESSURE CONTROL

A pressure control device is used to measure negative pressure at the induced draft blower motor inlet to detect a partial or blocked flue.

PRESSURE SWITCH OPERATION (DSI DIRECT SPARK SYSTEM)

The pressure switch is ignored unless there is a call for heat. When the control receives a call for heat, the control checks to see that the pressure switch is open. If the control sees that the pressure switch is closed before the induced draft blower is energized, the LED will flash a code of "2" (to indicate the pressure switch is stuck closed) and the inducer will remain off until the pressure switch opens.

If the pressure switch opens before the ignition period, the induced draft blower will remain on and the control will stay in pre-purge until the pressure switch is closed for an entire 15 second pre-purge period. The LED will flash a code of "3" to indicate open pressure switch.

If the pressure switch opens after the gas valve has been energized, the control will de-energize the gas valve and run the indoor blower through the heat off delay. The inducer stays on until the pressure switch re-closes. Then the control makes another ignition attempt.



WARNING


HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.

- 1. Remove wires from the electrical terminals.
- 2. Using a VOM check from Common to NO (Normally Open) should read open.

If switch reads as noted proceed to Step 3, otherwise replace control.

3. Remove the pressure control hose from the control and interconnect with an inclined manometer as shown:

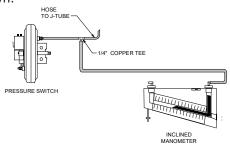

Reconnect wires to the Common and NO terminals.

With Power ON:



- Energize furnace for heating cycle. The induced draft blower motor will begin to run. The inclined manometer should read approximately -1.2" ± 0.3" W.C with no combustion.
- Remove and check the two electrical wires and using the VOM check from Common to NO (Normally Open), it should read closed (with I.D. motor running).
 If not as above, replace pressure control.
- 6. Reconnect all wires to the control and place in heating cycle.
- 7. As the unit fires on high stage, the inclined manometer negative pressure will drop to -0.9" ± 0.3" W.C.
- 8. If not as listed, replace control.

NOTE: the pressure switch must be mounted with the diaphragm in a vertical position.

S-311 HIGH ALTITUDE APPLICATION

IMPORTANT NOTE: The gas/electric units naturally derate with altitude. Do not attempt to increase the firing rate by changing orifices or increasing the manifold pressure. This can cause poor combustion and equipment failure. At all altitudes, the manifold pressure must be within 0.3 inches W.C. of that listed on the nameplate for the fuel used. At all altitudes and with either fuel, the air temperature rise must be within the range listed on the unit nameplate. Refer to the Installation Manual provided with the LP kit for conversion from natural gas to propane gas and for altitude adjustments.

When this package unit is installed at high altitude, the appropriate High Altitude orifice kit may be installed. As altitude increases, there is a natural reduction in the density of both the gas fuel and combustion air. This kit will provide the proper design certified input rate within the specified altitude range. High altitude kits are not approved for use in Canada. For installations above 2,000 feet, use kit HAKT036150. The HAKT036150 kit is used for both Natural and LP gas at high altitudes.

For propane conversions at altitudes below 2,000 feet, use LPHE-036072 propane conversion kit.

For propane conversion above 2,000 feet, high altitude kit HAKT036150 is required in addition to propane conversion kit LPHE-036072.

	LUCUL AL TITUDE	20,000 BTUH NAT/20,000 BTUH/L.P.										
INPUT/BURNER	HIGH ALTITUDE KIT		FLEVATION ABOVE SEA-LEVEL (FEET)									
	141	2000	3000	4000	4500	5000	6000	7000	8000			
U.S. BURNER ORIFICE	HAKT036150	45/55	47/55	47/56	-	47/56	48/57	48/58	49/58			
CANADA BURNER ORIFICE		45/55	-	-	48/57	-	-	-	-			

	LUCULAL TITUDE	22,500 BTUH NAT/20,000 BTUH/L.P.									
INPUT/BURNER	HIGH ALTITUDE KIT	FLEVATION ABOVE SEA-LEVEL (FEET)									
		2000	3000	4000	4500	5000	6000	7000	8000		
U.S. BURNER ORIFICE	HAKT036150	44/55	44/55	45/56	-	45/56	46/57	47/58	47/58		
CANADA BURNER ORIFICE		44/55	-	ì	47/57	,	-	,	-		

	LUCUL AL TITUDE	25,000 BTUH NAT/20,000 BTUH/L.P.									
INPUT/BURNER	HIGH ALTITUDE KIT	FLEVATION ABOVE SEA-LEVEL (FEET)									
	141	2000	3000	4000	4500	5000	6000	7000	8000		
U.S. BURNER ORIFICE	HAKT036150	43/55	43/55	44/56	-	44/56	44/56	45/57	45/57		
CANADA BURNER ORIFICE		43/55	-	-	46/57	-	-	-	-		

S-313 TESTING IGNITION CONTROL MODULE

NOTE: Failure to earth ground the unit, reversing the neutral and hot wire connection to the line (polarity), or a high resistance connection in the ground or neutral lines may cause the control to lockout due to failure to detect flame.




HIGH VOLTAGE

Wiring to this unit must be properly polarized and grounded. Disconnect ALL power before installing or servicing this unit. Multiple power sources may be present.

The ground wire must run from the unit all the way back to the electrical panel. Proper grounding can be confirmed by disconnecting the electrical power and measuring resistance between the neutral (white) connection and the burner closest to the flame sensor. Resistance should be less than 10 ohms.

DSI DIRECT SPARK IGNITION SYSTEMS NORMAL SEQUENCE OF OPERATION (DSI DIRECT SPARK IGNITION SYSTEM)

- Thermostat calls for heat by energizing "W". The
 control checks the pressure switch for open condition.
 If the pressure switch is closed the control will flash
 code "3" and wait for the pressure switch to open.
- The induced draft motor is energized and the control flashes code "2" and waits for the pressure switch to close. Once the pressure switch is closed, the LED stops flashing and the control begins timing the 15 second pre-purge.

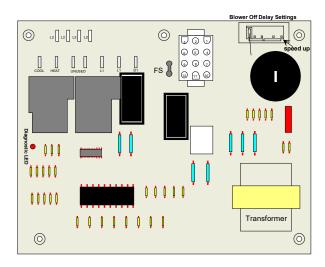

DSI CONTROL BOARD

- 3. The control energizes the spark igniter and gas valve for 7 seconds. If flame is established, the control goes into a 30 second heat on delay.
- 4. The indoor blower is energized at the heat speed after a 30 second on delay.
- 5. The control monitors the safety circuit inputs, flame, and thermostat during operation.
- 6. When the thermostat is satisfied, the gas valve is de-energized and the induced draft blower remains on for a 29 second post purge. The indoor blower remains on for the selected heat blower off delay (90, 120, or 150 seconds). Indoor blower off timing begins when thermostat call for heat ends.

TESTING DIRECT SPARK IGNITION (DSI) SYSTEMS

Thermostat calling for heat (15 second prepurge time and 7 second trial for ignition).

- Check for 230 VAC from L1 terminal of control module to L2. No voltage - check wire connections, continuity, etc.
- 2. Check for 24 VAC at "R" to "C" thermostat terminals.
 - A. No voltage check 3 amp automotive type fuse on control board. A blown fuse would indicate a short in the 24 VAC circuit (thermostat or limit circuit).
 - B. Voltage Present check limit, auxiliary limit and rollout (S-300, S-301 and S-302). If limit, auxiliary limit and rollout are closed, then check for 24 VAC at the gas valve terminals.

No 24 VAC at gas valve - replace Control board.

TROUBLESHOOTING

IGNITION CONTROL ERROR CODES

The following presents probable causes of questionable unit operation. Refer to *Diagnostic Indicator Chart* for an interpretation of the signal and to this section for an explanation.

Remove the control box access panel and note the number of diagnostic LED flashes. Refer to *Diagnostic Indicator Chart* for an interpretation of the signal and to this section for an explanation.

INTERNAL CONTROL FAILURE

If the integrated ignition control in this unit encounters an internal fault, it will go into a "hard" lockout and turn off the diagnostic LED. If diagnostic LED indicates an internal fault, check power supply to unit for proper voltage, check all fuses, circuit breakers and wiring. Disconnect electric power for five seconds. If LED remains off after restoring power, replace control.

ABNORMAL OPERATION - HEATING CODES EXTERNAL LOCKOUT (1 FLASH CODE)

An external lockout occurs if the integrated ignition control determines that a measurable combustion cannot be established within three (3) consecutive ignition attempts. If flame is not established within the seven (7) second trial for ignition, the gas valve is deenergized, 15 second interpurge cycle is completed, and ignition is reattempted. The control will repeat this routine three times if a measurable combustion is not established. The control will then shut off the induced draft blower and go into a lockout state.

If flame is established but lost, the control will energize the circulator blower at the heat speed and then begin a new ignition sequence. If flame is established then lost on subsequent attempts, the control will recycle for four (4) consecutive ignition attempts (five attempts total) before locking out.

The diagnostic fault code is 1 flash for a lockout due to failed ignition attempts or flame dropouts. The integrated control will automatically reset after one hour, or it can be reset by removing the thermostat signal or disconnecting the electrical power supply for over five seconds. If the diagnostic LED indicates an external lockout, perform the following checks:

- Check the supply and manifold pressures
- Check the gas orifices for debris
- Check gas valve for proper operation

• Check secondary limit

A dirty filter, excessive duct static, insufficient air flow, a faulty limit, or a failed circulator blower can cause this limit to open. Check filters, total external duct static, circulator blower motor, blower motor speed tap (see wiring diagram), and limit. An interruption in electrical power during a heating cycle may also cause the auxiliary limit to open. The automatic reset secondary limit is located on top of the circulator blower assembly.

· Check rollout limit

If the burner flames are not properly drawn into the heat exchanger, the flame rollout protection device will open. Possible causes are restricted or blocked flue passages, blocked or cracked heat exchanger, a failed induced draft blower, or insufficient combustion air. The rollout protection device is a manual reset limit located on the burner bracket. The cause of the flame rollout must be determined and corrected before resetting the limit.

• Check flame sensor

A drop in flame signal can be caused by nearly invisible coating on the sensor. Remove the sensor and carefully clean with steel wool.

Check wiring

Check wiring for opens/shorts and miswiring.

IMPORTANT: If you have to frequently reset your gas/ electric package unit, it means that a problem exists that should be corrected. Contact a qualified servicer for further information.

PRESSURE SWITCH STUCK OPEN (2 FLASH CODE)

A pressure switch stuck open can be caused by a faulty pressure switch, loose or broken wires can be interpreted as a open switch, check all wiring, a disconnected or damaged hose, a blocked or restricted flue, or a faulty induced draft blower. If the control senses an open pressure switch during the pre-purge cycle, the induced draft blower only will be energized.

If the pressure switch opens after ignition has begun the gas valve is deenergized, the circulator blower heat off cycle begins, and the induced draft blower remains on. The diagnostic fault code is two flashes.

PRESSURE SWITCH STUCK CLOSED (3 FLASH CODE)

A stuck closed pressure switch can be caused by a faulty pressure switch or shorted wires can be interpreted as a closed switch, check all wiring. If the control encounters a pressure switch stuck closed, the induced draft blower remains off. The diagnostic LED code for this fault is three (3) flashes.

OPEN THERMAL PROTECTION DEVICE (4 FLASH CODE)

If the primary limit switch opens, the gas valve is immediately deenergized, the induced draft and air circulating blowers are energized. The induced draft and air circulator blowers remain energized until the limit switch recloses. The diagnostic fault code for an open limit is four (4) flashes.

A primary limit will open due to excessive supply air temperatures. This can be caused by a dirty filter, excessive duct static, insufficient air flow, or a faulty limit. Check filters, total external duct static, blower motor, blower motor speed tap (see wiring diagram), and limit. Check for loose or missing wires on the limits. This limit will automatically reset once the temperature falls below a preset level.

FLAME DETECTED WITH GAS VALVE CLOSED (5 FLASH CODE)

If flame is detected with the gas valve deenergized, the combustion and air circulator blowers are energized. The diagnostic fault code is five (5) flashes for this condition. The control can be reset by removing the power supply to the unit or it will automatically reset after one hour. Miswiring is the probable cause for this fault.

ABNORMAL OPERATION - COOLING CODES

SHORT CYCLE COMPRESSOR DELAY (6 FLASH CODE)

The automatic ignition control has a built-in feature that prevents damage to the compressor in short cycling situations. In the event of intermittent power losses or intermittent thermostat operation, the ignition control will delay output to the compressor contactor for three minutes from the time power is restored. (Compressor is off a total of three minutes). The diagnostic LED will flash six (6) times to indicate the compressor contactor output is being delayed.

NOTE: Some electronic thermostats also have a built-in compressor short cycle timer that may be longer than the three minute delay given above. If you are using an electronic thermostat and the compressor has not started after three minutes, wait an additional five minutes to allow the thermostat to complete its short cycle delay time.

S-314 CHECKING FLAME SENSOR

A flame sensing device is used in conjunction with the ignition control module to prove combustion. If a microamp signal is not present the control will de-energize the gas valve and "retry" for ignition or lockout.


DSI DIRECT SPARK IGNITION SYSTEMS



HIGH VOLTAGE!

Disconnect ALL power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury or death.

1. Disconnect the flame sensor wire from terminal FS of the ignition control module.

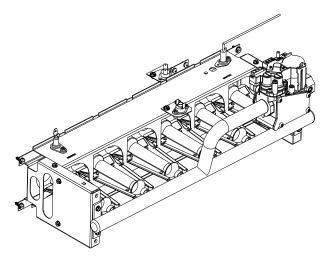

FLAME SENSOR

- 2. Connect a microamp meter in series with this wire and terminal FS.
- 3. Be sure the negative side of the meter is to the wire and the positive of the meter is to terminal FS.
- 4. Turn on Power.





- 5. With Power ON, Place the unit into a heating cycle.
- As soon as flame is established a microamp reading should be evident once proof of flame (microamp reading) is established, the direct spark ignitor will be de-energized.
- 7. The microamp reading should be 4 6 microamps.
- 8. If the microamp current is less than 0.5 microamp the control will lockout and flash a code of 1 flash after attempting to reestablish flame sense.

- 9. If the microamp reading is less than the minimum specified, check for high resistance wiring connections, the distance (3/16") between the sensor and burner, flame sensor connections, dirty flame sensor or poor grounding.
- 10. If no reading, check for continuity on all components and if good replace ignition control module.

NOTE: Contaminated fuel or combustion air can create a nearly invisible coating on the flame sensor. This coating works as an insulator causing a loss in the flame sense signal. If this situation occurs the flame sensor must be cleaned with steel wool. Do not use sand paper, the silicone in sand paper will further contaminate the sensor.


WARNING

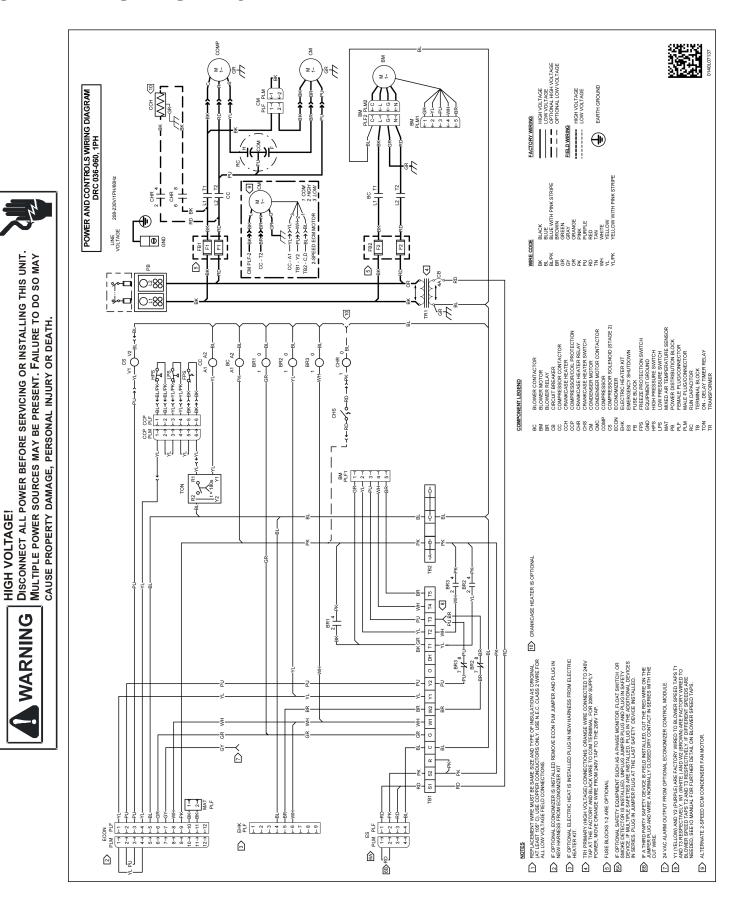


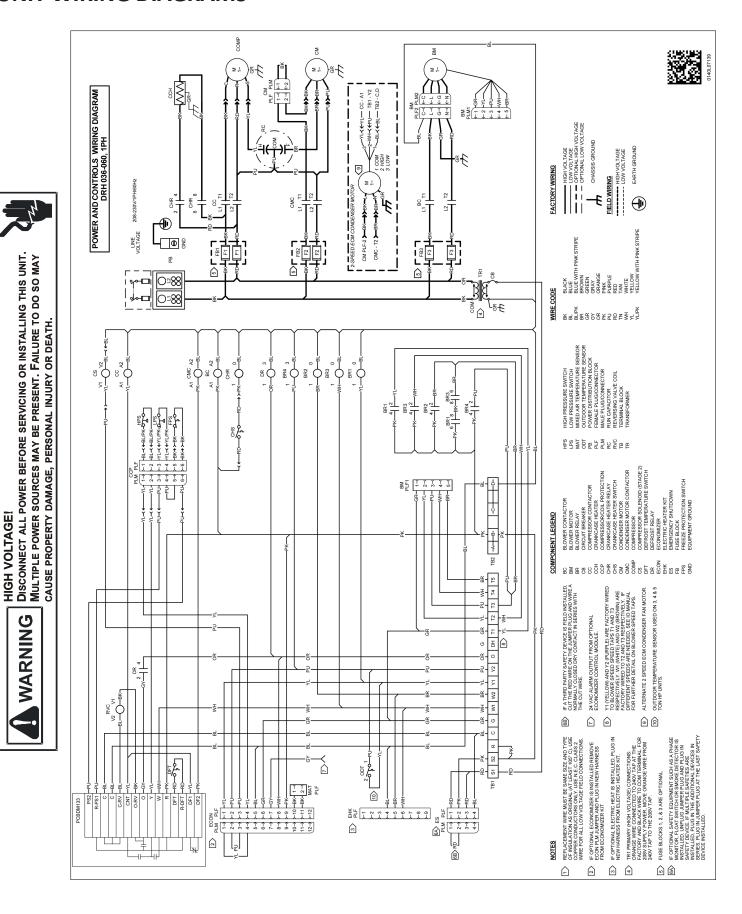


Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.


WARNING

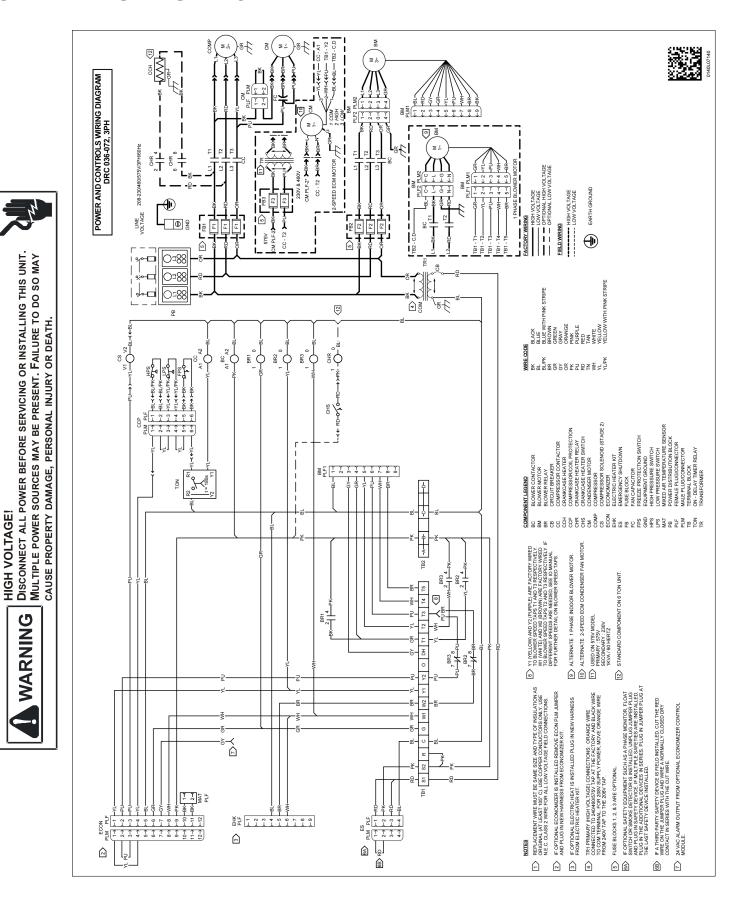

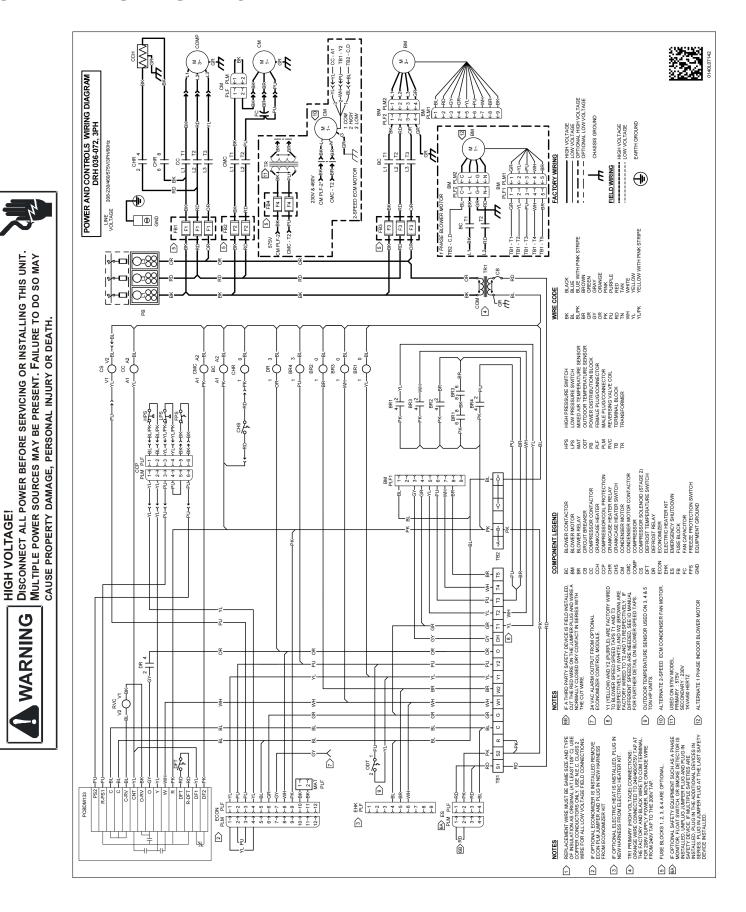


Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

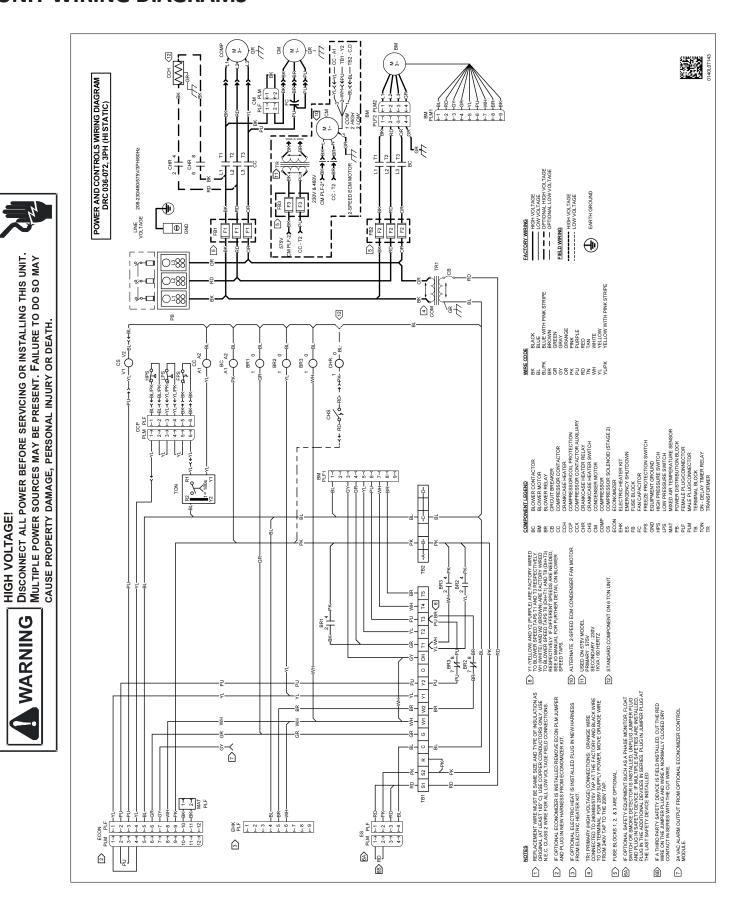

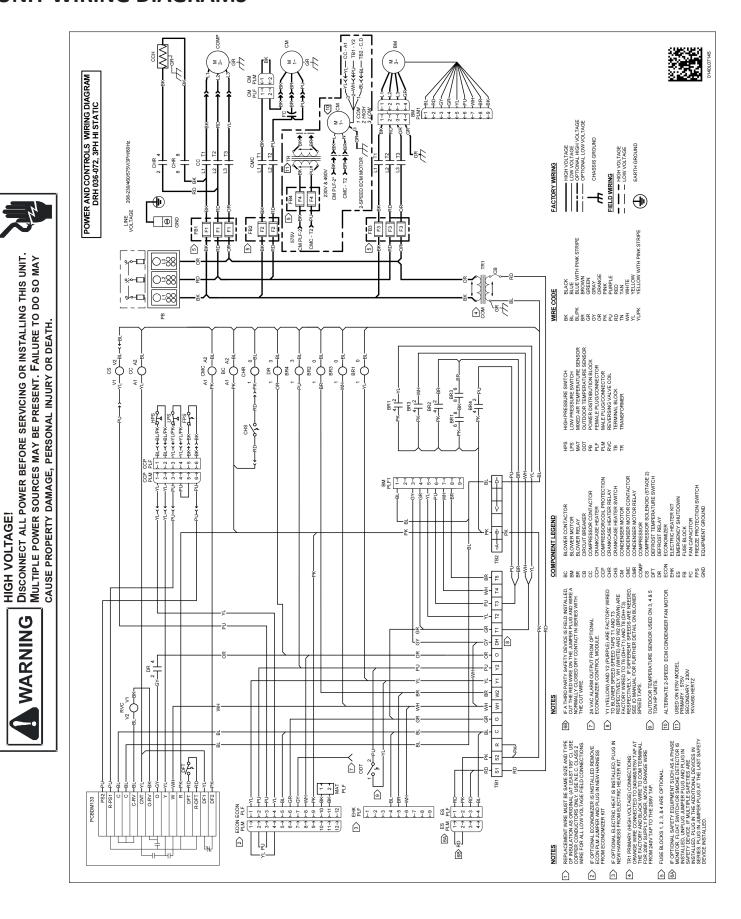


Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

WARNING

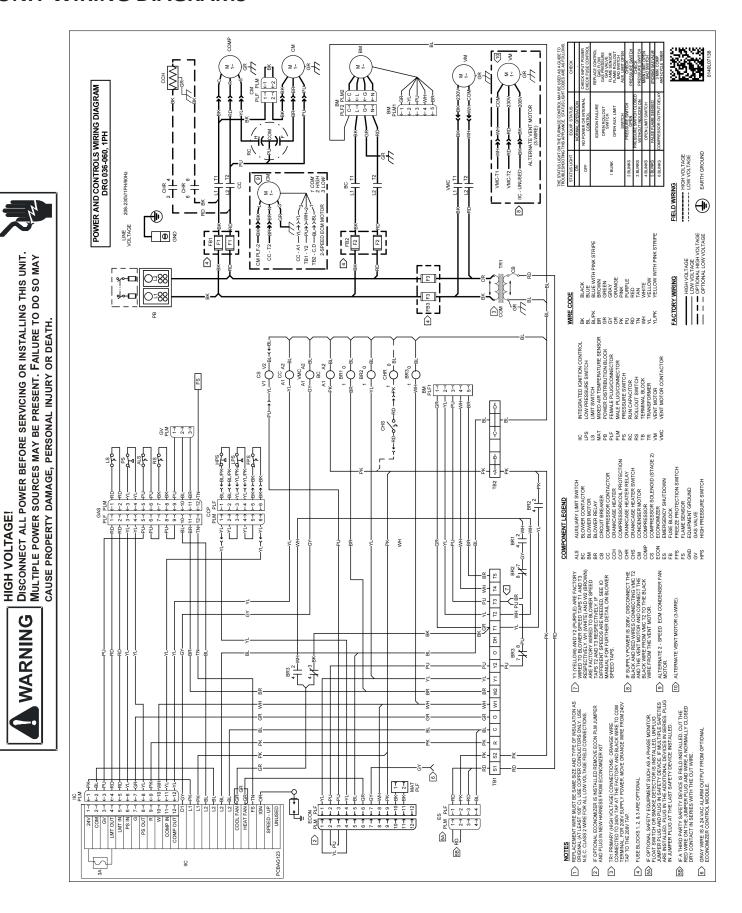



Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

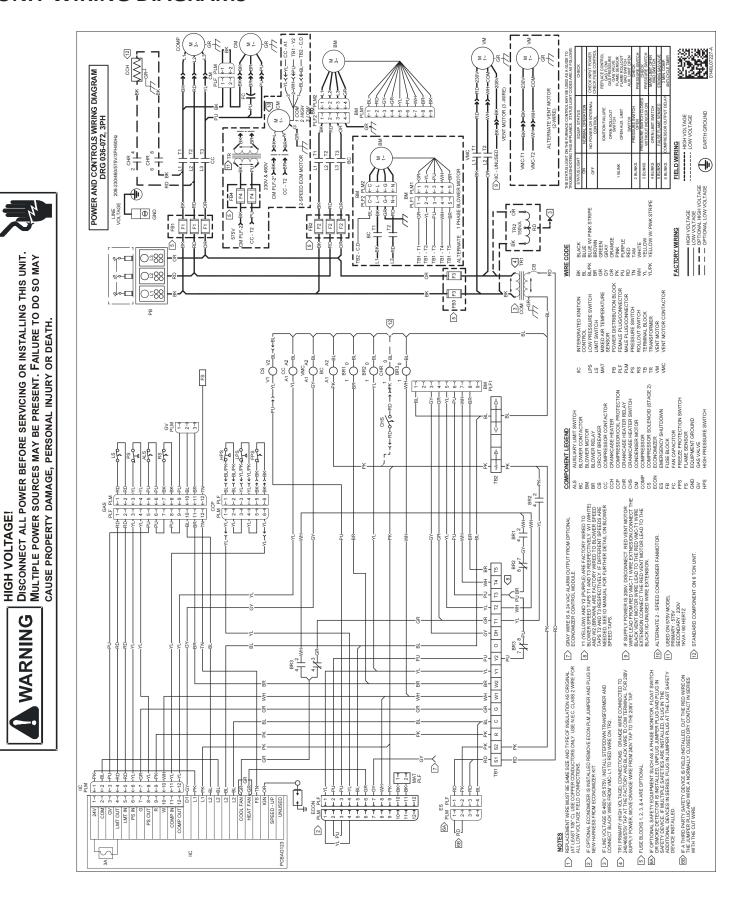



WARNING


WARNING

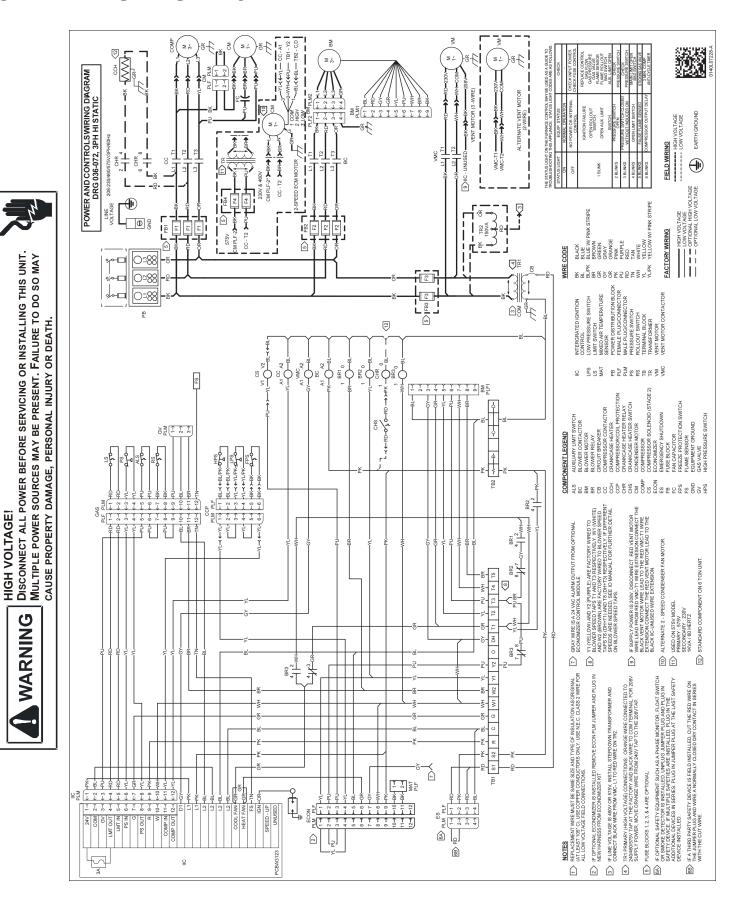

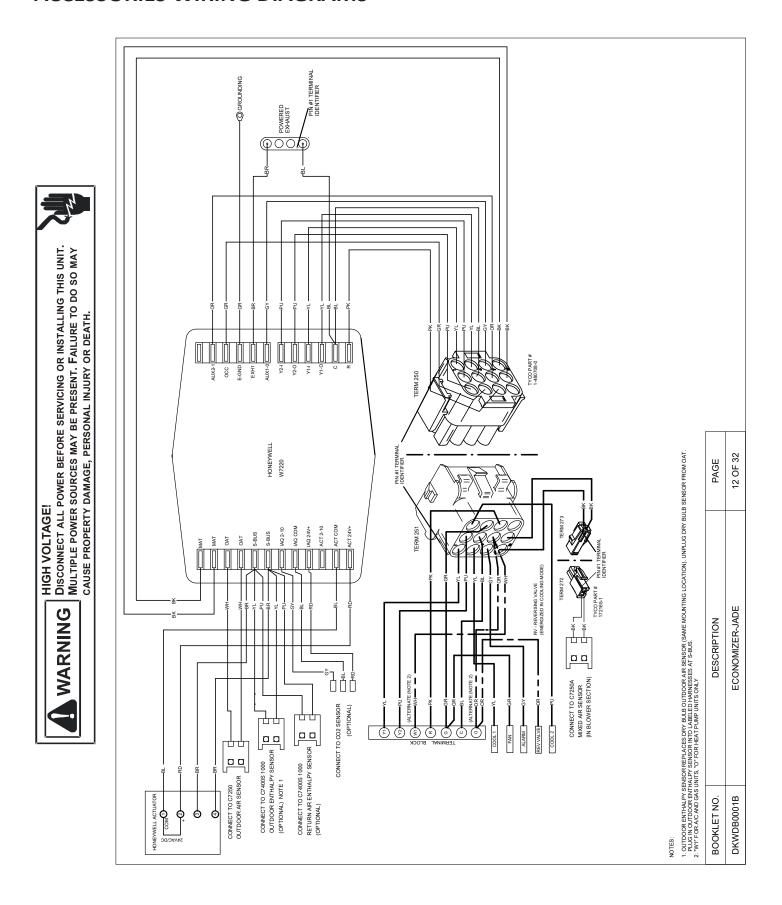


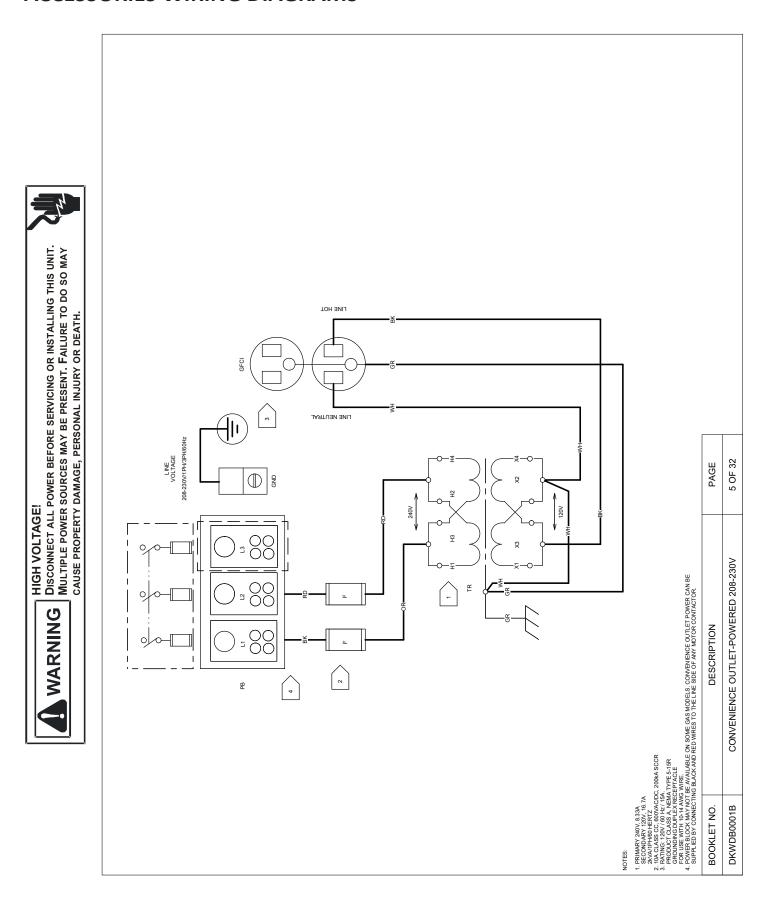

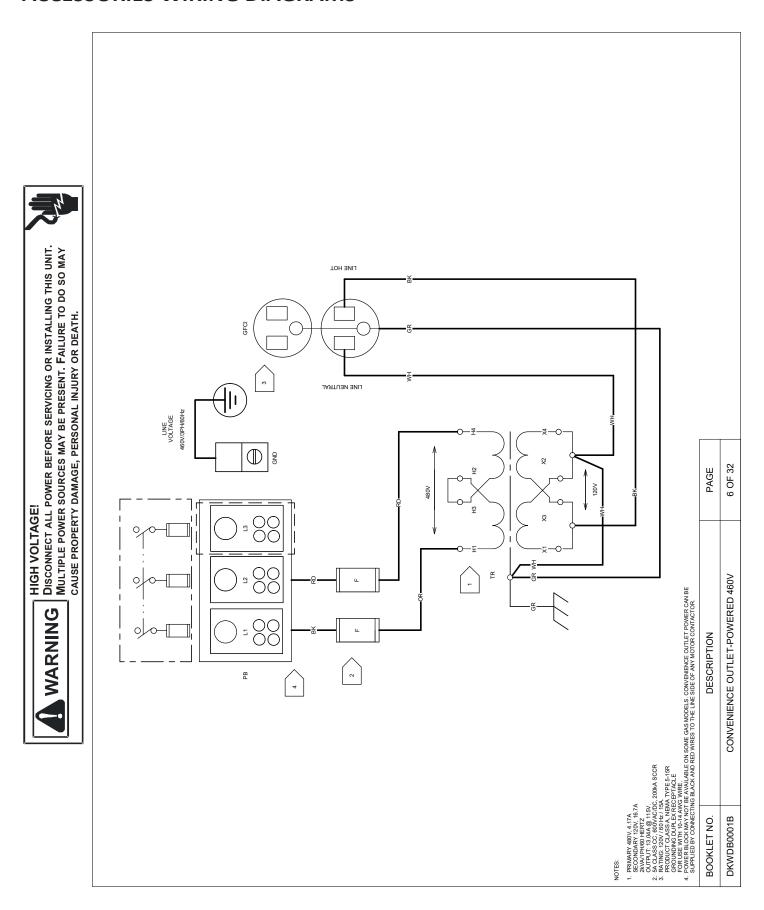

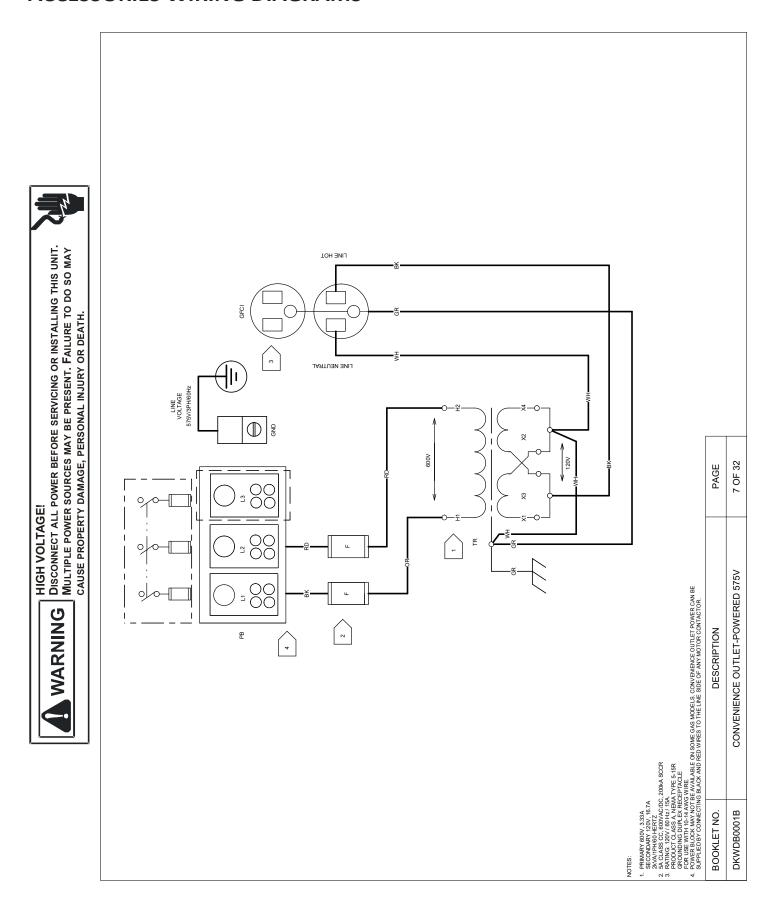


POWER EXHAUST 3 - 5 TON

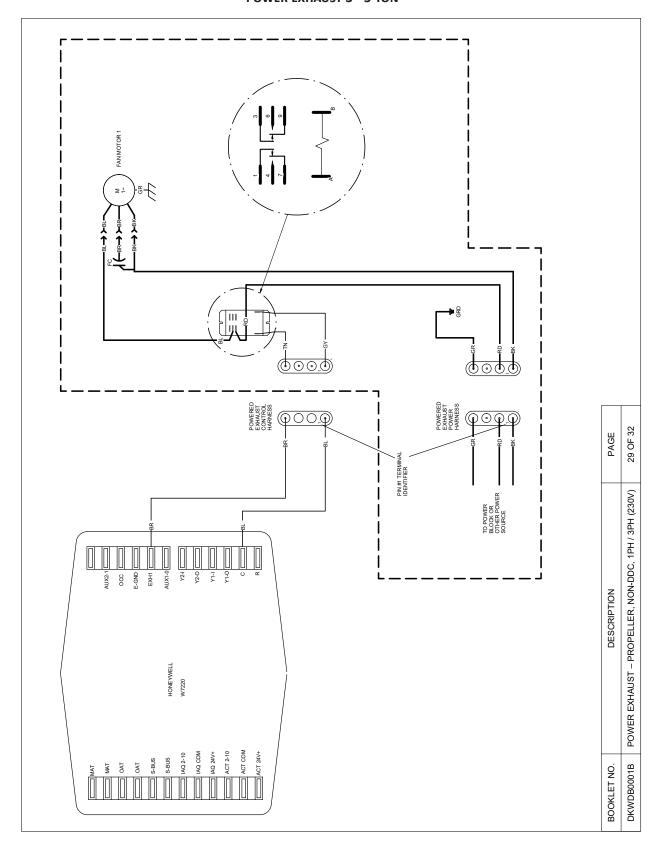


Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

HIGH VOLTAGE!
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT.
MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY
CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

WARNING

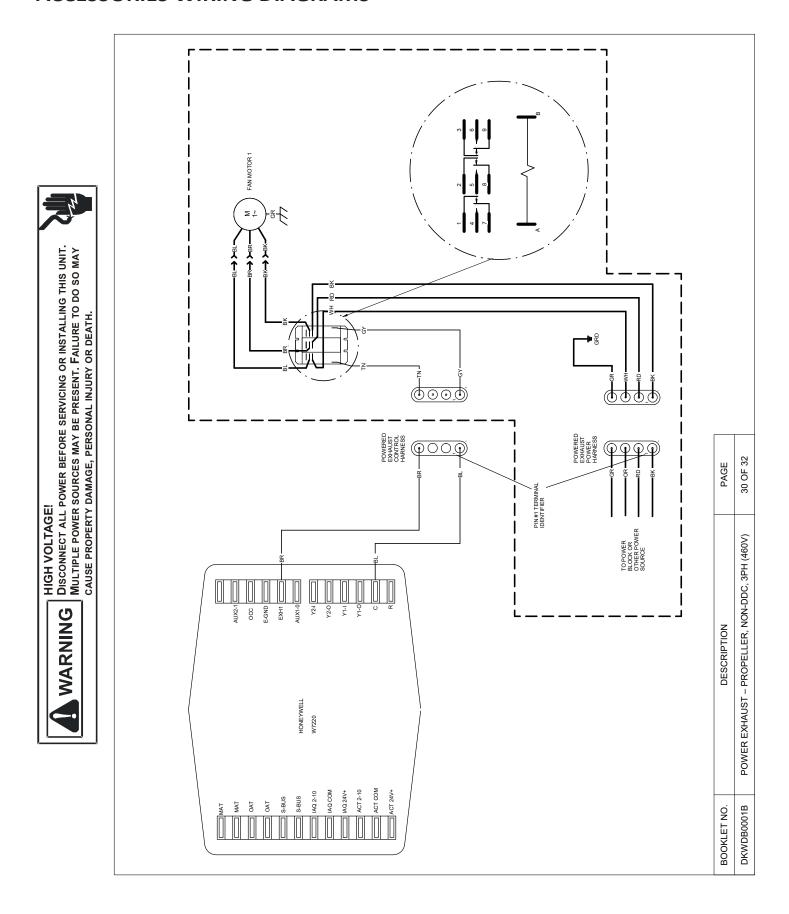

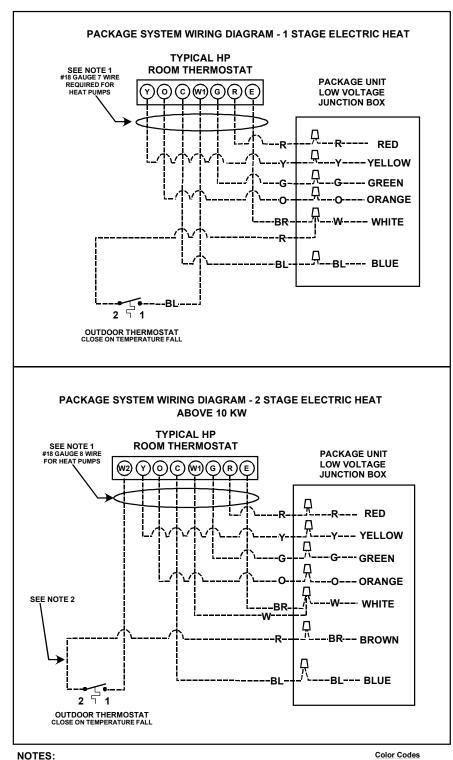

- 1) "O" and "E" used on heat pumps only.
- Connect wire from terminal #1 on outdoor thermostat to the white wire on package units if single stage indoor thermostat is used.

R - Red Y - Yellow

- BL Blue BR Brown
- O Orange W White
- G Green


OT18-60A OUTDOOR THERMOSTAT

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

HIGH VOLTAGE! DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

RNIN

WARNIN

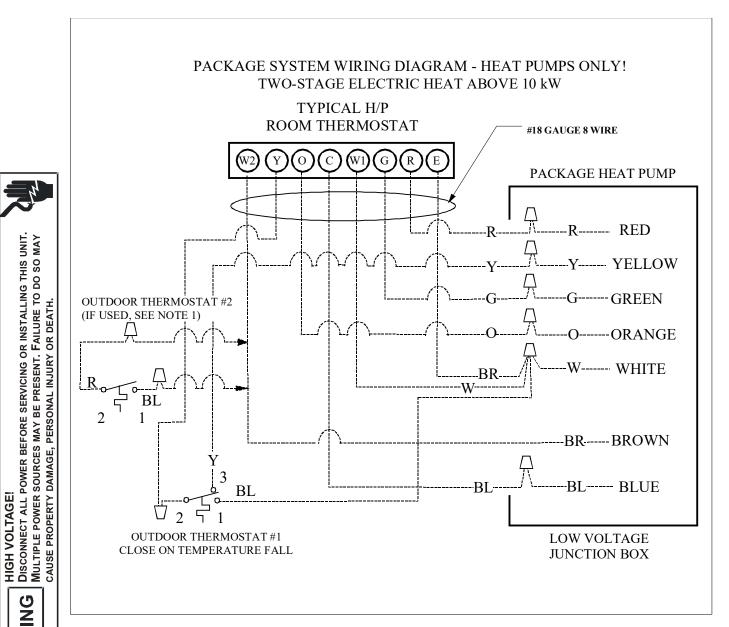


For outdoor temperatures below 0° F with 50% or higher relative humidity, set outdoor thermostat at 0° F

NOTE 1: OT18 #2 CAN BE CONNECTED BETWEEN W2 OF THERMOSTAT AND BROWN WIRE IF DESIRED.


COLOR CODES
R --RED
Y --YELLOW
BL-BLUE
BR-BROWN
O --ORANGE
W -WHITE
G --GREEN

OT18-60A OUTDOOR THERMOSTAT

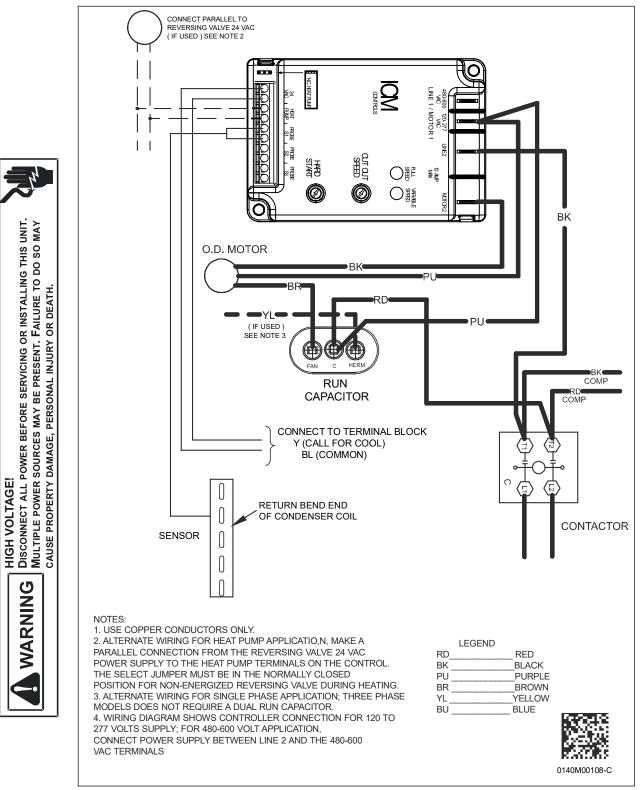


NOTICE: The cut out speed & hard start settings are factory preset. Changing those settings may cause early motor failure.


LOW AMBIENT FOR - 1D MODELS

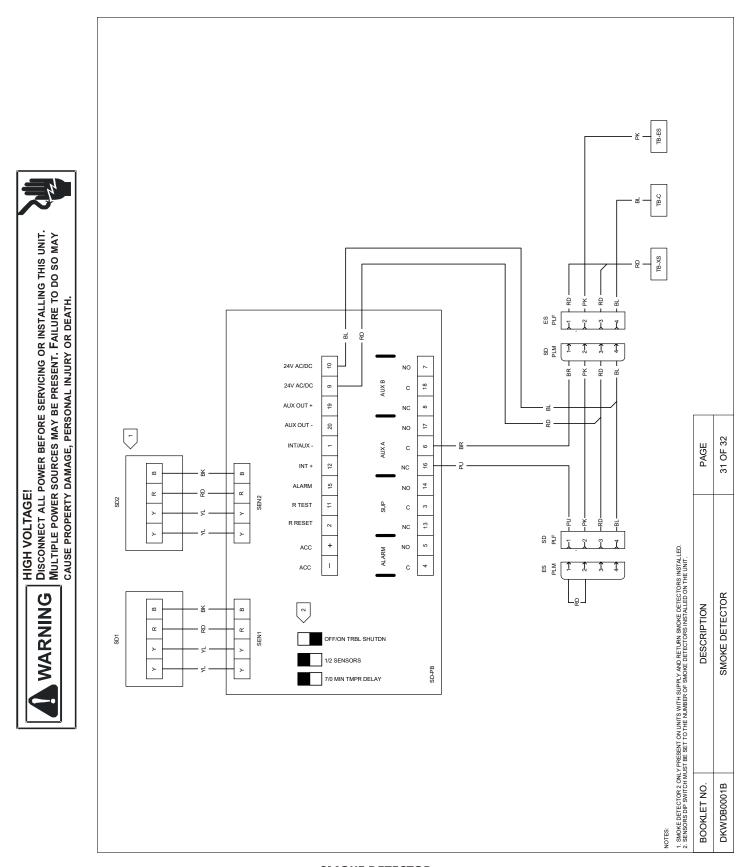


SMOKE DETECTOR

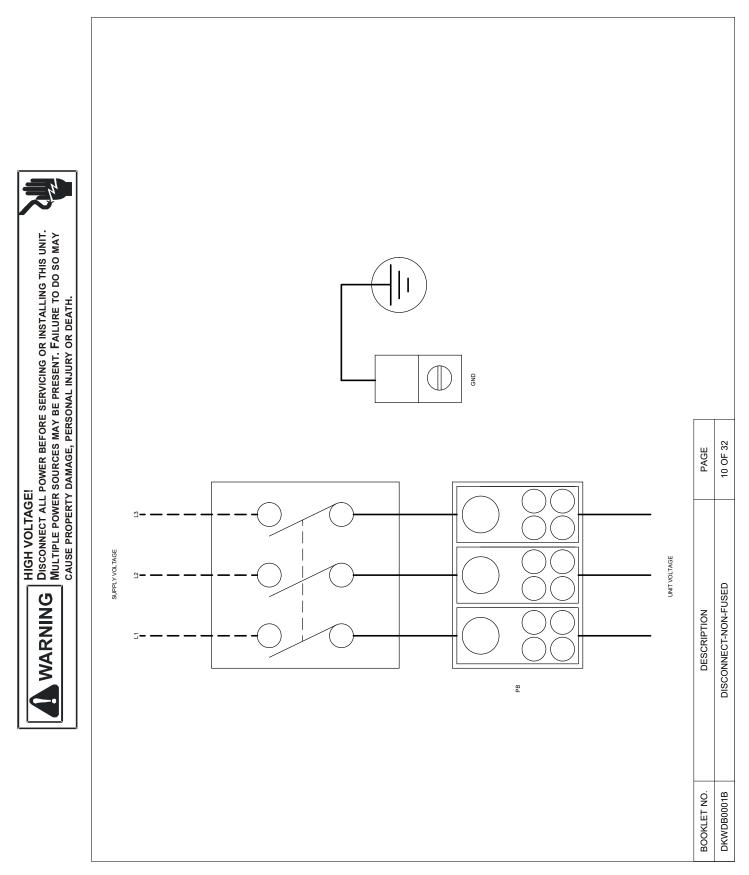

DISCONNECT MODULE

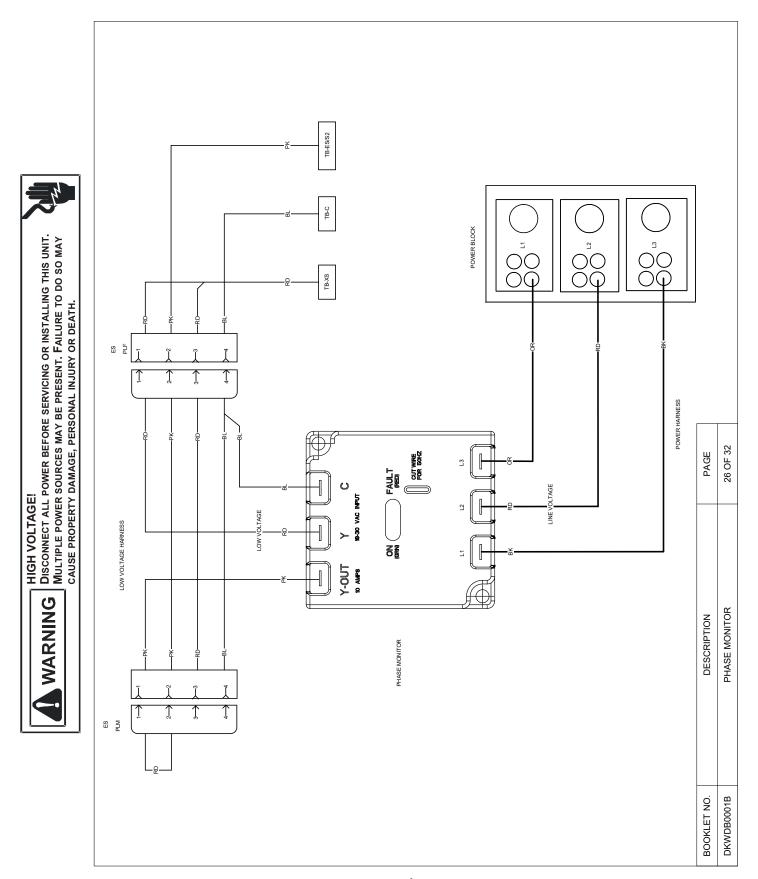

PHASE MONITOR - DBC/DBH MODELS

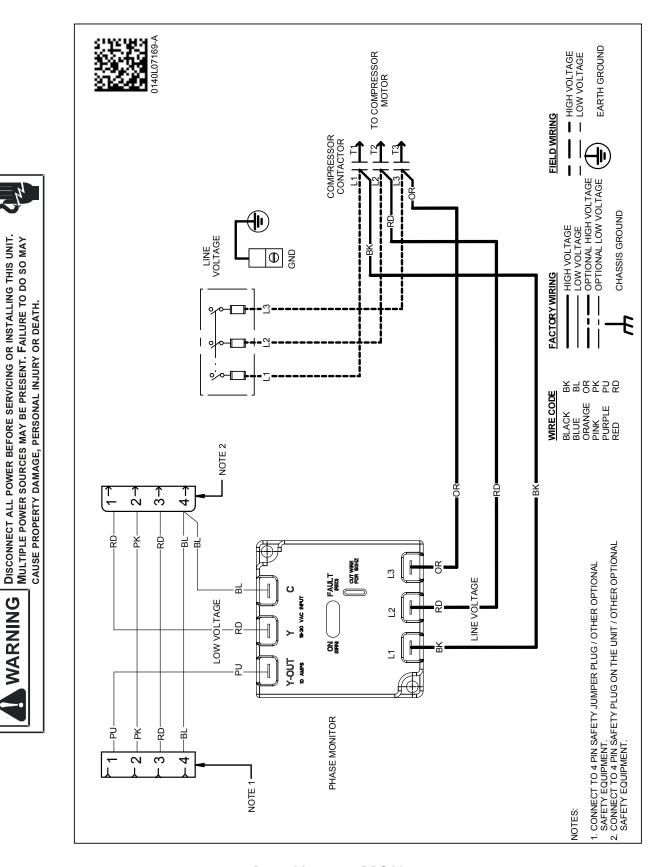

PHASE MONITOR - DBG MODEL

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.


HIGH VOLTAGE!

WARNING


Heater Kits for Direct Drive Models

Heater Kits for Direct Drive Woders						
Part Number	Description					
EHXD-1S05	ELECTRIC HEAT KIT 5KW - 240V - 1PH					
EHXD-1S10	ELECTRIC HEAT KIT 10KW - 240V - 1PH					
EHXD-1S15	ELECTRIC HEAT KIT 15KW - 240V - 1PH					
EHXD-1S16	ELECTRIC HEAT KIT 15KW - 240V - 1PH					
EHXD-1S18	ELECTRIC HEAT KIT 18KW - 240V - 1PH					
EHXD-1S21	ELECTRIC HEAT KIT 20KW - 240V - 1PH					
EHXD-1S22	ELECTRIC HEAT KIT 20KW - 240V - 1PH					
EHXD-3S05	ELECTRIC HEAT KIT 5KW - 240V - 3PH					
EHXD-3S10	ELECTRIC HEAT KIT 10KW - 240V - 3PH					
EHXD-3S15	ELECTRIC HEAT KIT 15KW - 240V - 3PH					
EHXD-3S16	ELECTRIC HEAT KIT 15KW - 240V - 3PH					
EHXD-3S18	ELECTRIC HEAT KIT 18KW - 240V - 3PH					
EHXD-3S21	ELECTRIC HEAT KIT 20KW - 240V - 3PH					
EHXD-3S22	ELECTRIC HEAT KIT 20KW - 240V - 3PH					


Minimum Airflow for Electric Heat Direct Drive						
Unit	Heater Kit Model Number	Minimum CFM				
DBC0361D	EHXD-1S05					
DBH0361D	EHXD-1S10					
DBH0201D	EHXD-1S16	1175				
DBC0363D	EHXD-3S05	11/5				
DBH0363D	EHXD-3S10					
DBI10303D	EHXD-3X16					
	EHXD-1S05					
DBC0481D	EHXD-1S10					
DBH0481D	EHXD-1S15					
DB110461D	EHXD-1S18					
	EHXD-1S22	1400				
DBC0483D DBC0483D	EHXD-3S05					
	EHXD-3S10					
	EHXD-3S15					
	EHXD-3S18					
	EHXD-3S22					
	EHXD-1S05					
DBC0601D	EHXD-1S10					
DBH0601D -	EHXD-1S15					
	EHXD-1S18					
	EHXD-1S21	1625				
	EHXD-3S05	1625				
	EHXD-3S10					
	EHXD-3S15					
DBH0603D	EHXD-3S18					
	EHXD-3S21					

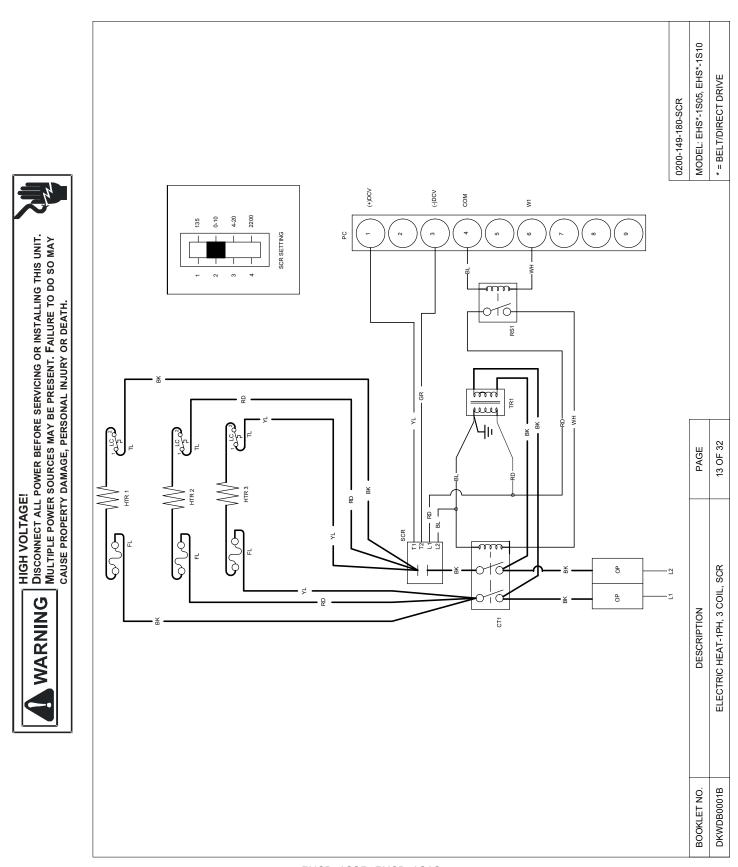


EHSD-1S05, EHSD-1S10
* FOR DIRECT DRIVE MODELS ONLY

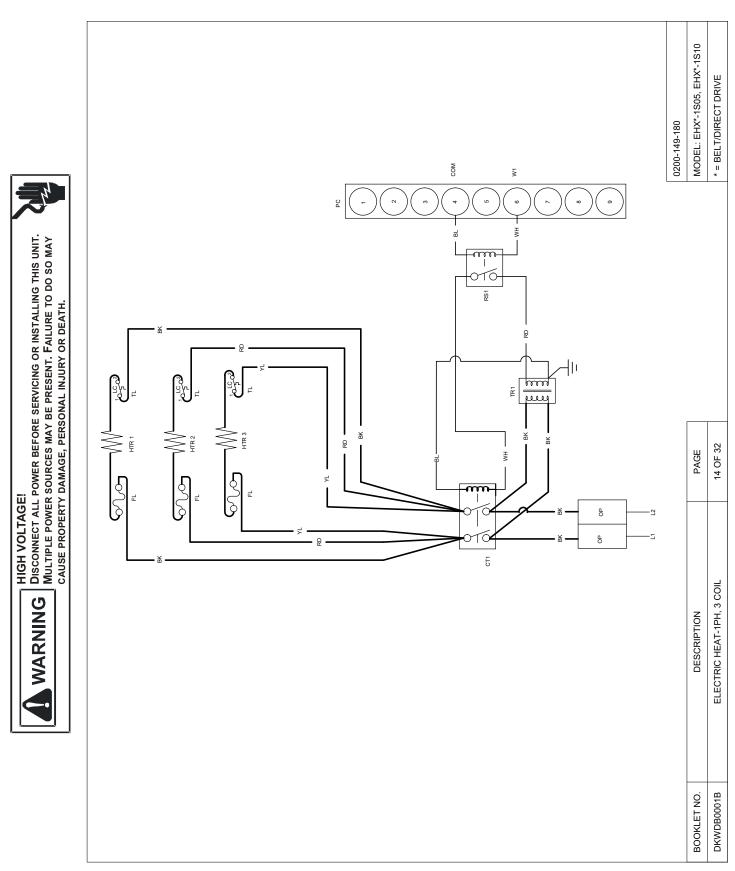


EHXD-1S05, EHXD-1S10
* FOR DIRECT DRIVE MODELS ONLY

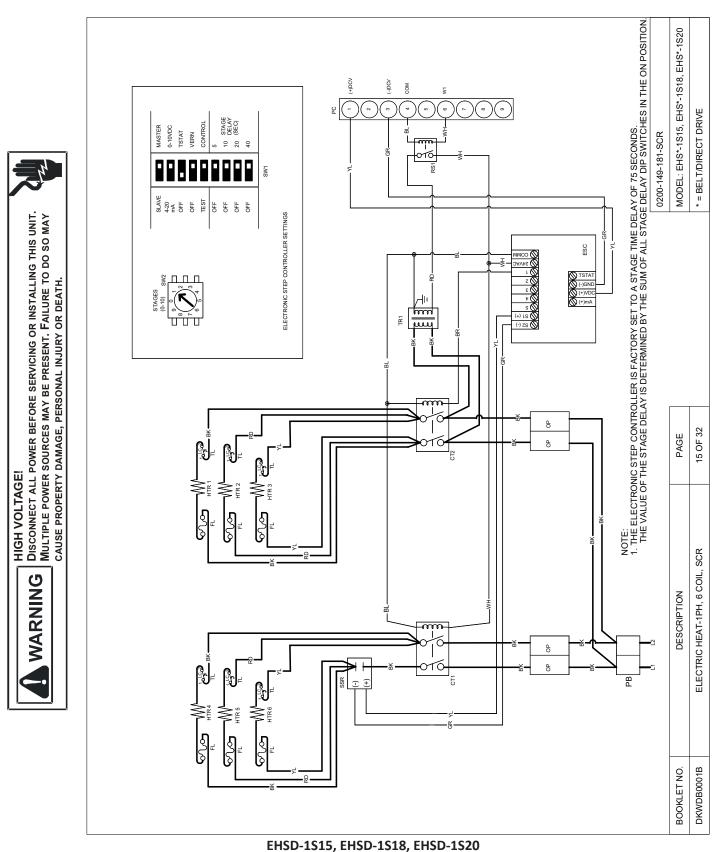


*FOR DIRECT DRIVE MODELS ONLY

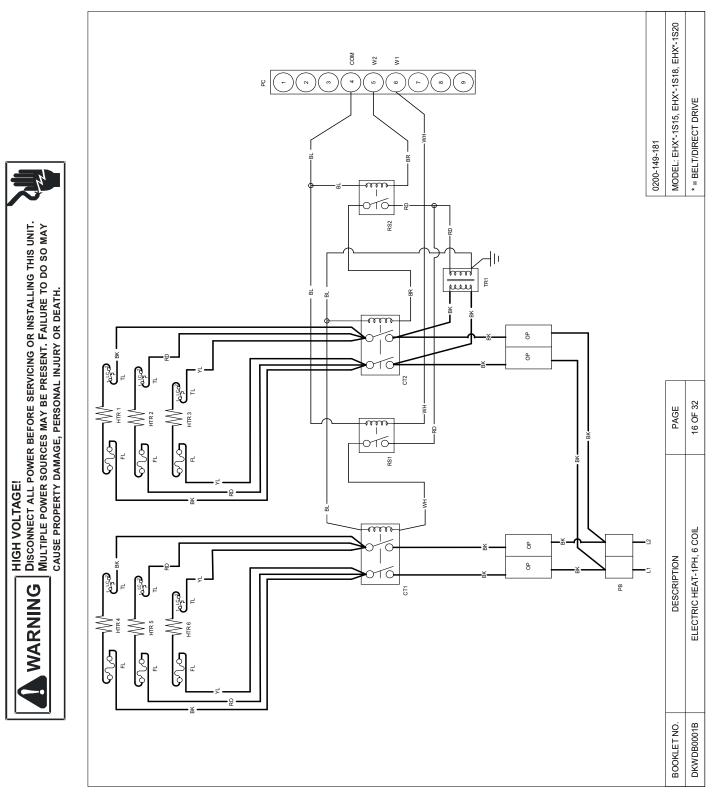


*FOR DIRECT DRIVE MODELS ONLY

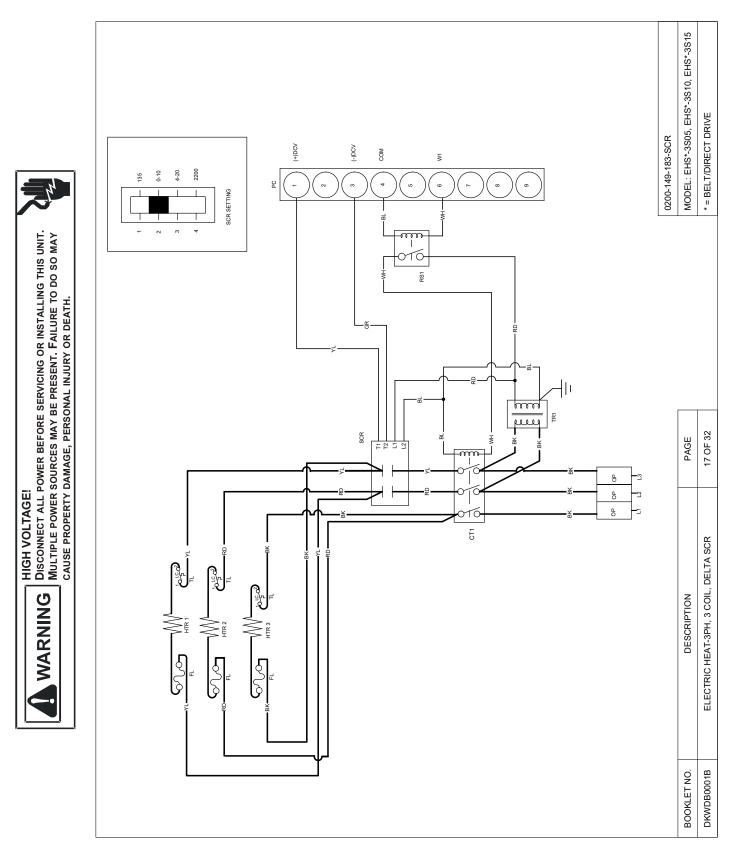


EHS*-3S05, EHS*-3S10, EHS*-3S15
DIRECT DRIVE

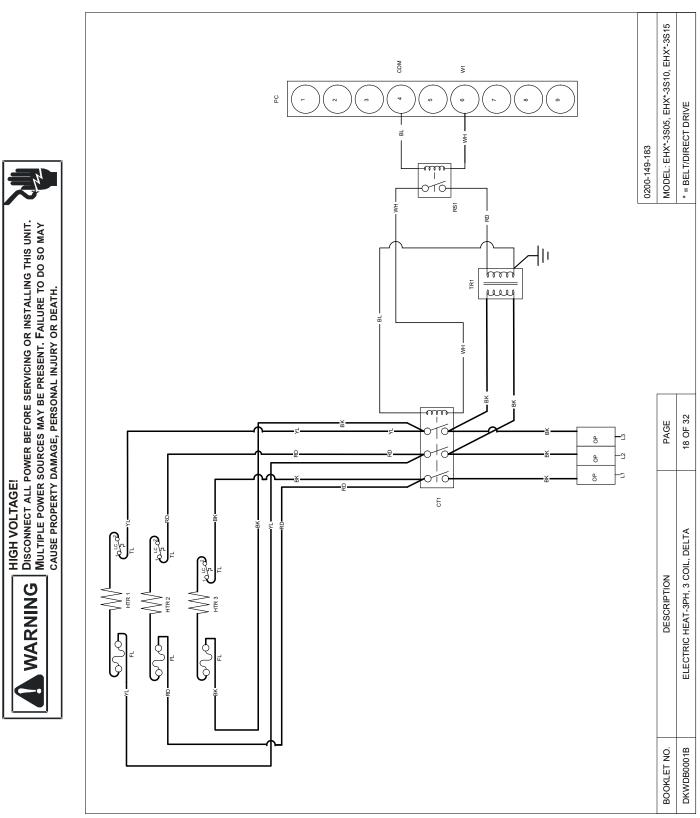


EHX*-3S05, EHX*-3S10, EHX*-3S15 DIRECT DRIVE

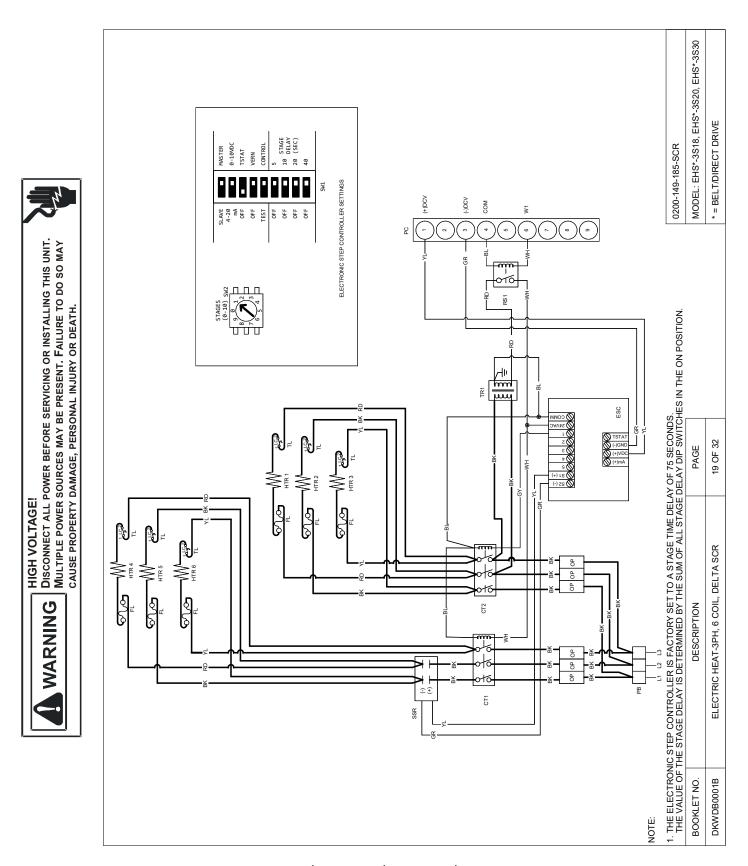

EHS*-3S18, EHS*-3S20, EHS*-3S30 DIRECT DRIVE

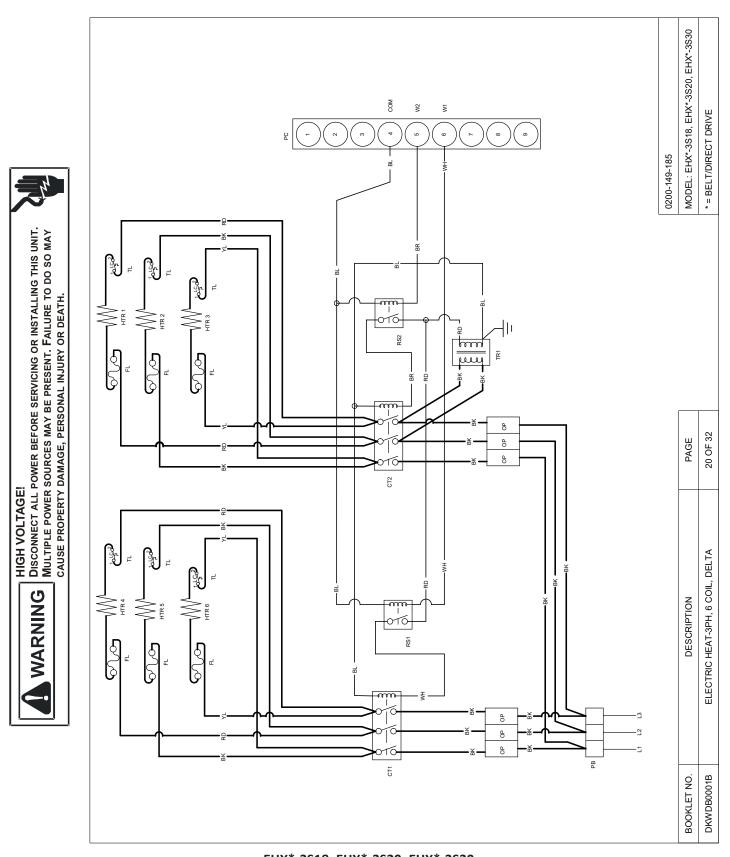


EHX*-3S18, EHX*-3S20, EHX*-3S30 DIRECT DRIVE

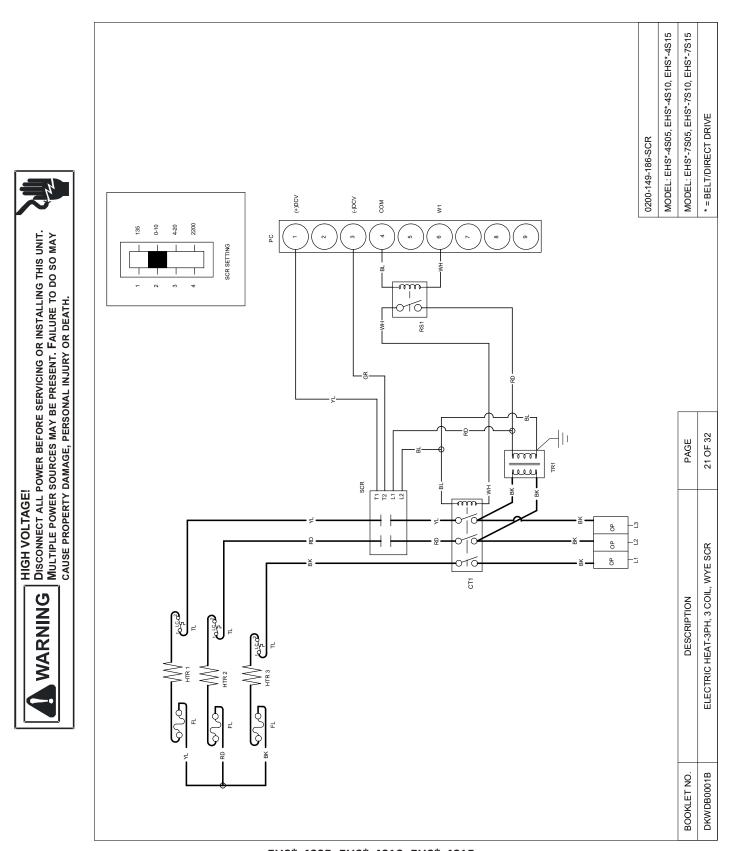


EHS*-4S05, EHS*-4S10, EHS*-4S15, EHS*-7S05, EHS*-7S10, EHS*-7S15 DIRECT DRIVE

HEATER KIT WIRING DIAGRAMS

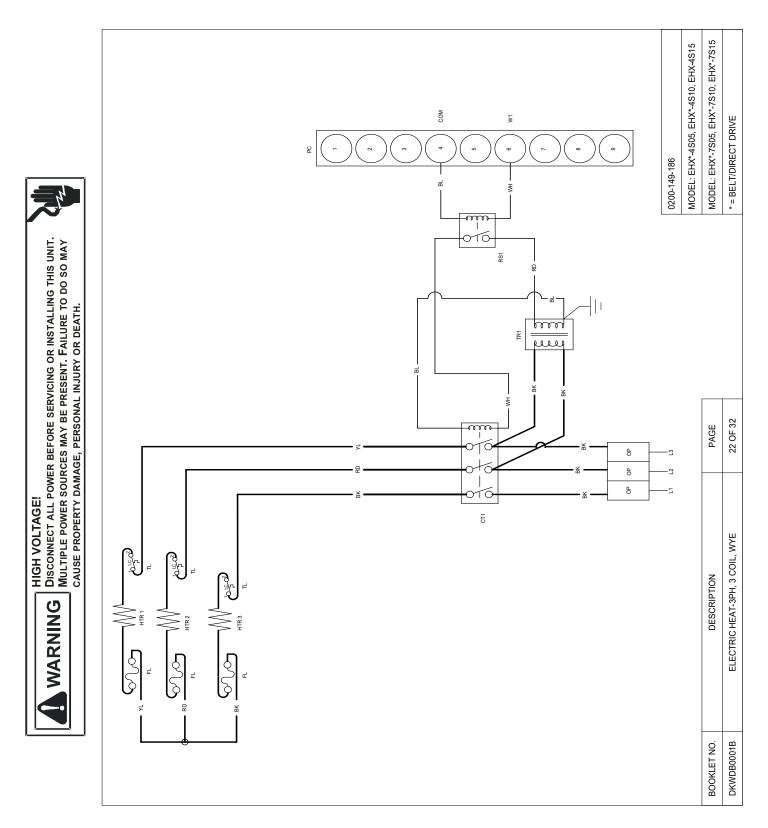


EHX*-4S05, EHX*-4S10, EHX*-4S15, EHX*-7S05, EHX*-7S10, EHX*-7S15 DIRECT DRIVE

HEATER KIT WIRING DIAGRAMS

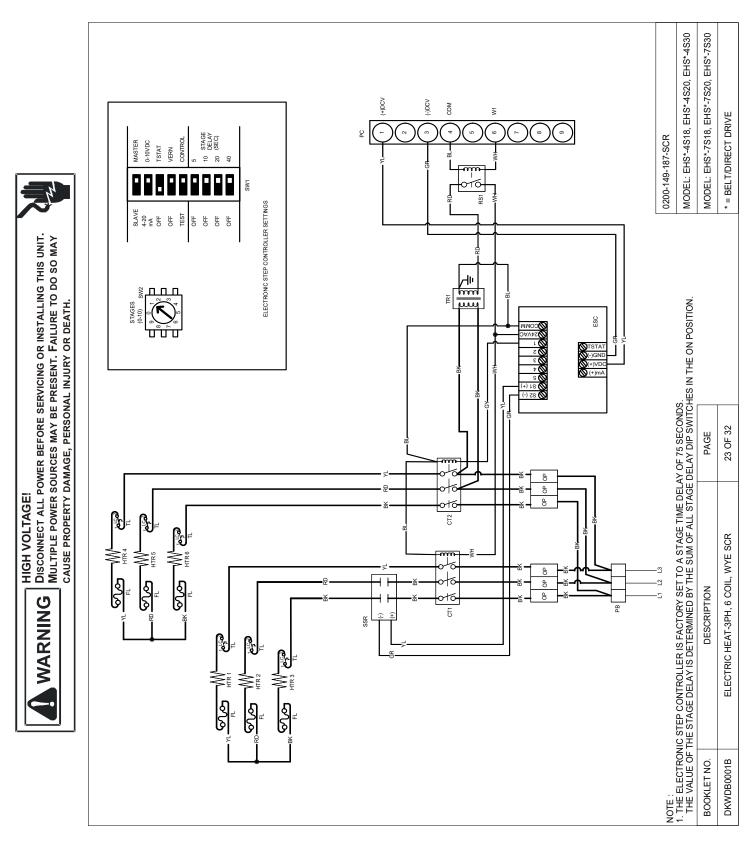

EHS*-4S18, EHS*-4S20, EHS*-4S30, EHS*-7S18, EHS*-7S20, EHS*-7S30 DIRECT DRIVE

HEATER KIT WIRING DIAGRAMS

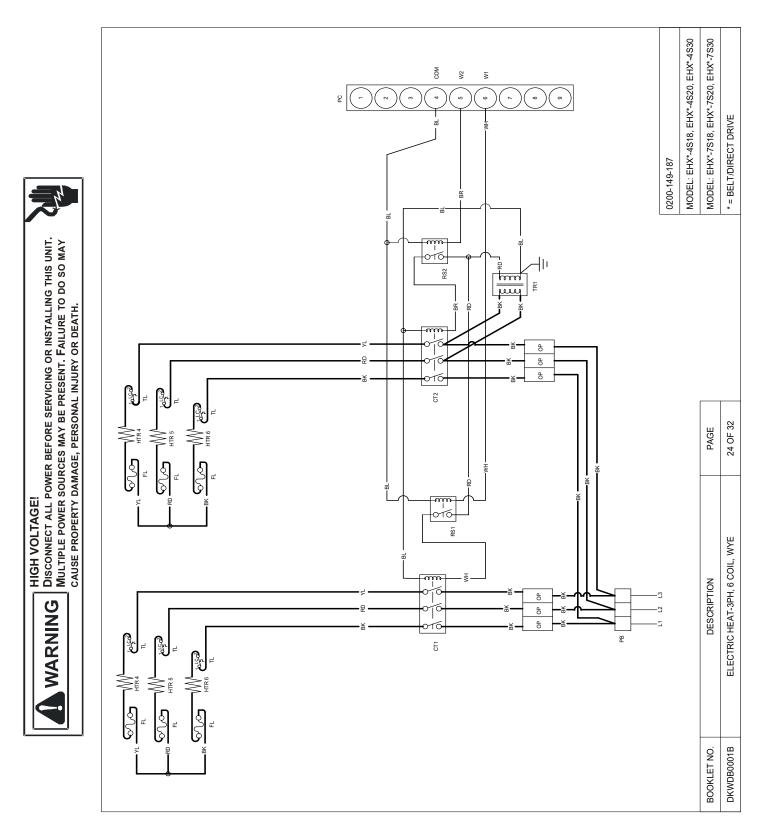

EHX*-4S18, EHX*-4S20, EHX*-4S30, EHX*-7S18, EHX*-7S20, EHX*-7S30 DIRECT DRIVE

SCHEDULED MAINTENANCE

MAINTENANCE



WARNING

ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD FAILURE TO FOLLOW SAFETY WARNINGS EXACTLY COULD RESULT IN DANGEROUS OPERATION, SERIOUS INJURY, DEATH OR PROPERTY DAMAGE.

IMPROPER SERVICING COULD RESULT IN DANGEROUS OPERATION, SERIOUS INJURY, DEATH OR PROPERTY DAMAGE.

- BEFORE SERVICING, DISCONNECT ALL ELECTRICAL POWER TO FURNACE.
- WHEN SERVICING CONTROLS, LABEL ALL WIRES PRIOR TO DISCONNECTING. RECONNECT WIRES CORRECTLY.
- VERIFY PROPER OPERATION AFTER SERVICING.



WARNING

HIGH VOLTAGE!

DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.





WARNING

TO PREVENT PERSONAL INJURY OR DEATH DUE TO IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE, REFER TO THIS MANUAL. FOR ADDITIONAL ASSISTANCE OR INFORMATION, CONSULT A QUALIFIED INSTALLER, SERVICER AGENCY OR THE GAS SUPPLIER.



CAUTION

SHEET METAL PARTS, SCREWS, CLIPS AND SIMILAR ITEMS INHERENTLY HAVE SHARP EDGES, AND IT IS NECESSARY THAT THE INSTALLER AND SERVICE PERSONNEL EXERCISE CAUTION.

Preventive maintenance is the best way to avoid unnecessary expense and inconvenience. Have this system inspected at regular intervals by qualified service personnel, at least twice a year. Routine maintenance should cover the following items:

- 1. Tighten all set screws, and wire connections.
- Clean evaporator and condenser coils mechanically or with cold water, if necessary. Usually any fouling is only matted on the entering air face of the coil and can be removed by brushing.
- 3. Replace filters as needed (see below).
- 4. Check for blockage of condensate drain.
- 5. Check power and control voltages.
- 6. Check running amperage.

- 7. Check operating temperatures and pressures.
- 8. Check and adjust temperature and pressure controls.
- 9. Check and adjust damper linkages.
- 10. Check operation of all safety controls.
- 11. Examine gas furnaces (see below and the User's Information Manual).
- 12. Check condenser fans and tighten set screws.

FILTERS



CAUTION

TO PREVENT PROPERTY DAMAGE DUE TO FIRE AND LOSS OF EQUIPMENT EFFICIENCY OR EQUIPMENT DAMAGE DUE TO DUST AND LINT BUILD UP ON INTERNAL PARTS, NEVER OPERATE UNIT WITHOUT AN AIR FILTER INSTALLED IN THE RETURN AIR SYSTEM.

Every application may require a different frequency of replacement of dirty filters. Filters must be replaced at least every three (3) months during operating seasons.

Dirty filters are the most common cause of inadequate heating or cooling performance. Filter inspection should be made at least every two months; more often if necessary because of local conditions and usage.

Dirty throwaway filters should be discarded and replaced with a new, clean filter.

Disposable return air filters are supplied with this unit. See the unit Specification Sheet or Technical Manual for the correct size and part number. To remove the filters, remove the filter access panel on return side of the unit.

CABINET FINISH MAINTENANCE

Use a fine grade automotive wax on the cabinet finish to maintain the finish's original high luster. This is especially important in installations with extended periods of direct sunlight.

CLEAN OUTSIDE COIL (QUALIFIED SERVICER ONLY)

The coil with the outside air flowing over it should be inspected annually and cleaned as frequently as necessary to keep the finned areas free of lint, hair and debris.

CONDENSER AND INDUCED DRAFT MOTORS

Bearings on the condenser fan motors and the combustion fan motor are permanently lubricated. No additional oiling is required.

SCHEDULED MAINTENANCE

FLAME SENSOR (QUALIFIED SERVICER ONLY)

A drop in the flame current can be caused by a nearly invisible coating on the flame sensor. This coating, created by the fuel or combustion air supply, can be removed by carefully cleaning the flame sensor with steel wool.

NOTE: After cleaning, the microamp signal should be stable and in the range of 4 - 6 microamps DC.

FLUE PASSAGES (QUALIFIED SERVICER ONLY)

At the start of each heating season, inspect and, if necessary, clean the unit flue passage.

LUBRICATION

The fan shaft bearings, the supply fan motors, the condenser fan motors and compressors are permanently lubricated.

INSPECTION & CLEANING

All flue product carrying areas of the furnace, its vent system, and main burners should be examined by a qualified service agency, and cleaned if necessary, before the start of each heating season. This examination is necessary for continued safe operation. Particular attention should be given to deterioration from corrosion or other sources. This examination is accomplished in the following manner.


- 1. Disconnect power to the unit and remove furnace section access panel.
- 2. Remove burner assembly:
 - A. Disconnect the wires from the gas valve after noting which wires are connected to each terminal.
 - B. Disconnect wires from the flame rod and ignition electrode.
 - C. Disconnect the gas piping at the union.
 - D. The entire burner assembly can now be removed from the unit.

NOTE: Use all screws that were removed; they are necessary for safe and proper operation of the unit.

3. Inspect and periodically clean the vent outlet (bird screen) on the access panel.

NOTE: Periodic observation of the flame and a log of CO_2 measurements are recommended. This will aid in determining whether the furnace is operating efficiently or if the furnace requires cleaning.

Flames should be stable, soft and blue (dust may cause orange tips but must not be yellow). The flames must extend directly outward from the burner without curling, floating or lifting off.

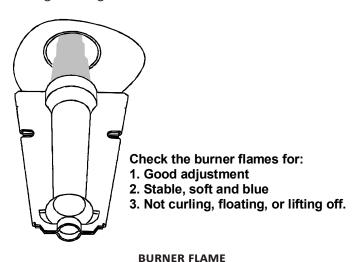



TO AVOID PERSONAL INJURY OR DEATH DUE TO ELECTRIC SHOCK, DO NOT REMOVE ANY INTERNAL COMPARTMENT COVERS OR ATTEMPT ANY ADJUSTMENT. CONTACT A QUALIFIED SERVICER AT ONCE IF AN ABNORMAL FLAME SHOULD DEVELOP.

At least once a year, prior to or during the heating season, make a visual check of the burner flames.

NOTE: This will involve removing and reinstalling the heat exchanger door on the unit, which is held by two screws. If you are uncertain about your ability to do this, contact a qualified servicer.

If a strong wind is blowing, it may alter the airflow pattern within the unit enough that an inspection of the burner flames is not possible.

FUNCTIONAL PARTS

Refer to the unit Parts Catalog for a list of functional parts. Parts are available from your distributor.