


Note: This battery charge indication only please do not refer to this table for NiMH batteries as they are of low voltage


04



1 Turn the hot shoe quick releas lock clockwise to the unlocked position as shown in the figure.

camera hot shoe as shown in the

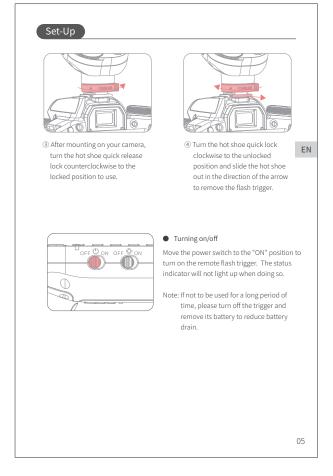

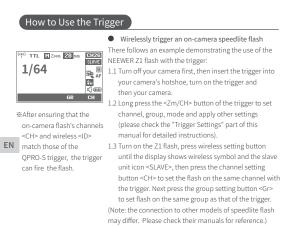


♠ TTL

06


() CH ;

+0.0

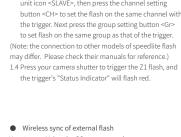

How to use: Using the Q3 as an example. 2.1 Turn off the camera, place the flash trigger on th camera hot shoe mount and turn on both the flash trigger power switch and the camera. ote: For other models of external flash settings, please follow the corresponding external flash instruction manual.)

 
2.2 Press and hold the <GR/CH> button to set the channel, group, mode and apply settings (see Setting the flash




setting and the <ID> setting button so that the <>>Wireless icon are the same for both the appears on the screen. Press the <GR/CH> group channel setting button to QPRO-S, the QPRO-S can set the same channel as the flash trigger. Short press control the external flash. the < GR/CH> group setting button to set the same group as the flash trigger. 2.4 Press the camera shutter to activate the flash. The "status indicator" of the flash unit will flash red. EN Wirelessly trigger a Sony on-camera Speedlite here follows an illustration to show how to connect an IVL-F45RM flash with the trigger: 3.1 Turn off your camera first, then insert the Opro-S trigger into your camera's hotshoe. Turn on the 3.2 Long press the <Zm/CH> button of the Qpro-S trigger to set channel, press <MENU> and choose <ID> to set wireless ID of the trigger. 3.3 Connect the Sony flash to a Q-S receiver, long press the <TX/RX> button to enter RX mode, then long press the <Zm/CH> button on the receiver to set it on the same channel as the Qpro-S trigger. Next, press its <MENU> button and choose <ID> to match the Note: When using the QPro-S trigger, the original 3.4 Turn on the Sony flash and set it to on-camera flash Sony speedlite camera mode (Note: please refer to the manual of your flash must be set to TTL auto flash mode 3.5 Press your camera shutter to trigger the Sony flash. regardless of the trigger The trigger's "Status Indicator" will flash red.

07

How to Use the Trigger

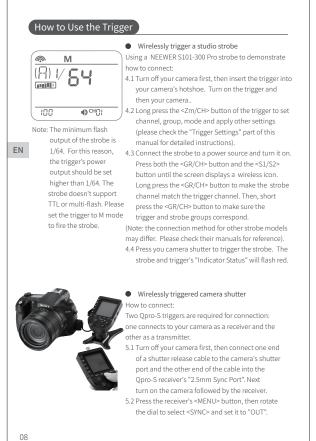





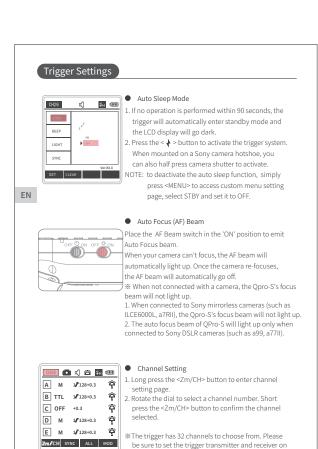



the same channel before firing flashes.


10

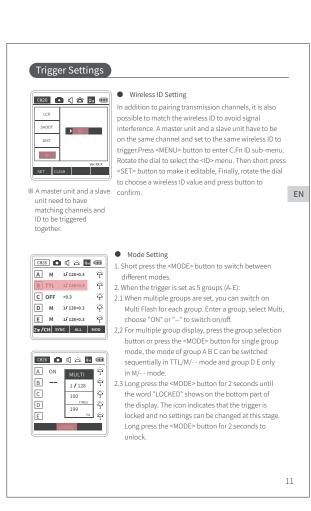


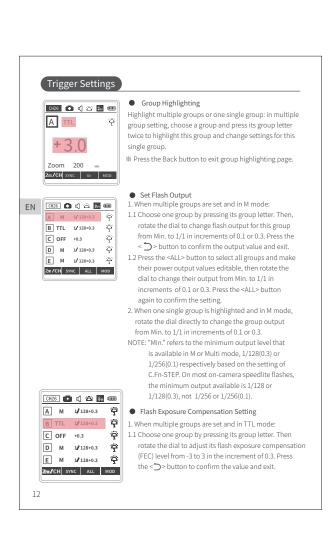


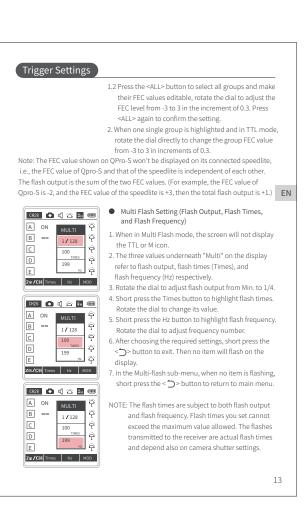


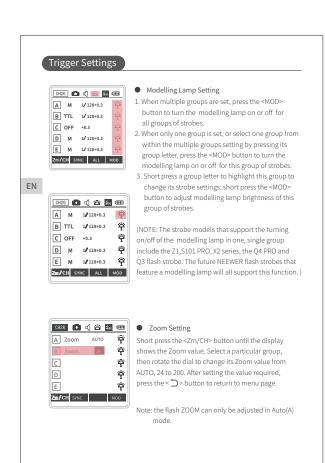

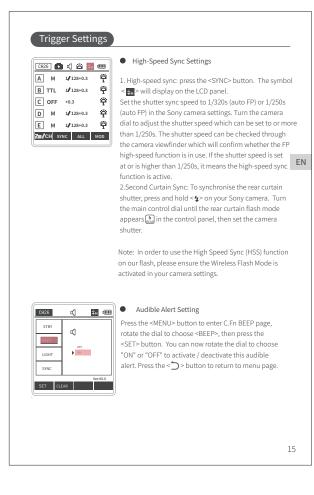


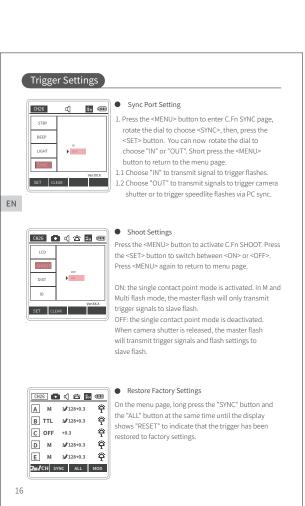

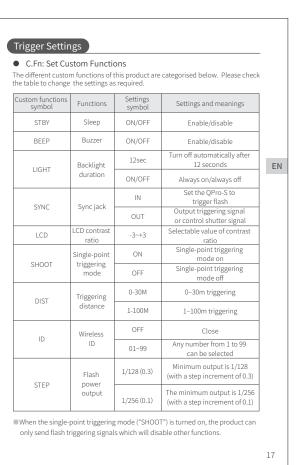

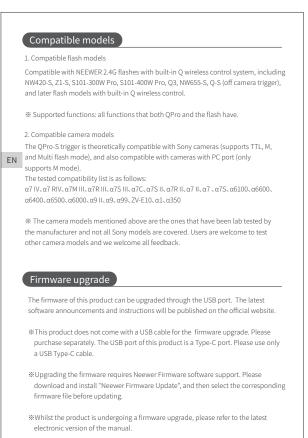

18

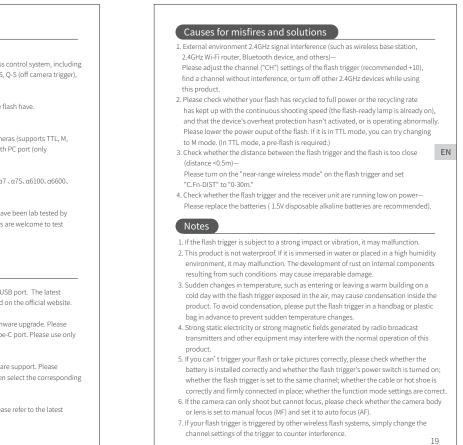

14

