

# STAY2SNUG™

## NAVY VELVETY HEATED THROW

### INSTRUCTION BOOKLET



Model: 63900

**LAKELAND** innovation

# STAYSNUG NAVY VELVETY HEATED THROW

Thank you for choosing the Lakeland StaySnug Navy Velvety Heated Throw.

Please take a little time to read this booklet before you use your heated throw and keep it in a safe place for future reference.

Your Navy Velvety Heated Throw is made from soft, thick fleece. The control unit has audible control buttons and there are 9 variable heat settings and 9 auto shut-off settings, from 20 minutes to 3 hours to switch off the heated throw.

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.


Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

## CONTENTS

Product features.....	3
Important instructions and safety notes.....	4-7
Using your Heated Throw for the first time.....	8
Instructions for use.....	8-9
Care and cleaning .....	10
Frequently asked questions .....	11
Technical data .....	12
Electrical connections .....	13
Recycling your electricals.....	13

## PRODUCT FEATURES

1. Throw
2. Plug
3. Connector plug
4. Control unit
5. Indicator panel
6. Auto shut-off setting button
7. Power button
8. Temperature setting button
9. Connector

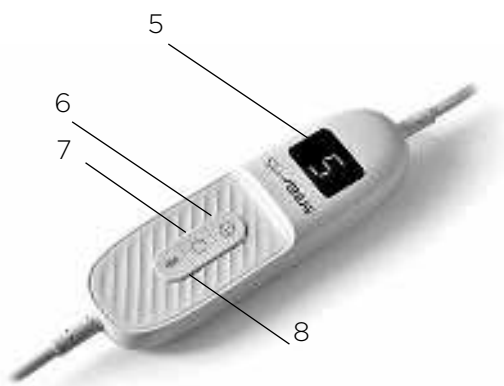

# **IMPORTANT INSTRUCTIONS. RETAIN FOR FUTURE USE.**

**WARNING! Instructions and warnings for safe use.**

## **SAFETY NOTES**



- Before using this appliance, carefully read the instructions for use and in particular the safety notes and warnings, which must be complied with. Keep this manual together with its illustrative guide for future consultation. Should you transfer the appliance to another user, make sure you hand over this documentation as well.
- After unpacking, make sure the appliance is intact, complete with all its parts as shown in the illustrative guide and with no sign of damage due to transportation. If in any doubt, do not use the appliance and contact an authorised service centre.
- This appliance must be used only for the purpose for which it was designed, namely as a heated throw for home use. Any other use is considered not compliant with the intended use and therefore dangerous.
- Before connecting the appliance to the mains supply, make sure that the voltage and frequency indicated on the technical data of the appliance correspond to those of the mains supply. The rating is on the appliance or on the power supply unit, if any (see illustrative guide).
- This appliance is only to be used with the types of detachable control unit that are marked on the appliance.



- Children under the age of three are not to use this appliance due to their inability to react to overheating.
- This appliance can be used by children older than 3 years and younger than 8 years under supervision and with the control always set to minimum temperature.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.



- **DO NOT** use the appliance with wet hands or damp feet.



- **DO NOT** pull the supply cord or the appliance itself to remove the plug from the socket.



- **DO NOT** pull or lift the appliance by the supply cord.

- The cable and control unit of the appliance can give rise to risks of entanglement, strangulation, tripping or treading if not correctly arranged. The user shall make sure that electric cords shall be arranged in a safe way.



- **DO NOT** expose the appliance to humidity, to the effects of weather (rain, sun, etc.) or to extreme temperatures.

- Always disconnect the appliance from the mains supply before cleaning or performing maintenance and when the appliance is not in use.
- Examine the appliance frequently for signs of wear or damage. If there are such signs, if the appliance has been misused or does not work, contact an authorised technical service centre before switching it on again.
- If the appliance is faulty or malfunctions, switch it off and do not tamper with it. Contact an authorised technical service centre for any repairs.
- If the supply cord is damaged, take the whole appliance to an authorised technical service centre for the replacement of the control unit, so as to prevent all risks.



- **DO NOT** use this appliance to warm animals.



- **DO NOT** place the control unit under the pillow or between the sheets or blankets.

- If the appliance is used on an adjustable bed, check that the heated throw and cord do not become trapped or rucked, for example in hinges.
- During use, ensure that the power cord is completely unwound.
- Not recommended to be used with a plug in timer switch.



- **DO NOT** tuck in.



- This appliance is not intended for medical use in hospitals.



- **DO NOT** use if wet.



- **DO NOT** use folded or creased.



- **DO NOT** insert pins or needles.

- **PLEASE NOTE:** If you wear a pacemaker please contact a medical professional or your pacemaker provider to ensure this product is compatible with your device.
- See the external packaging for the characteristics of the appliance.

## USING YOUR HEATED THROW FOR THE FIRST TIME

- Unpack the heated throw, remove all the packaging materials.
- Insert the connector plug into the connector on the heated throw.
- Ensure the connector plug is fully pushed in until the catch engages.
- The heated throw is now ready to use.



### **Please note:**

- The colour of this product may transfer to other objects.
- Avoid making contact with light coloured surfaces.

## INSTRUCTIONS FOR USE

- Plug in the control unit and switch on at the socket.
- Turn on the throw by pressing the power button, then press the temperature setting button. A number relating to the setting will appear in the indicator panel. The throw will gradually start to warm up.



Auto shut-off  
setting button  
Power button  
Temperature  
setting button

- There are 9 levels of heat, the default is 1, if you require a higher temperature setting, please set the temperature setting between 2 to 9 by pressing the temperature setting button. This increases in one unit intervals - 1, 2, 3, 4, 5, 6, 7, 8, 9. Once you have reached 9 if you press with temperature setting button again it will go back to 1.



- Should the throw get too warm for you, adjust the heating setting back to level 2 or 1 by pressing the temperature setting button.
- Levels between 2 and 9 are intended for heating up and level 1 is for continuous use.
- Change the temperature setting to level 1 before falling asleep.
- To switch off your heated throw, press the power button and there should then be nothing showing on the indicator panel. Switch off and unplug at the socket.
- The control unit has audible control buttons and makes a bleep each time the buttons are pressed.

**AUTO SHUT-OFF**

- Your throw has 9 settings for automatically switching off up to 3 hours. The default is 20 minutes.
- Should you like to adjust the setting, once you have set the temperature, press the auto shut-off setting button to select a setting between 2 and 9. Each setting increases by 20 minutes.
- So you know you are selecting the auto shut-off time, on the panel there is a dot after the number.

Level	Minutes (Hours)
1	20
2	40
3	60 (1hr)
4	80 (1hr 20min)
5	100 (1hr 40min)
6	120 (2hr)
7	140 (2hr 20min)
8	160 (2hr 40min)
9	180 (3hr)

## CARE AND CLEANING

- Unplug the heated throw and let it cool completely before cleaning.
- Check parts for wear and damage after every few uses.
- Never immerse the control unit in water or any other liquid.

## WASHING INSTRUCTIONS

- Disconnect the control unit from connector on the heated throw.
- Machine washable at 30°C on a wool programme.
- **DO NOT** iron, tumble dry, dry clean or bleach.
- Wash with similar colours.
- To hand wash, use a mild washing powder or detergent and soak your heated throw in lukewarm water for 15 minutes. After soaking, gently wash the heated throw and rinse thoroughly with clean, lukewarm water.
- Allow the excess water to drain from the heated throw. It may be gently squeezed, but do not wring the heated throw.

## DRYING YOUR HEATED THROW

- Air dry on a clothes line, avoid use of clothes pegs as they will damage the heated throw.
- Do not use your heated throw until it is completely dry.
- Do not wring the heated throw.
- Hold the heated throw up to the light and inspect it to ensure that none of the wires have formed into loops, or become twisted. Contact the Lakeland Customer Services team on 015394 88100 or [info@lakeland.co.uk](mailto:info@lakeland.co.uk) if any of the wires have moved.

## STORING YOUR HEATED THROW

- When storing the heated throw, allow it to cool down before folding.
- Avoid creasing the heated throw.
- Do not place heavy items on the heated throw when in storage, as deep creases or folds may damage the wiring.
- Do not use any moth-proofing chemicals.

## FREQUENTLY ASKED QUESTIONS

**Question:** Why is the control unit not illuminating?

**Answer:** Check that the appliance is plugged in and switched on at the socket.

Check that the control unit is properly attached to the heated throw.

**Question:** Why is my control unit flashing F on the panel?

**Answer:** The connector plug is not properly connected to the connector on the throw, push fully into the connector.

**Question:** Why is my control unit on but there is no heat?

**Answer:** Check that the connector plug is fully pushed into the connector.

The heated throw automatically switches off after 3 hours and may have gone into Standby mode. Press the power button to turn the throw back on.

The heated throw may be faulty or damaged. If so, contact the Lakeland Customer Services team on 015394 88100 or [info@lakeland.co.uk](mailto:info@lakeland.co.uk)

**Question:** Why is there heat discolouration on the fabric?


**Answer:** There may be a fault with the appliance, discontinue use and contact the Lakeland Customer Services team on 015394 88100 or [info@lakeland.co.uk](mailto:info@lakeland.co.uk)

TECHNICAL DATA

LAKELAND

HEATED THROW

220-240V.~ 50/60Hz. 160W.

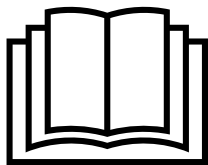

UK  
CA



RoHS



## ELECTRICAL CONNECTIONS

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

### CHANGING THE 3 AMP FUSE

Use a 3 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

**Note:** After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop.

## RECYCLING YOUR ELECTRICALS

The Waste Electrical and Electronic Equipment (WEEE) Directive requires UK distributors to maximise separate collection and environmentally friendly processing of WEEE.

UK distributors (including retailers) are required to provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge.

As a responsible retailer, we have met these requirements by offering all customers buying new electrical and electronic equipment free take-back of their old electricals on a like-for-like basis.







**Lakeland**

Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ  
Tel: 015394 88100 **[lakeland.co.uk](http://lakeland.co.uk)**