

USER GUIDE



W24

KID SMART WATCH

PDF



SAFETY AND WARNINGS

misuse of batteries can lead them bursting, causing a fire or chemical leaks. Please read the below precautions:

- Do not disassemble.
- Do not crush and expose the battery to shock or force. Such as hammering, dropping or stepping on it.
- Do not short circuit.
- Do not expose to high temperatures or place near a heat source. Do not leave in direct sunlight for any length of time.
- Do not dispose of in fire.
- Do not handle damaged or leaking battery. Keep the battery out of the reach of children. Keep the battery dry.
- If you notice any signs of damage, abuse use, and contact supplier support.
- Dispose of the item at a suitable waste station, as this battery cannot be added to normal waste.
- Keep the rubber cover of the micro USB port closed tightly while it is not in use in order to prevent dust or water from getting into the micro USB port.
- Keep the watch clean by wiping it with a slightly damp cloth.
- Keep the watch out of direct sunlight and away from any direct heat source.
- Do not drop the watch on a hard surface. Do not expose it to moisture or immerse it in water.
- Keep the lens clean. If the pictures taken are blurry, it could be because there is dust or dirt on the lens. You can clean the lens by:
 - Blowing on the lens,
 - Gently wiping the lens with a dry cloth.
- Charging should only be completed by an adult.

OVERVIEW

Introduction

This smart watch is a great wearable gadget for children! In addition to showing the time, you can also take photos, shoot videos, record voice and play games!

Please note, it is not necessary to turn off the Home Button during daily use.

The watch may come with a small amount charge, but we recommend a full charge before use. A full charge will take about 2 hours.

Components



What's in the box

- Smart Watch v1 (With detachable watch strap)
- Micro USB Cable v1
- User Guide v1

Notes

1. If this watch is out of the supervision, please charge it with a 5V voltage adapter for 2-3 hours to start up the watch.
2. It is suggested to leave the watch in 20% position during charging.

OPERATION

Getting Started

1. Slide the MASTER POWER SWITCH up to the ON position.
 2. Fully charge the battery before use.
- Do not switch off the MASTER POWER SWITCH for daily use.
Long press the Home Button on the right side of the device to turn the Smart Watch on.

Charging the Battery

Connect the smart watch to a computer with the included micro USB cable to charge the battery.

Lift up the rubber cover of the micro USB port on the left side of your watch. Insert the micro USB cable (small end) into the Micro USB port on the watch. Insert the larger end of the micro USB cable into a spare USB port on the computer. A USB port is usually marked with the symbol USB.

Keep the master power switch on before charging. When the watch is turned off, you will see the battery charging symbol displayed on the watch screen, and the battery will continuously charge until connected. When you turn on the watch, there will display the interface of USB mode. If select "USB Charging" and press OK, the battery will continuously charge. If you want to transfer data on your PC, you can select "Mass storage".

Monitor the watch regularly throughout the charging process.

When the battery is fully charged, A full battery symbol displays on the screen. [Disconnect] the watch from the computer.

Note: It will take approximately 3 hours to fully charge the battery. The actual time depends on power supply, the remaining charge and the ambient temperature of the charging environment. The optimum ambient temperature is (7°C-41°C / 32°F-104°F). If your watch needs

longer than 2 hours to fully charge, by charging from a different USB power source.

Battery Life

The time of the battery lasts between charges depends on usage. Like other electronic devices, more frequent usage will mean the battery will drain more quickly. Some activities will be more demanding on the battery, such as taking photos and videos. The expected battery life is shown below. This is based on the assumption that the screen is turned off when not in use.

Note: Please do not use fast charge; charge at least once a week.

Condition	Battery Time
Low Usage	2 weeks
Typical Usage	2 - 3 days
Heavy Usage	1 day

Low Battery Reminder

There will be a reminder when the battery is below 30%, and you will not be able to play games when the battery is below 10%.

How To Operate Your Watch

Long press home button to power on the watch.

Press the home button to wake the watch up. Press the Home button for 3 seconds to wake up the watch from standby.

When the clock is displayed on screen, press the home button to go to the home menu.

If the battery level is too low and cannot keep the clock running, you will need to enter the time and date again after recharging.

When the battery level is low, only the clock display function is available. We recommend recharging the battery as soon as possible before further use.

Shortcut keys

Slide down at the top of the screen, a shortcut key appears, and click to introduce the current time.



Show the time



Hide the time

Slide down at the top of the screen, a shortcut key appears, and click to switch between mute and default volume.



Default volume



Mute

Slide down at the top of the screen, a shortcut key appears, click to switch the colorful light mode. (There are four color modes in total)



Red light mode



Blue light mode



Green light mode



Colorful light mode



Turn off the colorful light

Automatic Screen Off

To preserve battery life, the screen will automatically shut off after a short period of time when in clock mode.

The auto screen off time can be set by 15 sec, 30 sec, 45 sec, 60 sec and longer. Please refer to the [Setting](#) section in the manual.

In other activities, it will return to clock mode automatically if there is no input for 1 minute. When in camera mode, it will auto exit after 3 minutes. When in sketchview, the auto quit time is 10 minutes.

If you have a timer running, it will return to the timer screen instead of returning to watch mode. The watch will not shut off automatically when the timer is running.

Clock Display

When the home button is pressed, the clock will be displayed. Tap the center of the screen to switch the clock face between analog and digital.

Swipe left or right on the screen to see more clock faces.

Press the home button to display the home screen for other activities.



Top row: digital clock faces

Bottom row: analog clock faces

Home Menu

Press the home button to display the home menu. The following functions are available:

- Camera
- Video
- Recording
- Music Player / Storybook
- Puzzle Games (12)
 - (1) Fruit War
 - (2) Turntable
 - (3) Pomodoro Clock Up
 - (4) Snake Fun

- ☐ Finger-Guessing
 - ☐ Jelly Pile
 - ☐ Sweet Together
 - ☐ Soap
 - ☐ Basketball Shot Master
 - ☐ Sea War
 - ☐ Petal Pile Game
 - ☐ Ultimate Flaming
- **Mathematics**
- **CLIM Interactive Plot**
- **Time**
 - ☐ Time Teacher
 - ☐ Alarm Clock
 - ☐ Countdown
 - ☐ Stopwatch
- **The Letter Card**
- **Connect Four Card**
- **Musical Instruments Simulation**
- **Sound Simulation**
- **DIY Club Face**
- **Background**
- **The Formation Of Good Behavior Habits (25)**
- **Photo Album / Video Gallery**
- **Search**
- **Calculator**
- **Calendar**
- **Setting**

Tap the icon to enter the activity.

Swipe left or right to scroll through the menu pages.



Notes:

1. When using photos and videos, you need to grant access to turn on the camera.
2. After finish using camera or video, return the camera to the same direction as the screen, then press it back inside.

Camera

- Press the camera button  on the screen to take a photo.
- Tap the icon  there are interesting photo frames for option.
- Tap the photo gallery  button to view photos.
- Tap the arrow icons or swipe the screen to see the previous or next photo.
- To delete a file, tap the  icon on screen and follow prompts.
- To switch to the camera function, click the  icon.

Video

- Press the camera button  on the screen to take a video.
- Tap the video gallery  button to view videos.
- Tap the arrow icons or swipe the screen to see the previous or next video. To delete a file, follow prompts.
- To switch to the camera function, click the  icon.

Recording

- Tap  to start voice recording.
- Tap  to play the last recording.
- Tap  to pause recording playback.
- Use the arrows to select previous or next recording.

Music Player / Storybook

Music Player

To upload music to the watch, use the Music USB cable to connect your watch to a computer / laptop. Copy any MP3 music files to the watch folder "My Music". After transfer is complete, safely eject the watch from your computer and unplug the USB cable.

To play the music transferred to your watch, select the music player  icon, and then press play  to start playing the file.

 Play

 Volume Up

 Next

 Pause

 Volume down

 Back

Storybook

To play a story from your watch, select the story player  icon from the Media/Story function and press play  to play the story.

 Play

 Volume Up

 Next

 Pause

 Volume down

 Back

Puzzle Games

There are 12 built-in games on the smart watch. Swipe the screen to see the game icons, then tap one to play.

Feeding War

Game Instruction: Click on the desserts with the same color as the base of the screen to match the color order of the dessert in the window.

Turnside

Game Instruction: Spin that wheel and see where you land. Each color lands on a number which tell you how many times you need to click. Pay close attention as you need to follow instruction carefully. It may land on yellow and say NOT YELLOW! Yes, This means its NOT click yellow but any other color 8 times total. Good luck...

Pinches Drive Up

Game Instruction: Click the second small icon at the top left, dress clothes (not high-heeled shoes, hair accessories will appear in turn). Can choose different videos. click on the clothes appear in the top meter out, to the process for dressing up.

Shake Fun

Game Instruction: Shake the watch, let the dice turn, random points.

Finger-Guessing

Game Instruction: Guessed twice in 60 seconds. Let's see how many points you can get.

Jelly Flow

Game Instruction: Exchange jelly seeds so that three jelly can be arranged in a row or column.

Seed Together

Game Instruction: Click on the test tubes, put the copy of the same color in the same test tube, you can pass the level.

2048

Game Instruction: Swipe up, down, left or right to move the tiles across the board. The tiles will slide in the swiped direction, meanwhile a new tile will emerge randomly in the board. When the tiles with the same number meet, they will merge into one tile.

Basketball Shoot Master

Game Instruction: Press the basketball to shoot, when the basketball is going to move to the middle, control to shoot.

Sea War

Game Instruction: Tap the screen left or right to move the fighter to shoot. Purple enemies need to be hit twice. Score as many points as you can! You have a total of three opportunities.

Pedal Hit Bricks

Game Instruction: Destroy all bricks to progress to the next level. White bricks give a special Mini bonus. Blue bricks need to be hit 2 times. Score as many points as you can!

Ultimate Racing

Game Instruction: Hold the car to move left and right to switch lanes. The car in front may drop gold coins. Get as many gold coins as possible. To avoid crash, you have only one chance.

Pedometer

Use the pedometer to count your steps! Follow the prompts on screen to start or reset the pedometer. When started, the count will be updated every 30 seconds.

GUB! Interactive Pet

There is a perfect friend named GUB!. You can interact by sliding in different directions on the screen, clicking on different positions, etc. It will display different expressions and make interesting sounds.



Time

There are four functions, Time Teacher, Alarm Clock, Countdown, Stopwatch.

Time Teacher

The time teacher is a friendly panda who can say the time for you. Tap the Hour or Minute buttons to select the time you want the panda to say.

Tap  to increase by an hour / minute. Tap  to decrease by an hour / minute. Tap the clock on the panda to tell the time.

Alarm Clock

Tap the clock icon on screen  to change the alarm time.

Tap the lock icon on screen  to turn on / off the alarm.

How to set an alarm?

Select the hour and minute by swiping up or down on the hour and minutes. Tap <ok> to confirm the chosen time.

Note: If the battery level is too low, the alarm will need to be set again.

Countdown

Set a countdown timer here.

Tap the play icon  to start the timer.

While the timer is running, tap  to pause the count down, then tap  again to resume. Tap  to stop the countdown and read the timer.

Stopwatch

Tap the play icon  to start the stopwatch.

While the stopwatch is running, tap  to pause the timer, tap  again to resume.

Tap to stop  the timer and read the stopwatch to zero.

The Letter Card

Recognize 26 letters through cards.

Click the card to play the content.

Slide left and right to switch cards.

Common Sense Card

There are 6 categories of common sense things learned through cards.



Animal



Food



Fruit



Nation



Vegetable



Vehicle

Click the card to play the content.
Slide left and right to switch cards.

Musical Instruments Simulation

Watch comes with 8 kinds of Musical Instruments Simulation. They are Piano, Violin, Triangle, Flute, Snare Drum, Tuba, Bass Guitar and Ukulele. Click on the corresponding instruments, it will produce the corresponding sound.

Sound Simulation

Click the icon to enter the simulation interface, and select the simulation object by clicking the icon.

Watch comes with 8 kinds of sound simulation. They are Light Gun, Hammer, Basketball, Tennis, Ho Ho Ho, Clap, Whistle and Wand.

After entering the simulation interface, when you click the screen, the sound will be emitted every time.

DIY Clock Face

Press the  icon to enter the secondary interface. You can take a photo now  or choose your favorite photo  from the album. Next, you can switch the pointer type you like by  or , and it will be displayed on the watch interface!

Background



Helps the Flypaper to set the habit's wallpaper you like.

The Formation Of Good Behavior Habits



- In this interface , click the icon  in the upper bar, then to select different items. 

- Swipe left and right to select the item you want to set, there are total 10 items.



- Slide up or down to set the reminder time, The initial time is 08:00.



- Click the icon in the bottom middle to set the frequency, to day once, every day, and not day.



- Click the delete icon  in the bottom left to delete the item, and return to the previous list interface.

- Click the icon  in the bottom right to complete the setting of item.

- The schedules will be sorted one by one by the setting time (the time can be set on the screen), there will display the quantity of the items in the upper right corner. There are five color background labels for a cycle.



- You can click the set reminder picture area to modify the time or status.



- When the time is up, a bell will be sounded, the program will last for 30 seconds.



Click and click the watch screen or press the home button will return back. If the reminder are set at the same time, the time is added every 1 second until 30 seconds of the reminder.

- For the photo taking item, it will enter the photo function to take a photo for setting a reminder.



- For photo gallery item, it will enter the photo gallery function to select a photo you wanted, then to set a reminder.



Photo Album / Video Gallery

Click the photo icon  to view the photo taken.

Click the video icon  to view the video taken.

Torch

Tap the screen to turn on / off the torch. The torch will remain on during other activities until you return to the torch menu to turn it off.

Caution: Be careful when using the torch. Do not point the light directly at people or animals, as it may cause eye damage. Torch is not the fan, and must be used carefully.

Calculator

Calculator function is for basic mathematical calculations. Do not use this to cheat on tests, or you will never learn how to work out the answers by yourself.

Calendar

Use the calendar to view the date. If the date shown is incorrect, please go to the Settings  menu to reset the date and time information.

Setting

In settings, swipe left or right on the screen to scroll through different setting sub-menus. Here you can adjust the following items:

- Volume
- Brightness
- Brightness Timer
- Colorful Mood Light
 - Red Light Mode
 - Blue Light Mode
 - Green Light Mode
 - Colorful Mood Light Mode
 - Turn Off the Colorful Mood Light
- Doze Time
- Parental Control
- Time Format
- Language
- Storage Location
- Factory Reset

Parental Control

Set time-limits for how long games can be played per day to use, go to the Settings  menu and open the Parental Control sub-menu.

Tap and hold on the screen for three seconds. Then, you will be asked to identify a object on the screen and tap three times to confirm. Once this has been completed, you will gain access to the parental control.

Select between a daily limit of 15, 30, 60 or Unlimited, or no limit. You can also choose to disable the games completely. Tap the  icon to confirm the selection.

Tip

- When you touch the screen, ensure your entire finger is pressing the screen and hold for a second.

- Do not use your fingernails.
- To view photos, videos or voice audio on your laptop / computer, connect the watch by using the included Micro USB cable. Photos, videos and voice audio can be found in the "Photos", "Videos" and "Audio" folders.

SPECIFICATIONS

Display	1.55 inch IPS touch screen
Photo Resolution	342*228
Video Resolution	178*228
Storage Capacity	Photos: More than 30,000 pieces. Video: More than 2+ hours. Recording: More than 20 hours. Note: The number of photos, videos, and recording times shown above are estimated based on the average file size. Actual data may vary.
File Format	Photos: Standard Baseline JPEG Videos: AM (Motion JPEG)
Connectivity	Micro USB Charging & Data Transfer Cable (Included)
Battery	Li-Ion 320 mAh
Input Charging Current	300 mA±
Voltage	5V

TROUBLESHOOTING

Please check the troubleshooting steps outlined below, and if you still have any issues, contact supplier for support.

Problem	Solution
The watch is not turning on	● Hold the home button for 3 seconds to turn off, then hold the home button again to turn back on. ● Next to the USB port, there is a small hole for resetting. With a small paperclip, insert the end of an unfolded paperclip to press the internal button and manually perform a hard reset. ● Remove the cardboard paper clip from immediately, then hold the home button for 3 seconds to power on. If a soft reset doesn't work, try to rechange the battery and try again (refer to the battery not charging section below).
The watch is not charging	● Try to charge the watch with a different name USB cable. ● Check if the computer's USB port or whether you are using to charge the device (not included) is working with other electronic devices. ● If still not working, perform the hard reset method as described above.
Screen display is abnormal	Hold the home button for 3 seconds to turn off, then wait 30 seconds. Hold the home button again turn back on.
Cannot connect to computer	Check the connections on the watch USB cable between the watch and the computer. Ensure the cable is properly connected at both ends. Hold the home button for 3 seconds to turn off. Then wait 30 seconds. Hold the home button again turn back on. Unplug from the computer and restart.

Problem	Solution
Images taken are not clear	Make sure the lighting conditions of the shooting environment are good. Check to see if the camera lens are clean. If you find some dust or dirt on it, please try blowing on the lens, and gently wiping the lens with a dry cloth.
Not enough memory storage space	If you have run out of memory, you will need to delete some of your files. These may include photos, videos, voice recording, and music files. You transfer files to your computer before deleting from the watch. Alternatively to delete all files, need to Settings > Advanced > Storage Location and open the memory.
How to reset the watch.	Use a pin to press the reset button, the watch will turn off, and then you need to plug in the USB charging cable and make it under charging status. Long press the home button to turn on the watch, and it is reset is finished.